



INSTALLATION INSTRUCTIONS

Accessory
REAR SIDE LINING PROTECTORS
 P/N 08P42-TGS-100A

Application
2019 PASSPORT

Publications No.
VERSION 1
 Issue Date
JAN 2019

PARTS LIST

Left rear side lining protector



Right rear side lining protector



16 Rivets



TOOLS AND SUPPLIES REQUIRED

Flat-tip screwdriver

Drill

3 mm Drill bit

T-pin

Masking tape

File

Ruler


Utility knife

Eye protection (face shield, safety goggles, etc.)

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Rotabroach Hole Cutting Kit (T/N BLR11201SO)

Illustration of the Rear Side Lining Protectors in the Vehicle

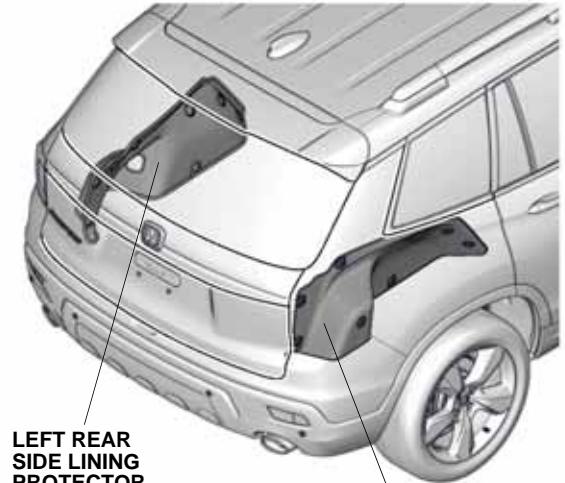

LEFT REAR SIDE LINING PROTECTOR

RIGHT REAR SIDE LINING PROTECTOR

QH52901AA

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the body.
- If you are also installing accessory parking sensors, hands-free access power tailgate, or power socket (sold separately), install them before you install the rear side lining protectors.

With accessory parking sensors or Hands-Free Access Power Tailgate


1. If the vehicle is equipped with accessory parking sensors or hands-free access power tailgate, cut out the left rear side lining protector as shown.

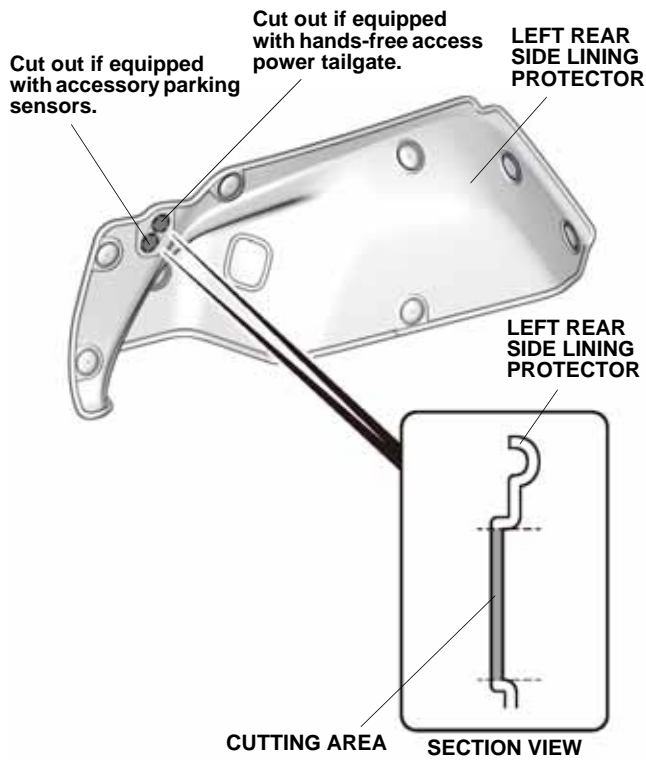

QH52902BA

With accessory power socket

2. If the vehicle is equipped with accessory power socket, cut out the left rear side lining protector as shown.

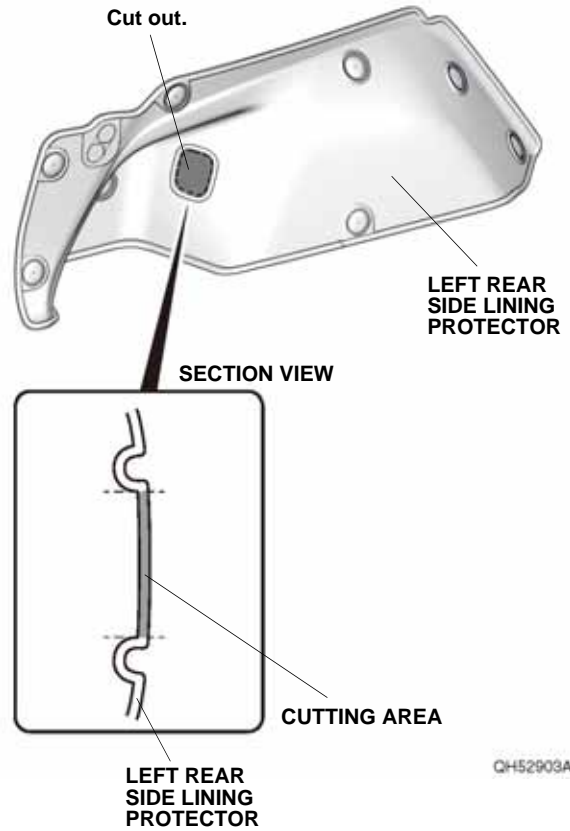

QH52903AA

Installing the Rear Side Lining Protector


3. Fold down the left and right rear seats.



QH52801AN




4. Secure the eight snaps to the eight snap retainers on the left rear side lining protector with masking tape as shown.

NOTE: Make sure the snaps are centered on the snap retainers.

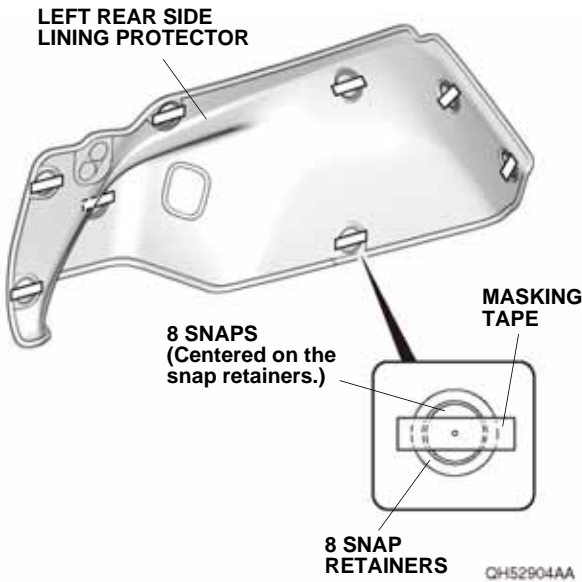


QH52904AA

5. Line up the left rear side lining protector with the contour of the left rear side trim panel. If the vehicle is equipped with the accessory parking sensors, hands-free power tailgate, or power socket, line up the cut out holes in the left rear side lining protector with the switches or socket.

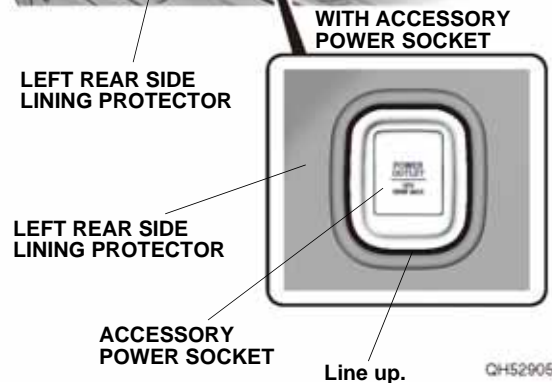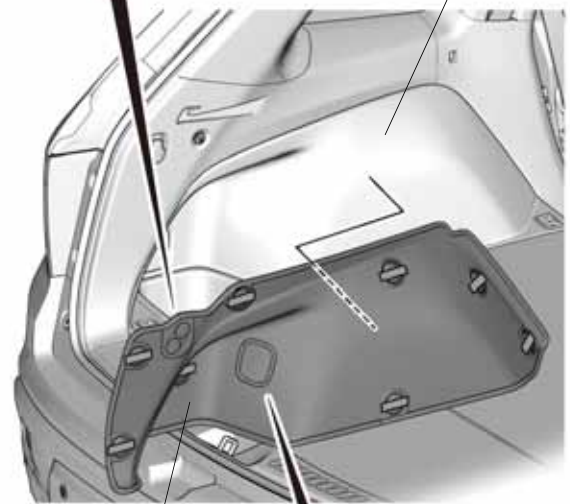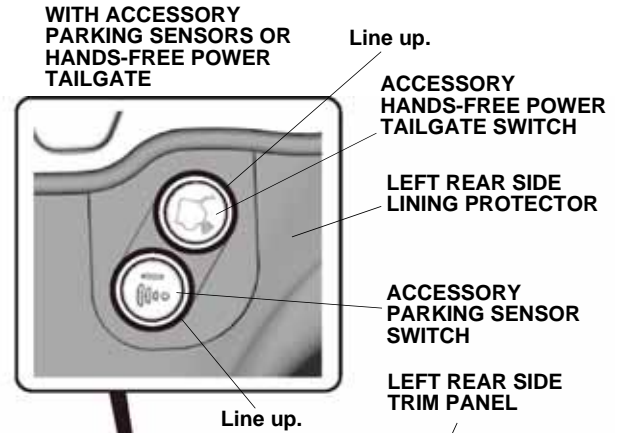


QH52905BA

6. Temporarily secure the left rear side lining protector to the left rear side trim panel with masking tape as shown. Lift the left rear side lining protector, and attach masking tape to the left rear side trim panel where the five snaps will be located as shown.

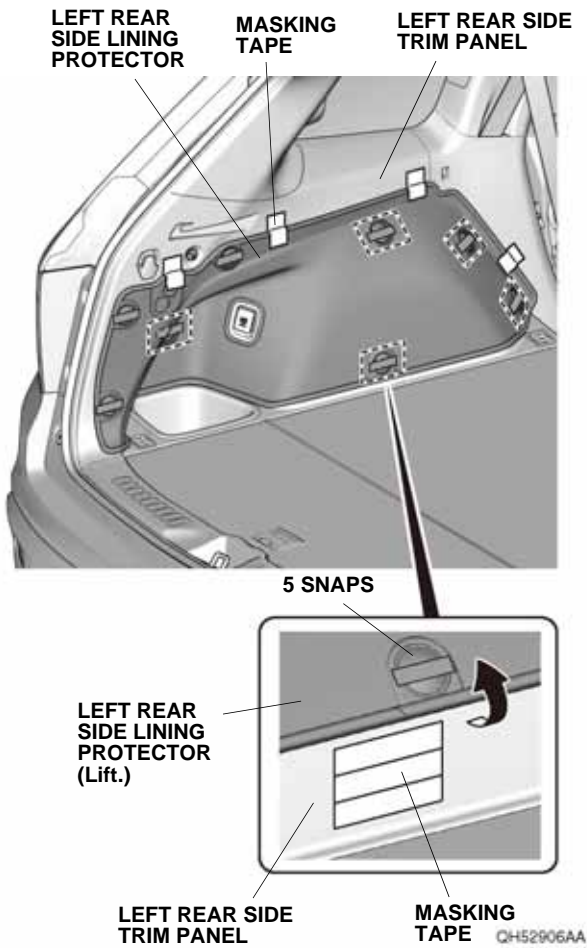


7. Using a T-pin, pierce the left rear side trim panel through one hole in the snap No.1 as shown. Remove the masking tape attached in step 4 from the left rear side lining protector. NOTE: Make sure to pierce the left rear side trim panel perpendicular. Do not remove the masking tape where the left rear side trim panel is not marked yet.

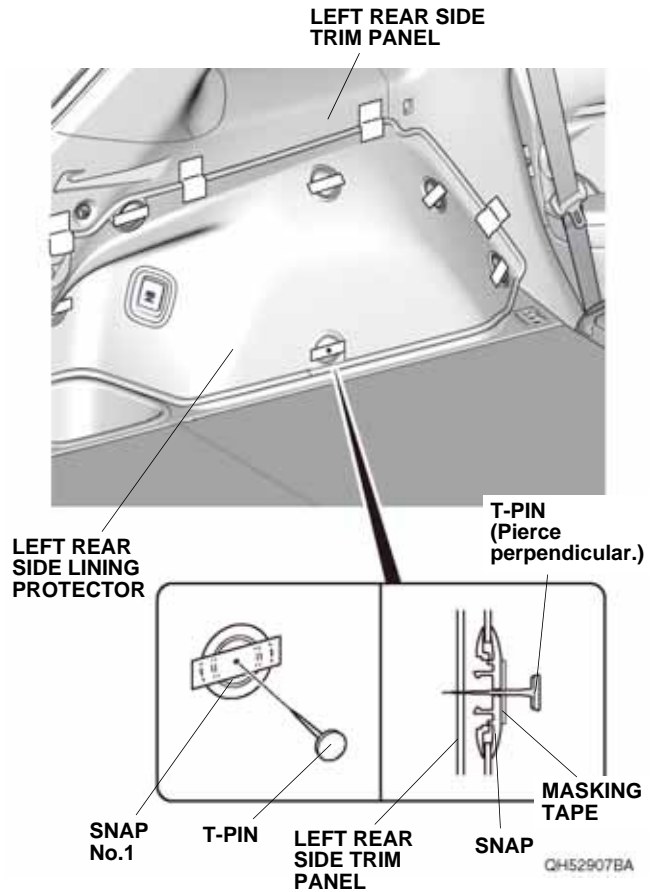


8. Remove the left rear side lining protector.


9. While wearing eye protection, use a 3 mm drill bit to drill the pierced mark as shown.
NOTE: Insert a 3 mm drill bit into the drill. Make sure the drill bit extension is no more than 50 mm (1.97 in.). Wrap masking tape around the 3 mm drill bit 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill the left rear side trim panel perpendicular.

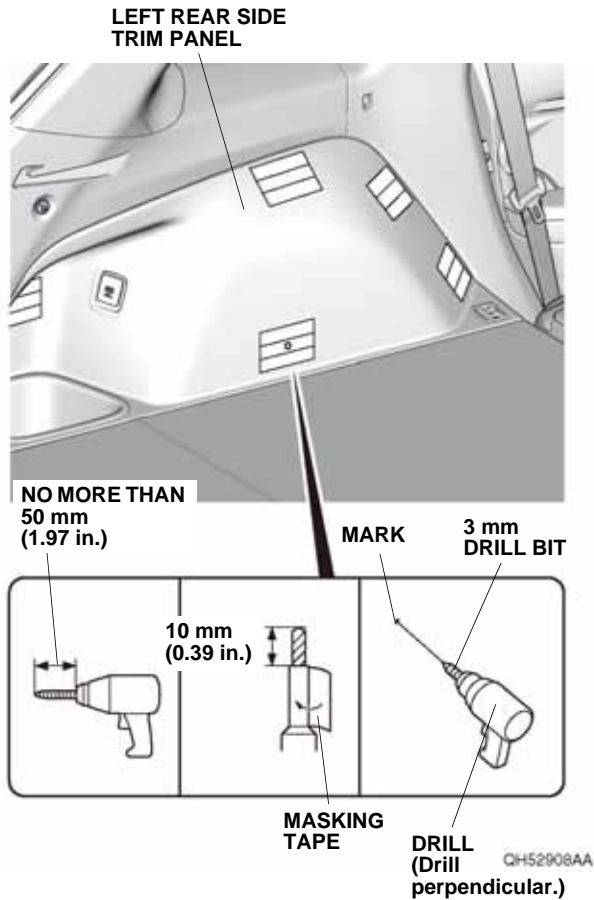


10. While wearing eye protection, use a 6 mm Rotabroach bit to drill the hole. Remove the masking tape at the position shown. Remove any burrs.
NOTE: Make sure to drill the left rear side trim panel perpendicular.

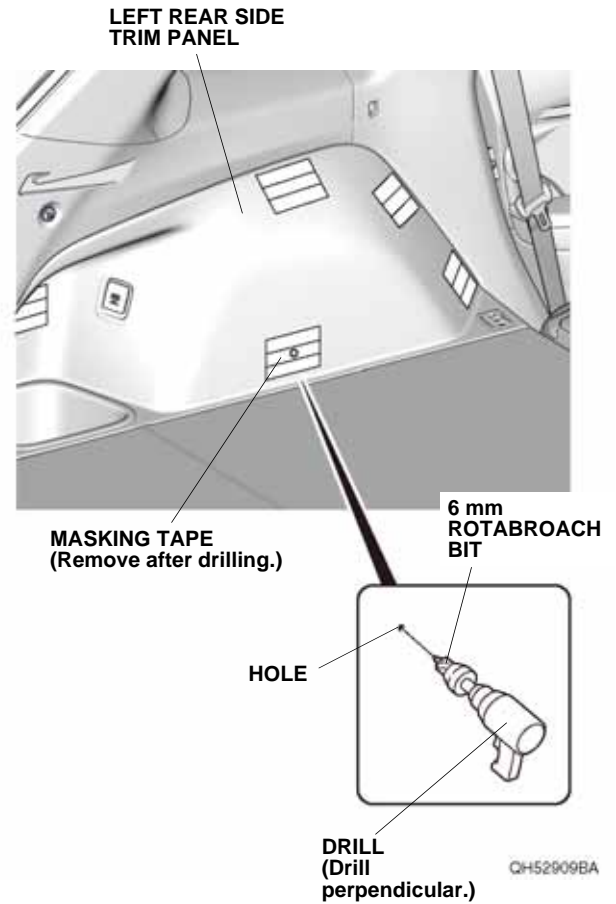

11. Install one rivet into the hole on the left rear side trim panel as shown.

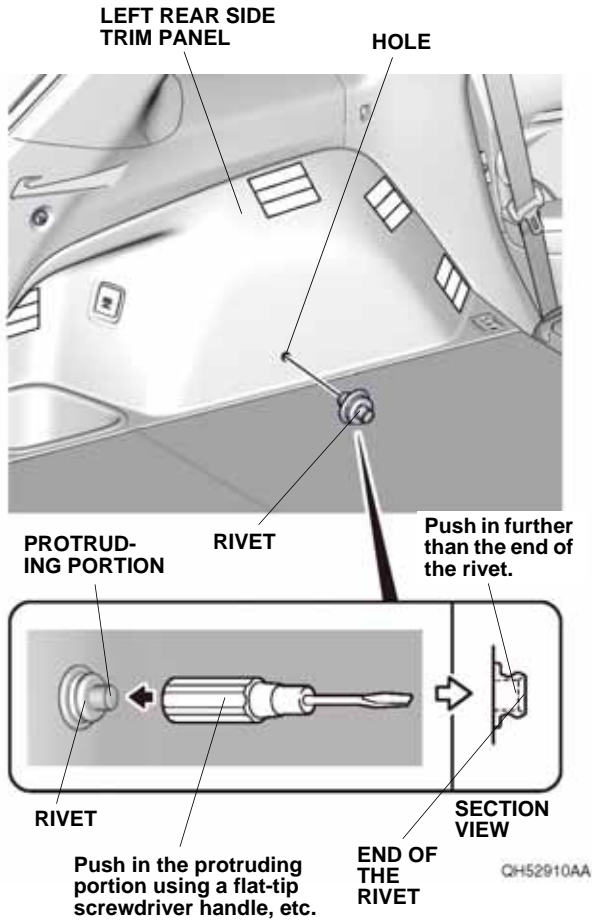


12. Line up the left rear side lining protector, and temporarily attach it to the left rear side trim panel with the snap No. 1 and masking tape as shown. If the vehicle is equipped with accessory parking sensors, hands-free power tailgate, or power socket, line up the cut out holes in the left rear side lining protector with the switches or socket.

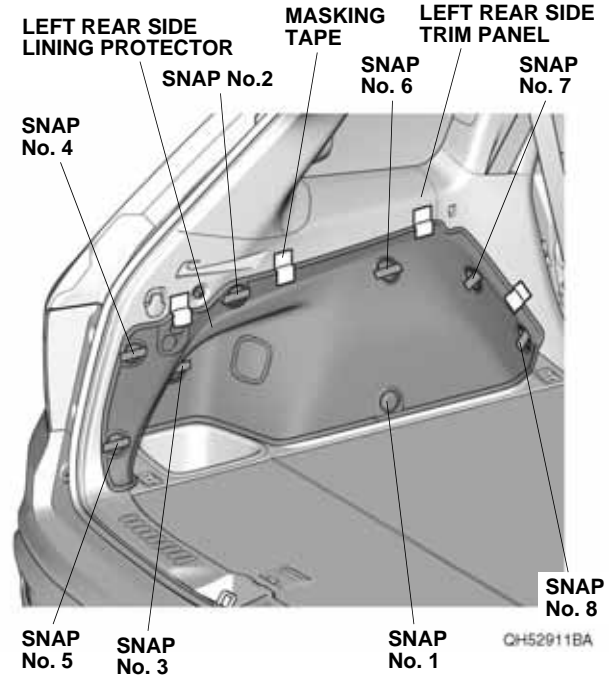

13. Repeat steps 7 through 11 for each of the remaining snaps, follow the pattern shown.

14. Fit the left rear side lining protector, and secure it to the left rear side trim panel with eight snaps.

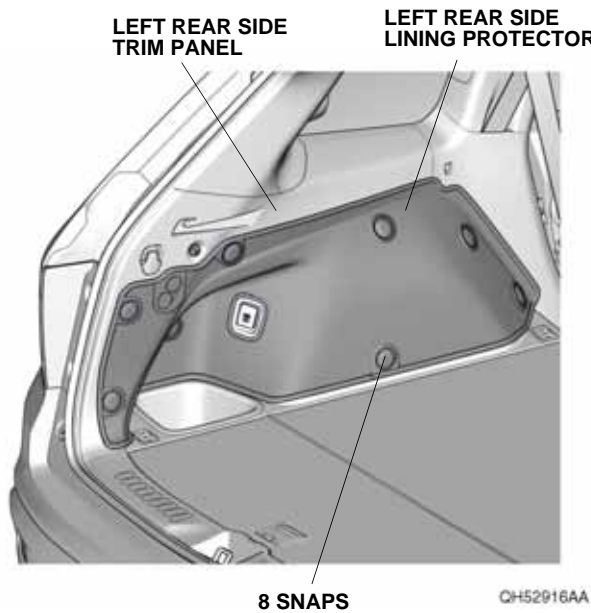

15. Repeat steps 4 through 14 on the right side of the vehicle.