



INSTALLATION INSTRUCTIONS

Accessory
REAR BUMPER APPLIQUES
 P/N 08P48-TGS-100

Application
2020 PASSPORT

Publications No.
VERSION 1
 Issue Date
NOV 2019

PARTS LIST

Left rear bumper applique
 (Identification mark: L)



Right rear bumper applique
 (Identification mark: R)



Center rear bumper applique



Alcohol wipe




TOOLS AND SUPPLIES REQUIRED

- Shop towel
- Spray bottle
- 3M Protective tape application solution
- Gloves

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Mini Soft Spreader/Applicator (T/N SBSA2302Y5PK)

Illustration of the Rear Bumper Appliques on the Vehicle

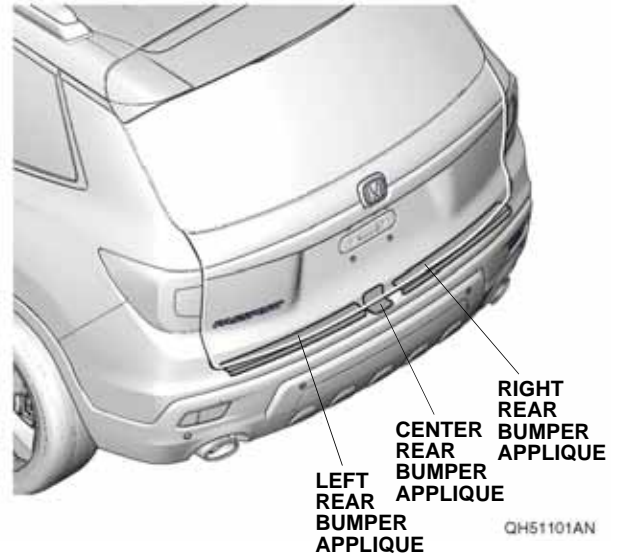


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Always wear gloves when working with 3M Protective tape application solution.
- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

1. Open the tailgate. Using the alcohol wipe, thoroughly clean the rear bumper where the rear bumper appliques will attach.

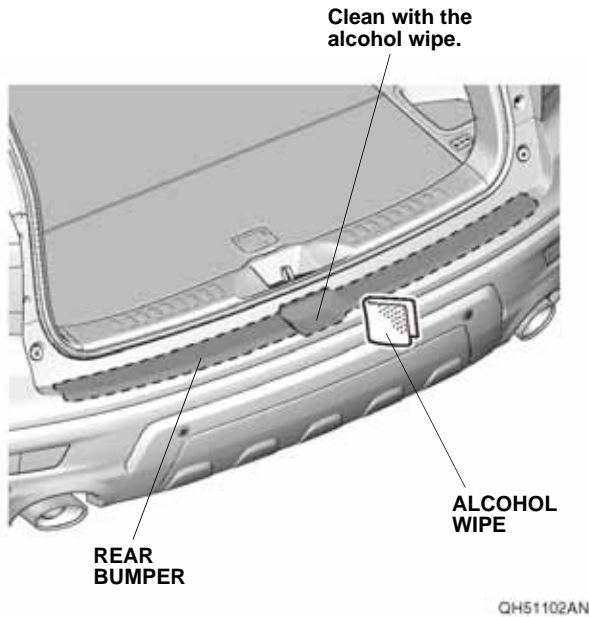


2. Using a spray bottle with the 3M protective tape application solution, spray the area where the left rear bumper applique will attach.


Spray with the 3M protective tape application solution.

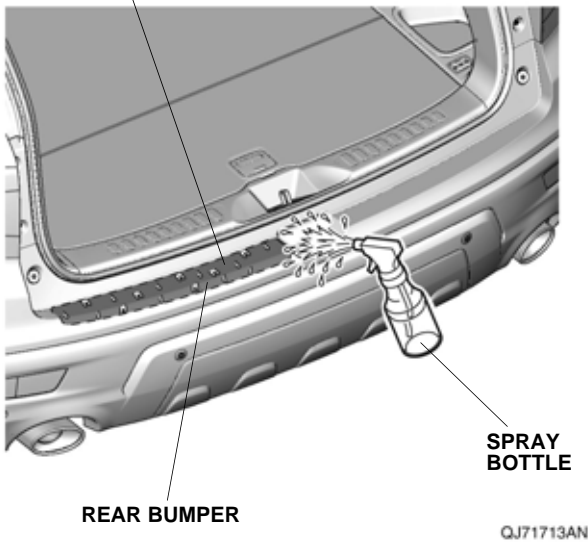


3. Remove the adhesive backing from the left rear bumper applique.
NOTE: Make sure to check the identification mark before installation.

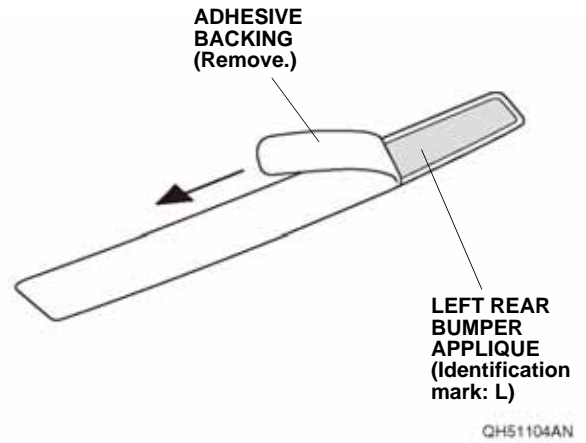


4. Spray the left rear bumper applique with the 3M protective tape application solution.

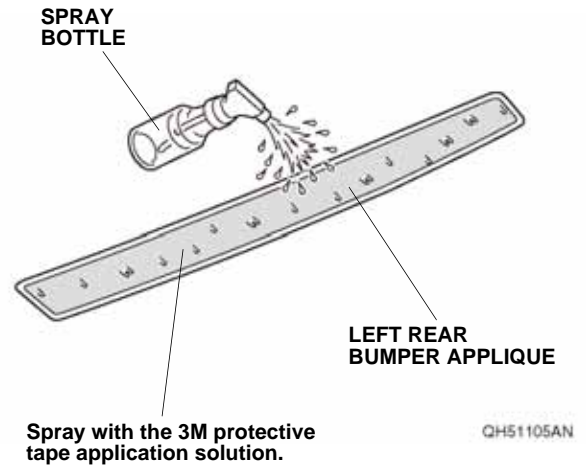


5. Line up the edge of the protective film of the left rear bumper applique with the edge of the curved surface on the rear bumper as shown.

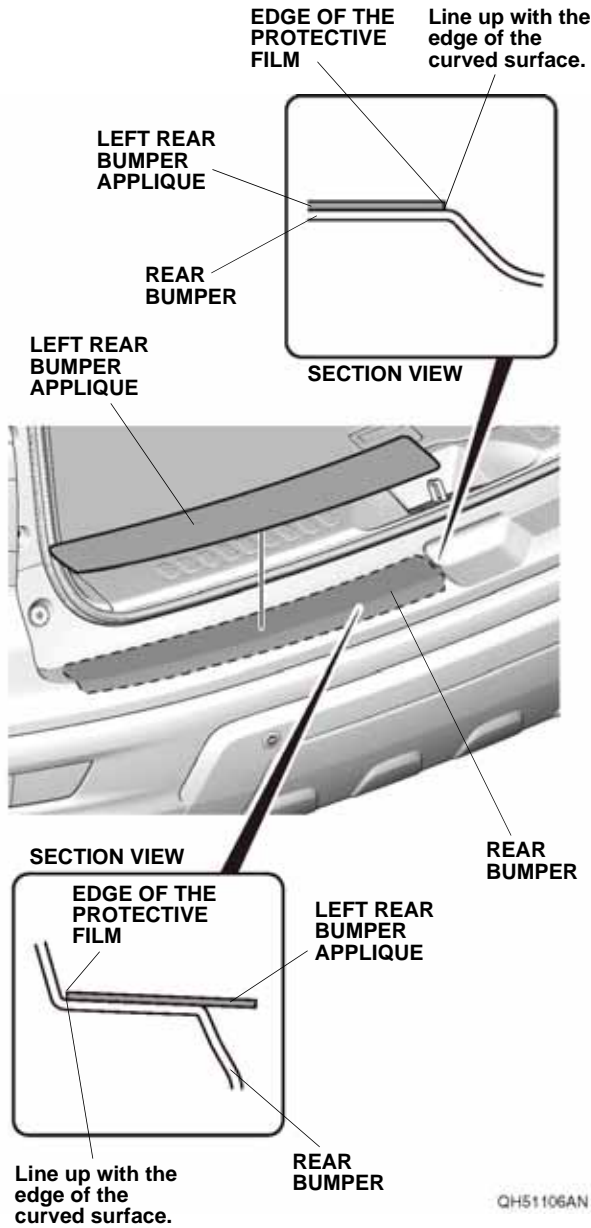

6. Starting from the front and working rearward, use the mini soft spreader/applicator to smooth out the center of the upper section on the left rear bumper applique. Move the mini soft spreader/applicator in one direction only. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly, and keep pressure against the left rear bumper applique.

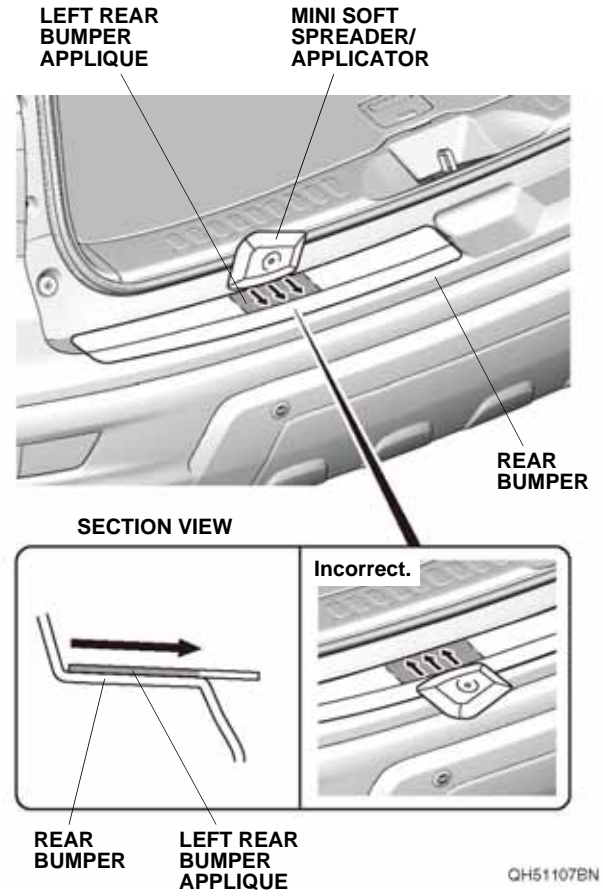


7. Starting from the center and working outward, use the mini soft spreader/applicator to smooth out the left and right sides of the upper section on the left rear bumper applique. Move the mini soft spreader/applicator in one direction only. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly, and keep pressure against the left rear bumper applique.

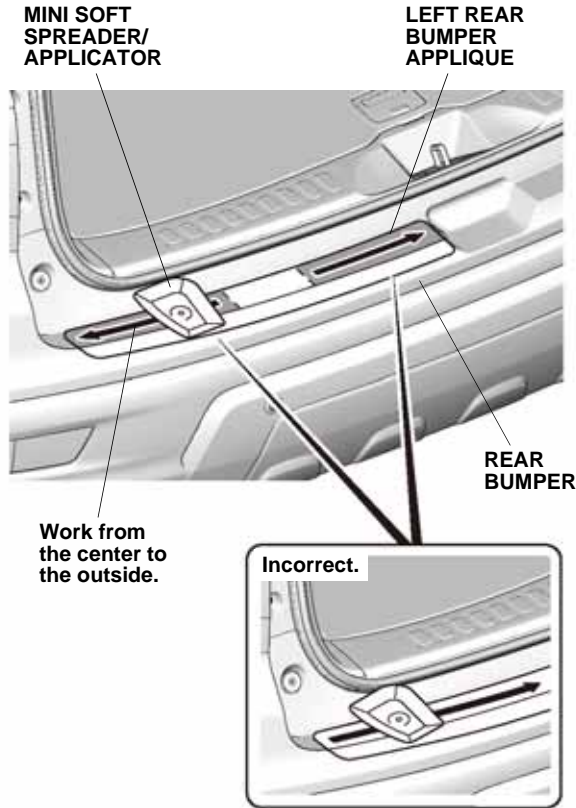


QH51108BN

8. Slowly remove the protective film from the left rear bumper applique.
NOTE: Do not pull up on the protective film.

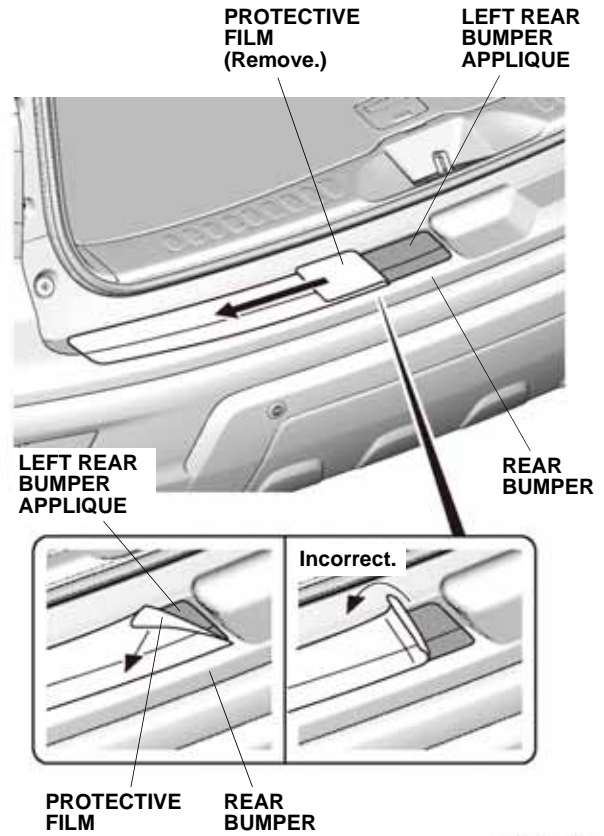


QH51109AN

9. Repeat step 6 to the lower section of the left rear bumper applique.

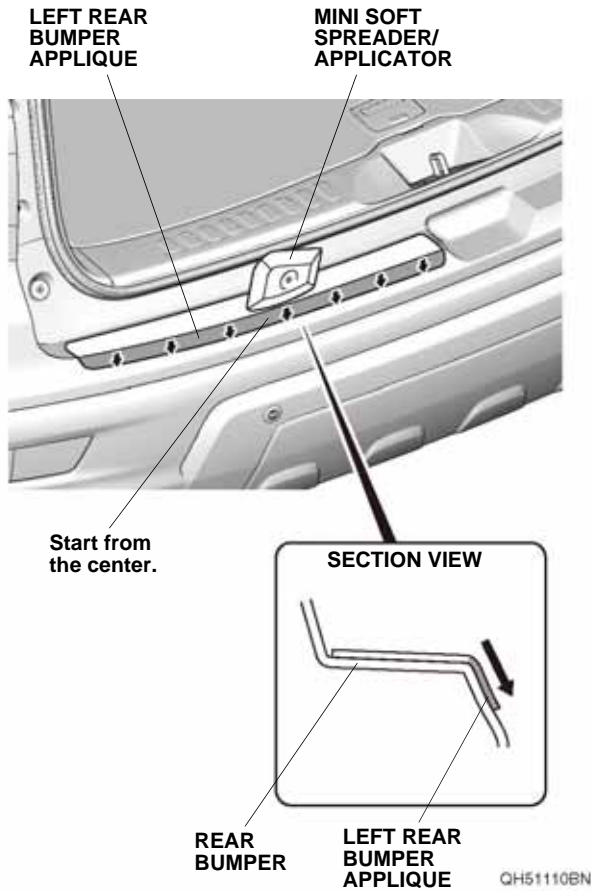


10. Repeat steps 2 through 9 on the right side of the vehicle.


11. Using a spray bottle with the 3M protective tape application solution, spray the area where the center rear bumper applique will attach.

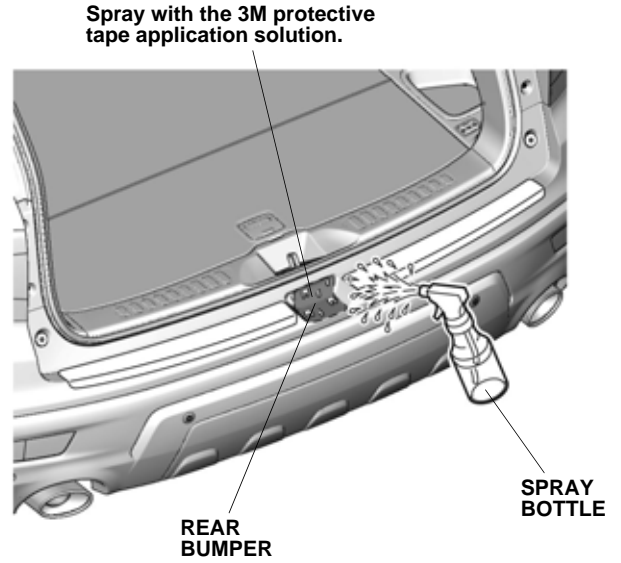


12. Remove the adhesive backing from the center rear bumper applique.

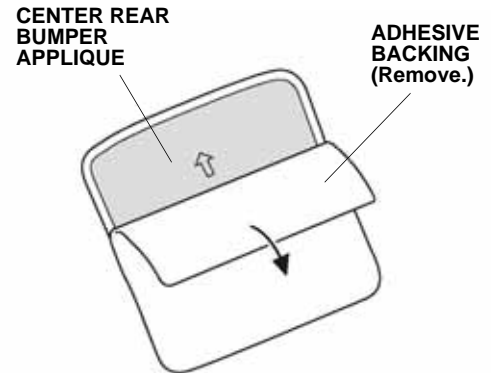


13. Spray the center rear bumper applique with the 3M protective tape application solution.

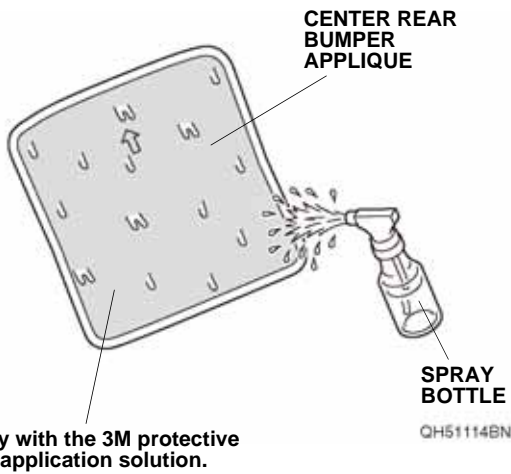


14. Line up the edge of the protective film of the center rear bumper applique with the edge of the curved surface on the rear bumper as shown.
NOTE: Make sure to check the arrow mark before installation.

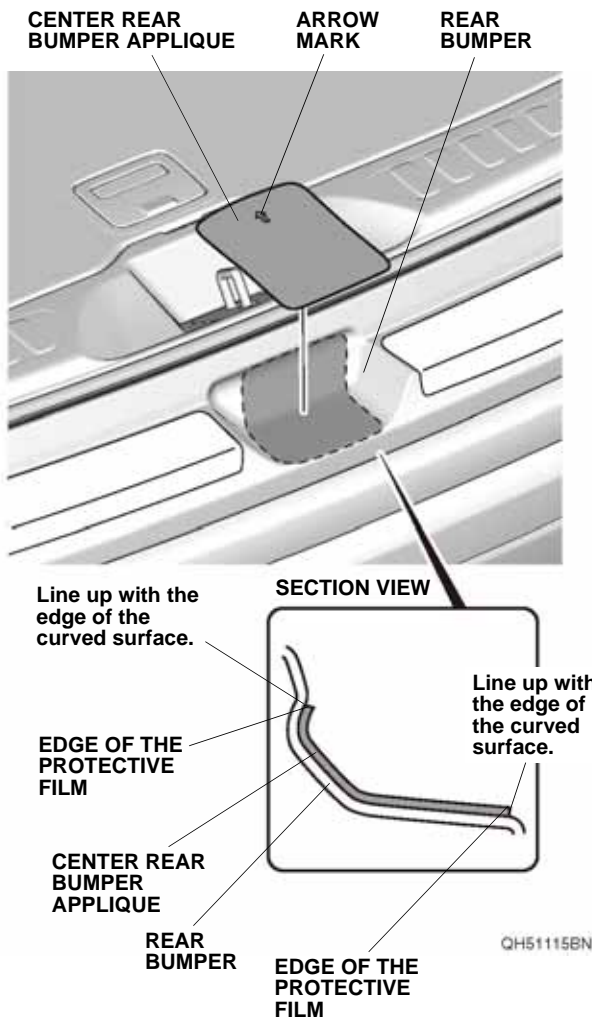


15. Starting from the center and working outward, use the mini soft spreader/applicator to smooth out the center section of the center rear bumper applique. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly, and keep pressure against the center rear bumper applique.

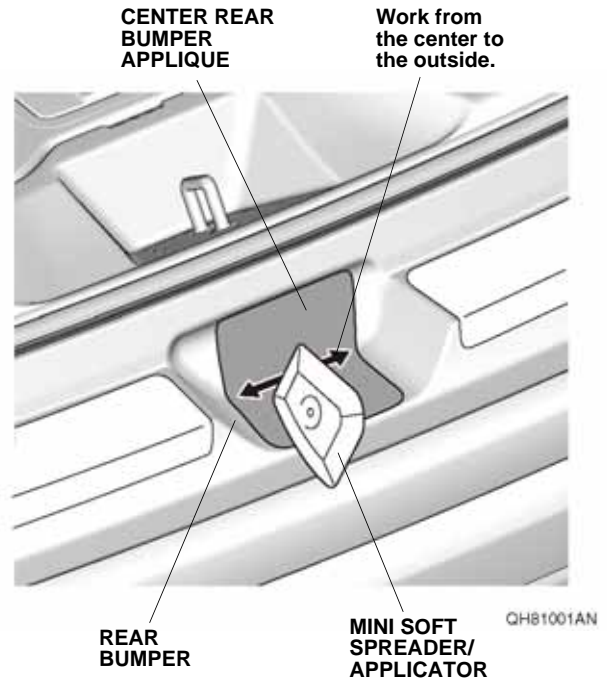

16. Starting from the center and working outward, use the mini soft spreader/applicator to smooth out the center rear bumper applique. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly, and keep pressure against the center rear bumper applique.

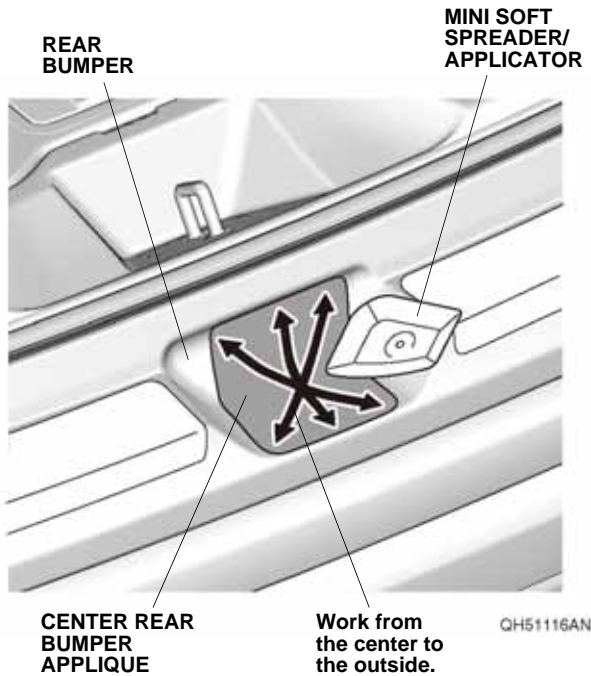

17. Slowly remove the protective film from the center rear bumper applique.
NOTE: Do not pull up on the protective film.

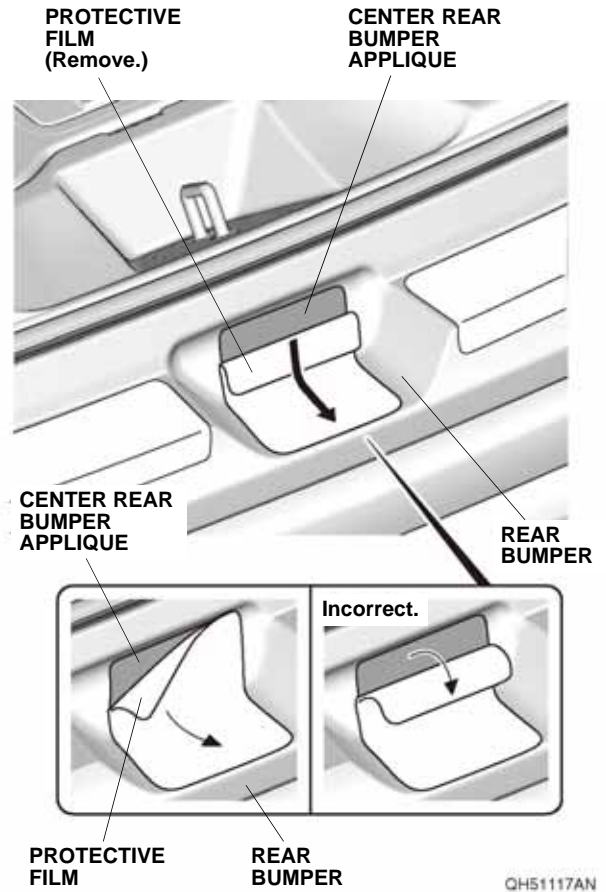

18. Using a shop towel, wipe up the 3M protective tape application solution. Allow the rear bumper appliques to dry thoroughly.

