



INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
FENDER FLARES P/N 08P21-TGS-100	2020 PASSPORT	VERSION 1
		Issue Date NOV 2019

PARTS LIST

Left front bumper flare



Right front bumper flare



Left front fender flare



Right front fender flare



Left rear door flare



Right rear door flare



Left rear fender flare



Right rear fender flare



Left rear bumper flare



Right rear bumper flare



10 Alcohol wipes



8 Snap fit clips



2 Self-tapping screws, 5 x 10 mm



4 Self-tapping screws, 5 x 20 mm



4 Spring nuts



2 Washers



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
10 mm Open end wrench
Masking tape
Blanket
10 mm Socket
Ratchet
5 mm Hex wrench
Shop towel
Utility knife
Pushpin
Eye protection (faceshield, safety goggles, etc.)
Drill
File
3 mm and 5 mm Drill bits

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Air Saw (T/N AT192A)

Illustration of the Fender Flares on the Vehicle



INSTALLATION



Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- If the vehicle is equipped with splash guards remove them, they cannot be installed with these fender flares.
- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the customer is aware of this.


1. Open the tailgate.
2. Disconnect the negative cable from the battery:
 - Wrap a shop towel around the hood latch.

HOOD LATCH
(Wrap with a shop towel.)

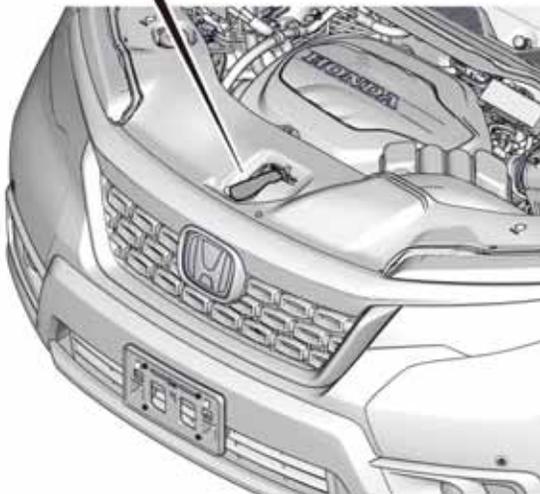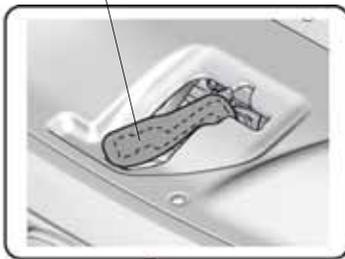


QH50702AB

- Remove the front bulkhead cover.

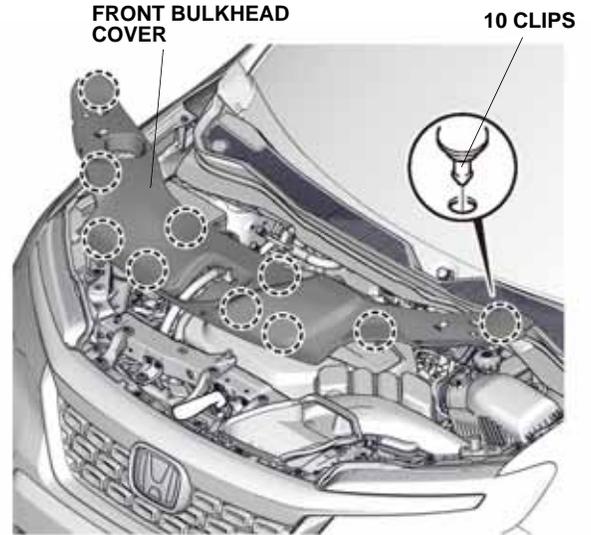


QH50703AB

- Remove the intake air tube.
- Disconnect the negative cable from the battery.

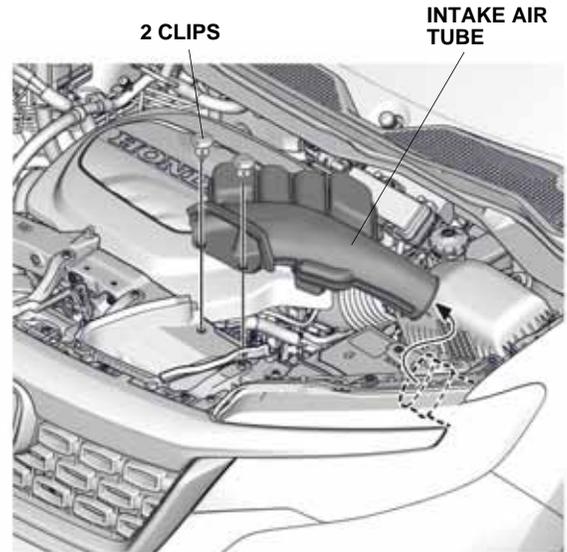


QH50704AB

- Remove the three self-tapping screws.

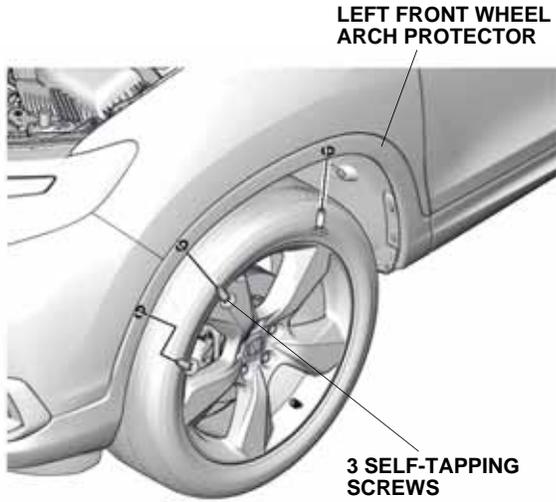

QH51402AC


- Remove the left front wheel arch protector.

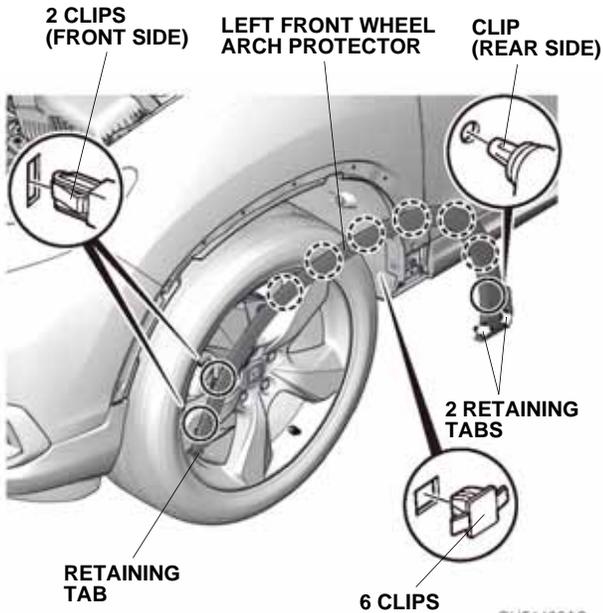

QH51403AC


- Repeat steps 3 and 4 on the right side of the vehicle.
- Remove the front bumper:

- Using a flat-tip screwdriver, remove the H emblem.

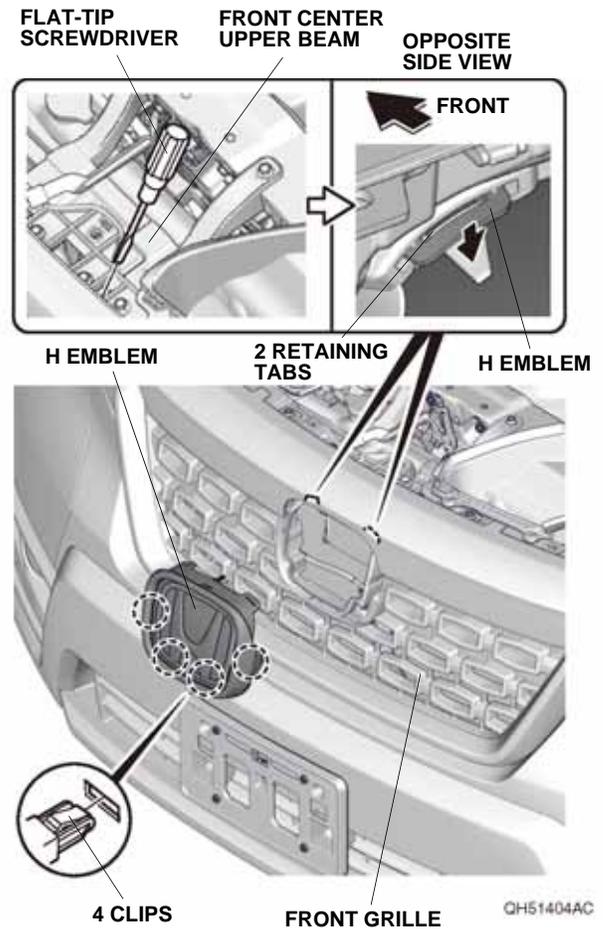


QH51404AC


- Remove the front upper grille.

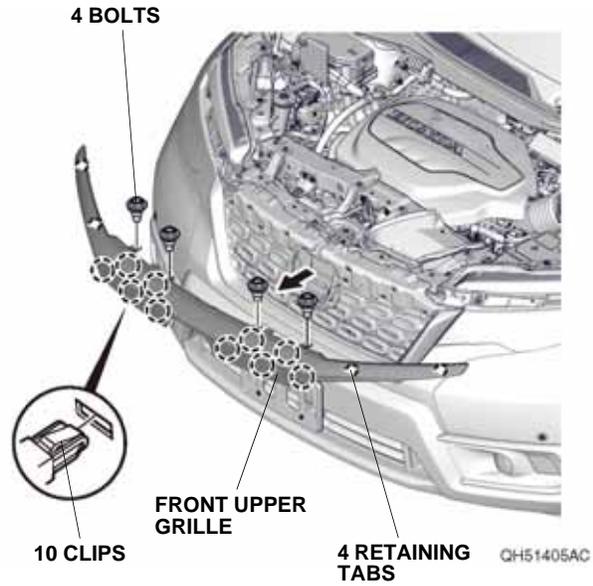


- Apply masking tape as shown.

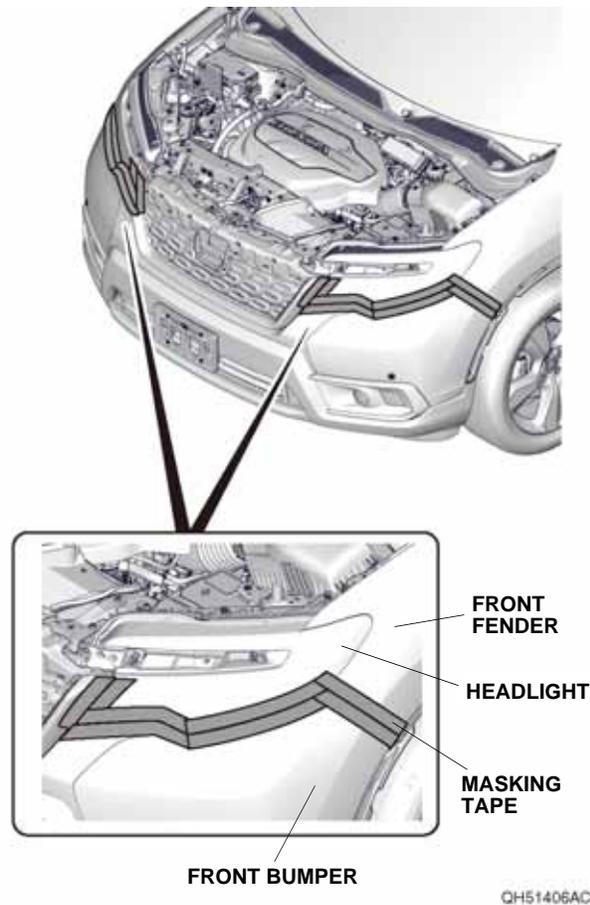


- Remove the four self-tapping screws, eight clips, and eight flange bolts.

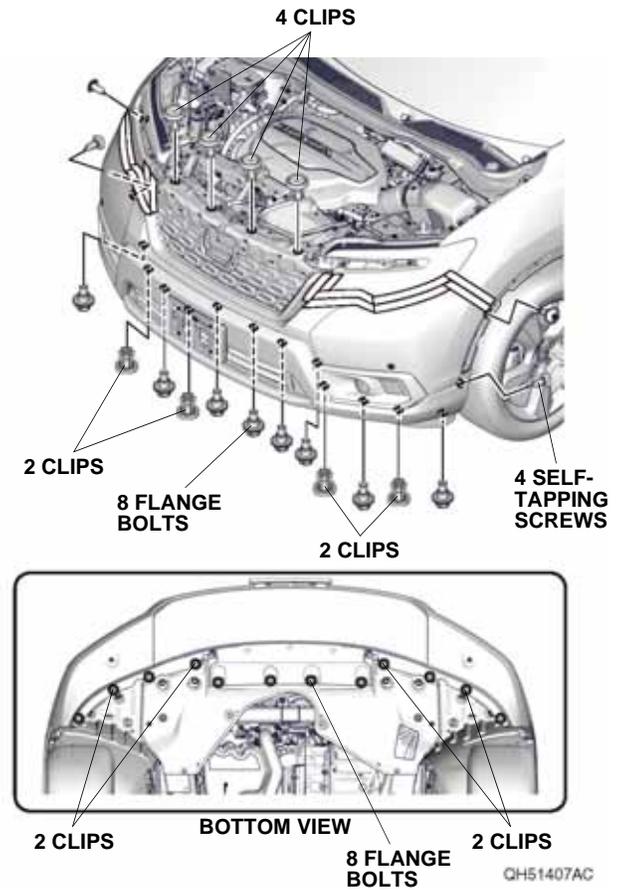


- With the help of an assistant, release the seven retaining tabs on each side.

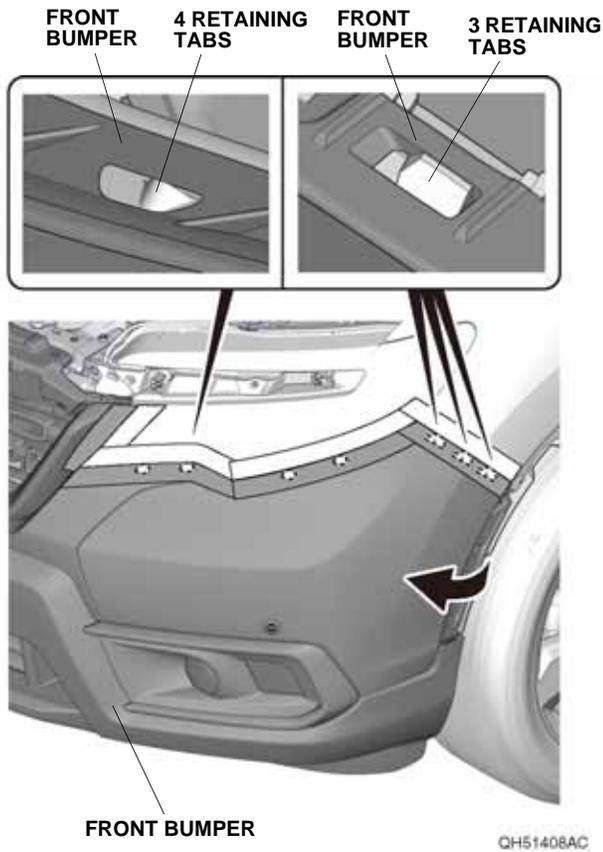


- Release the front grille.

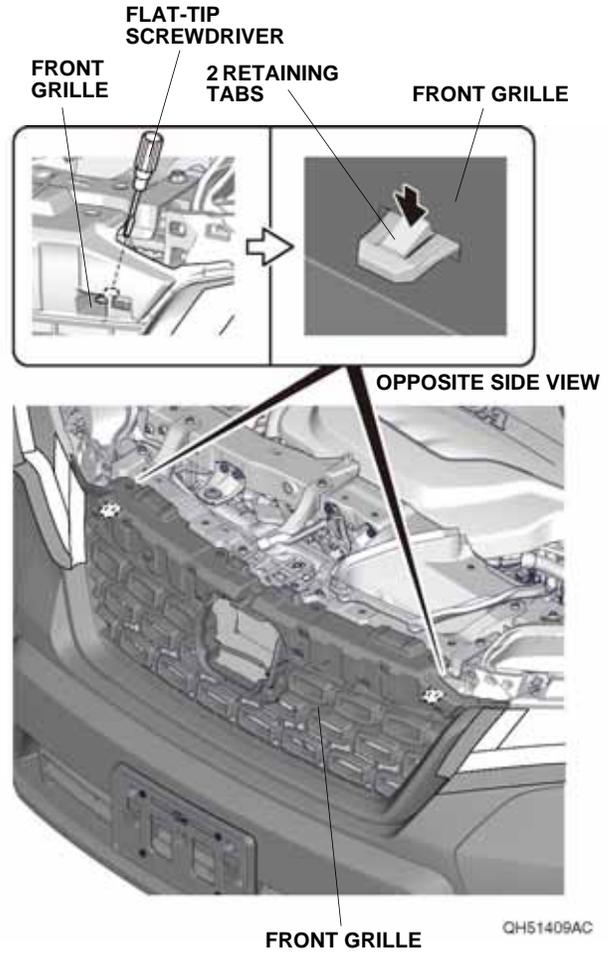


- With the help of an assistant, remove the front bumper, and unplug the vehicle connectors.
- Place the front bumper on a blanket.

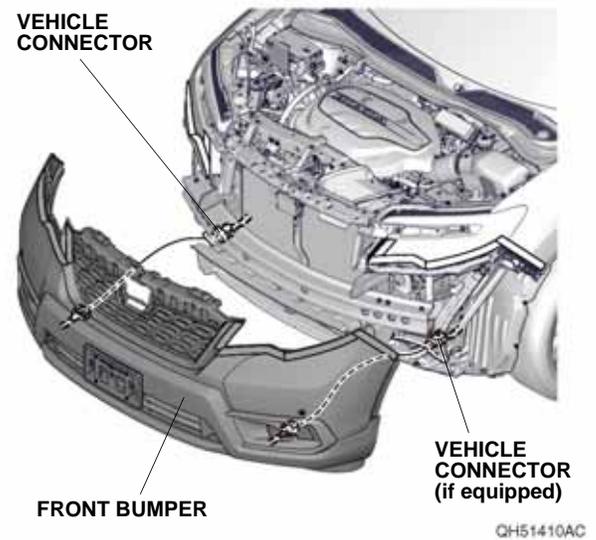

7. Open the right rear door.

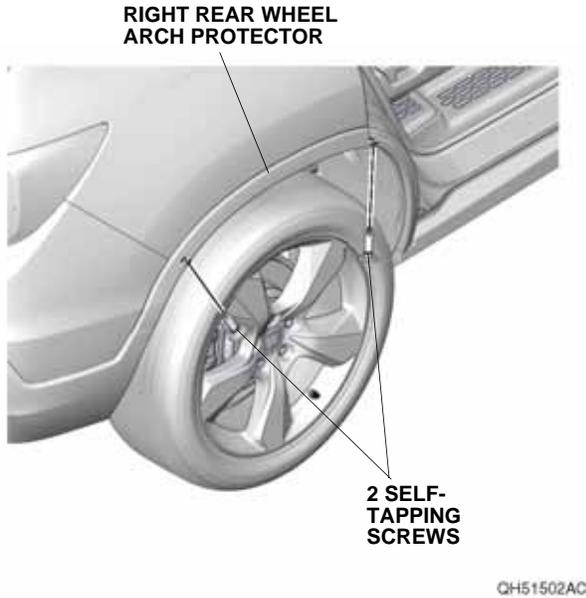


8. Remove the two self-tapping screws.
9. Remove the right rear wheel arch protector.

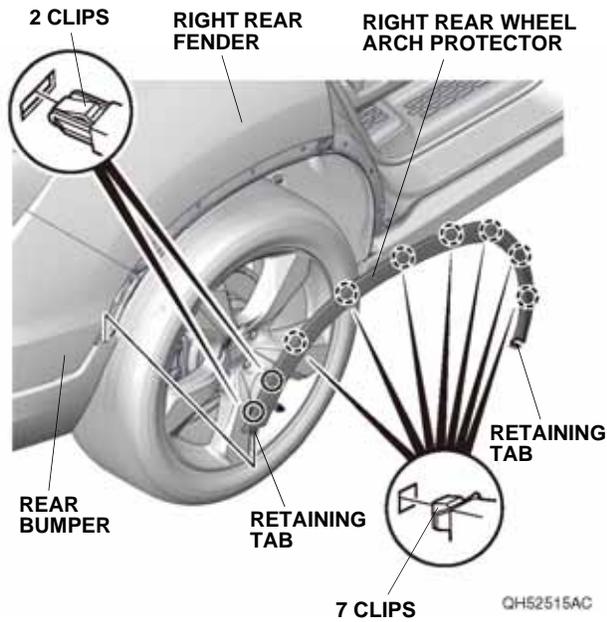


10. Repeat steps 7 through 9 on the left side of the vehicle.

11. Remove the rear bumper:


- Apply masking tape as shown.

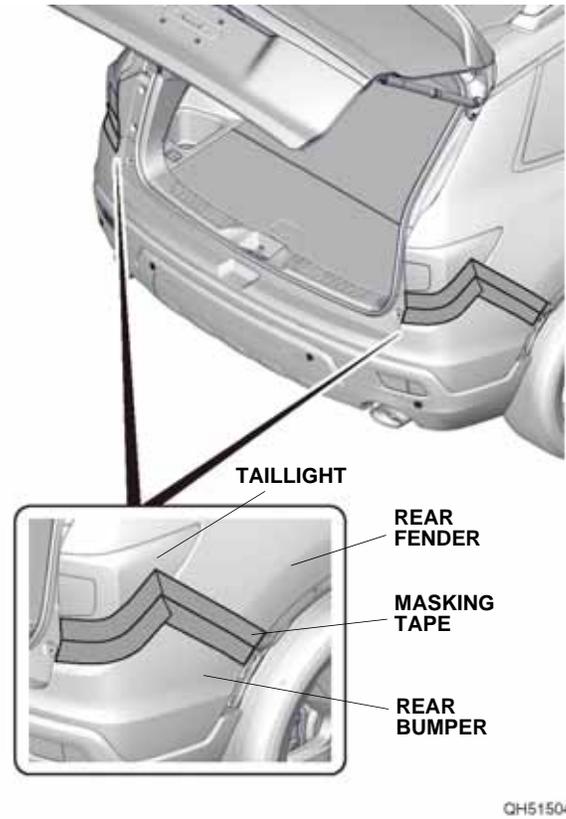

- Remove the two bumper screws, 10 self-tapping screws, and three clips.

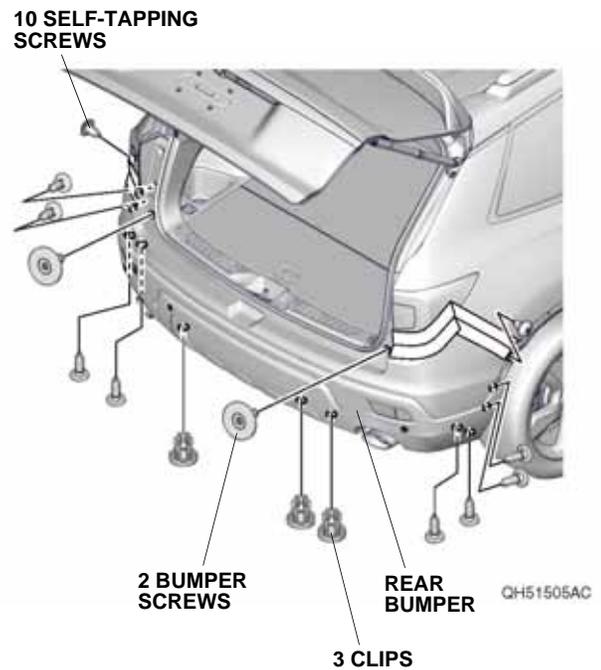


- With the help of an assistant, release the seven retaining tabs along the fenderwell on each side.

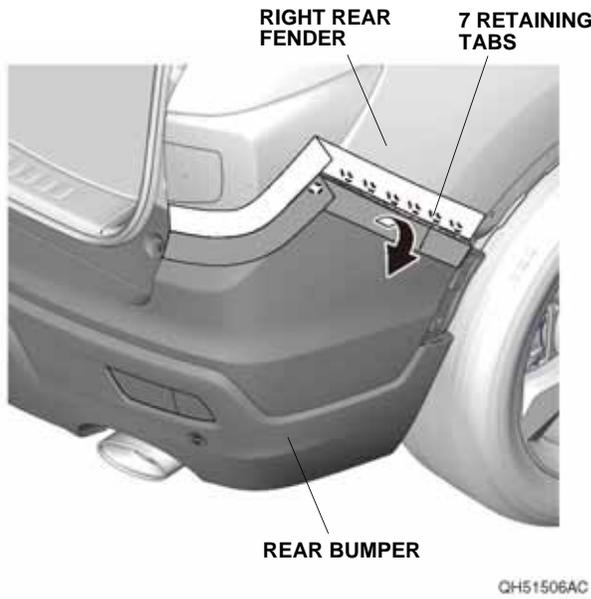


- With the help of an assistant, release the two retaining tabs on each side.




- With the help of an assistant, remove the rear bumper, and unplug the vehicle connectors.
- Place the rear bumper on a blanket.

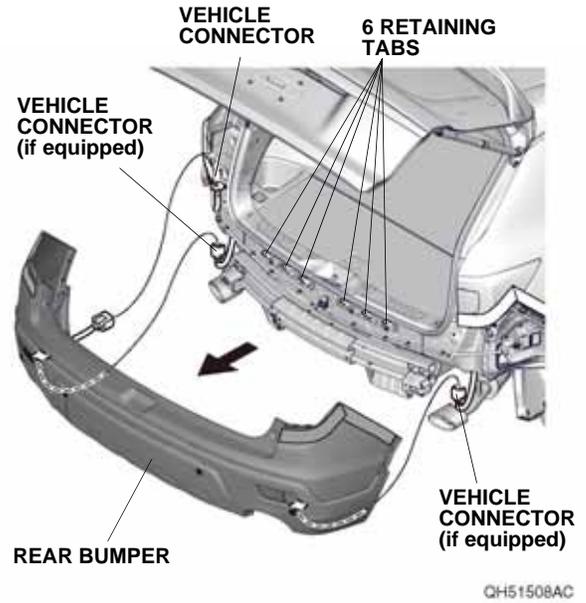

12. Remove the seven clips from the left front wheel arch protector.

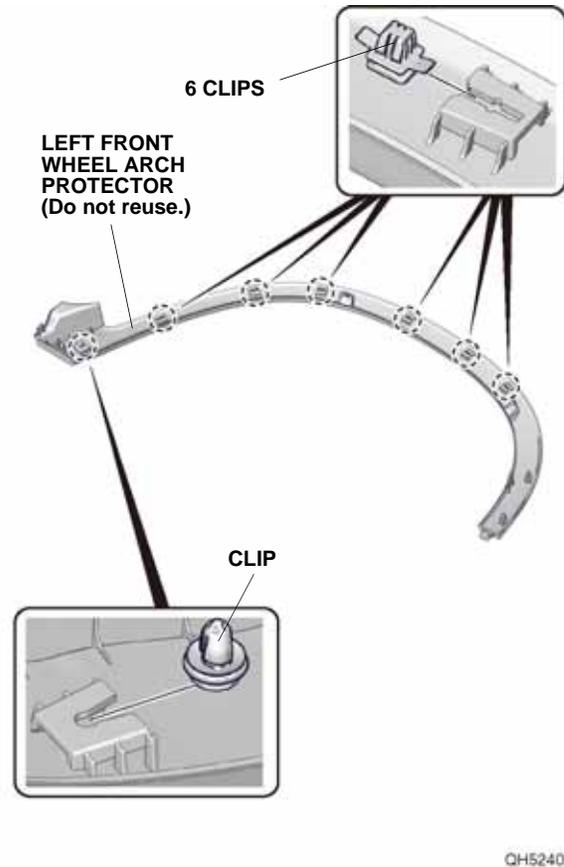


13. Install the seven clips removed in step 12 to the left front fender flare.

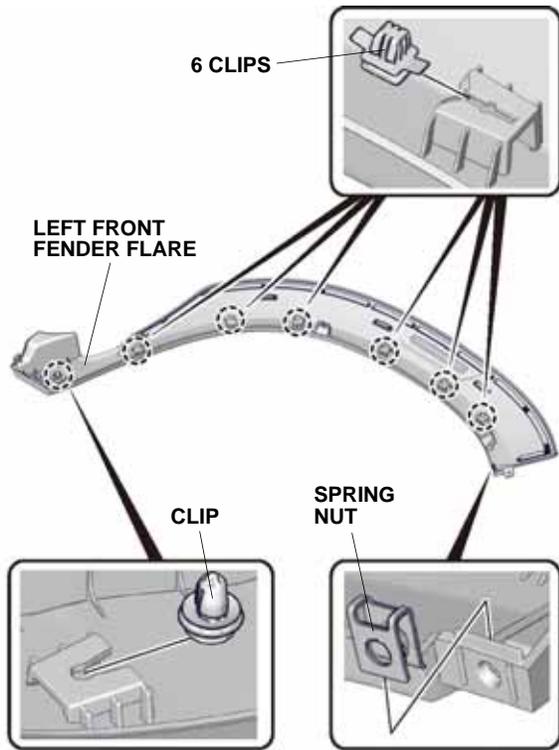


14. Install one spring nut to the left front fender flare as shown.
NOTE: Make sure to install the spring nut in the correct orientation.


15. Using the alcohol wipe, thoroughly clean the left front fender where the left front fender flare will attach.

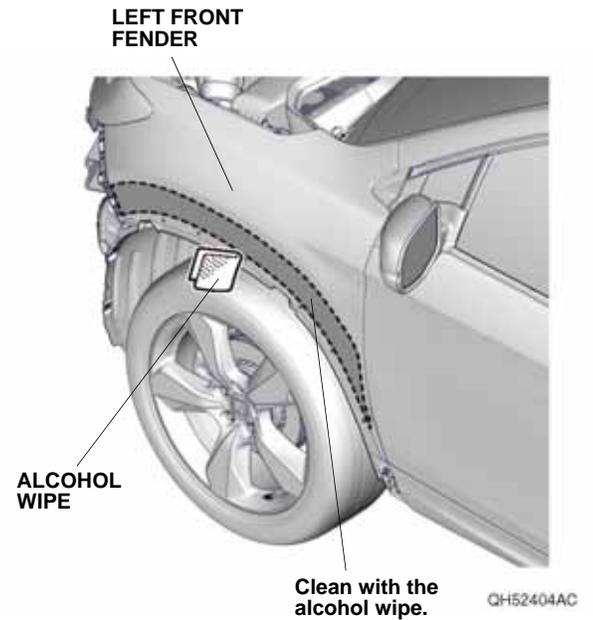


16. Peel back the adhesive backings, and tape them to the front surface of the left front fender flare with masking tape.

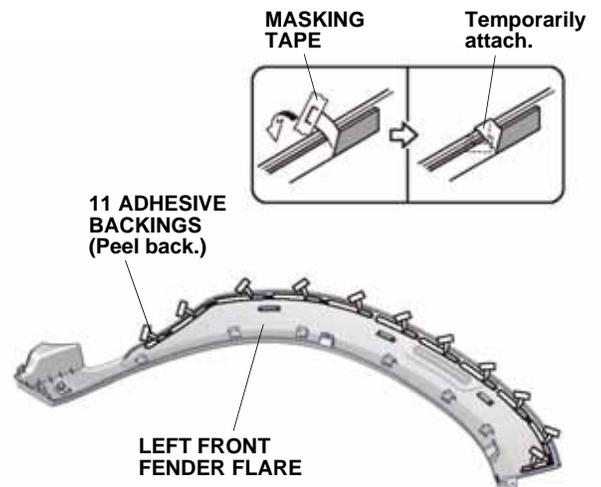

17. Install the left front fender flare to the left front fender with seven clips and two retaining tabs.

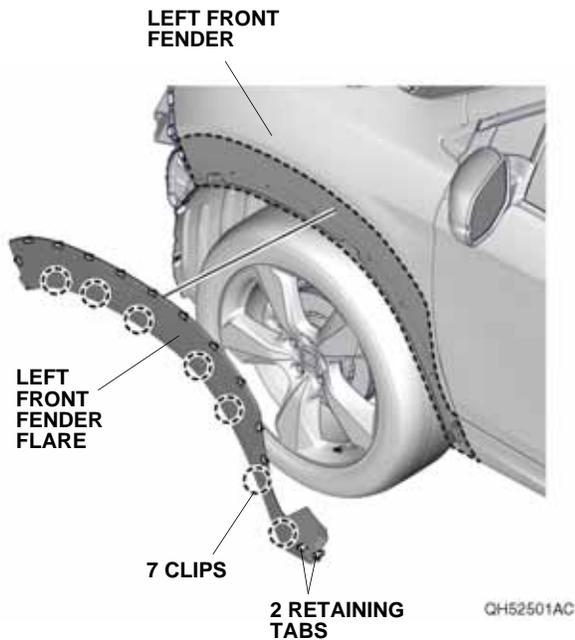


18. Secure the left front fender flare to the left front fender with the two self-tapping screws removed in step 3.

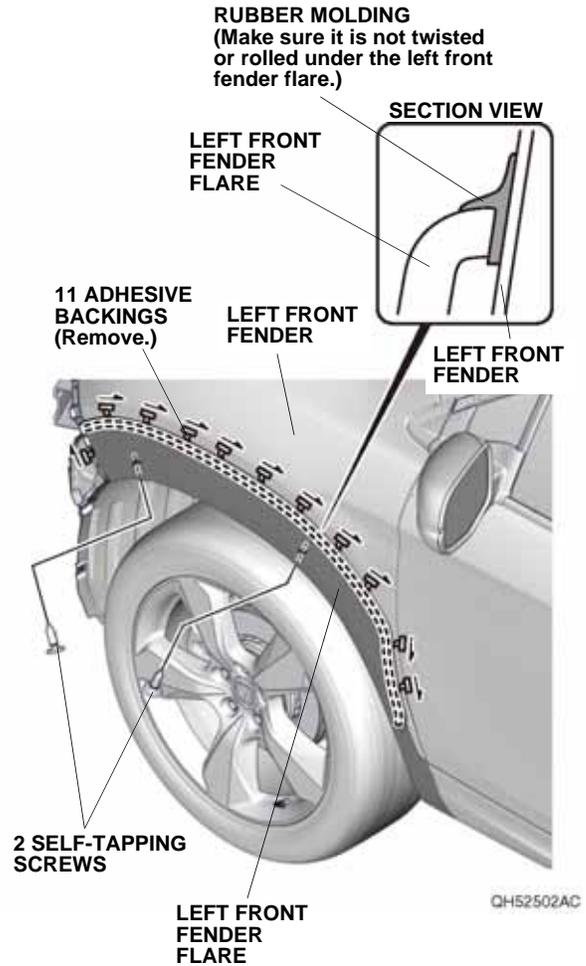


19. While applying light pressure against the left front fender flare, carefully remove the taped adhesive backings.
20. Using the palm of your hand, firmly press the left front fender flare against the left front fender.


21. Using a utility knife, cut out the left front inner fender as shown.

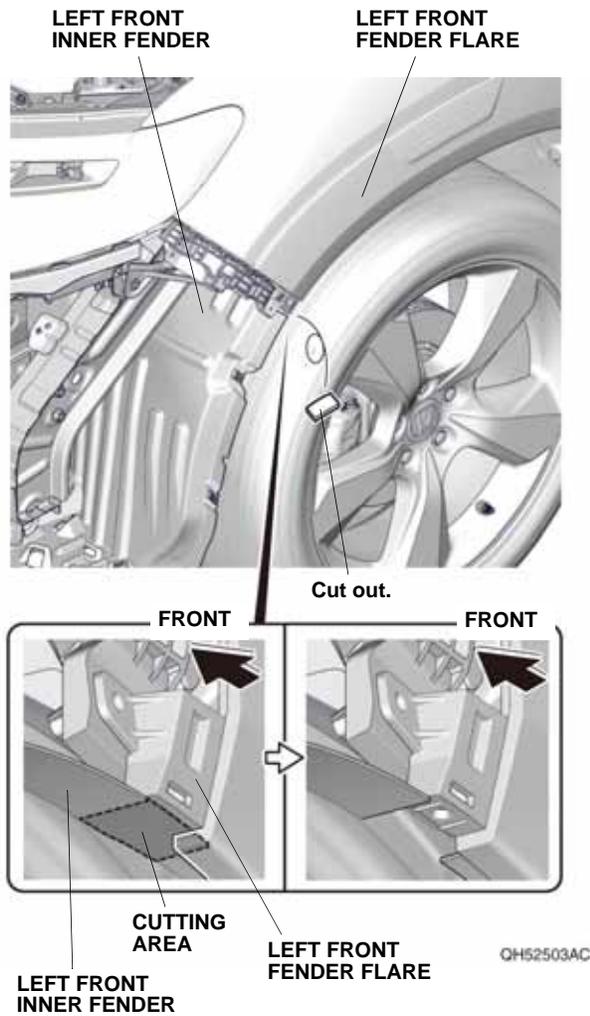


22. Secure the left front fender flare to the vehicle bracket with the self-tapping screw removed in step 6 from the front bumper.

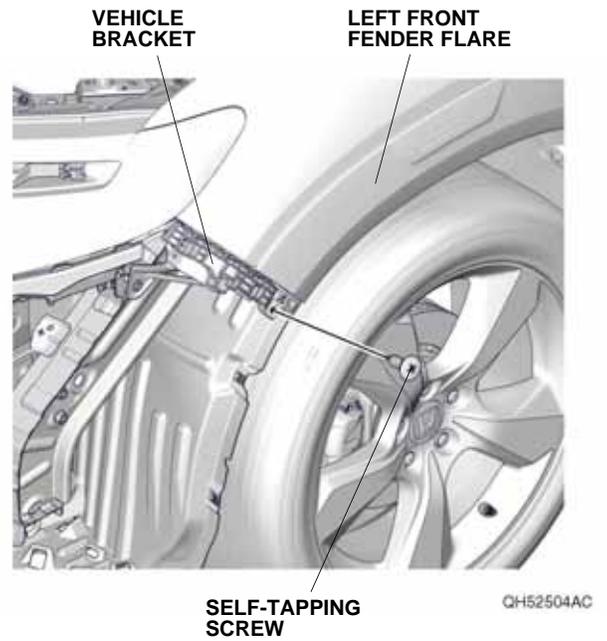


23. While wearing eye protection, use an air saw to cut the front bumper at the scribe line. Remove any burrs.

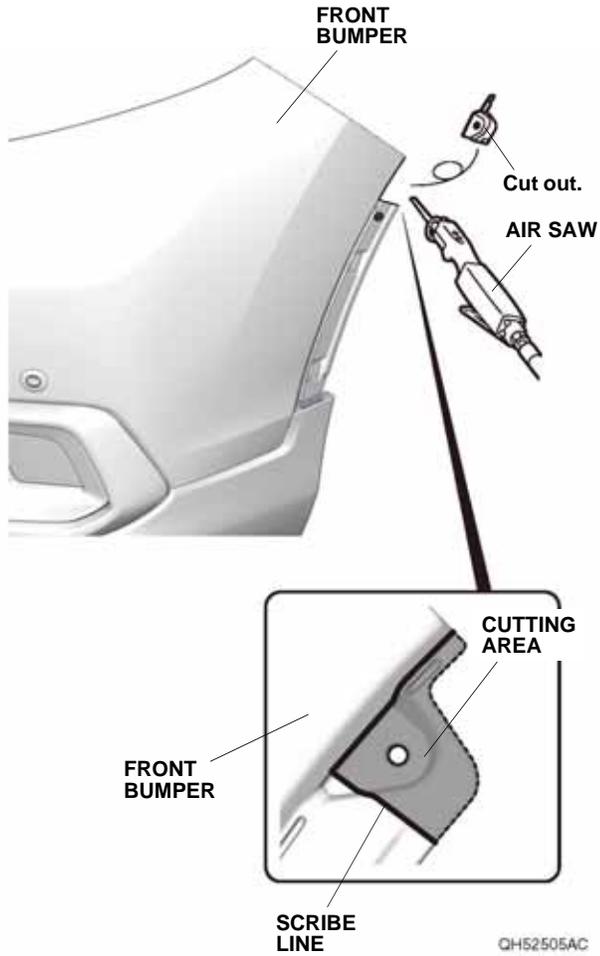

24. Using a pushpin, pierce the center of the scribe mark on the front bumper.
NOTE: Make sure to pierce perpendicular to the front bumper.

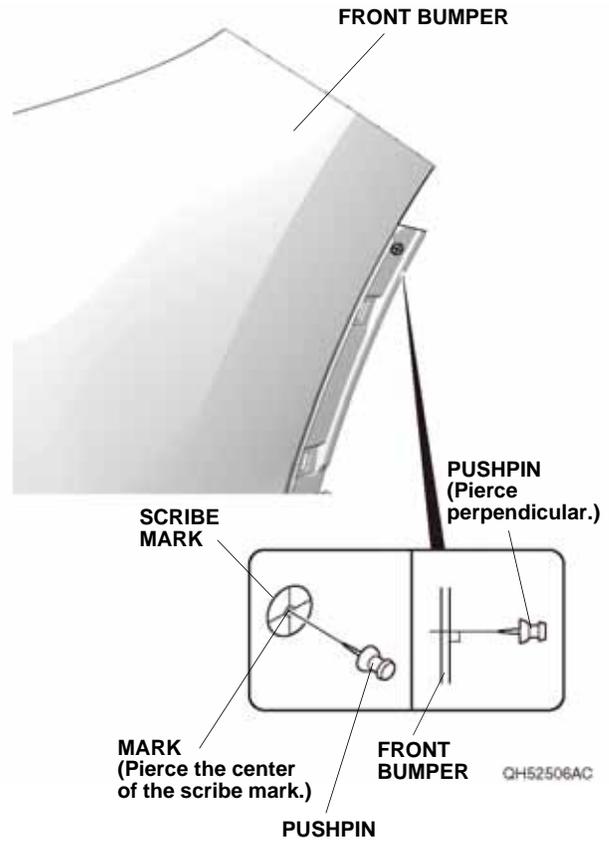


25. While wearing eye protection, drill the pierced mark on the front bumper to 5 mm. First drill with a 3 mm drill bit, and finish with a 5 mm drill bit. Remove any burrs.
NOTE: Make sure to drill perpendicular to the front bumper.

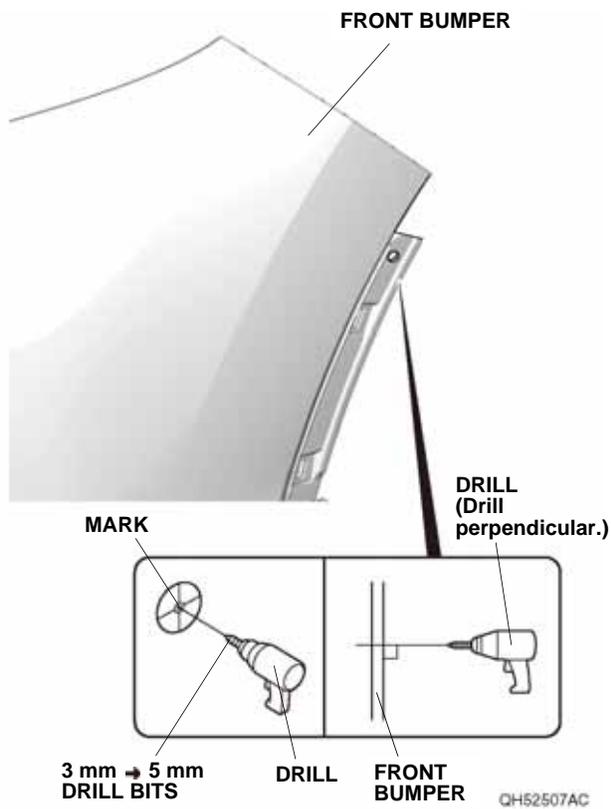


26. Repeat steps 12 through 25 on the right side of the vehicle and front bumper.


27. With the help of an assistant, temporarily install the front bumper. Do not secure the left and right front inner fenders in this step.

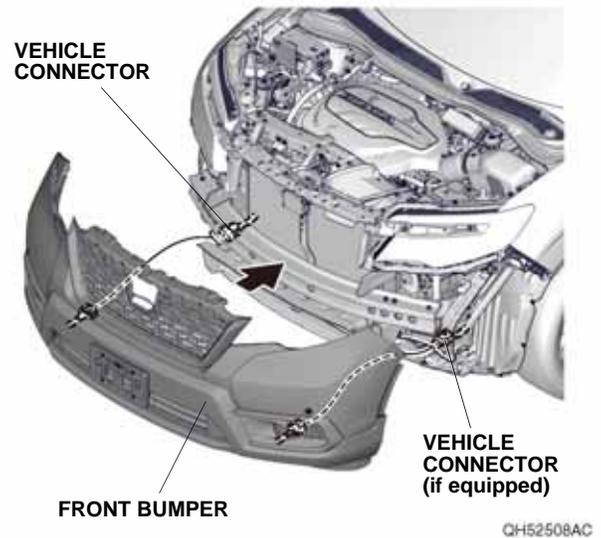


28. Install the two snap fit clips to the left front bumper flare.

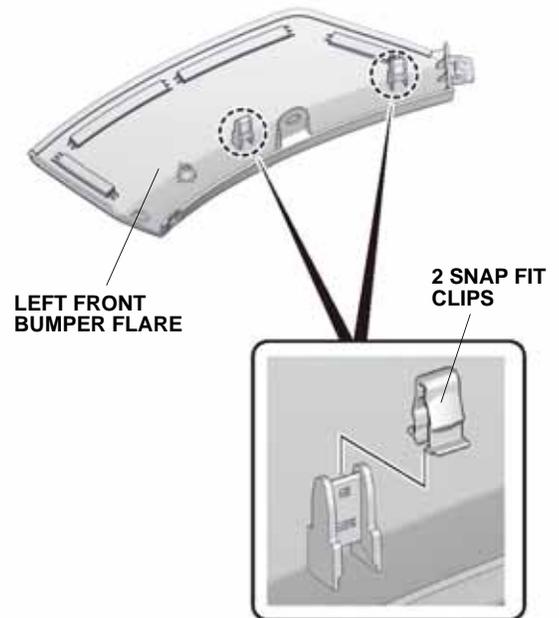


29. Using the alcohol wipe, thoroughly clean the front bumper where the left front bumper flare will attach.

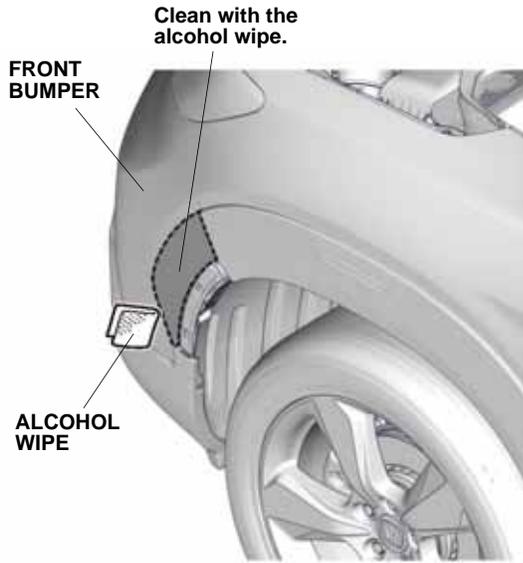


30. Peel back the adhesive backings, and tape them to the front surface of the left front bumper flare with masking tape.

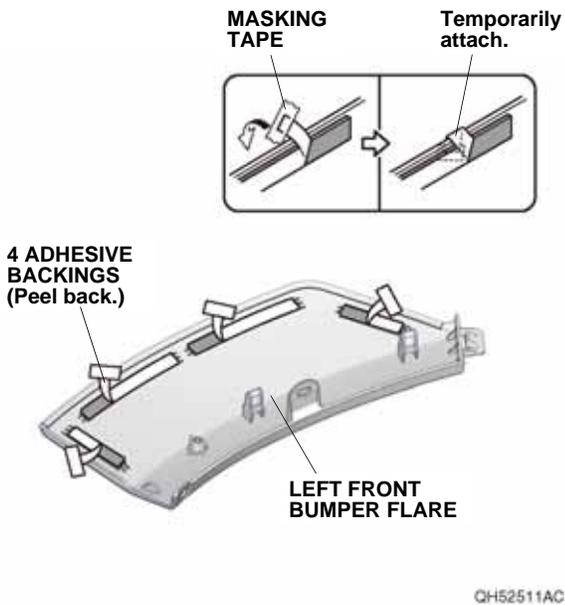


31. Install the left front bumper flare to the front bumper with two clips and one retaining tab.

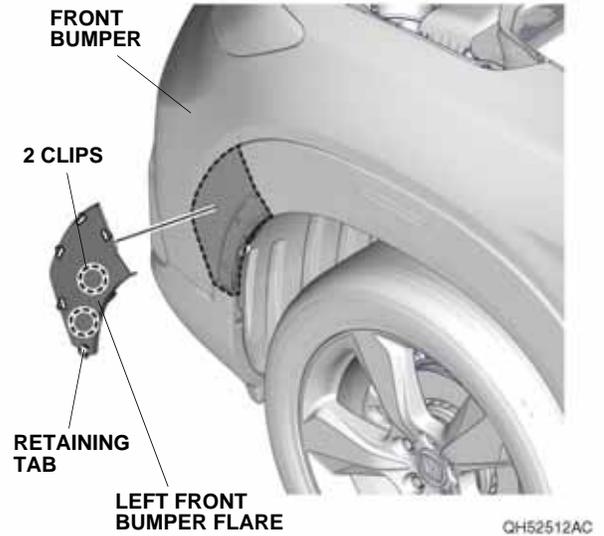

32. Pull back the left front inner fender. Secure the left front bumper flare to the front bumper with one washer and one 5 x 10 mm self-tapping screw.

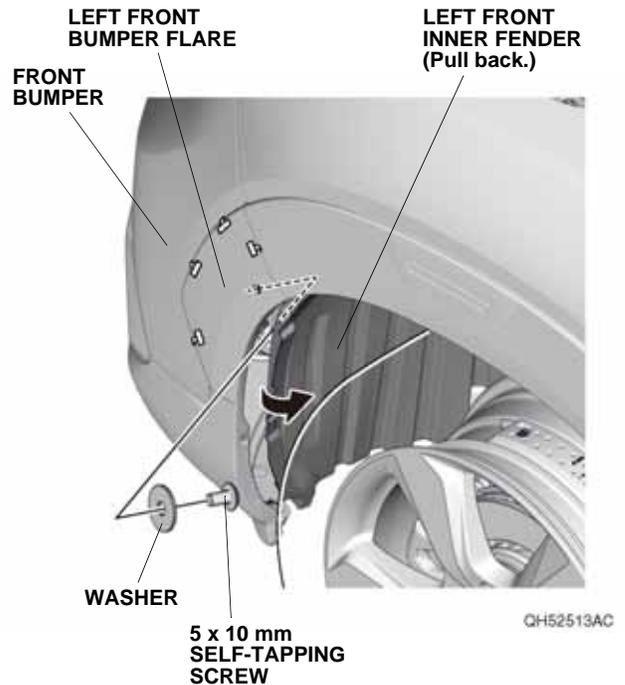


33. Secure the left front bumper flare to the front bumper with one 5 x 20 mm self-tapping screw supplied and one self-tapping screw removed in step 3.

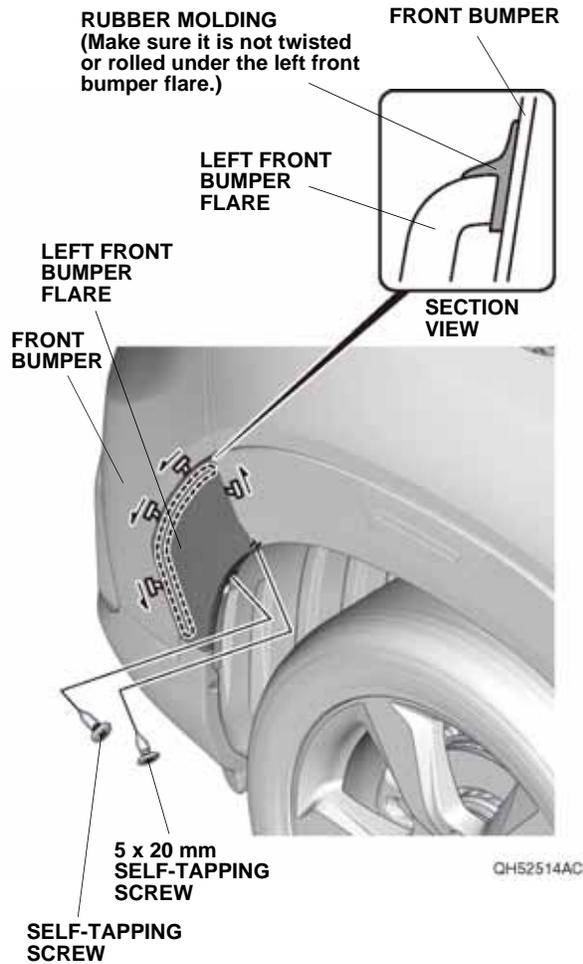


34. While applying light pressure against the left front bumper flare, carefully remove the taped adhesive backings.
35. Using the palm of your hand, firmly press the left front bumper flare against the front bumper.
36. Repeat steps 28 through 35 on the right side of the vehicle.


37. While wearing eye protection, use an air saw to cut the rear bumper at the scribe line. Remove any burrs. Repeat the same on the other side.

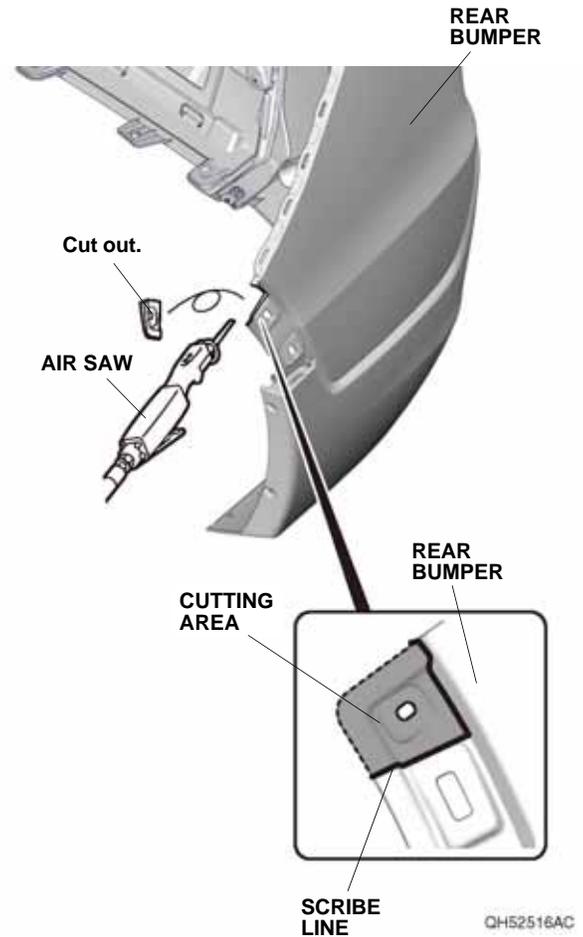


38. With the help of an assistant, temporarily install the rear bumper. Do not secure the left and right rear inner fenders in this step.

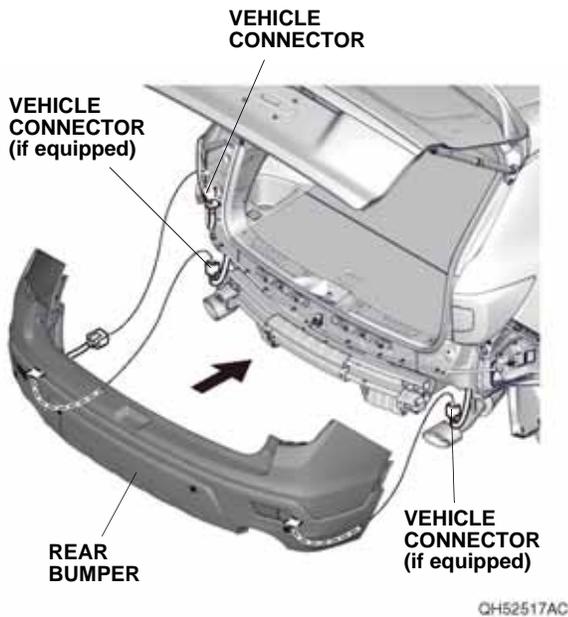

39. Remove the seven clips from the left rear wheel arch protector.

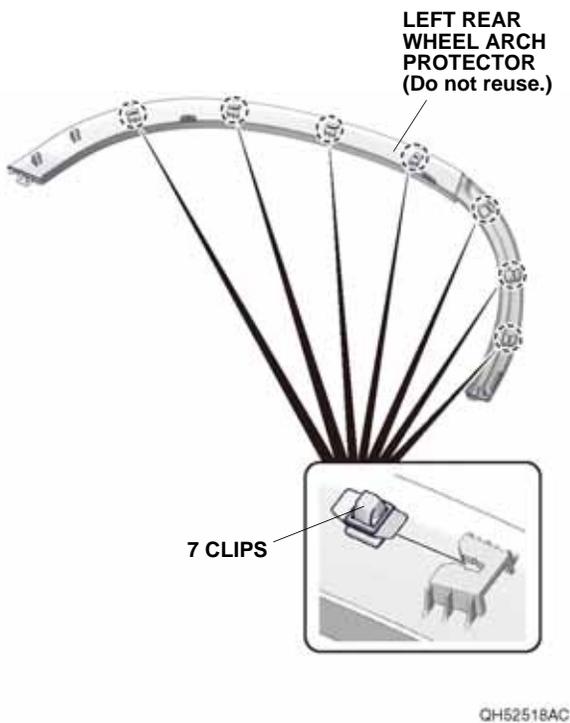

40. Install the seven clips removed in step 39 to the left rear fender flare.

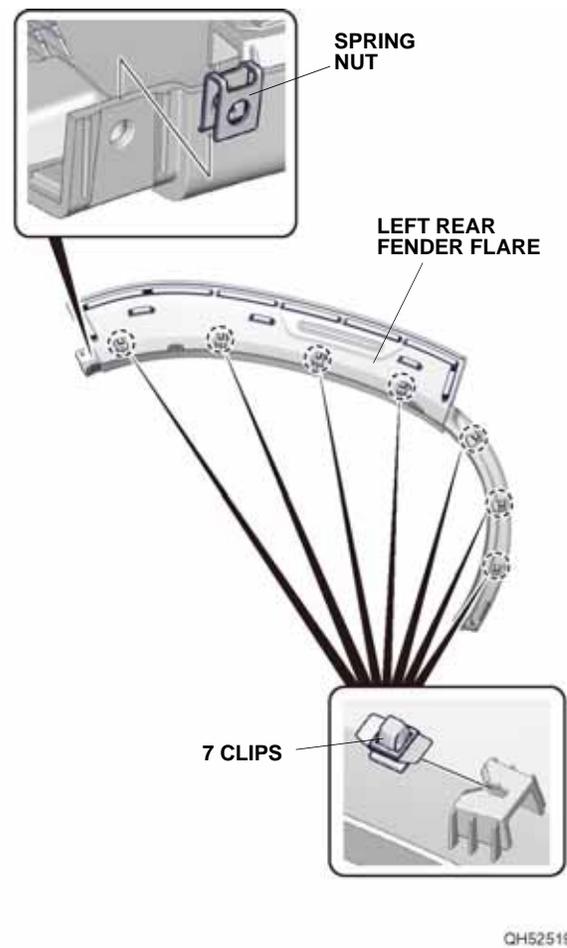


41. Install one spring nut to the left rear fender flare as shown.
NOTE: Make sure to install the spring nut in the correct orientation.

42. Using the alcohol wipe, thoroughly clean the left rear fender where the left rear fender flare will attach.




QH52520AC

44. Install the left rear fender flare to the left rear fender with seven clips and one retaining tab.

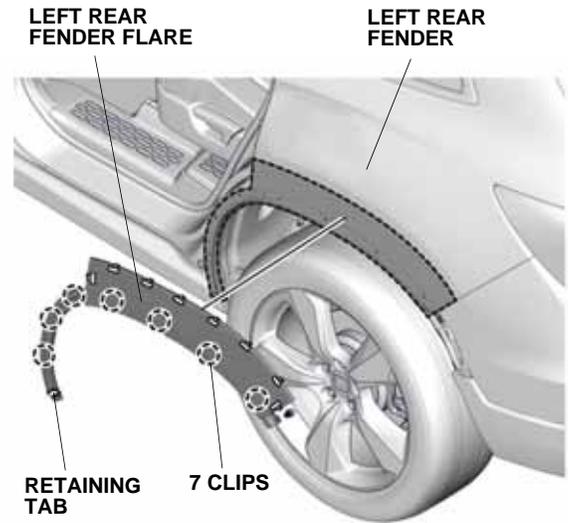


QH52522AC

43. Peel back the adhesive backings, and tape them to the front surface of the left rear fender flare with masking tape.

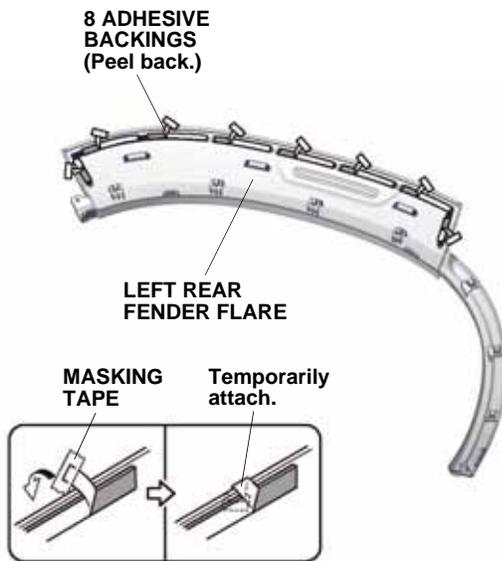


QH52521AC

45. Secure the left rear fender flare to the left rear fender with two self-tapping screws removed in step 8.

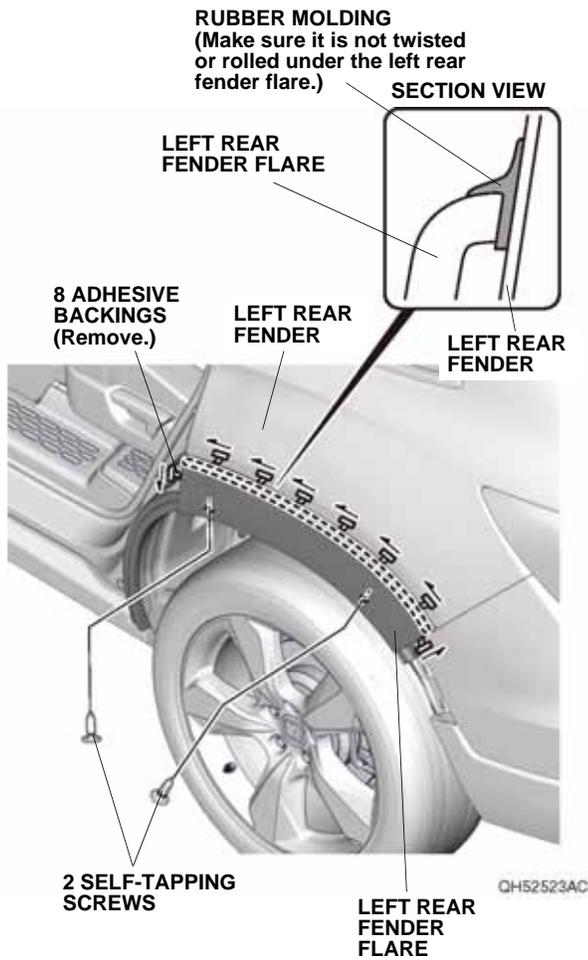


46. While applying light pressure against the left rear fender flare, carefully remove the taped adhesive backings.
47. Using the palm of your hand, firmly press the left rear fender flare against the left rear fender.


48. Secure the left rear fender flare to the rear bumper with one self-tapping screw removed in step 11 from the rear bumper.

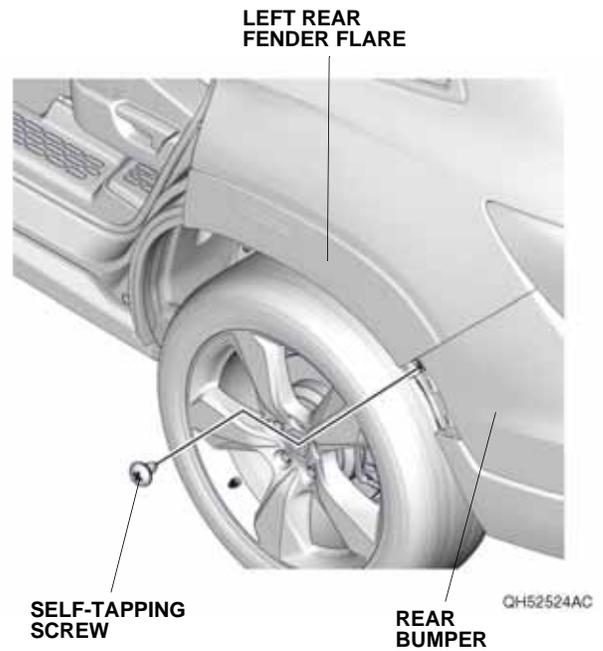


49. Remove the clip from the left rear door.

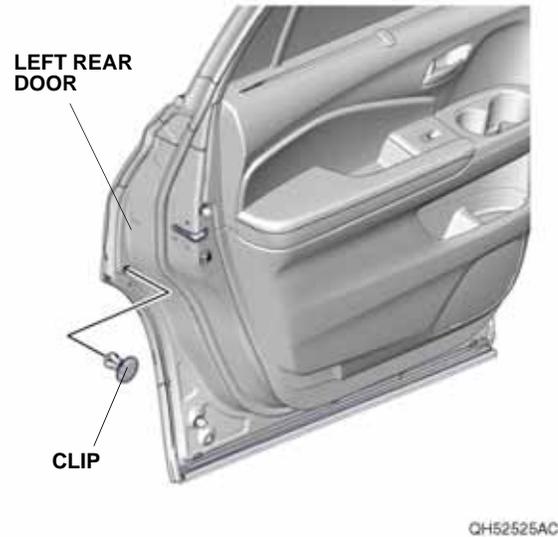


50. Close the left rear door.

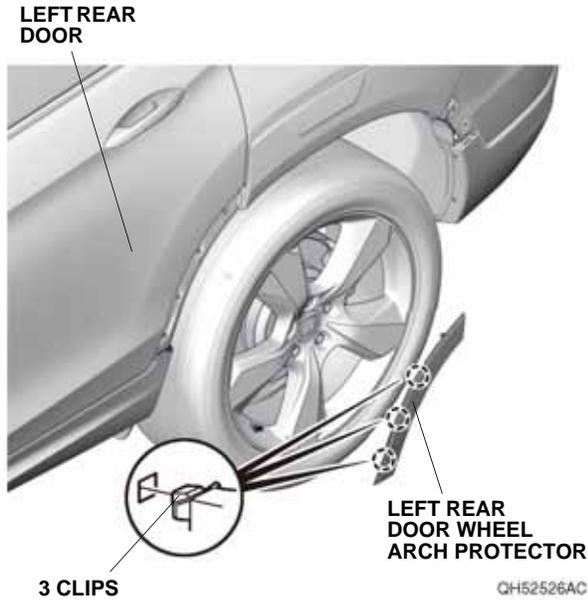


51. Remove the left rear door wheel arch protector.
52. Remove the three clips from the left rear door wheel arch protector.

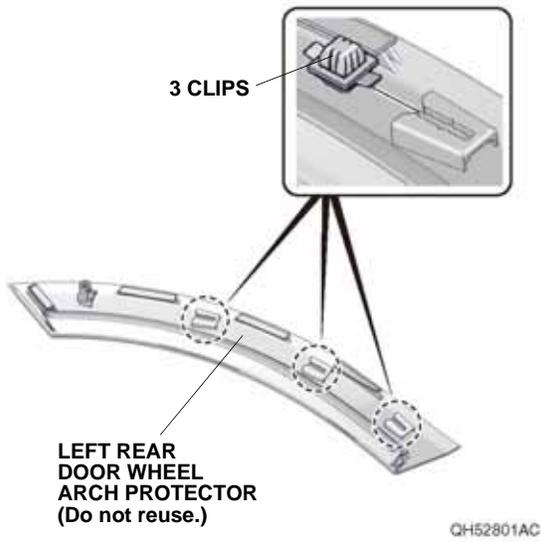


53. Install the three clips removed in step 52 to the left rear door flare.

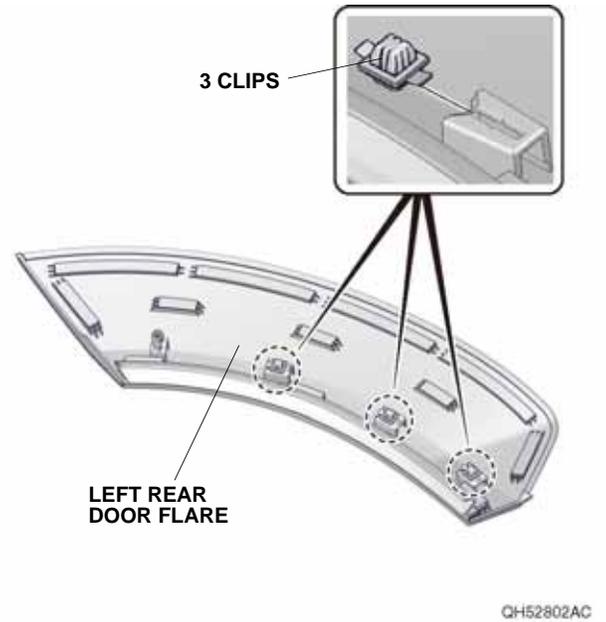


54. Using the alcohol wipe, thoroughly clean the left rear door where the left rear door flare will attach.

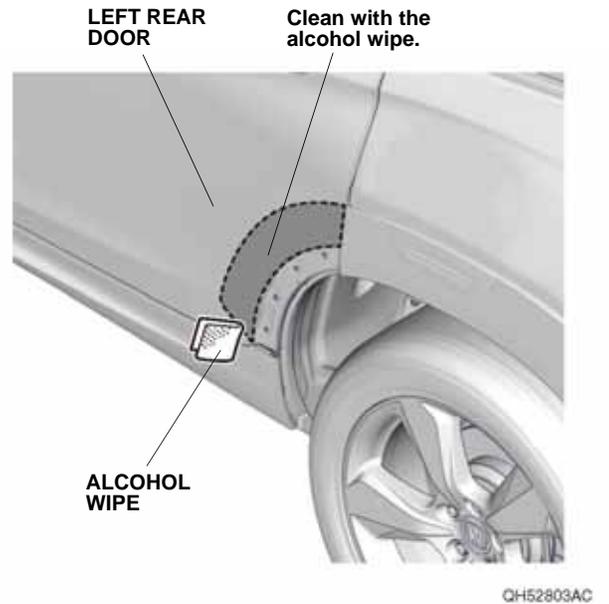


55. Peel back the adhesive backings, and tape them to the front surface of the left rear door flare with masking tape.

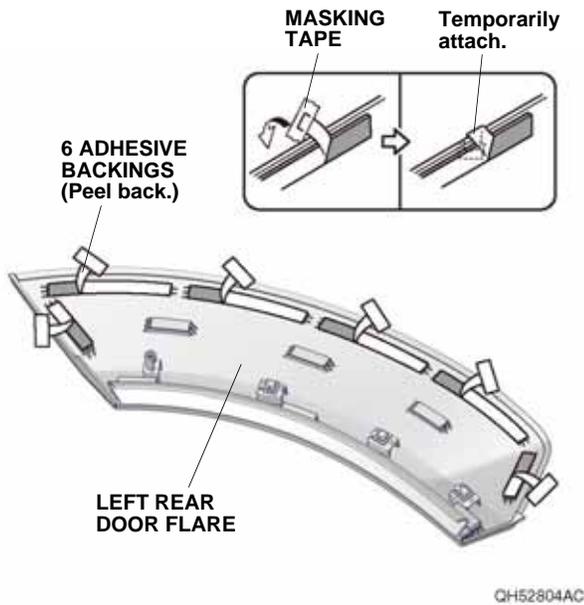

56. Install the left rear door flare to the left rear door with three clips.

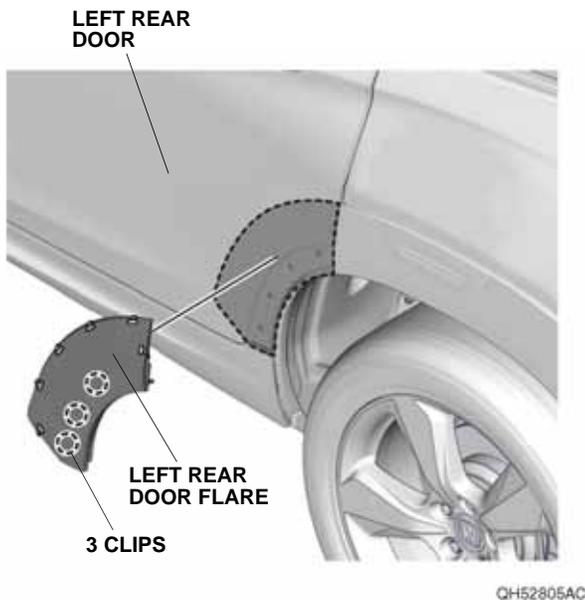


57. While applying light pressure against the left rear door flare, carefully remove the taped adhesive backings.

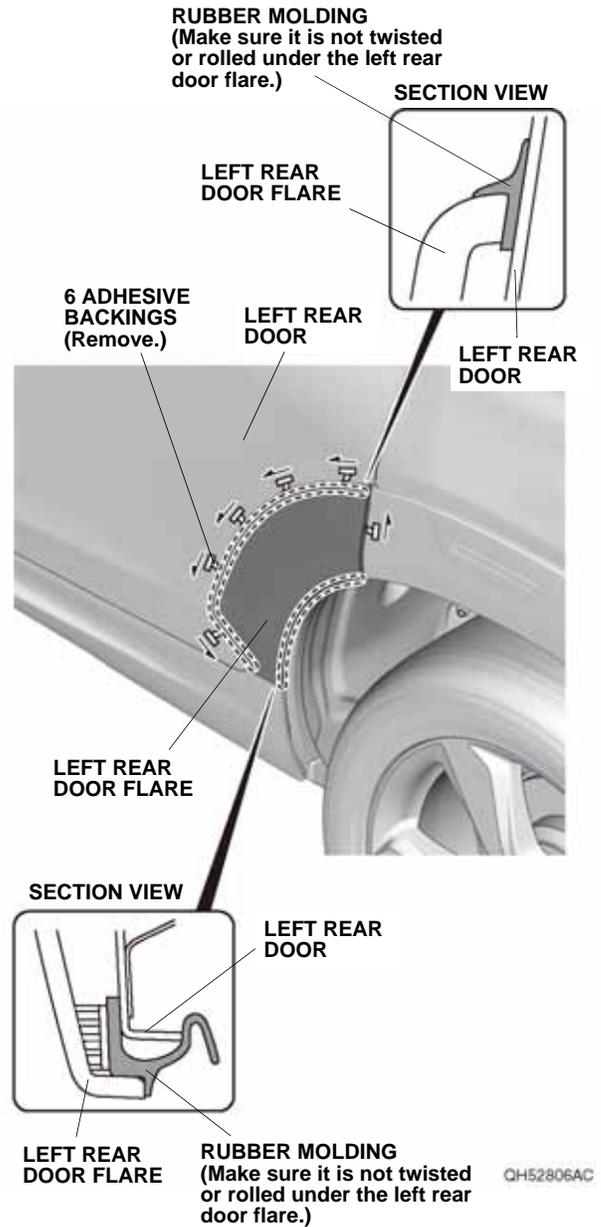


58. Using the palm of your hand, firmly press the left rear door flare against the left rear door.

59. Open the left rear door.

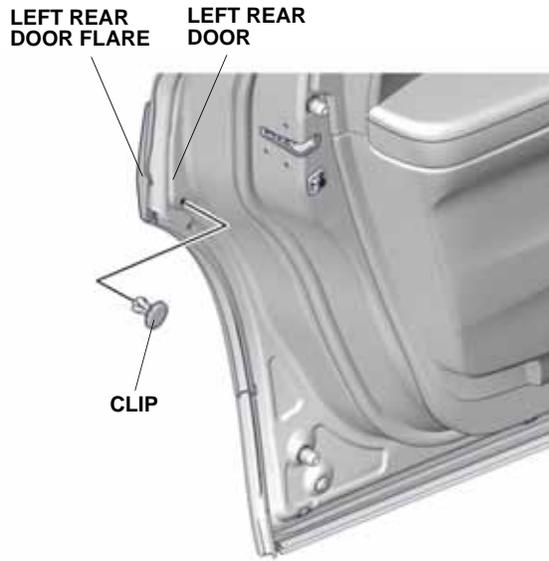


QH52807AC

60. Secure the left rear door flare to the left rear door with one clip removed in step 49.
61. Install the two snap fit clips to the left rear bumper flare.

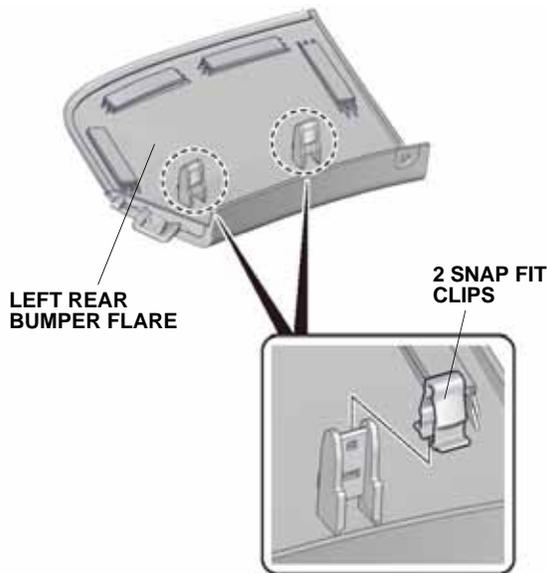


QH52808AC

62. Using the alcohol wipe, thoroughly clean the rear bumper where the left rear bumper flare will attach.

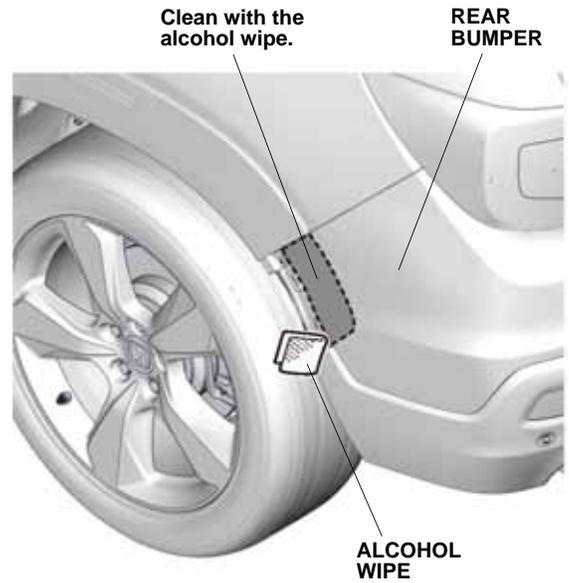


QH52809AC

63. Peel back the adhesive backings, and tape them to the front surface of the left rear bumper flare with masking tape.

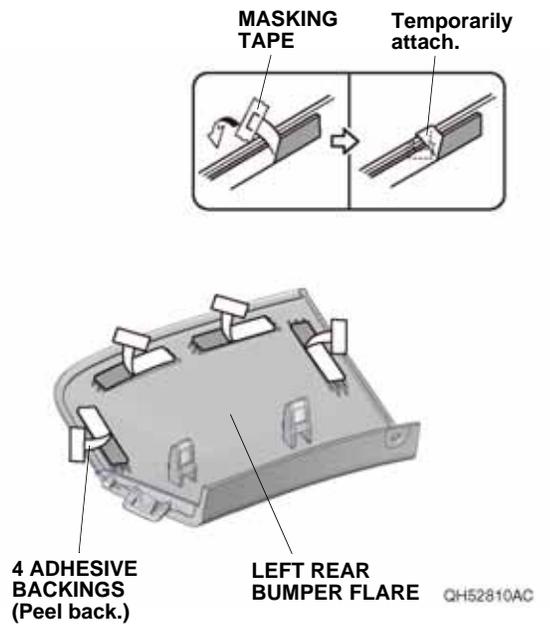


QH52810AC

64. Install the left rear bumper flare to the rear bumper with two clips and one retaining tab.

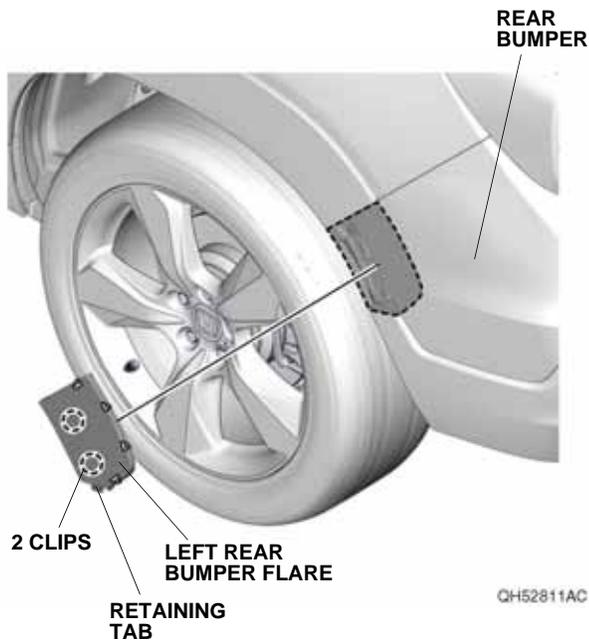

65. Secure the left rear bumper flare to the rear bumper with one 5 x 20 mm self-tapping screw.

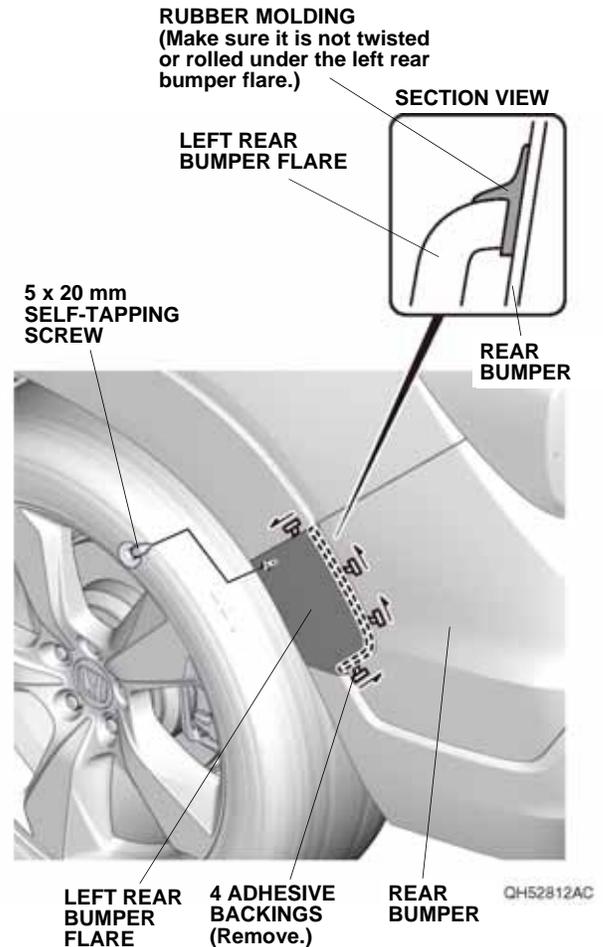

66. While applying light pressure against the left rear bumper flare, carefully remove the taped adhesive backings.
67. Using the palm of your hand, firmly press the left rear bumper flare against the rear bumper.
68. Repeat steps 39 through 67 on the right side of the vehicle.
69. Check that all wire harnesses are routed properly and all connectors are plugged in.
70. Install all removed parts except for the front bulkhead cover and the intake air tube.
71. Connect the negative cable to the battery.
72. Install the front bulkhead cover and the intake air tube.
73. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
74. Set the clock on vehicles without navigation.
75. If necessary, restore the systems back to normal operation as described in the service information.