**INSTALLATION INSTRUCTIONS**  Accessory

**RUNNING BOARDS** P/N 08L33-TGS-100F

**2022 PASSPORT** 

Publications No. **VERSION 1** 

> Issue Date **NOV 2021**

#### **PARTS LIST**

Left running board



Left bracket C



Right running board



Right bracket C



Left bracket A



24 Flange bolts



Right bracket A



**TOOLS AND SUPPLIES REQUIRED** 

Ratchet File


13 mm Socket

Torque wrench

Utility knife

Touch-up paint

Illustration of the Running Boards on the Vehicle

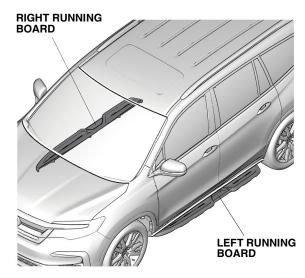

QH32201AN

Left bracket B



Right bracket B




#### INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

#### NOTE:

- Thoroughly clean the bottom of the body between the front and rear wheels.
- Be careful not to damage the body paint finish.
- 1. Using a utility knife, cut out the left side sill panel as shown. Remove any burrs.

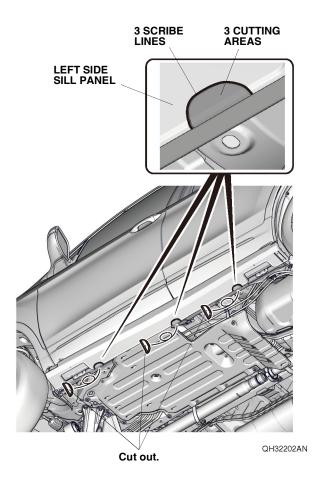


2. Remove the undercoating as shown. Apply touch-up paint where you removed the undercoating and allow it to dry thoroughly.

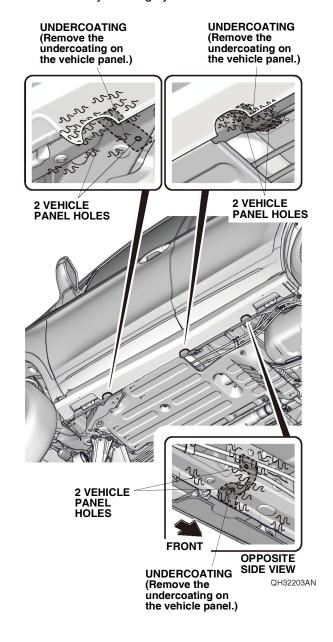


 Loosely install the left bracket A, left bracket B, and left bracket C to the vehicle panel with six flange holts


NOTE: Make sure that the brackets are installed in the correct positions and orientations.

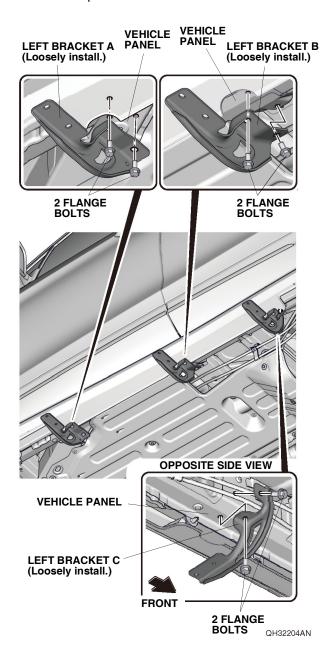

4. With the help of an assistant, install the left running board to the left bracket A, left bracket B, and left bracket C with six flange bolts. Torque the flange bolts to 20 lb-ft (27 N·m).

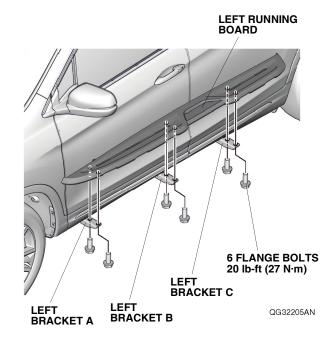

5. Tighten the six flange bolts loosely installed in step3. Torque the flange bolts to 20 lb-ft (27 N·m).

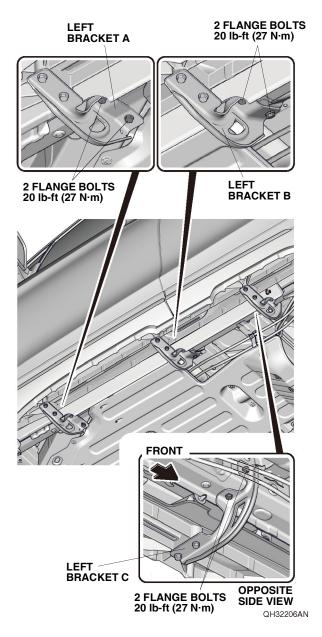

6. Repeat steps 1 through 5 on the right side of the vehicle.