

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS


Accessory  
**FENDER FLARES**

Application  
**2022 PASSPORT**

Publications No.  
**VERSION 2**  
Issue Date  
**NOV 2021**

## GENERAL VIEW

If you are also installing door lower trim, install them before you install the fender flares.

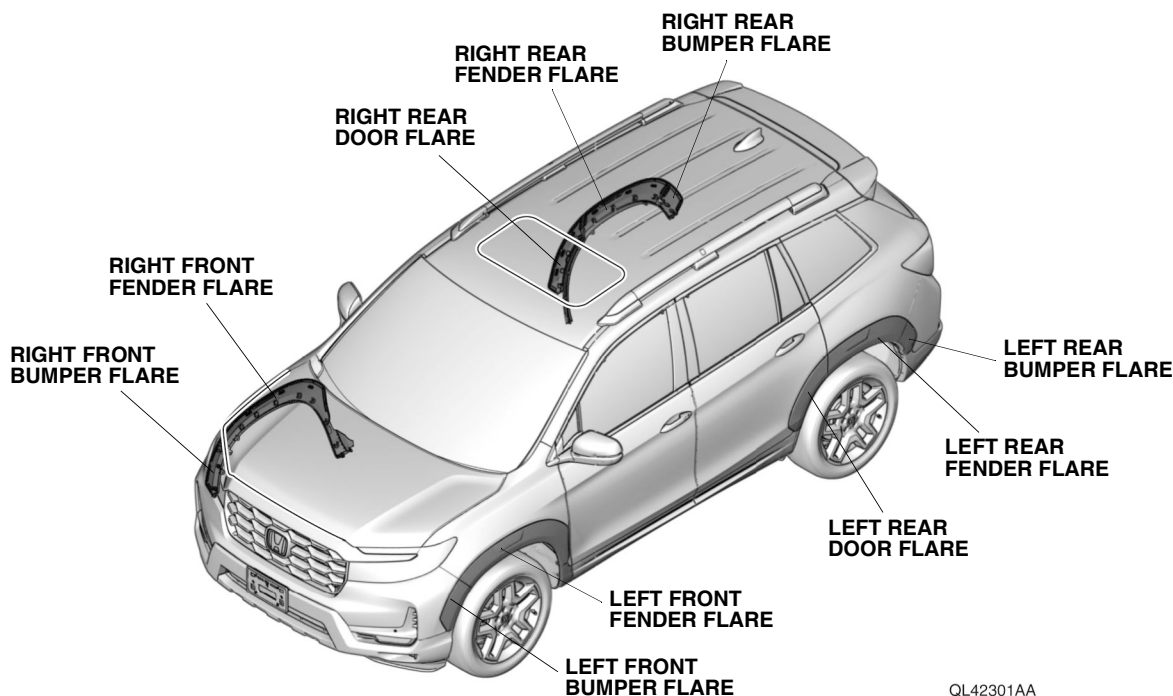

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts

Always disconnect the negative cable from the battery before beginning work.

## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

# Germain Honda of College Hills

















## PARTS LIST

### Fender Flares Kit

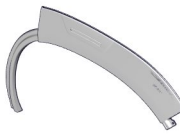(P/N 08P21-TGS-100B)

(P/N 08P21-TGS-P00B)

(\*: The part differs depending on the kit.)

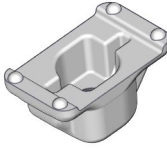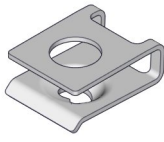Left front bumper flare	Right front bumper flare	Left front fender flare	Right front fender flare
			
Left rear door flare	Right rear door flare	Left rear fender flare	Right rear fender flare
			
Left rear bumper flare	Right rear bumper flare	Clips (8)	*Alcohol wipes (10) (P/N 08P21-TGS-100B)
			
4 x 12 mm Self-tapping screws (2)	5 x 20 mm Self-tapping screws (4)	Caps (2)	Spring nuts (4)
			

# Germain Honda of College Hills

## REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- 10 mm Socket
- Shop towel
- File
- 3 mm, 6 mm, 8 mm, and 12 mm Drill bits
- Stubby Phillips screwdriver
- 10 mm Open end wrench
- Pushpin
- Utility knife
- Eye protection (face shield, safety goggles, etc.)
- Ratchet
- Blanket
- Drill
- Masking tape

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Air Saw (T/N AT192A)
- Rubber Roller (T/N MHLE54D)




# Germain Honda of College Hills

## INSTALLATION


1. Wrap a shop towel.

### NOTE


Do not remove the shop towel until after the parts are installed.



HOOD LATCH  
LEVER

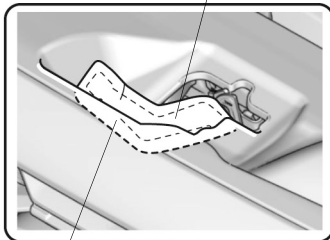


SHOP  
TOWEL

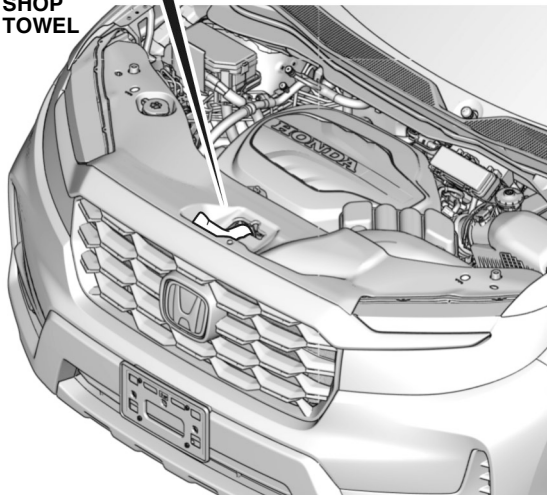

QL42302AA

2. Remove the front bulkhead cover.


10 CLIPS

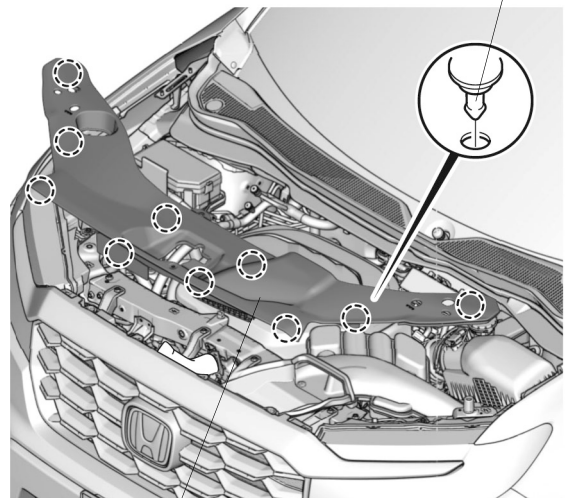

FRONT BULKHEAD  
COVER


QL42303AA

3. Remove the intake air tube.



2 CLIPS


INTAKE  
AIR TUBE

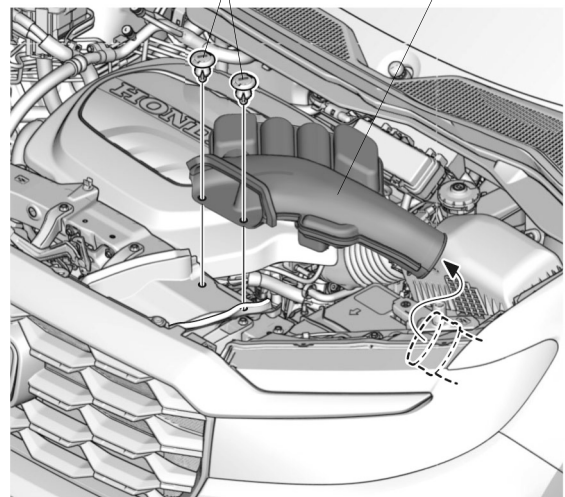

QL42304AA


# Germain Honda of College Hills

4. Disconnect the negative cable from the battery.

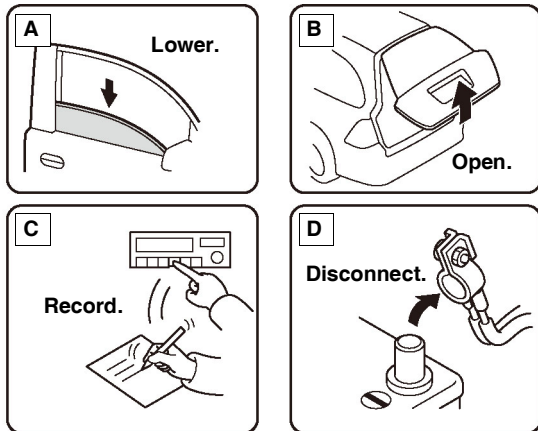


QCD0504BM

5. Remove the self-tapping screws.

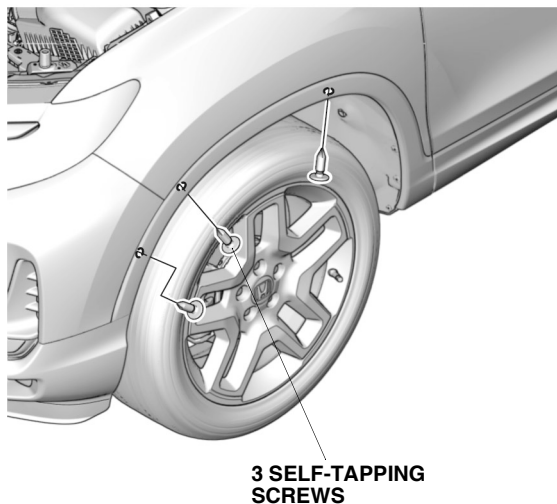


QL42305AA

6. Open the front driver side door and remove the left front wheel arch protector.

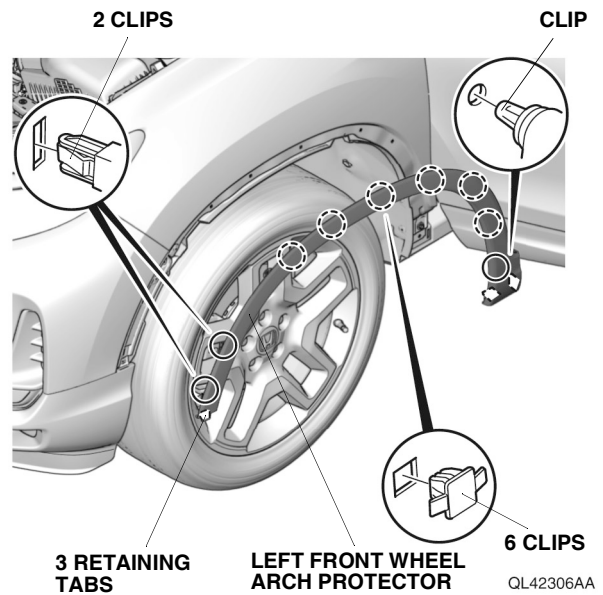


7. Close the front driver side door.  
8. Repeat same procedures on the other side.

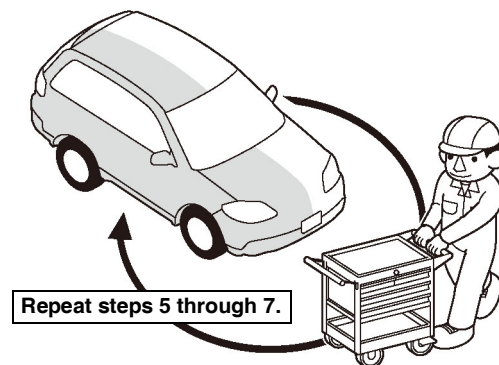

Q9D1014AM

# Germain Honda of College Hills


9. Remove the front upper grille.

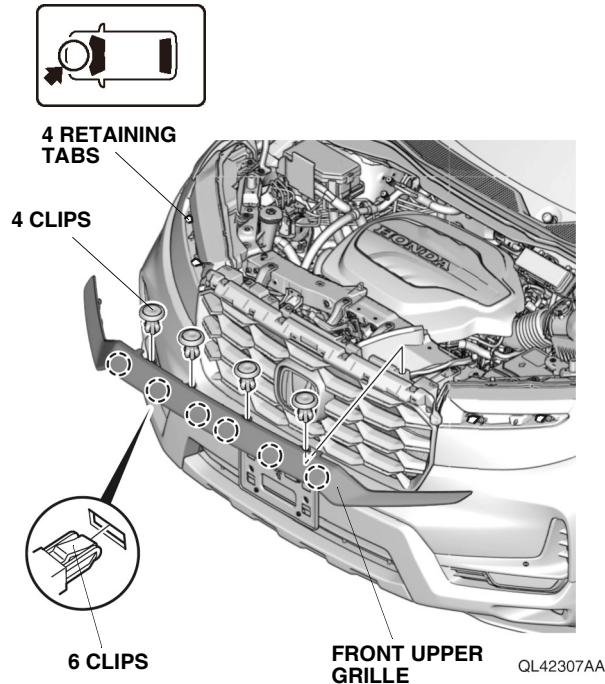

10. Attach masking tape to protect the vehicle.


## NOTE

Do not remove the masking tape until after the parts are installed.

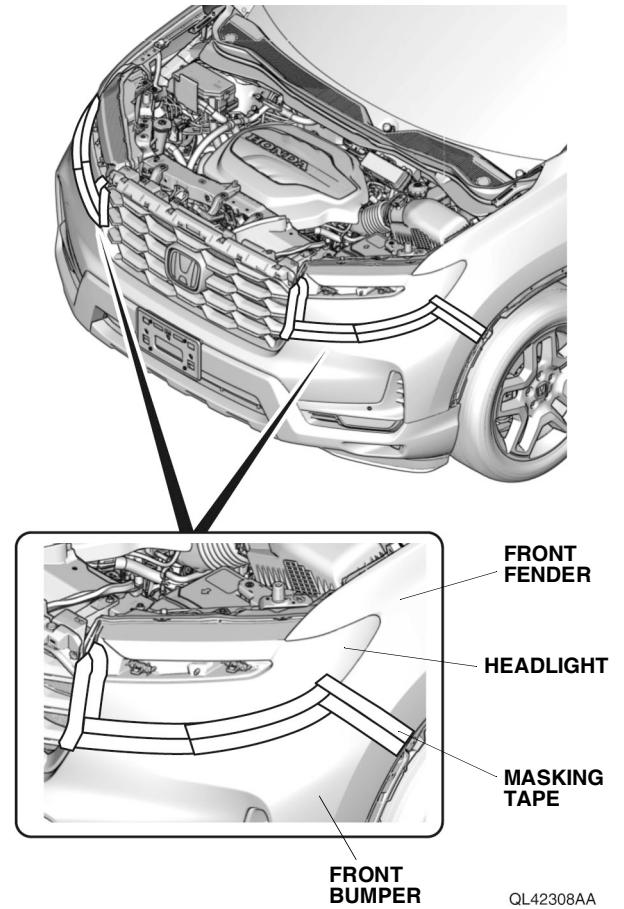

# Germain Honda of College Hills

11. Remove the clips, bolts, and self-tapping screws.

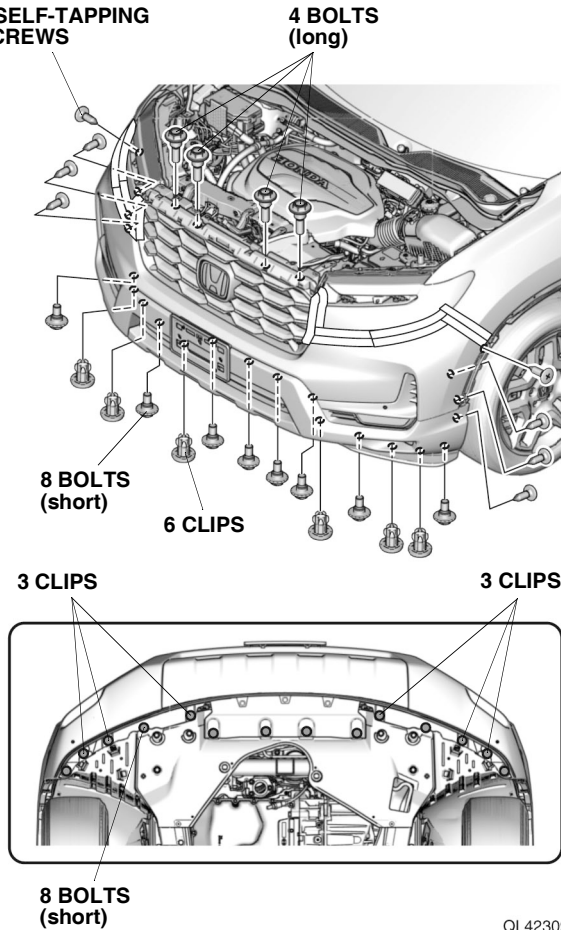


QL42309AA



12. Release the retaining tabs.

## NOTE


- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.



4 RETAINING TABS

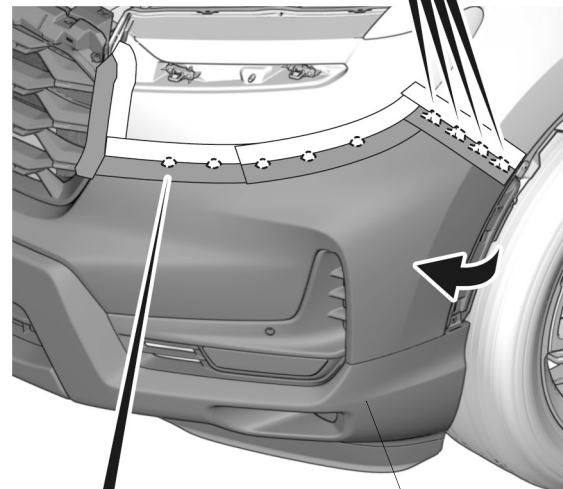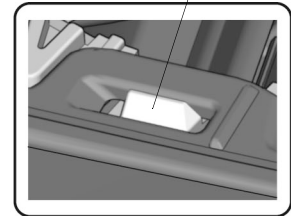

FRONT BUMPER

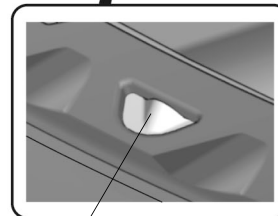

5 RETAINING TABS


QL42310AA

13. Repeat step 12 on the other side.




# Germain Honda of College Hills


14. Remove the front bumper.

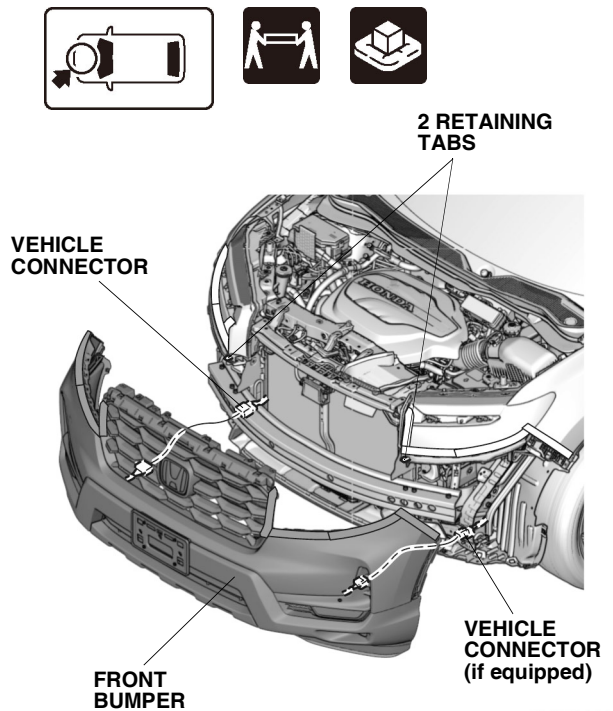


15. Open the left rear door and remove the self-tapping screws.

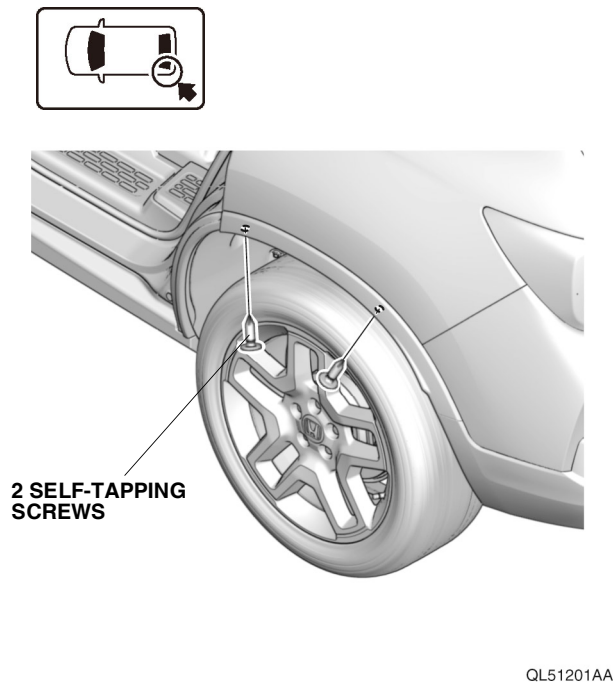

16. Remove the left rear wheel arch protector.

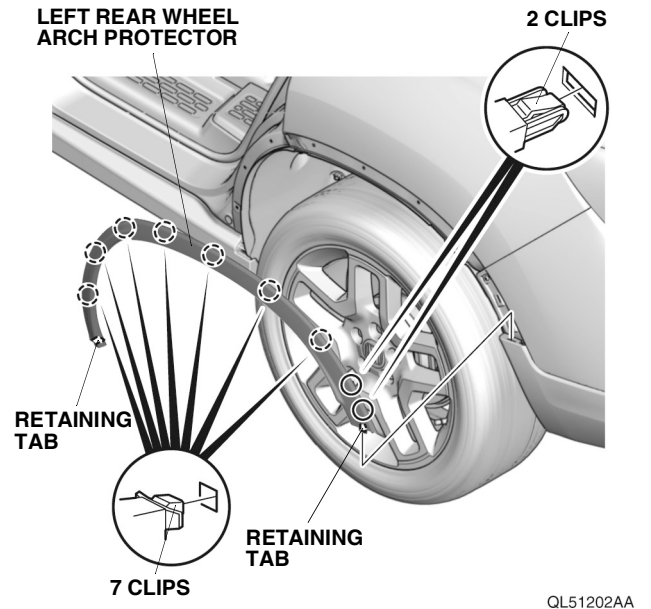

17. Remove the self-tapping screws.

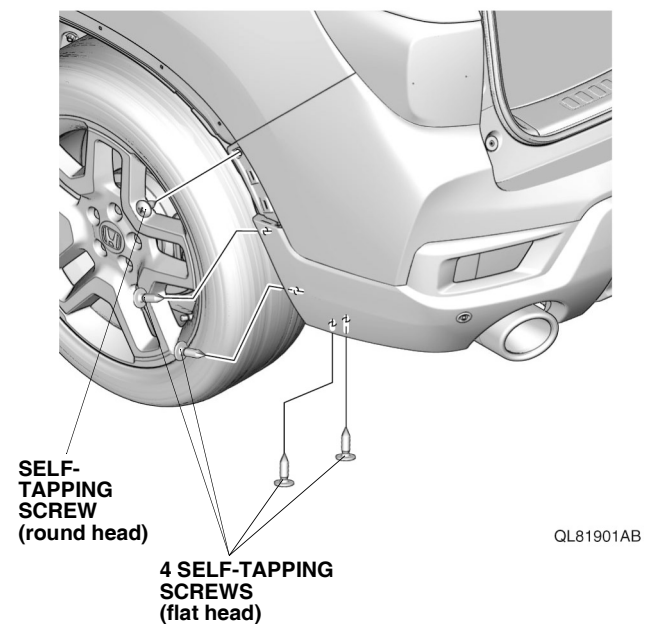


# Germain Honda of College Hills

18. Release the retaining tabs.


## NOTE

- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.


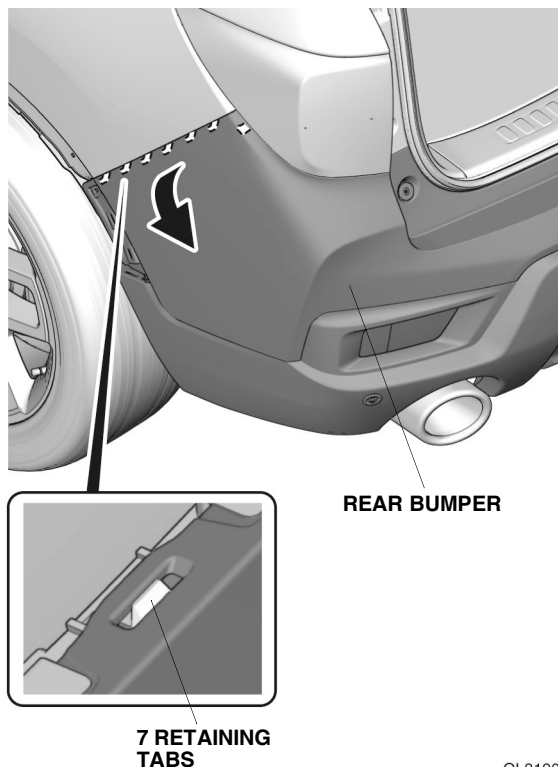


QL81902AB

19. Repeat same procedures on the other side.

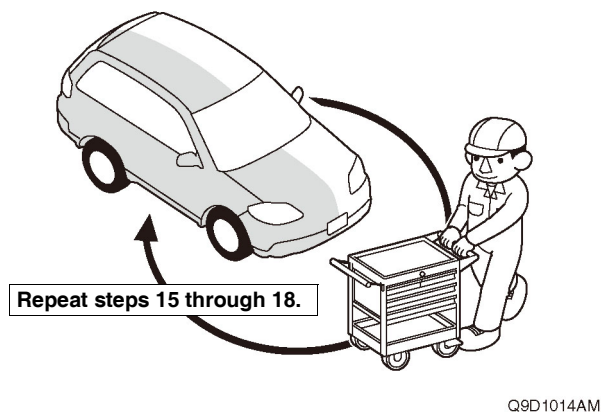


20. Cut the left front inner fender.

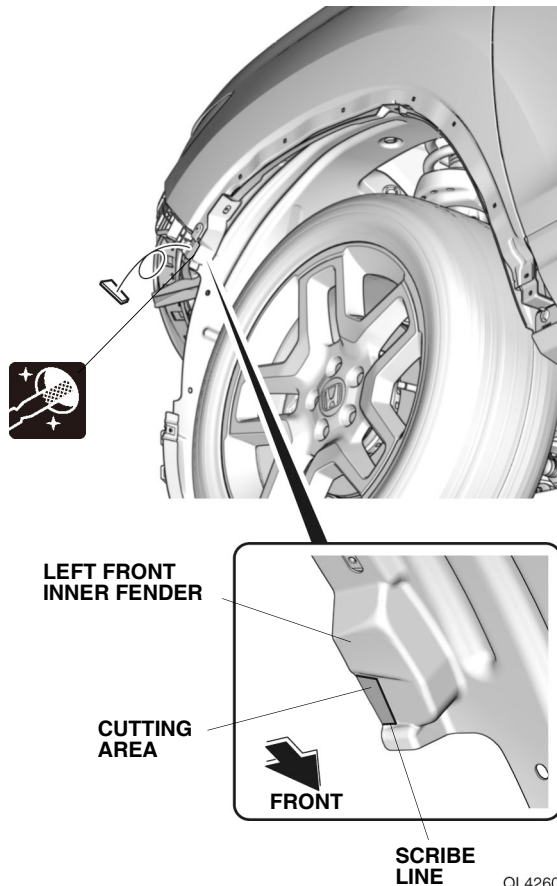

QL42601AA

21. Remove the clips.

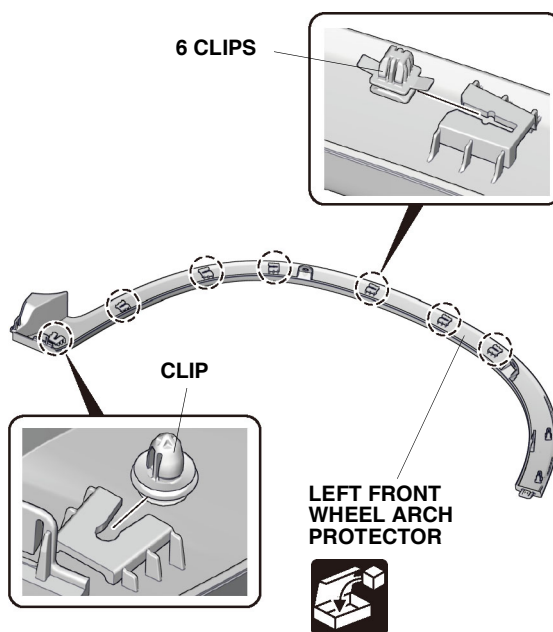


QE01603AA

# Germain Honda of College Hills

22. Install the clips and spring nut.


## NOTE

Make sure to install the spring nut in the correct orientation.

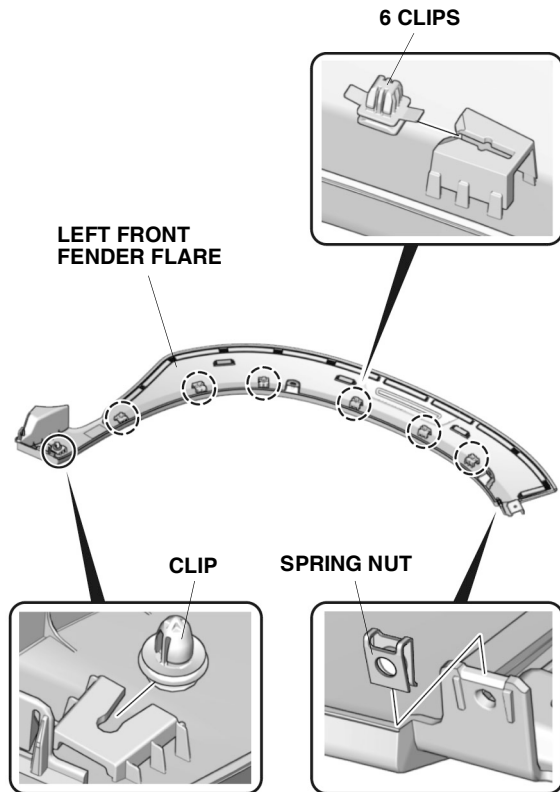

QL42602AA

23. Temporarily attach the adhesive backings.

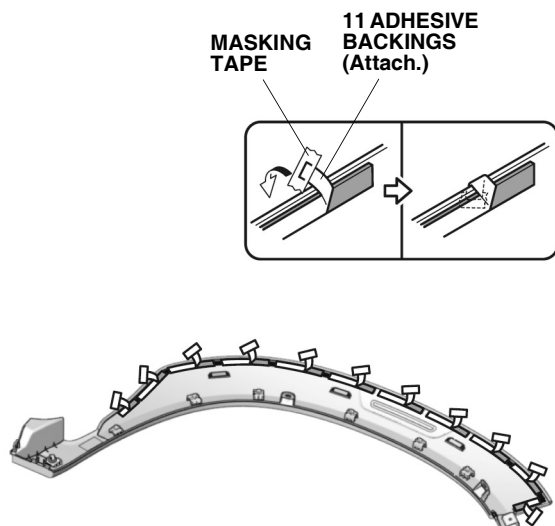


QL42604AA

24. Clean the attaching area.


## NOTE

Allow to dry thoroughly.

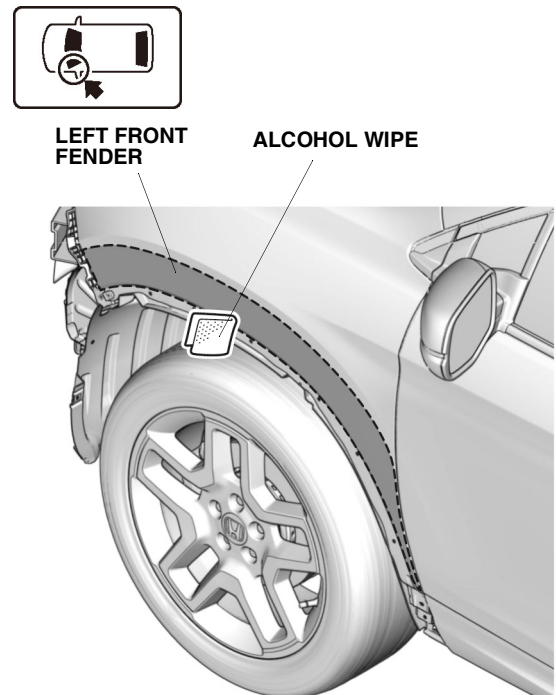

QL42603AA

25. Open the front driver side door and install the left front fender flare.

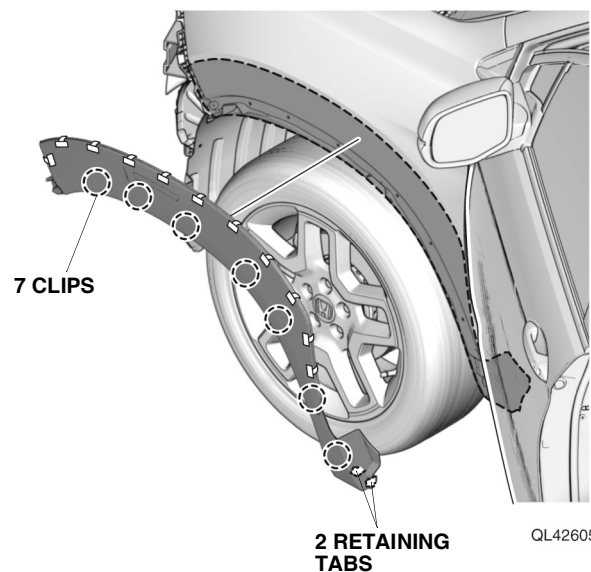


QL42605AA

26. Close the front driver side door.

# Germain Honda of College Hills


27. Secure the left front fender flare.

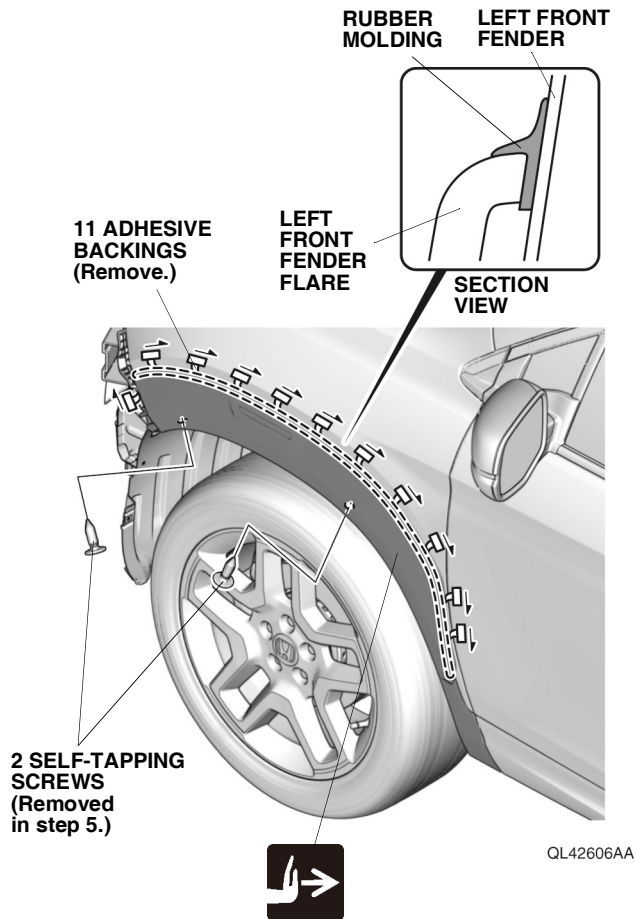


28. Secure the left front fender flare.



29. Secure the left front fender flare.

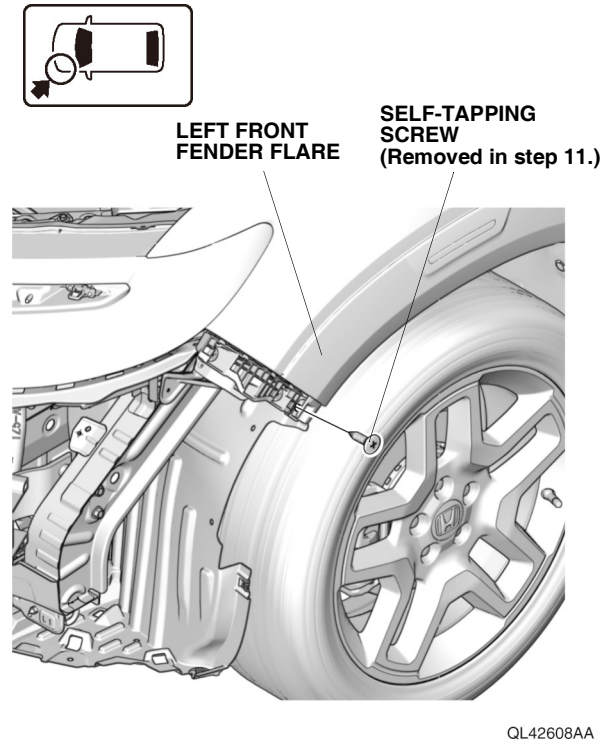

30. Pierce the front bumper.

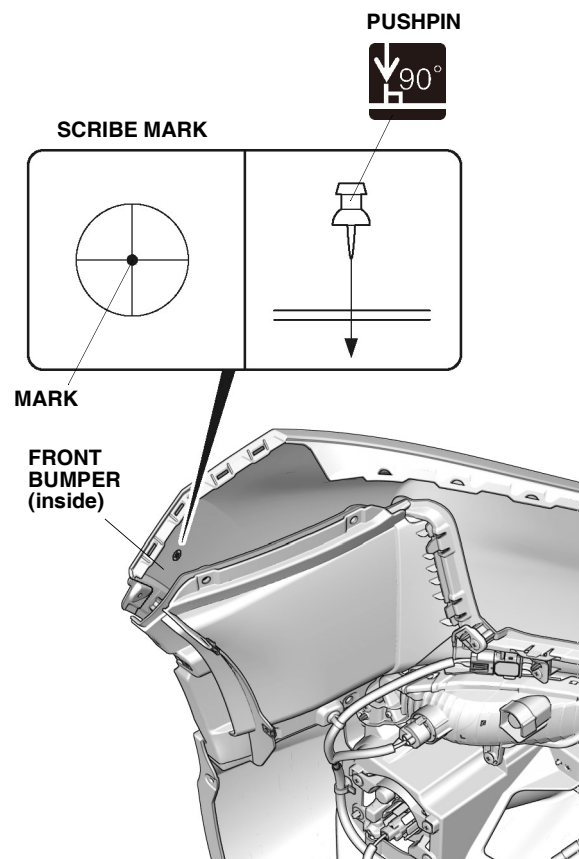



# Germain Honda of College Hills

31. Drill the front bumper.

## NOTE



Take care not to drill air duct.



3 mm → 6 mm → 8 mm →  
12 mm DRILL BITS



MARK

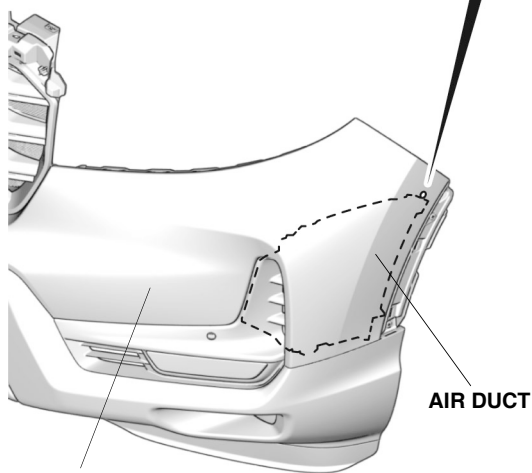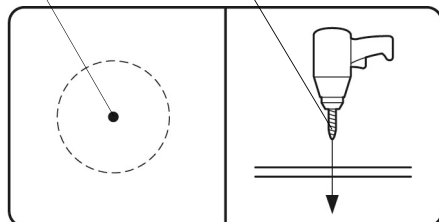


FRONT BUMPER  
(outside)

AIR DUCT

QL42609AA


32. Cut the front bumper.

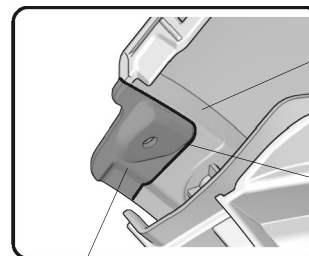

FRONT BUMPER  
(inside)

SCRIBE LINE



CUTTING AREA

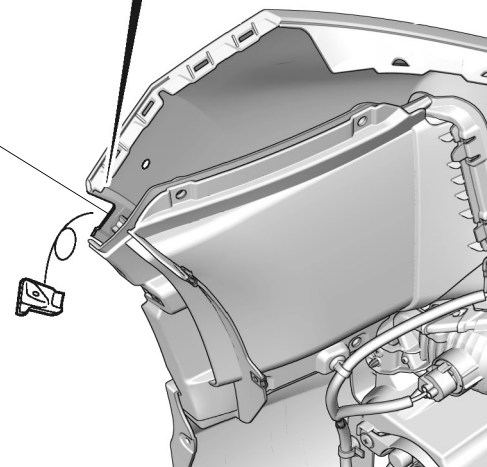

QK70812BB

33. Install the clips.

2 CLIPS

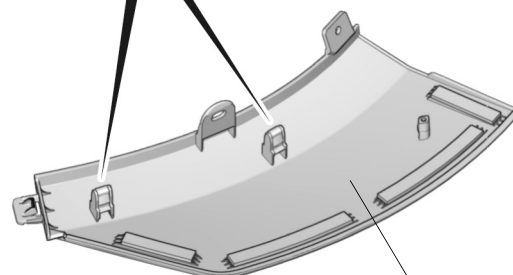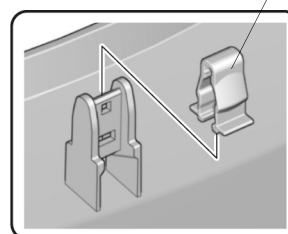


LEFT FRONT  
BUMPER FLARE

QL42610AA


# Germain Honda of College Hills

34. Temporarily attach the adhesive backings.

4 ADHESIVE  
BACKINGS  
(Attach.)

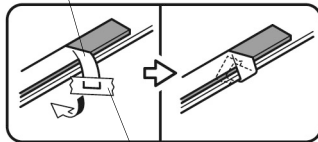

MASKING  
TAPE

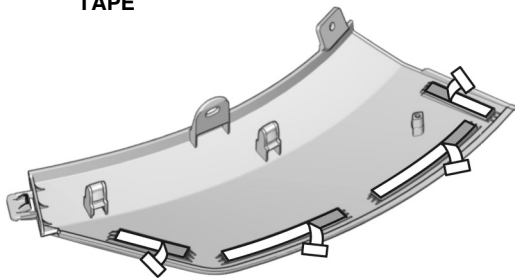


QL42612AA

35. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

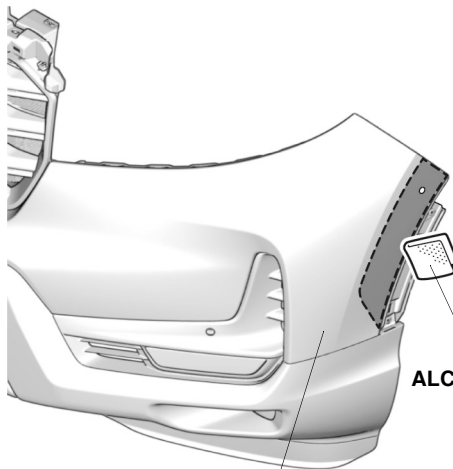

ALCOHOL WIPE

FRONT BUMPER  
(outside)

QL42611AA


36. Install the left front bumper flare.

## NOTE

Make sure to install the cap in the correct orientation.

4 x 12 mm  
SELF-TAPPING  
SCREW

CAP

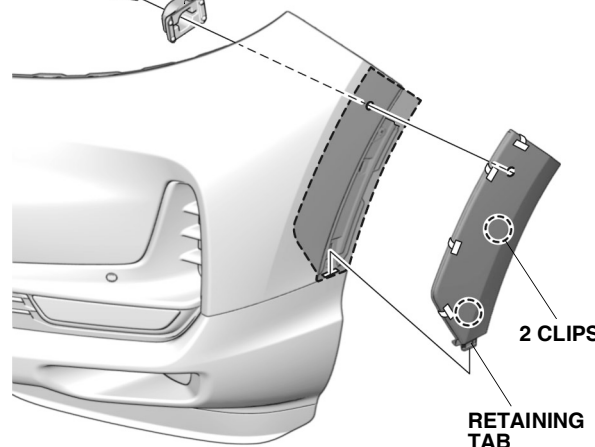


2 CLIPS

RETAINING  
TAB

QL42613AA

37. Repeat same procedures on the other side.

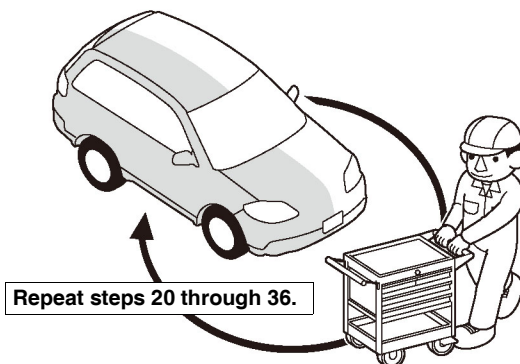

Repeat steps 20 through 36.



Q9D1014AM

# Germain Honda of College Hills

38. Install the front bumper.


## NOTE

Do not secure the front inner fenders in this step.

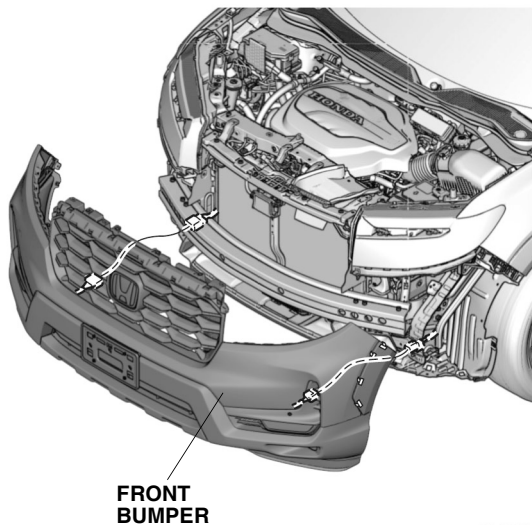

QL42614AA

39. Secure the left front bumper flare.



RUBBER MOLDING  
FRONT BUMPER

LEFT FRONT BUMPER FLARE



SECTION VIEW

4 ADHESIVE BACKINGS (Remove.)


SELF-TAPPING SCREW (Removed in step 5.)

LEFT FRONT BUMPER FLARE

5 x 20 mm SELF-TAPPING SCREW (supplied)

QL42615AA

40. Secure the left front bumper flare.

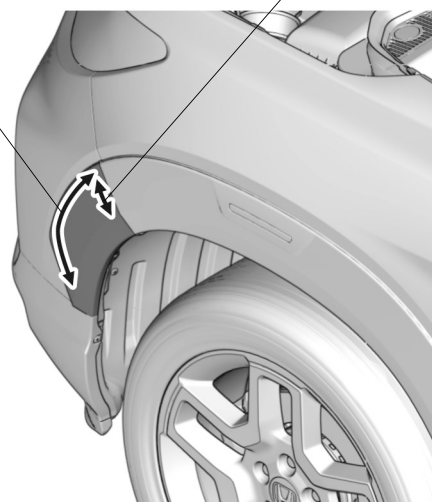



QL42616AA

# Germain Honda of College Hills

41. Cut the rear bumper.

## NOTE

Do not damage the rear fender.

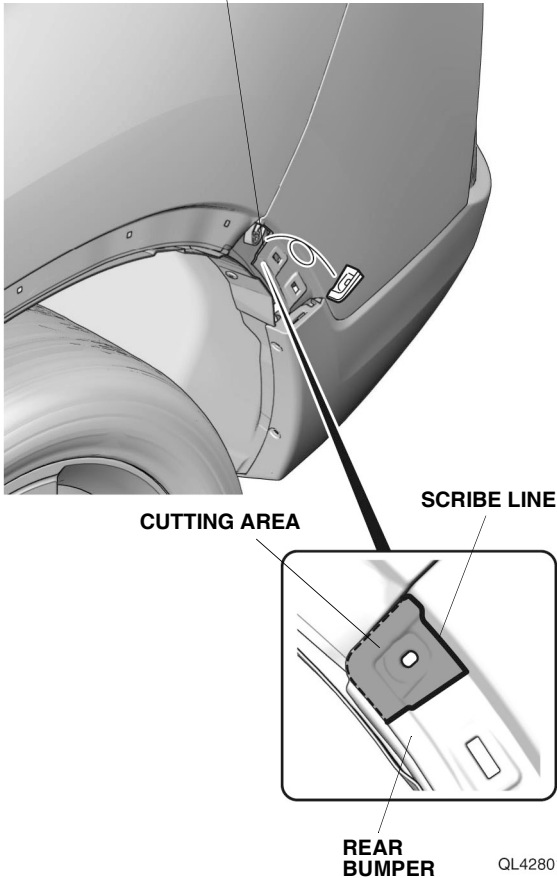



42. Install the rear bumper.

## NOTE

Do not secure the self-tapping screw (round head) in this step.

43. Remove the clips.

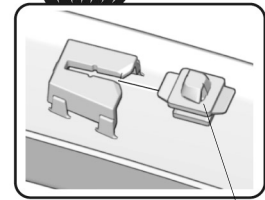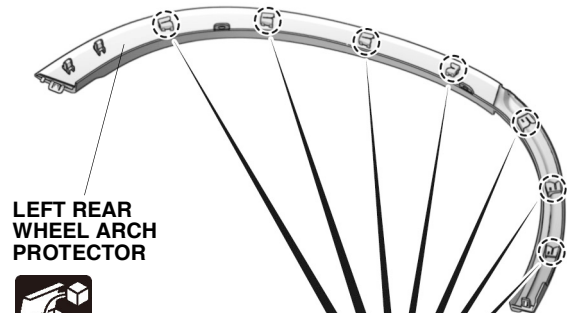


**7 CLIPS**  
QL42803AA

# Germain Honda of College Hills

44. Install the clips and spring nut.


## NOTE

Make sure to install the spring nut in the correct orientation.

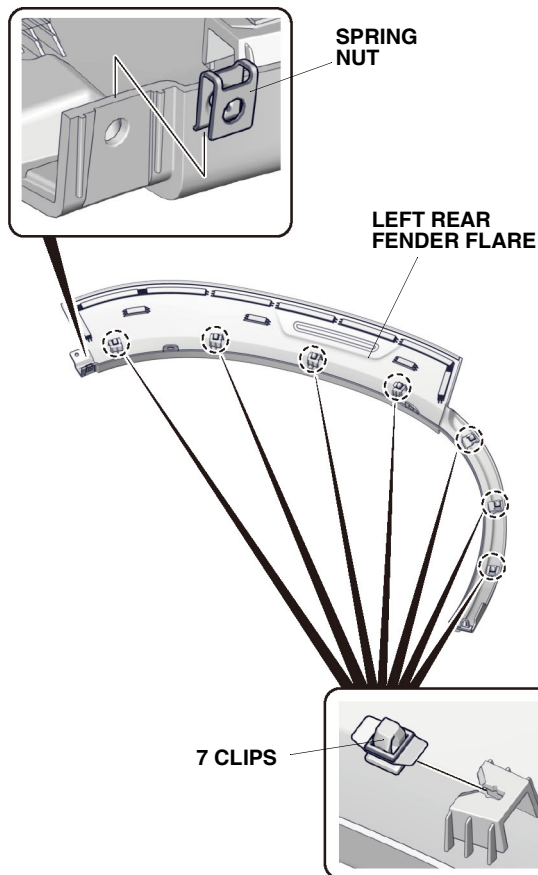

QH52519AC

45. Temporarily attach the adhesive backings.


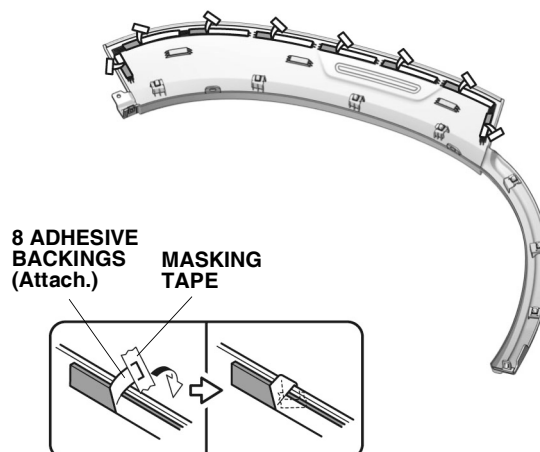


QL42701AA

46. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

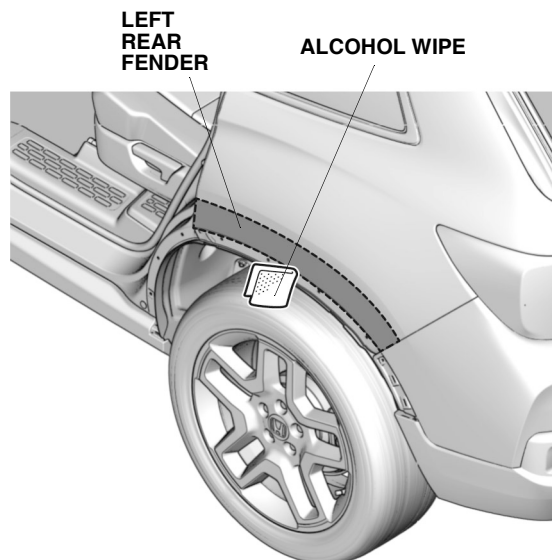


QL42804AA




# Germain Honda of College Hills

47. Install the left rear fender flare.

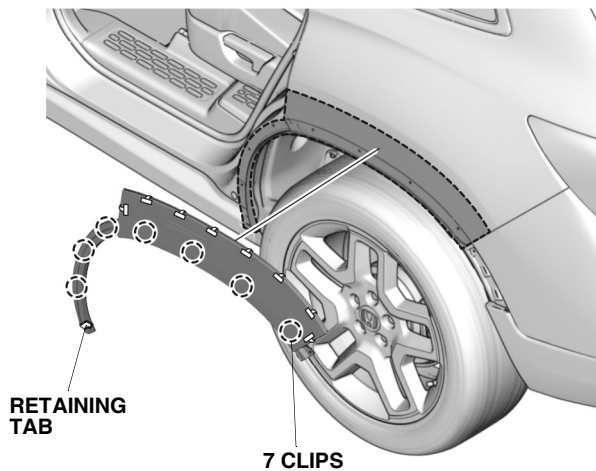


QL42805AA

48. Secure the left rear fender flare.

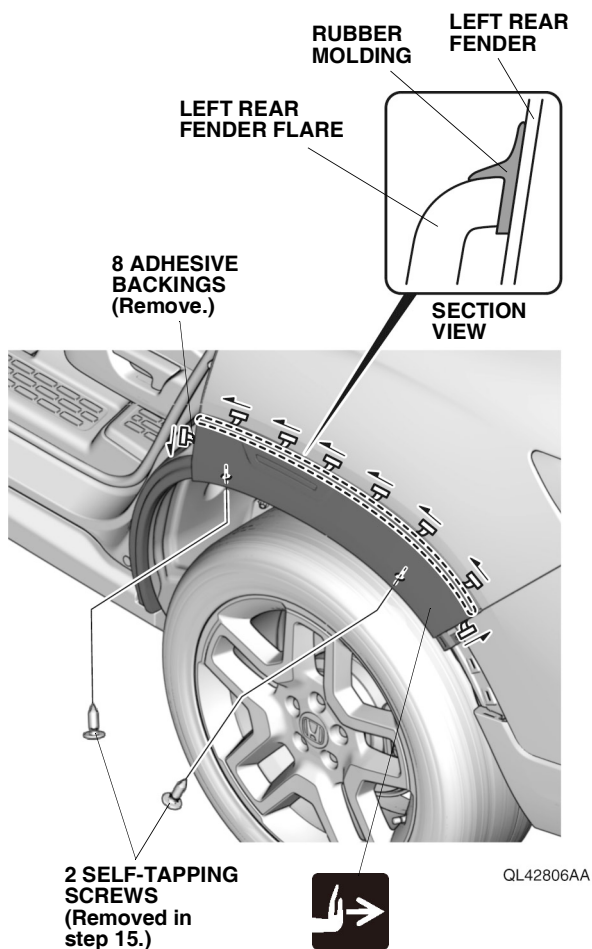

49. Secure the left rear fender flare.

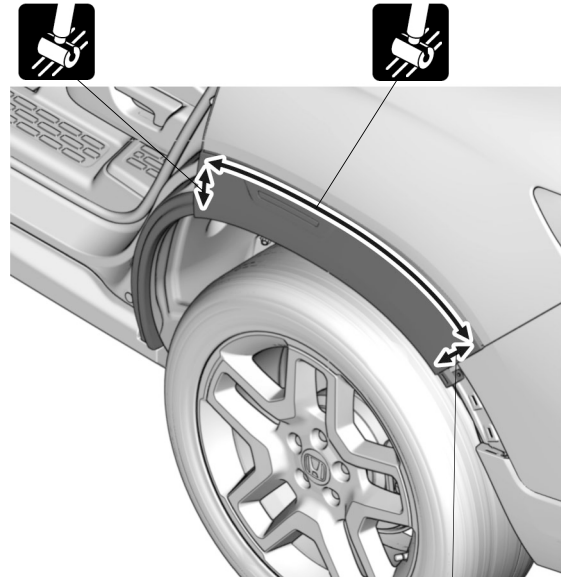



QL42807AA

50. Secure the left rear fender flare.





# Germain Honda of College Hills

51. Remove the clip.

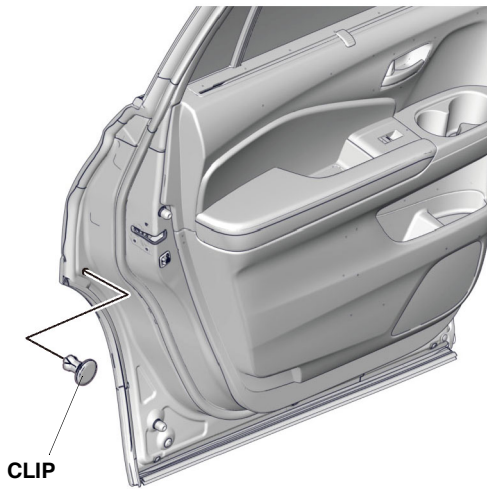


QH52525AC

52. Close the left rear door and remove the left rear door wheel arch protector.

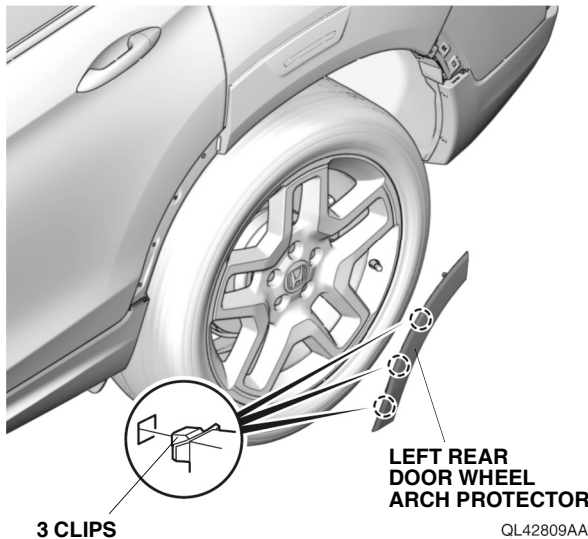


QL42809AA

53. Remove the clips.

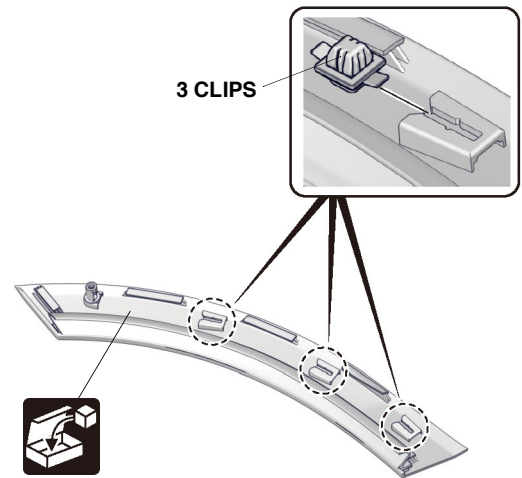

QH52801AC


54. Install the clips.

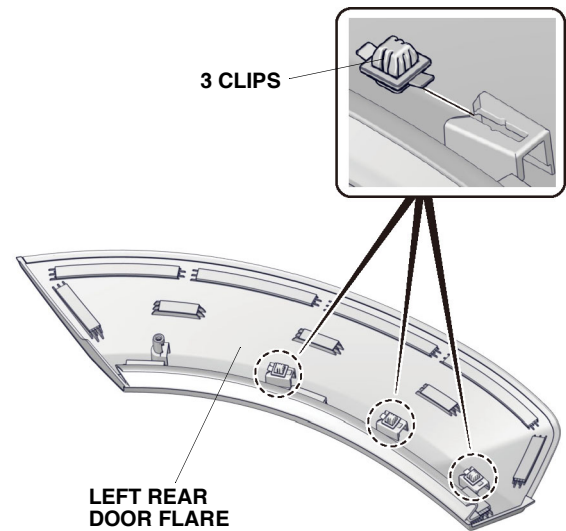

QH52802AC

# Germain Honda of College Hills


55. Temporarily attach the adhesive backings.

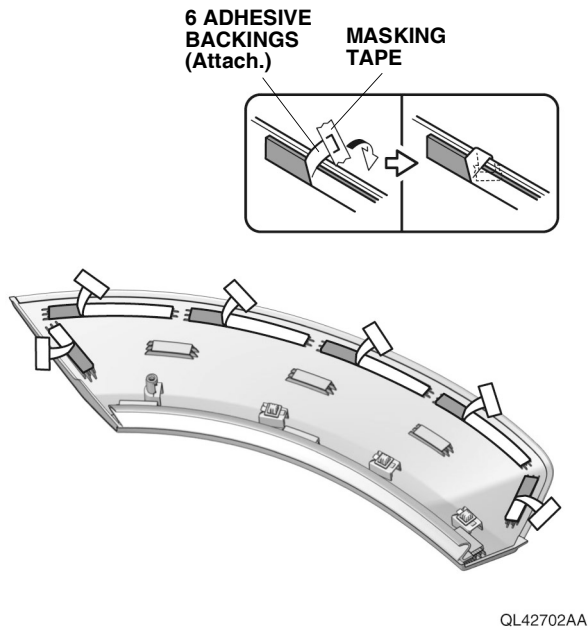


56. Clean the attaching area.

## NOTE


Allow to dry thoroughly.



LEFT REAR  
DOOR

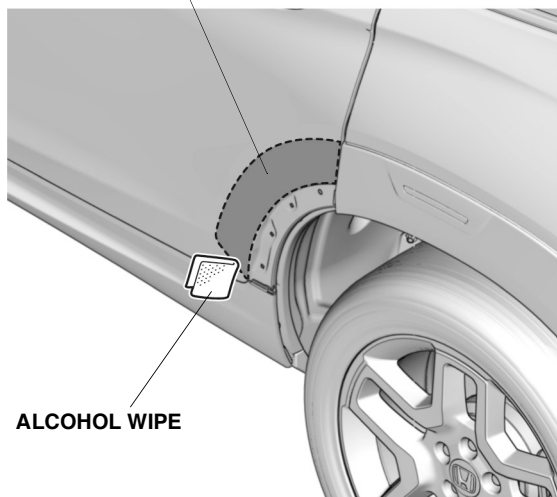


57. Install the left rear door flare.

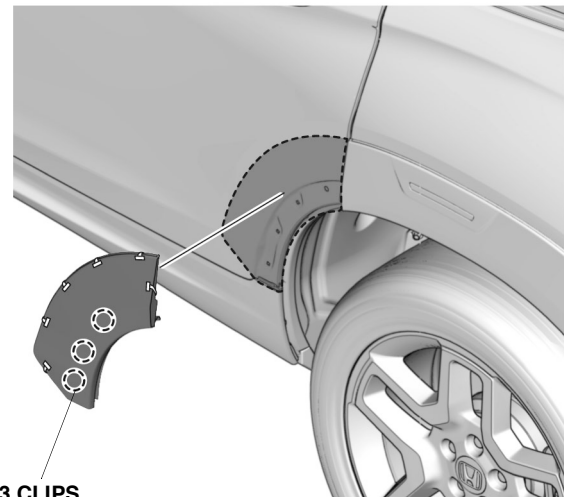



# Germain Honda of College Hills

58. Secure the left rear door flare.


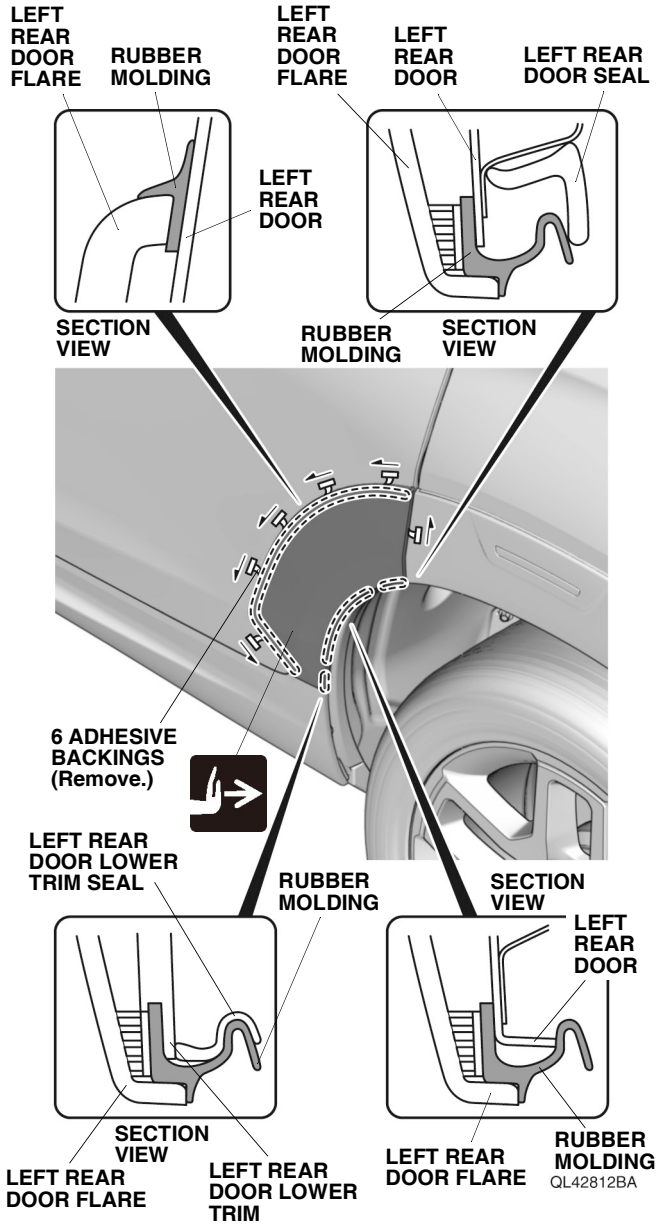


59. Secure the left rear door flare.



QL42813AA


60. Open the left rear door and secure the left rear door flare.

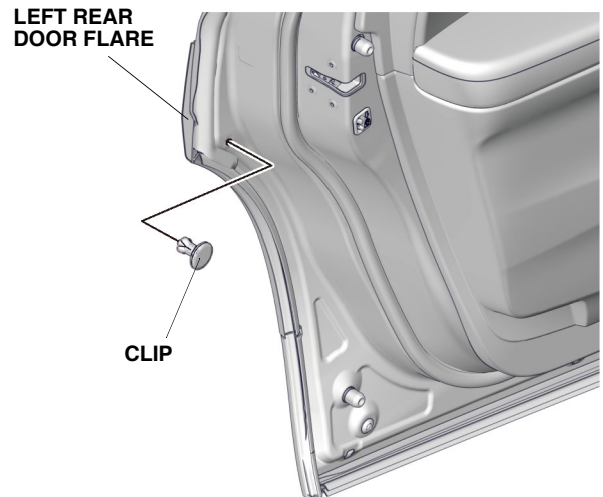


QH52807AC

# Germain Honda of College Hills

61. Install the clips.


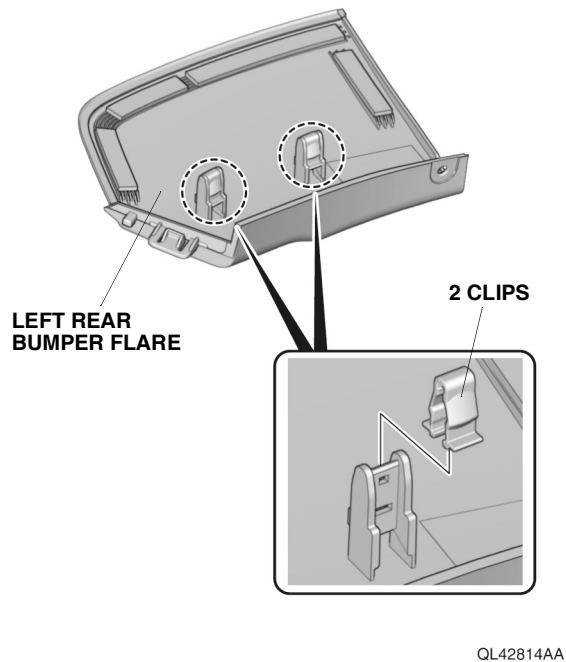


62. Temporarily attach the adhesive backings.

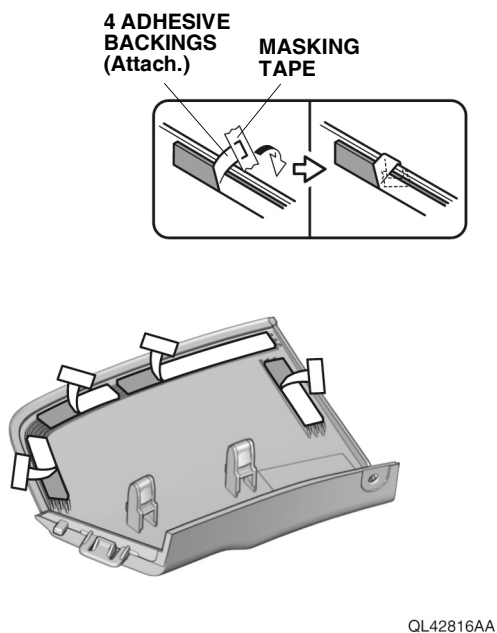


63. Clean the attaching area.

NOTE
Allow to dry thoroughly.

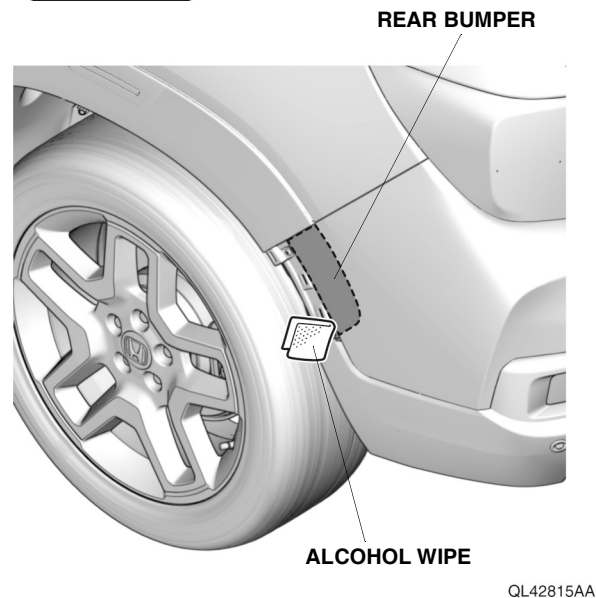


64. Install the left rear bumper flare.

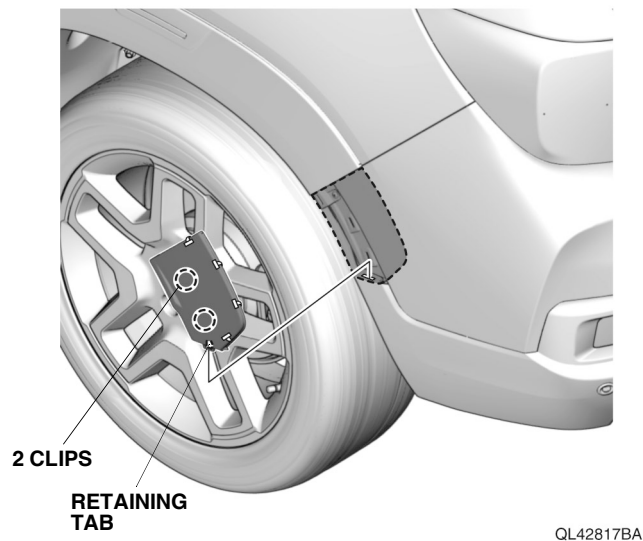


# Germain Honda of College Hills


65. Secure the left rear bumper flare.

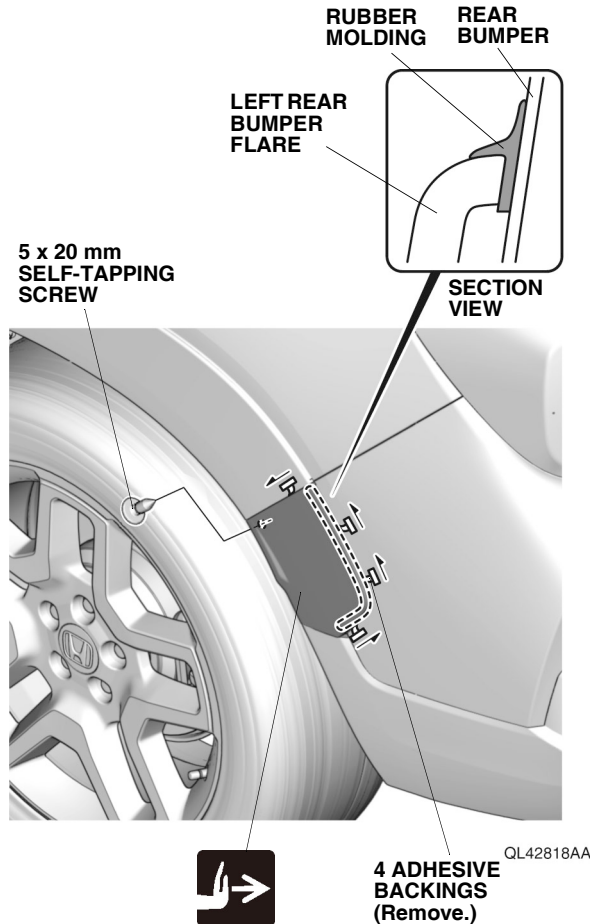

66. Secure the left rear bumper flare.

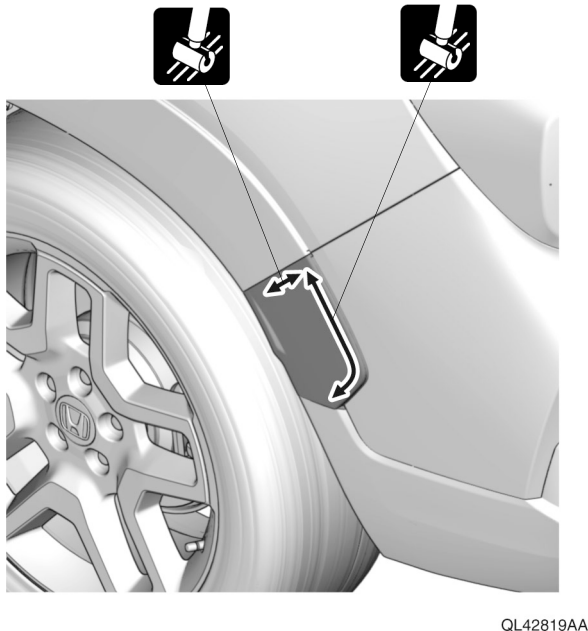

67. Repeat same procedures on the other side.

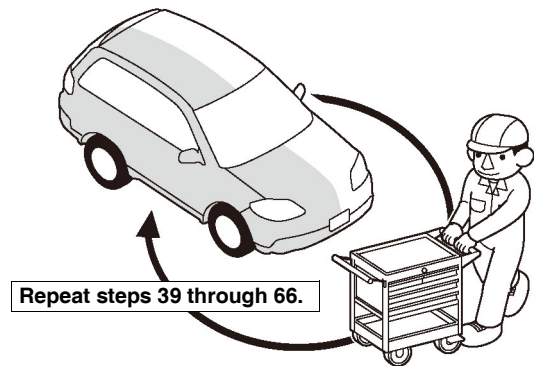

Q9D1014AM


68. Check that all parts are installed and properly routed.

## NOTE

- Check that all harnesses are not pulled and not pinched.
- Make sure all clamps and wire ties are securely installed.

69. Install all removed parts except for the front bulkhead cover and intake air tube.

70. Connect the negative cable to the battery.

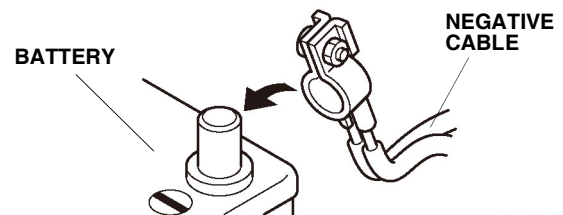

Q060702BM

71. Install the front bulkhead cover and intake air tube.
72. Make sure all accessories and systems operate properly.
73. If necessary, restore the systems back to normal operation as described in the service information.
74. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.