

November 2021 All18533-09

Accessory Trailer Hitch

When installing the trailer hitch to a Passport with an accessory or factory-equipped hands-free access power tailgate, you must install the hands-free access power tailgate sensor trailer hitch adaptor.

To ensure proper trailer hitch installation with hands-free access, use the chart below to help determine what parts you need.

		Trim Level and Application		
Description	Part Number	EX-L		TOURING/ELITE
		Accessory Hands-Free Access w/o Accessory Trailer Hitch	Accessory Hands-Free Access with Accessory Trailer Hitch	Factory equipped Hands-Free Access with Accessory Trailer Hitch
Hands-Free Access Power Tailgate Sensor (Long Sensor)	08U59-TGS-100	•	•	
Hands-Free Access Power Tailgate Sensor Attachment (Long Sensor)	08U59-TGS-100A	•	•	
Hands-Free Access Power Tailgate Sensor Trailer Hitch Adaptor (Short Sensor)	08L91-TGS-100A		•	•
Trailer Hitch	08L92-TGS-100		•	•

For instructions on how to work the hands-free access system, see the online owner's manual.

INSTALLATION INSTRUCTIONS

TRAILER HITCH

Accessory

Application


2022 PASSPORT

Publications No. VERSON 2

Issue Date NOV 2021

GENERAL VIEW

If you are also installing trailer hitch harness, install it before you install the trailer hitch.

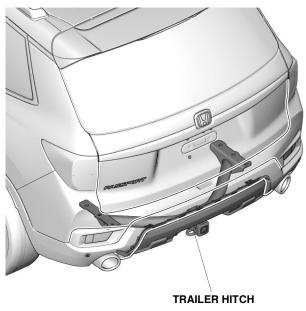

QL51001AB

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

▲ DANGER	You will be killed or seriously hurt if you do not follow the instructions.
A WARNING	You can be killed or seriously hurt if you do not follow the instructions.
A CAUTION	You can be hurt if you do not follow the instructions.
NOTICE	Gives advice to prevent damage to the product, vehicle, the environment or other property.
NOTE	Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.




The location on the vehicle.



The location in the vehicle. (instrument panel.)



Wear eye protection.

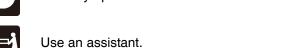



Work perpendicular.



Use touch-up paint and allow to dry.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Clean with isopropyl alcohol.



Wear heavy gloves.



Place the part on a blanket.



Remove any burrs.



Tighten to the specified torque.



Press firmly.



Return the original part to the customer. (Do not reuse.)


Wire Harness Routing Precaution



Do not secure the accessory harness to the SRS harness. (except for instruction cases.)




Push the connectors and terminals together until they lock.

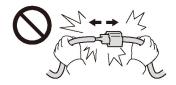

Do not pull the harness to unplug the connectors.



Install removed connectors in their original location.

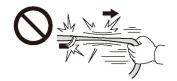

Do not pull the harness.



Secure the accessory harness as shown.



Do not pinch the harness.



Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- · Be careful not to damage the vehicle or the parts.
- · Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- · The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts


Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory


- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST


Trailer Hitch Kit (P/N 08L92-TGS-100B) (P/N 08L92-TGS-P00B)

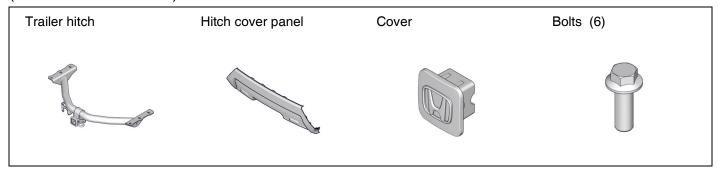

Ball Mount Kit (P/N 08L92-TGS-100A)

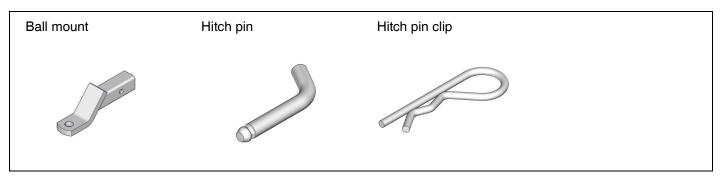

Hands-Free Access Power Tailgate Unit Kit (P/N 08L91-TGS-100B) (P/N 08L91-TGS-P00B)

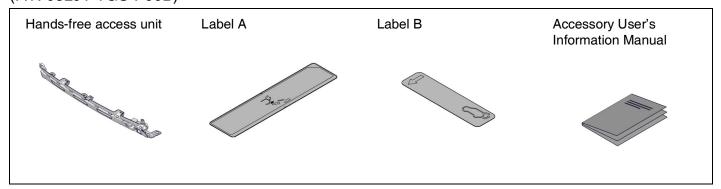

REQUIRED TOOLS AND SUPPLIES

- · Phillips screwdriver
- Torque wrench
- · Shop towel
- · Masking tape

- 10 mm Open end wrench
- 10 mm and 18 mm Sockets
- Blanket
- Isopropyl alcohol

The following tools are available through the Honda Tool and Equipment Program:


- Trim Tool Set (T/N SOJATP2014) PI
 - Plastic Trim Tool (T/N

INSTALLATION

Wrap a shop towel.


NOTE

Do not remove the shop towel until after the parts are installed.

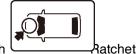


• Horonom Latex Hwrench

• FIGH

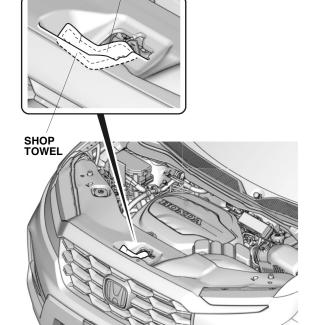


QL42302AA


2. Remove the front bulkhead cover.

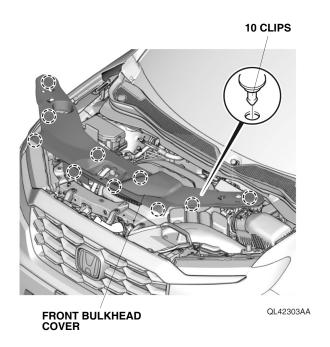

3. Remove the intake air tube.

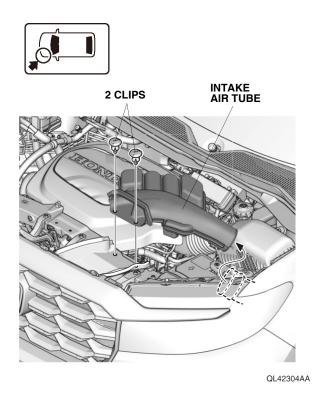


4. Disconnect the negative cable from the battery.

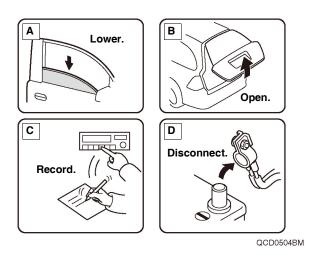


5. Open the left rear door and remove the self-tapping



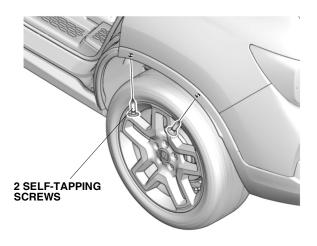


QL51201AA

6. Release the left rear wheel arch protector.

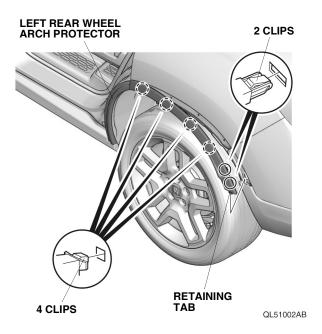

7. Repeat same procedures on the other side.

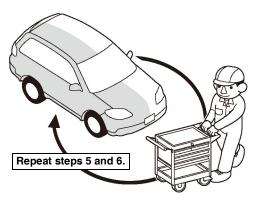


Q9D1014AM


8. Attach masking tape to protect the vehicle.

NOTE

Do not remove the masking tape until after the parts are installed.

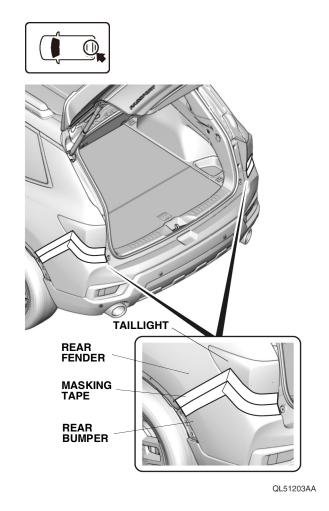


Remove the clips, hex bolts, and self-tapping screws.

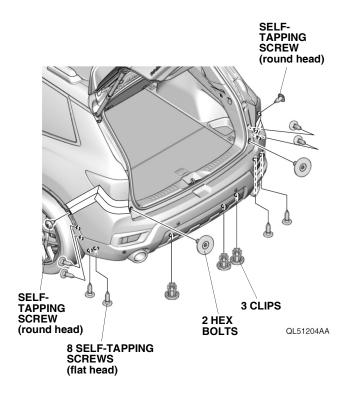


10. Release the retaining tabs.

NOTE


- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.

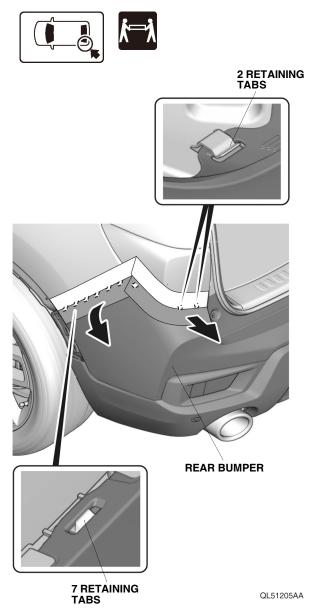


- Repeat step 10 on the other side.
- 12. Remove the rear bumper.

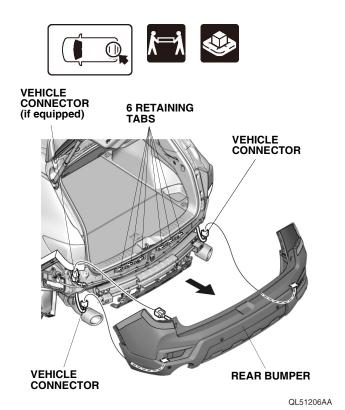

13. Remove the rear bumper lower cover.

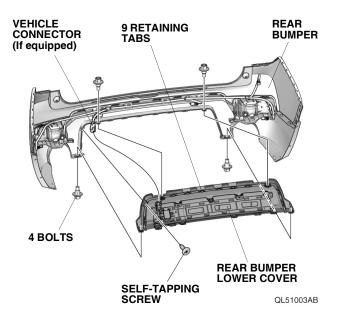


14. Remove the clip (if equipped), self-tapping screws (if equipped), and spring nuts.

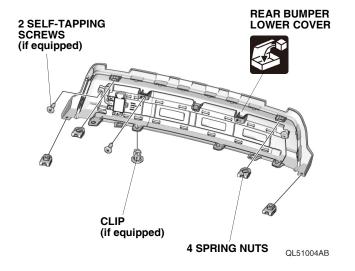


15. Choose one of these options.

- With Hands-Free Access Power Tailgate Unit Kit
 Go to step 16
 Without Hands-Free Access Power Tailgate Unit Kit
 Go to step 20
- 16. Release the sensor bars.

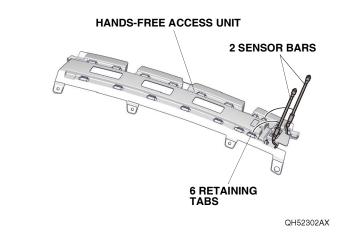

17. Cut the hands-free access unit.


NOTE Be careful not to damage the sensor bars.

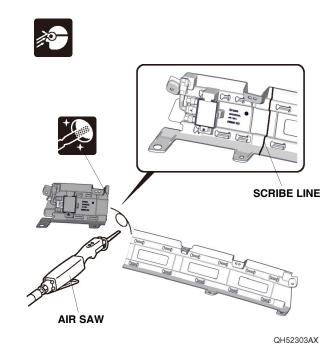


18. Install the sensor bars.

NOTE

Make sure to install the sensor bars in the correct position.

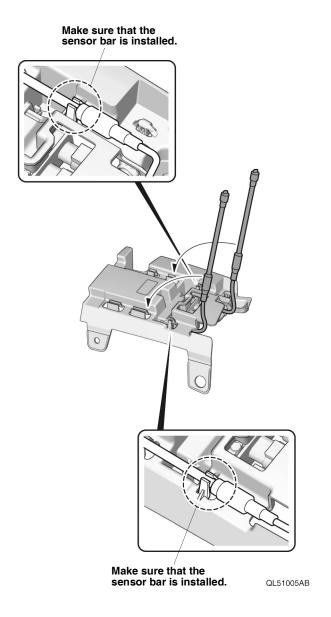


19. Install the hands-free access unit.

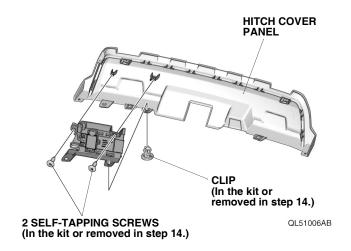


20. Install the spring nuts.

NOTE

Make sure to install the spring nuts in the correct orientation.

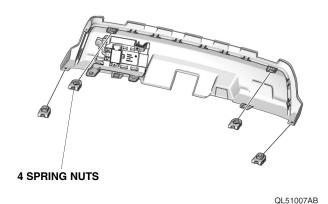


21. Install the hitch cover panel.

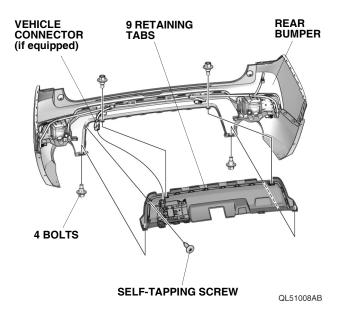

22. Install the rear bumper.




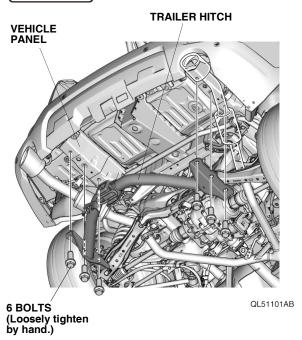

- 23. Loosely install the trailer hitch.
- 24. Tighten the bolts.

NOTE

- Tighten in the order shown.
- Tighten the six bolts to an initial torque of 32 lb-ft (43 N·m) as shown. Then, tighten the bolts to a final torque of 63 lb-ft (85 N·m).
- · After tightening all the bolts, recheck their torque.

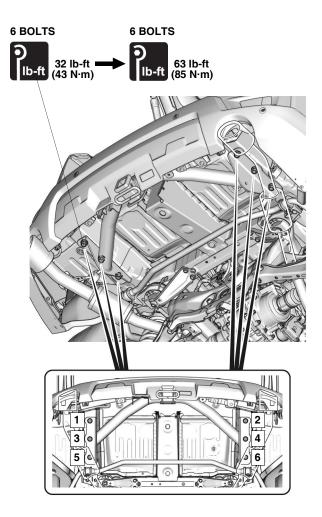


QL51102AB

25. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled and not pinched
- Make sure all clamps and wire ties are securely installed.
- 26. Install all removed parts except for the front bulkhead cover and intake air tube.
- 27. Connect the negative cable to the battery.

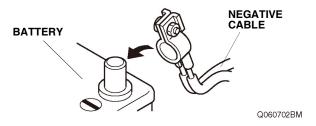


28. Install the front bulkhead cover and intake air tube.

- 29. Perform operation check by referring to the accessory user's information manual (with handsfree access power tailgate unit kit).
- 30. Make sure all accessories and systems operate properly.
- 31. If necessary, restore the systems back to normal operation as described in the service information.
- 32. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.

With Hands-Free Access Power Tailgate Unit Kit

33. Remove the label.



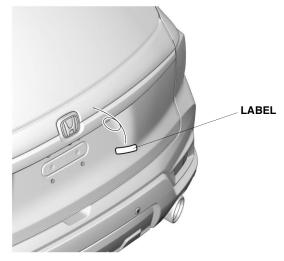


QL01302AN

34. Attach the label A.

NOTE


Make sure the customer is aware the label A can be removed after reading.

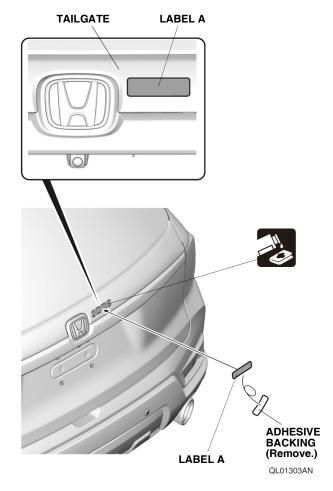

35. Attach the label B.

NOTE

Make sure the customer is aware the label B can be removed after reading.

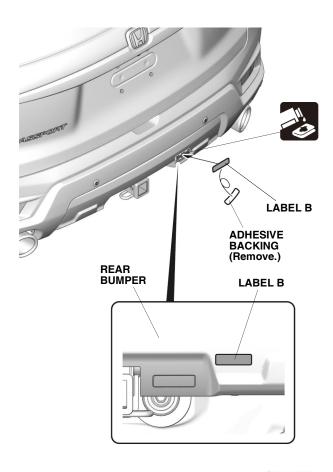


QL01304AN

Please give your customer a copy of this page.

TRAILER HITCH


Whenever you remove the hitch pin clip, the hitch pin, and the ball mount, store them securely in the cargo area. Install the cover into the opening at the end of the trailer hitch.

When you reinstall the ball mount, store the cover in the cargo area.

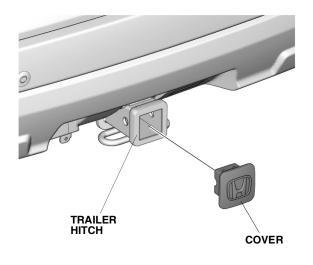

QL51103AB

Install the ball mount into the trailer hitch using a hitch pin clip and hitch pin.

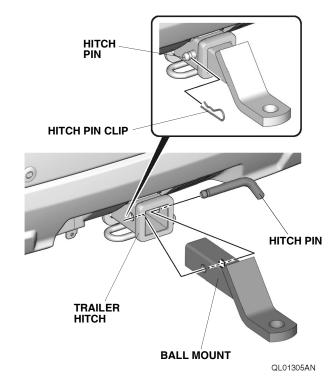

After the first 600 miles (1,000 km) of towing, have your Honda Dealer check the tightness of the trailer hitch bolts.