




BODY SIDE MOLDINGS	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
--------------------	-------------------------------	-------------------------------

GENERAL VIEW

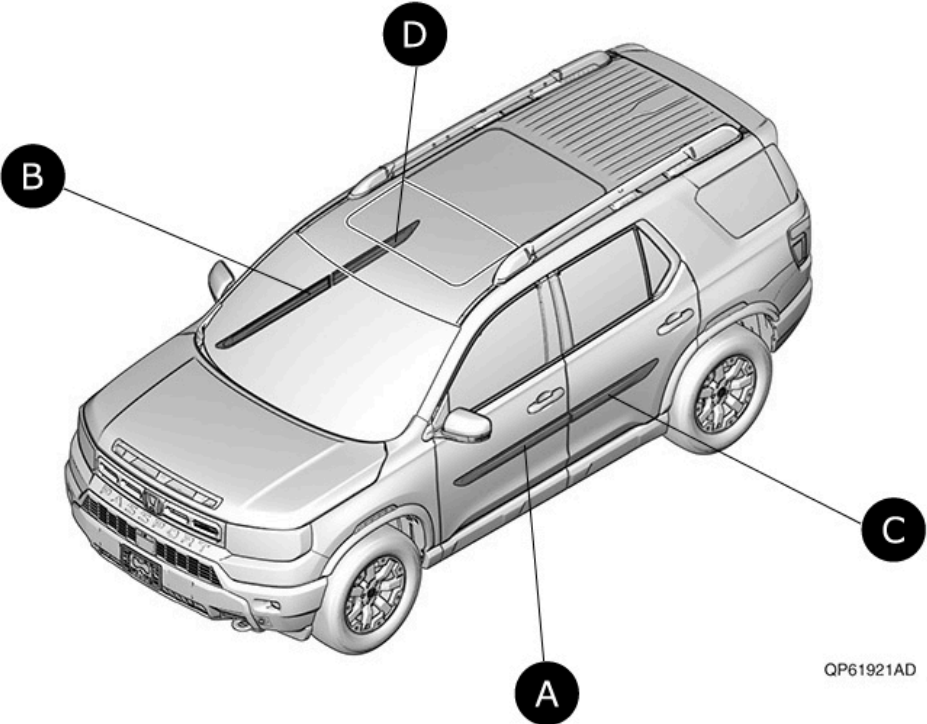

QP61921AD

A	LEFT FRONT MOLDING
B	RIGHT FRONT MOLDING
C	LEFT REAR MOLDING
D	RIGHT REAR MOLDING

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.













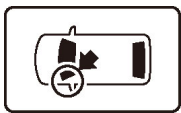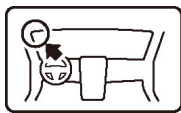



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Safety: General







- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

| Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

■ Body Side Moldings Kit (P/N 08P05-3BM-100)

Parts	Parts name	QTY	Remarks
	Left front molding	1	
	Right front molding	1	
	Left rear molding	1	
	Right rear molding	1	
	Template	1	
	Alcohol wipe	4	

REQUIRED TOOLS AND SUPPLIES


- Masking tape
- Ruler
- Felt-tip pen

The following tool is available through the Honda Tool and Equipment Program:
Rubber Roller (T/N MHLE54D)

INSTALLATION

■ Installing the Moldings

1 Secure the template.

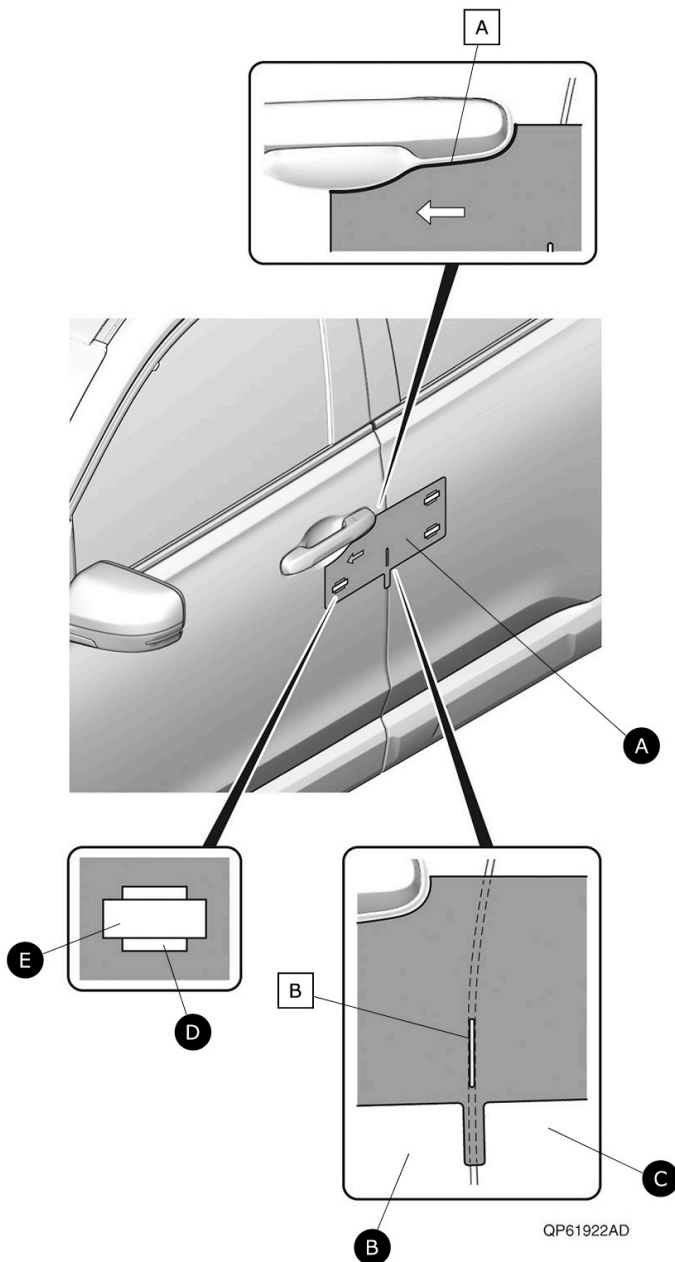


A	TEMPLATE
A	Line up with the end of the curved surface.
B	LEFT FRONT DOOR
C	LEFT REAR DOOR
B	Line up with the center of the door gap.
D	HOLE(3)
E	MASKING TAPE


2 Choose one of these options.

• With door edge films or door edge guards	Go to step 3
• Without door edge films or door edge guards	Go to step 4

3 Mark the template.

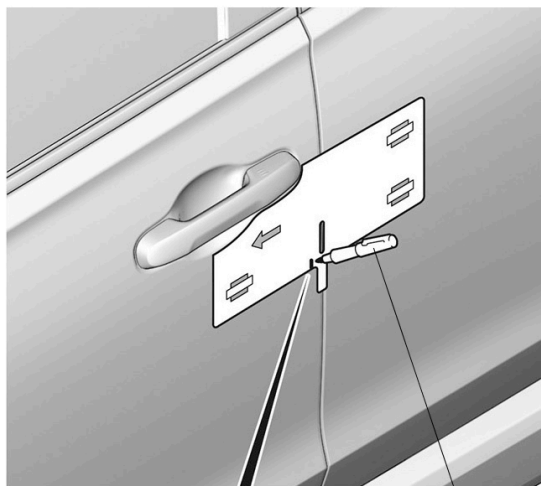

A	FELT-TIP PEN
B	MARK

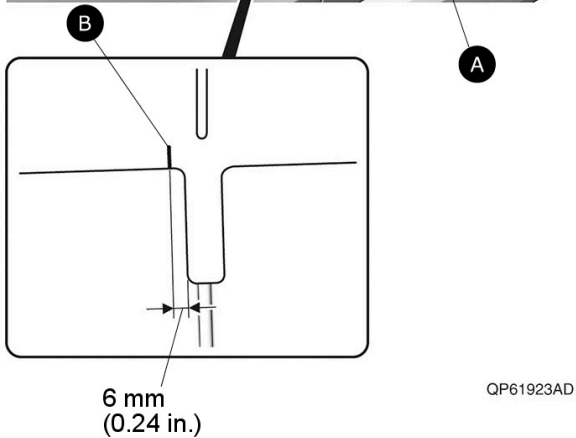


QP61923AD

4 Clean the attaching area.

NOTE



Allow to dry thoroughly.

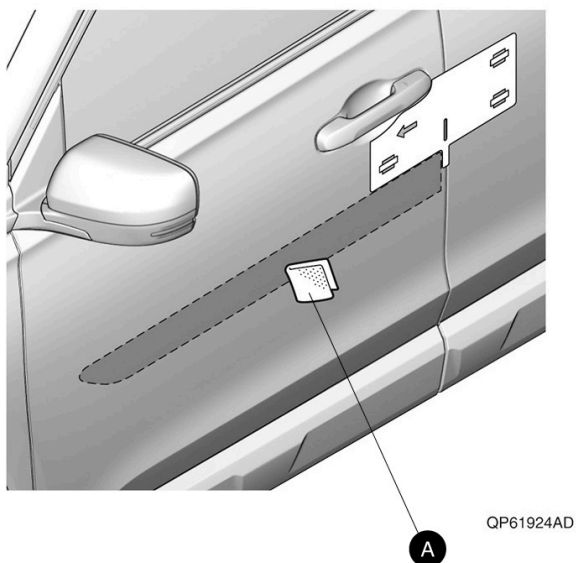

A

ALCOHOL WIPE

5 Temporarily attach the adhesive backings.

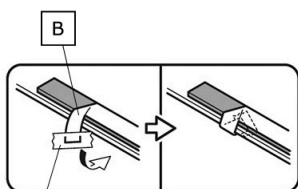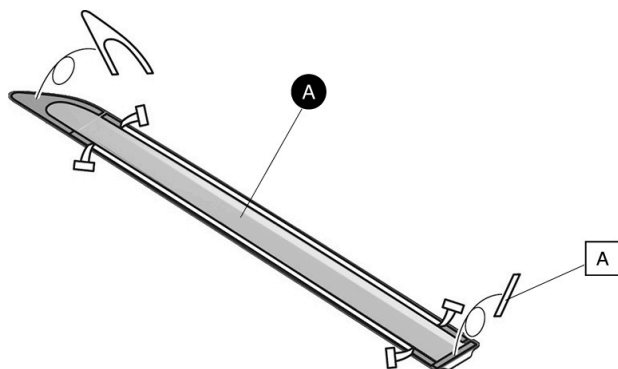

B


QM51001AB

A	LEFT FRONT MOLDING
A	ADHESIVE BACKING (Remove.)(2)
B	ADHESIVE BACKING (Attach.)(2)
B	MASKING TAPE



6 Remove the adhesive backings.

7 Line up the left front molding.

WITHOUT DOOR EDGE FILMS OR DOOR EDGE GUARDS

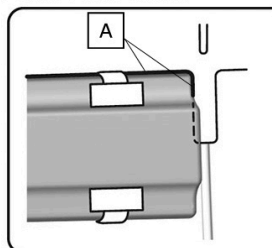

WITH DOOR EDGE FILMS OR DOOR EDGE GUARDS

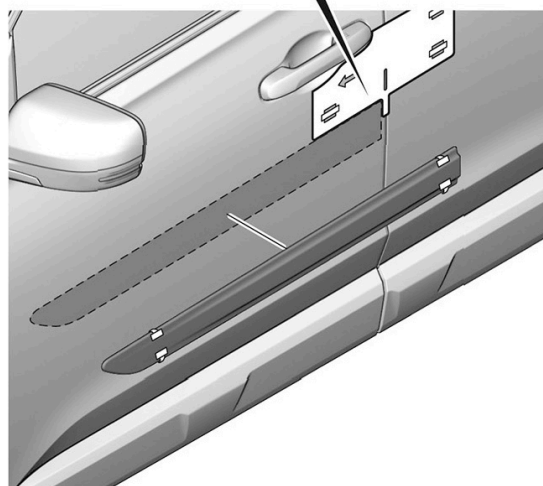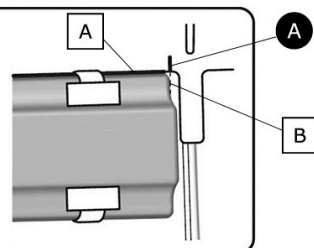


A	Line up.
A	MARK
B	Line up with the mark.

QP61925AD

8 Secure the left front molding.


NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

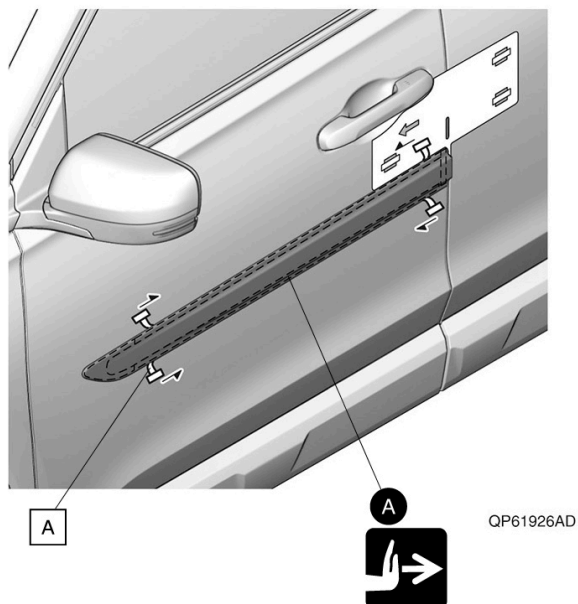

A	ADHESIVE BACKING (Remove.)(2)
A	DOUBLE-SIDED ADHESIVE TAPE(4)



9 Secure the left front molding.

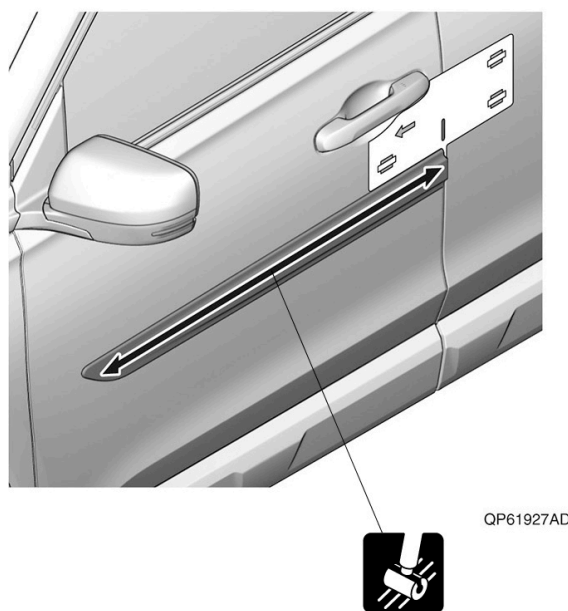

10 Clean the attaching area.

NOTE


Allow to dry thoroughly.

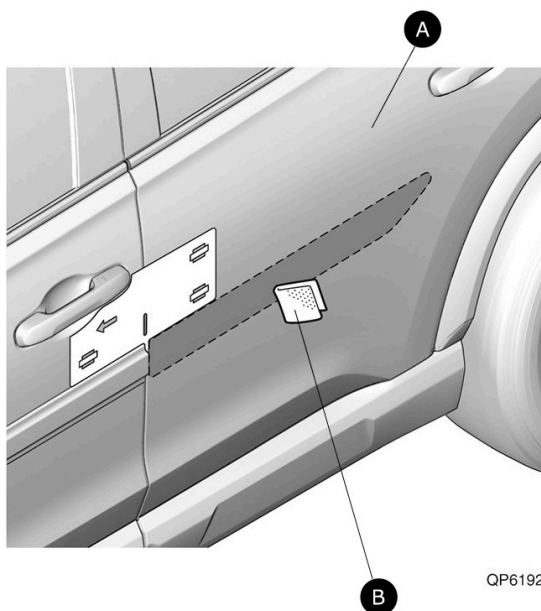

QP61928AD

A	LEFT REAR DOOR
B	ALCOHOL WIPE

11 Temporarily attach the adhesive backings.


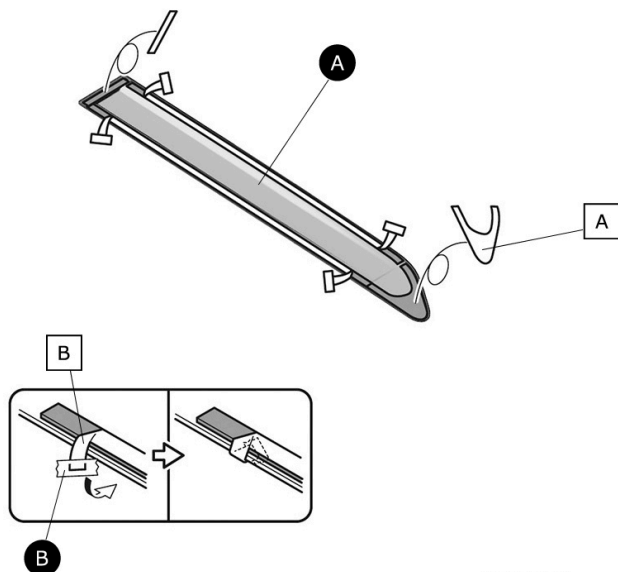


QM51006AB

A	LEFT REAR MOLDING
A	ADHESIVE BACKING (Remove.)(2)
B	ADHESIVE BACKING (Attach.)(2)
B	MASKING TAPE

12 Remove the adhesive backings.

13 Line up the left rear molding.

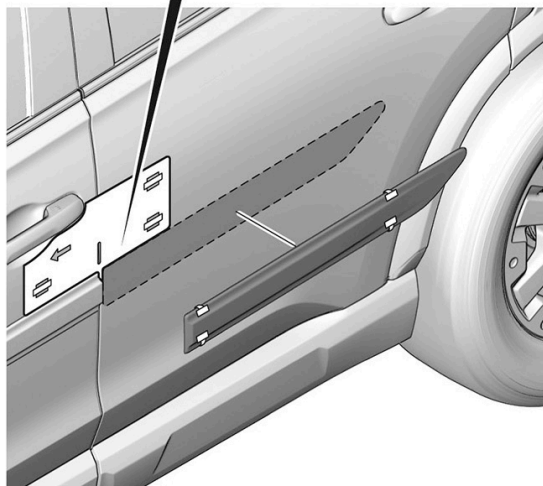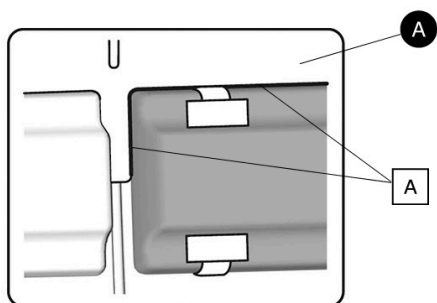


A	TEMPLATE
A	Line up.

QP61929AD

14 Secure the left rear molding.


NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

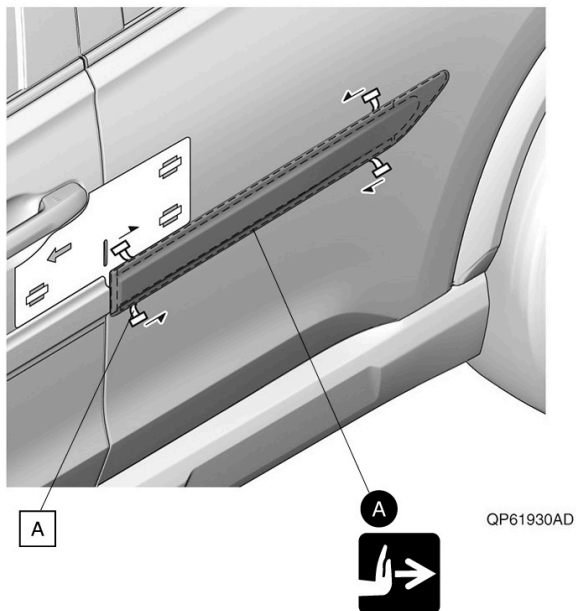

A	ADHESIVE BACKING (Remove.)(2)
A	DOUBLE-SIDED ADHESIVE TAPE(4)


15 Secure the left rear molding.

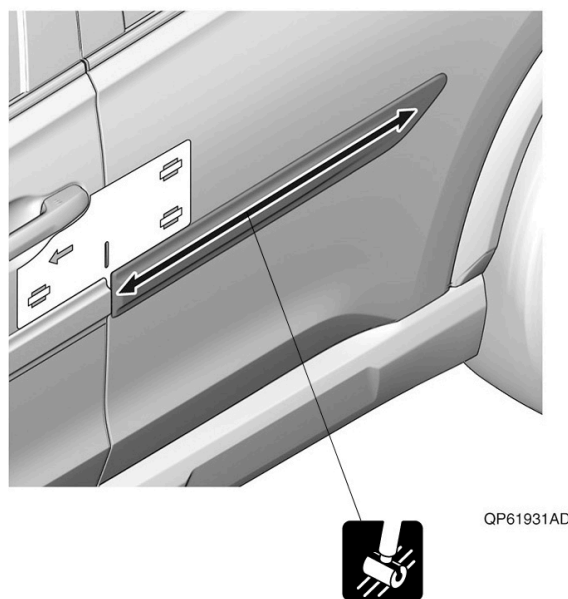

QP61931AD

16 Remove the template.

17 Flip the template, and repeat steps 1 through 16 on the other side.

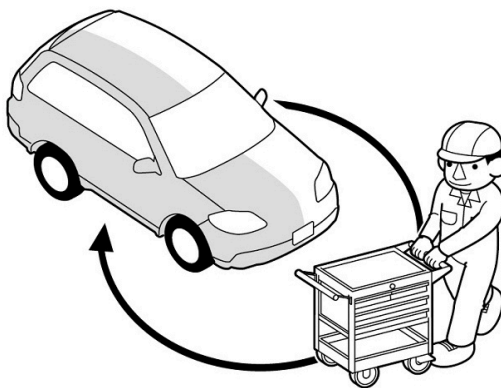

Q9D1014AM

18 Check that all parts are installed properly.