

CARGO NET	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
-----------	-------------------------------	-------------------------------

### GENERAL VIEW



QP52401AN

<b>A</b>	CARGO NET
----------	-----------

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.













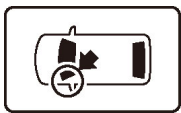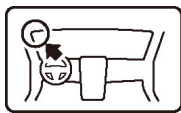



Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.






	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## PARTS LIST

### ■ Cargo Net Kit (P/N 08L96-3BM-100) (P/N 08L96-3BM-P00)

Parts	Parts name	QTY	Remarks
	Cargo net	1	
	Snap	4	
	Anchor	2	
	Stud bolt	2	
	Accessory User's Information Manual	1	

## REQUIRED TOOLS AND SUPPLIES

Ratchet


The following tool is available through the Honda Tool and Equipment Program:

Cargo Cap Screw Socket (T/N 07AAA-SEPA100)


## INSTALLATION

### ■ Installing the Cargo Net

**1** Remove the side hook.




<b>A</b>	SIDE HOOK
----------	-----------

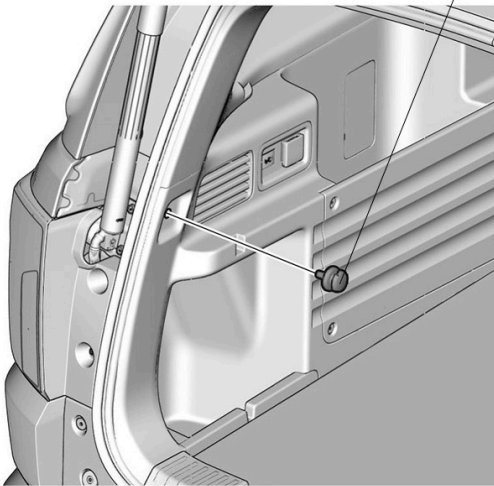

QP52402AN

**2** Install the stud bolt.

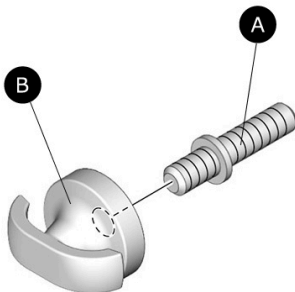


<b>A</b>	STUD BOLT
<b>B</b>	ANCHOR

QP52403AN


## 3 Install the anchor.

### NOTE

Make sure to install the anchor in the correct orientation.

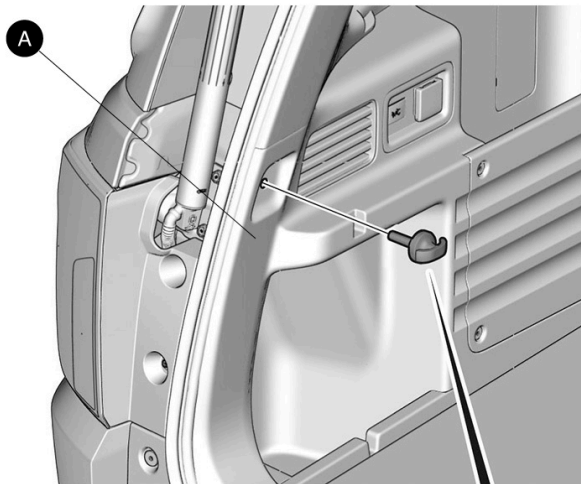


<b>A</b>	LEFT REAR SIDE TRIM PANEL
<b>A</b>	Tighten.
<b>B</b>	Adjust to horizontal.

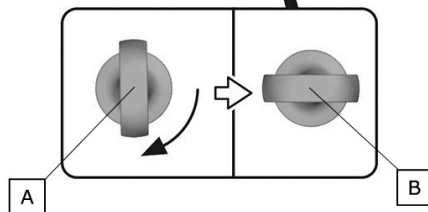


QP52404AN

## 4 Repeat steps 1 through 3 on the other side.

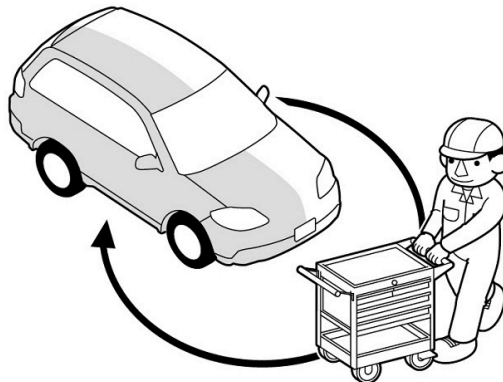

Q9D1014AM



## 5 Attach the snaps.

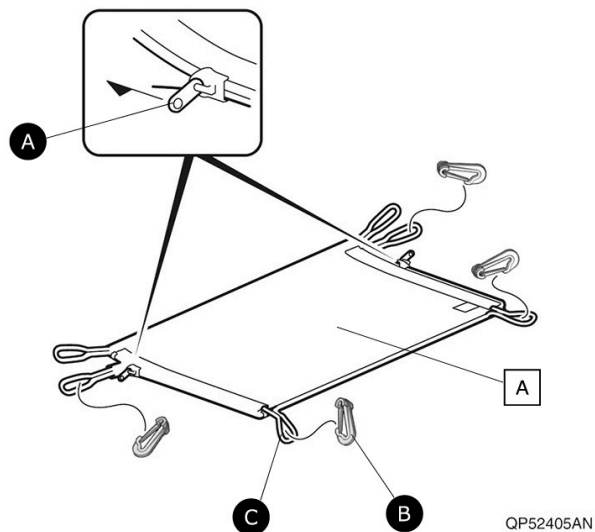

<b>A</b>	ZIPPER(2)
<b>A</b>	CARGO NET (Fold in half.)
<b>B</b>	SNAP(4)
<b>C</b>	LOOP(4)



## 6 Install the cargo net.

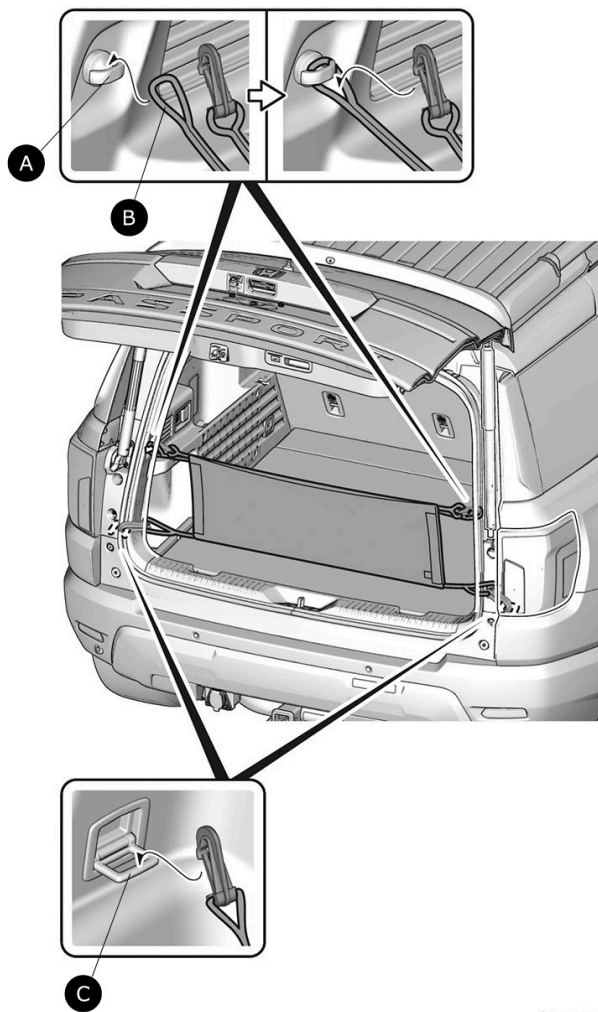

A	ANCHOR(2)
B	LOOP(2)
C	TIE-DOWN HOOK(2)

QP52406AN

## 7 Check that all parts are installed properly.

## **Give the following item(s) to your customer:**

Accessory User's Information Manual