




CARGO SHELF	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
-------------	-------------------------------	-------------------------------

GENERAL VIEW

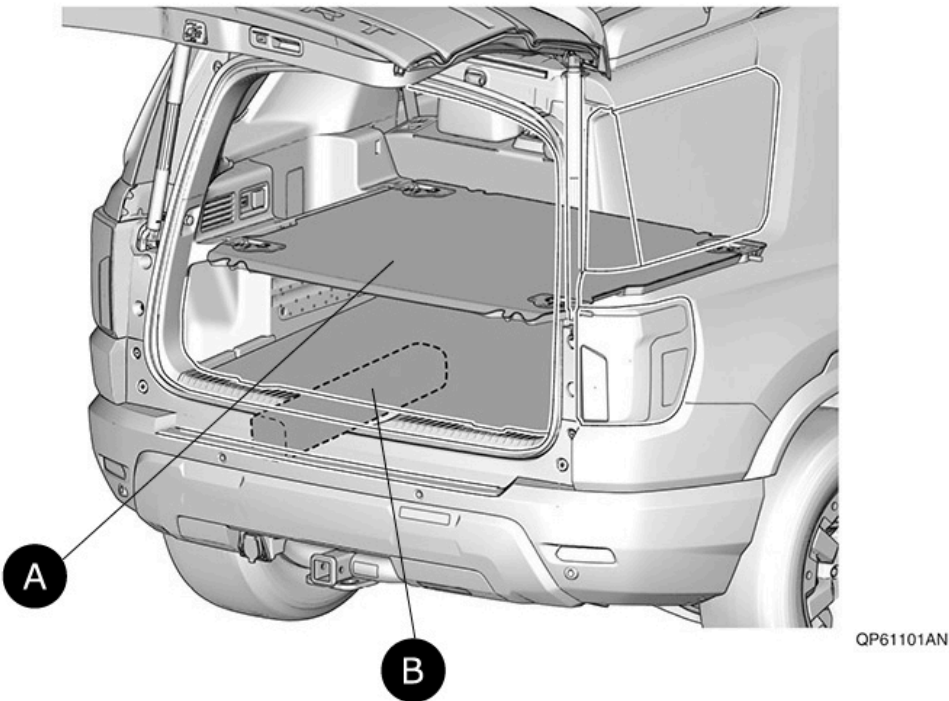

A	CARGO SHELF
B	STORAGE BAG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.

















Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Safety: General







- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

■ Safety: Accessory






- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

PARTS LIST

■ Cargo Shelf Kit (P/N 08Z05-3BM-100)

Parts	Parts name	QTY	Remarks
	Cargo shelf	1	
	Leg	4	
	Storage bag	1	
	Felt	4	
	Alcohol wipe	2	
	Accessory User's Information Manual	1	


■ Cargo Shelf Kit (P/N 08Z05-3BM-P00)

Parts	Parts name	QTY	Remarks
	Cargo shelf	1	
	Leg	4	
	Storage bag	1	
	Felt	4	
	Accessory User's Information Manual	1	

INSTALLATION



Installing the Cargo Shelf

- 1 Put the legs in the storage bag.

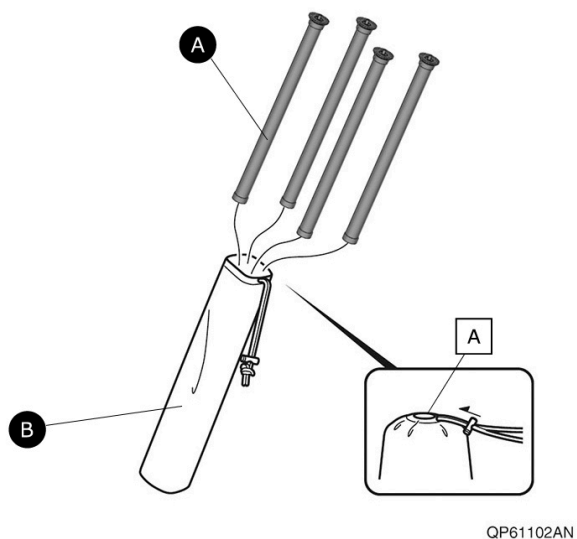

A	LEG(4)
B	STORAGE BAG
A	Close.

- 2 Store the storage bag.

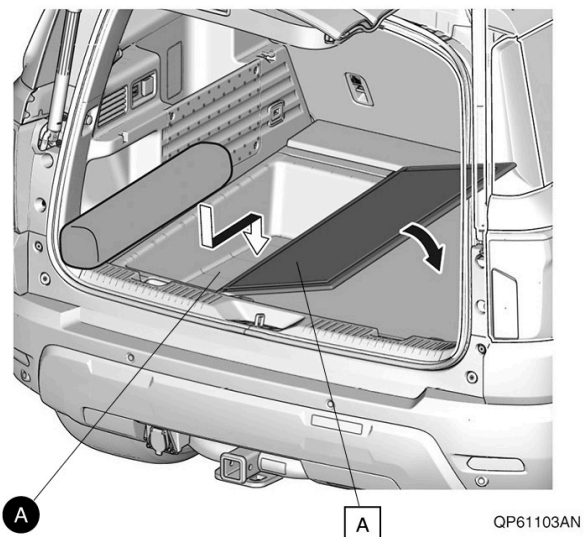



A	CARGO LID (Open.)
A	CARGO BIN

3 Clean the attaching areas.

NOTE

Allow to dry thoroughly.

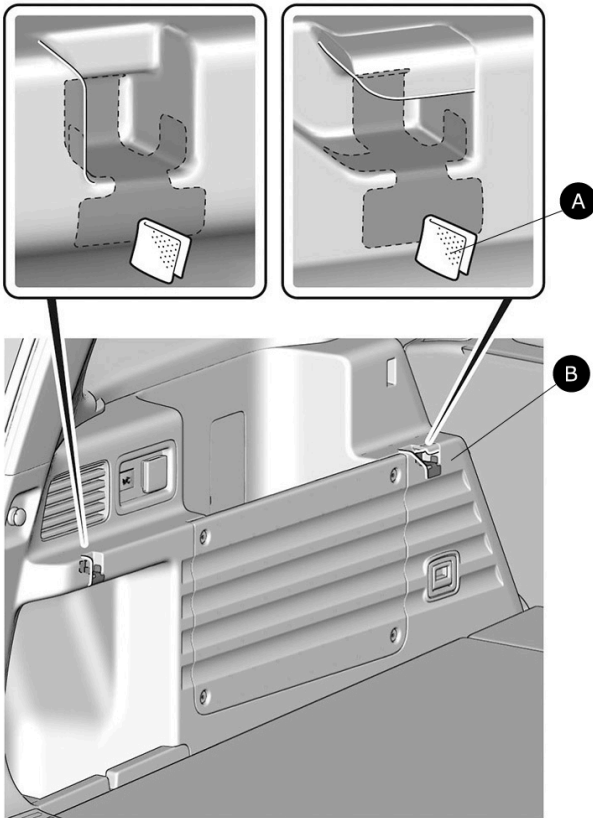

A


ALCOHOL WIPE

B

LEFT REAR SIDE TRIM PANEL


QP71001AN

4 Attach the felts.

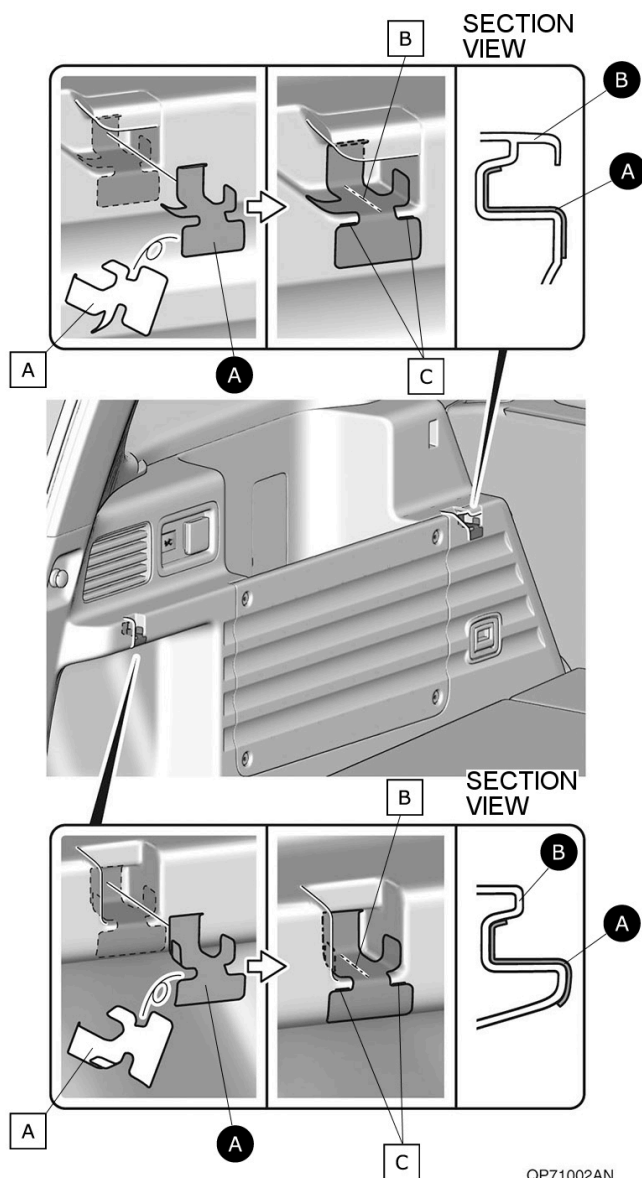


A	ADHESIVE BACKING (Remove.)
A	FELT
B	Center the felt on the flat surface.
C	Line up with the end of the curved surface.
B	LEFT REAR SIDE TRIM PANEL

5 Repeat steps 3 and 4 on the other side.

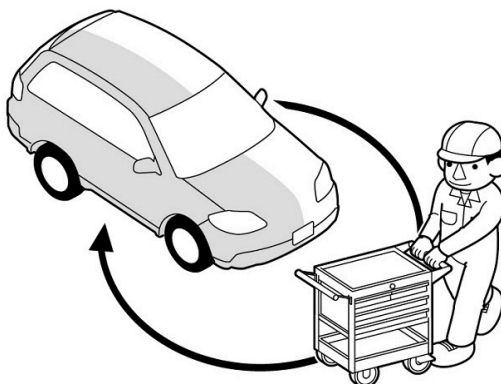

Q9D1014AM



6 Move the pins of the front and rear mechanisms.

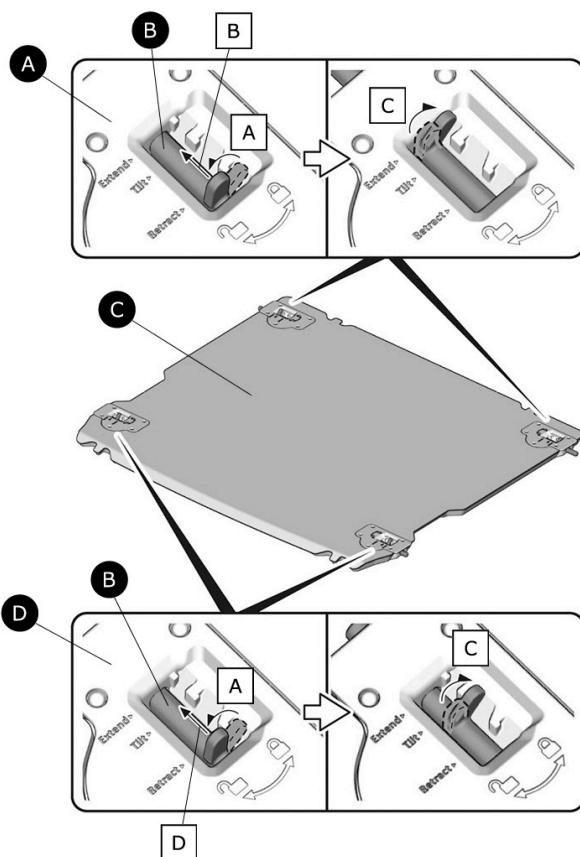


QP61104AN

A	FRONT MECHANISM(2)
B	PIN(2)
C	CARGO SHELF
D	REAR MECHANISM(2)
A	Unlock.
B	Slide to the "Extend" position.
C	Lock.
D	Slide to the "Tilt" position.

7 Install the cargo shelf.

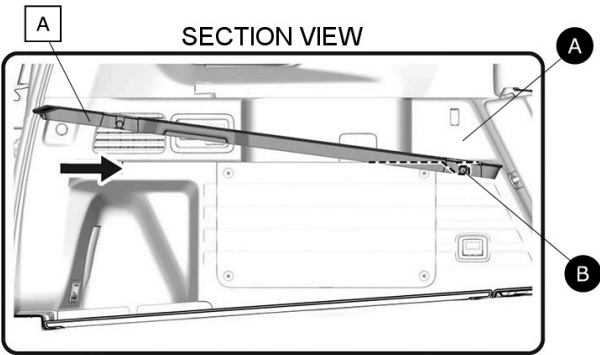


A	CARGO SHELF (Tilt.)
A	LEFT REAR SIDE TRIM PANEL
B	PIN
C	LEFT REAR SIDE TRIM PANEL, RIGHT REAR SIDE TRIM PANEL

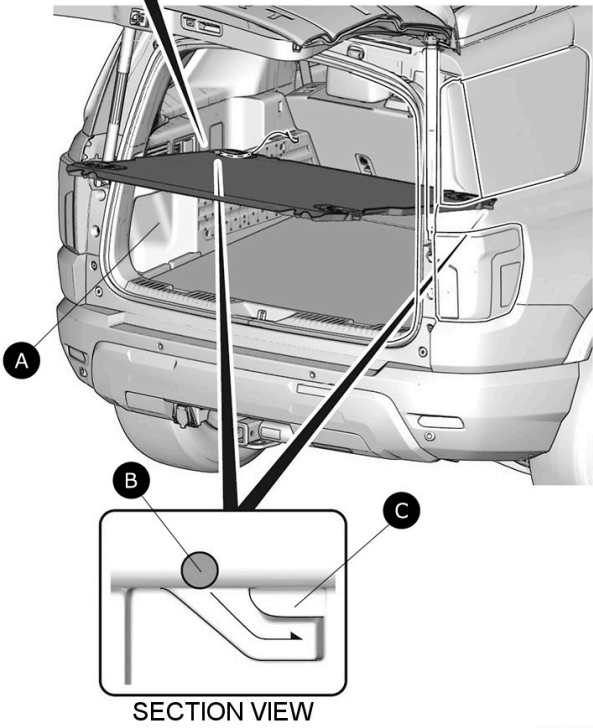

QP61105BN



8 Drop down the cargo shelf.

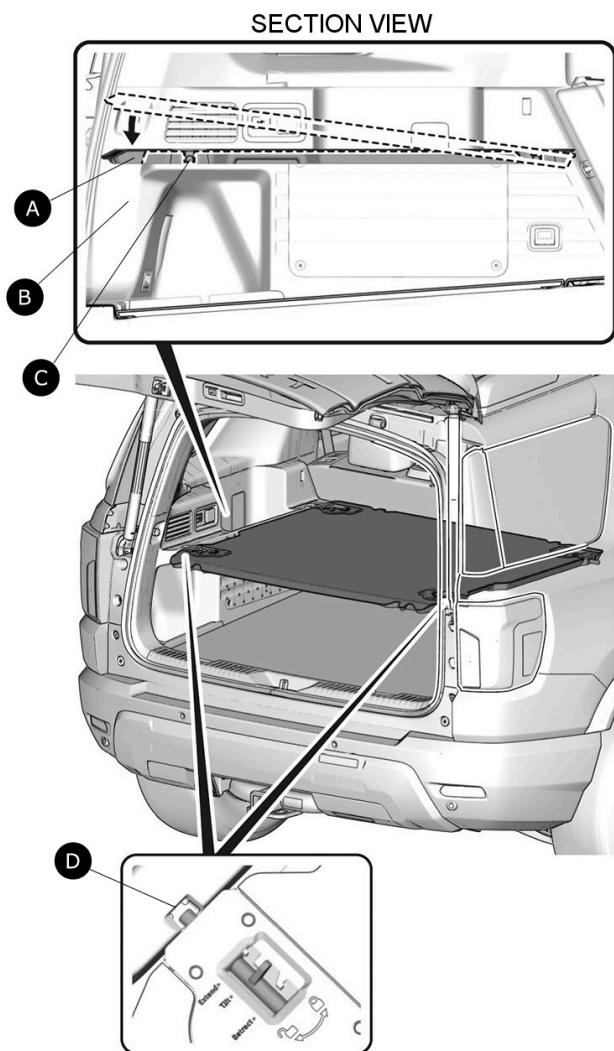

A	CARGO SHELF
B	LEFT REAR SIDE TRIM PANEL
C	PIN
D	RECESS(2)

QP61106BN

9 Move the pins of the rear mechanisms.

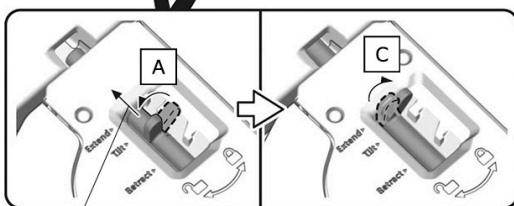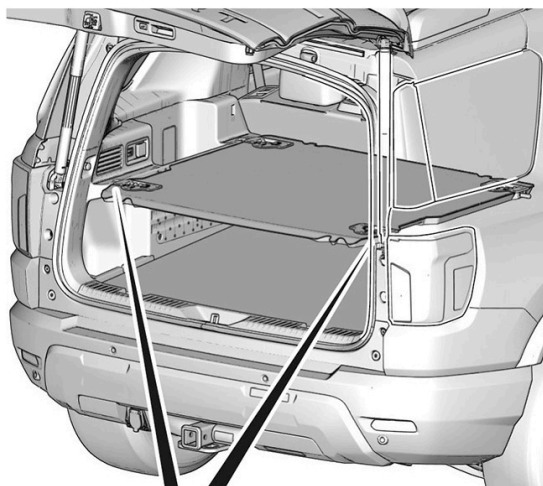

QP61107BN

A	Unlock.
B	Slide to the "Extend" position.(2)
C	Lock.

10 Check that all parts are installed properly.

Give the following item(s) to your customer:

Accessory User's Information Manual