### HONDA


### **INSTALLATION INSTRUCTIONS**

JAN. 2025

DOOR EDGE FILMS	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
-----------------	-------------------------------	-------------------------------

### **GENERAL VIEW**

If you are also installing body side moldings (sold separately), install them before you install the door edge films.

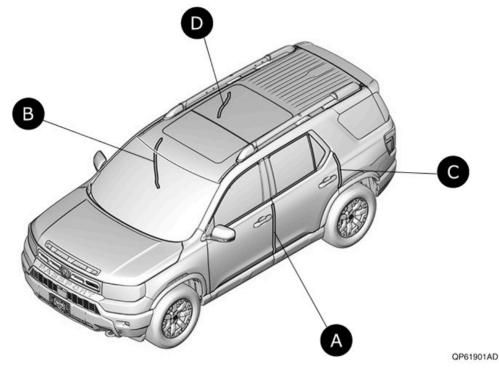

A	LEFT FRONT DOOR EDGE FILM
B	RIGHT FRONT DOOR EDGE FILM
0	LEFT REAR DOOR EDGE FILM
D	RIGHT REAR DOOR EDGE FILM

### FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### **A** DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### **▲** WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### **CAUTION**

You can be hurt if you do not follow the instructions.

#### MOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### ■ NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

### Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)

	Wear eye protection.		Wear heavy gloves.
<b>ķ</b> ─¾	Use an assistant.		Place the part on a blanket.
<b>4</b> 90°	Work perpendicular.	+	Remove any burrs.
	Use touch-up paint and allow to dry.	lb-ft	Tighten to the specified torque.
5,0	Apply firm pressure while rolling, especially at the ends, to set the adhesive.	4>	Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

### Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- · Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- · The illustrations may differ slightly from the actual accessory.

### Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use the 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

### **PARTS LIST**

### Door Edge Films Kit (P/N 08P20-T90-100)

Parts	Parts name	QTY	Remarks
	Left front door edge film (identification mark: FR-L)	1	
	Right front door edge film (identification mark: FR-R)	1	
	Left rear door edge film (identification mark: RR-L)	1	
	Right rear door edge film (identification mark: RR-R)	1	
	Alcohol wipe	4	
	Applicator	1	

### **REQUIRED TOOLS AND SUPPLIES**

- · Shop towel
- Gloves
- 3M Protective tape application solution

### **INSTALLATION**


### Installing the Door Edge Films

Clean the attaching area.

◆ NOTE

Allow to dry thoroughly.



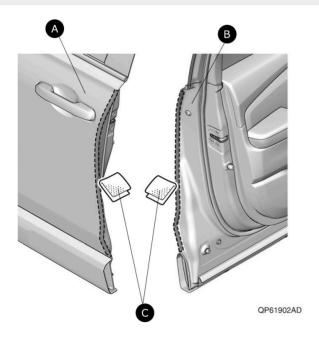


A	LEFT FRONT DOOR (outside)
B	LEFT FRONT DOOR (inside)
0	ALCOHOL WIPE


2 Spray the left front door.



Spray the outer surface of the door only.



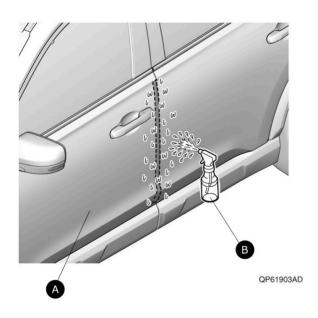




**CATION SOLUTION** 

3 Attach the left front door edge film.



Check the identification mark and the installation position of the door edge film.



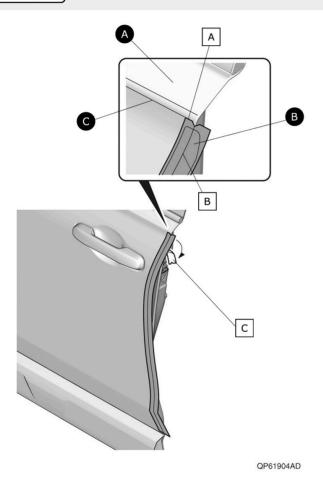


A	LEFT FRONT DOOR
В	LEFT FRONT DOOR EDGE FILM (identification mark: FR-L)
0	END OF THE CURVED SURFACE
А	TOP EDGE OF THE PROTECTIVE FILM (Line up with the end of the curved surface.)
В	MARK (Line up with the edge of the left front door.)
С	ADHESIVE BACKING (Remove.)



Secure the left front door edge film.




- · Work in one direction only.
- · Make sure that there are no air bubbles.

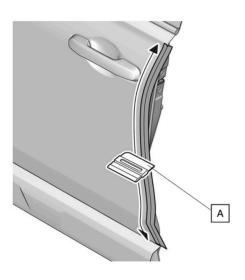

APPLICATOR (Use the hard side.)

QP61905BD

**5** Remove the protective film.

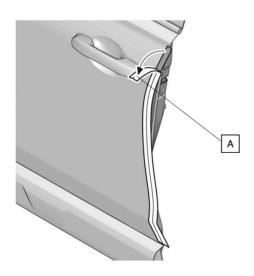

PROTECTIVE FILM (Remove.)


QP61906AD

6 Secure the left front door edge film.

#### **S** NOTE

- Do not trim or damage the seam sealant.
- · Make sure to prevent air from entering.



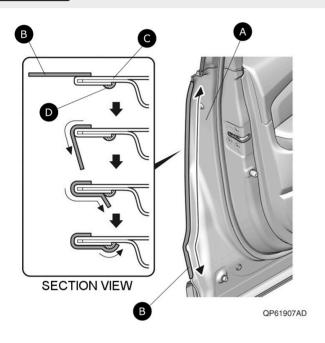


A	LEFT FRONT DOOR (inside)
В	LEFT FRONT DOOR EDGE FILM
0	LEFT FRONT DOOR
D	SEAM SEALANT


Wipe off the 3M protective tape application solution.

NOTE

Allow to dry thoroughly.



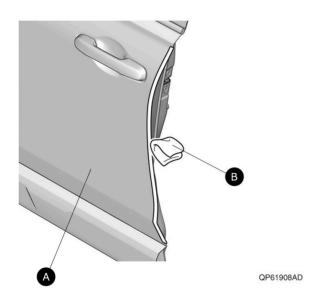




8 Clean the attaching area.




Allow to dry thoroughly.



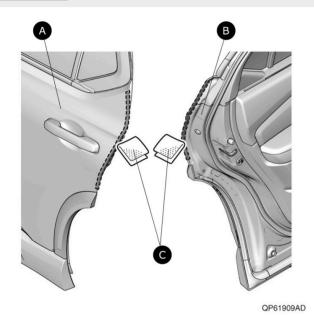

A	LEFT REAR DOOR (outside)
В	LEFT REAR DOOR (inside)
0	ALCOHOL WIPE





Spray the outer surface of the door only.








**CATION SOLUTION** 

1 Attach the left rear door edge film.



Check the identification mark and the installation position of the door edge film.



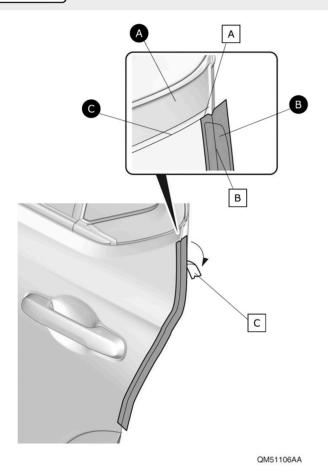


A	LEFT REAR DOOR
В	LEFT REAR DOOR EDGE FILM (identification mark: RR-L)
0	END OF THE CURVED SURFACE
А	TOP EDGE OF THE PROTECTIVE FILM (Line up with the end of the curved surface.)
В	MARK (Line up with the edge of the left rear door.)
С	ADHESIVE BACKING (Remove.)

Secure the left rear door edge film.




- · Work in one direction only.
- · Make sure that there are no air bubbles.

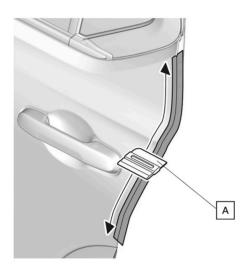

APPLICATOR (Use the hard side.)

QPD0302AD

12 Remove the protective film.

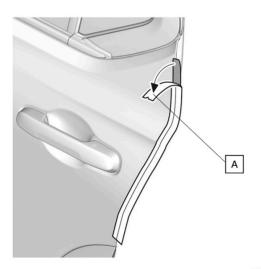

PROTECTIVE FILM (Remove.)


QM51108AA

13 Secure the left rear door edge film.

#### **S** NOTE

- Do not trim or damage the seam sealant.
- · Make sure to prevent air from entering.



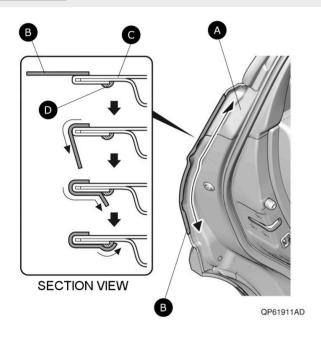


A	LEFT REAR DOOR (inside)
В	LEFT REAR DOOR EDGE FILM
0	LEFT REAR DOOR
D	SEAM SEALANT

Wipe off the 3M protective tape application solution.

**S** NOTE

Allow to dry thoroughly.




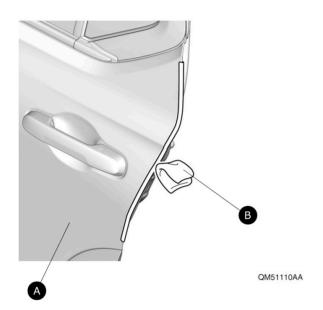

A LEFT REAR DOOR (outside)

SHOP TOWEL

Repeat steps 1 through 14 on the other side.

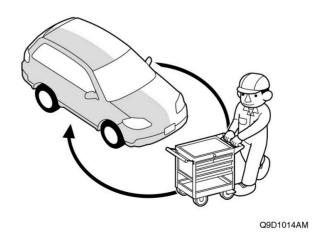

16 Check that all parts are installed properly.