



ROOF PLATFORM	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
---------------	-------------------------------	-------------------------------

GENERAL VIEW

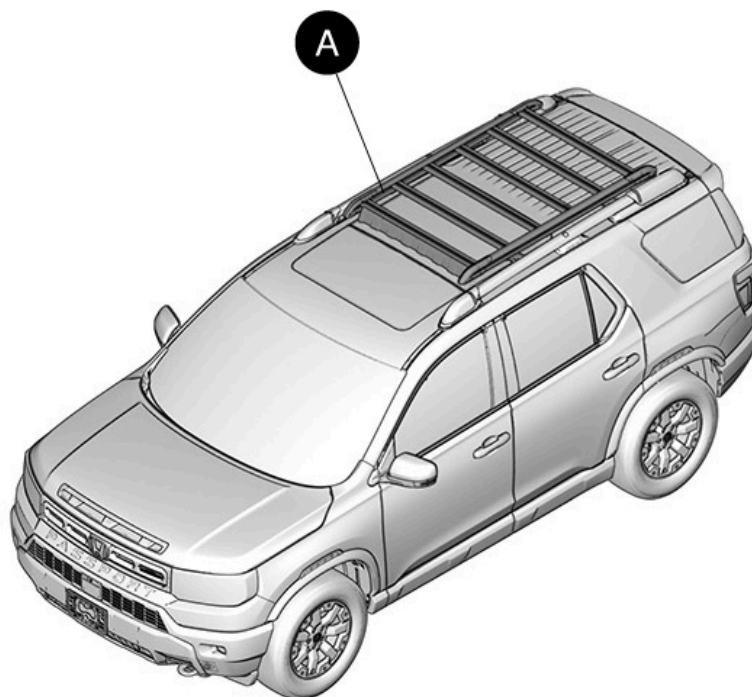

QP61401AD

	ROOF PLATFORM
---	---------------

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.













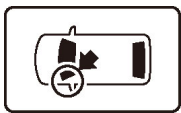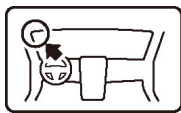



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.










	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

PARTS LIST

■ Roof Platform Kit (P/N 08L08-3BM-100) (P/N 08L08-3BM-P00)

Parts	Parts name	QTY	Remarks
	Roof platform	1	
	Wind deflector	1	
	Left front bracket (identification mark: FR-L)	1	
	Left rear bracket (identification mark: RR-L)	1	
	Right front bracket (identification mark: FR-R)	1	
	Right rear bracket (identification mark: RR-R)	1	
	Shoulder bolt	4	
	Flange bolt	20	
	Accessory User's Information Manual	1	

REQUIRED TOOLS AND SUPPLIES



- T-30 TORX bit
- Torque wrench
- Ratchet
- 10 mm Crowfoot-type wrench
- Blanket
- 10 mm Socket
- 10 mm Ratchet wrench

INSTALLATION

■ Removing the Vehicle Parts

● Plastic Plug

1 Remove the plastic plugs.

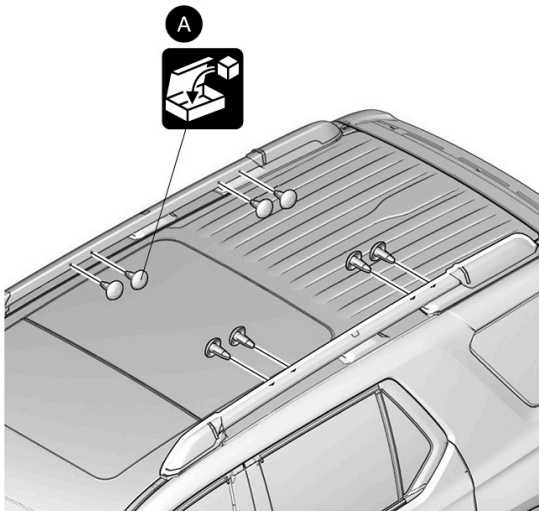

QP53102AD



A	PLASTIC PLUG(8)
----------	-----------------

Installing the Roof Platform

2 Install the right front bracket and right rear bracket.

NOTE


Check the identification mark and the installation position of the bracket.

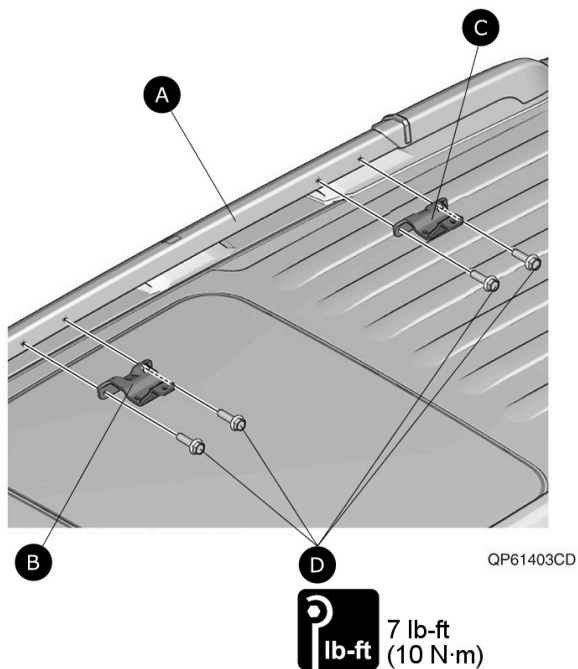

A	RIGHT ROOF RAIL
B	RIGHT FRONT BRACKET (identification mark: FR-R)
C	RIGHT REAR BRACKET (identification mark: RR-R)
D	FLANGE BOLT(4)

3 Repeat step 2 on the other side.


4 Place the blanket to protect the vehicle.

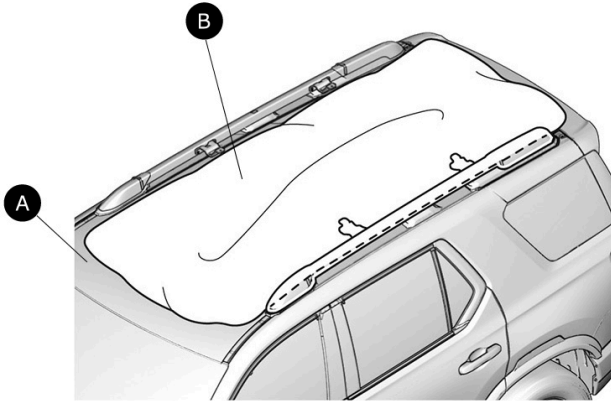

QP61701BD

A	ROOF
B	BLANKET

5 Install the wind deflector.

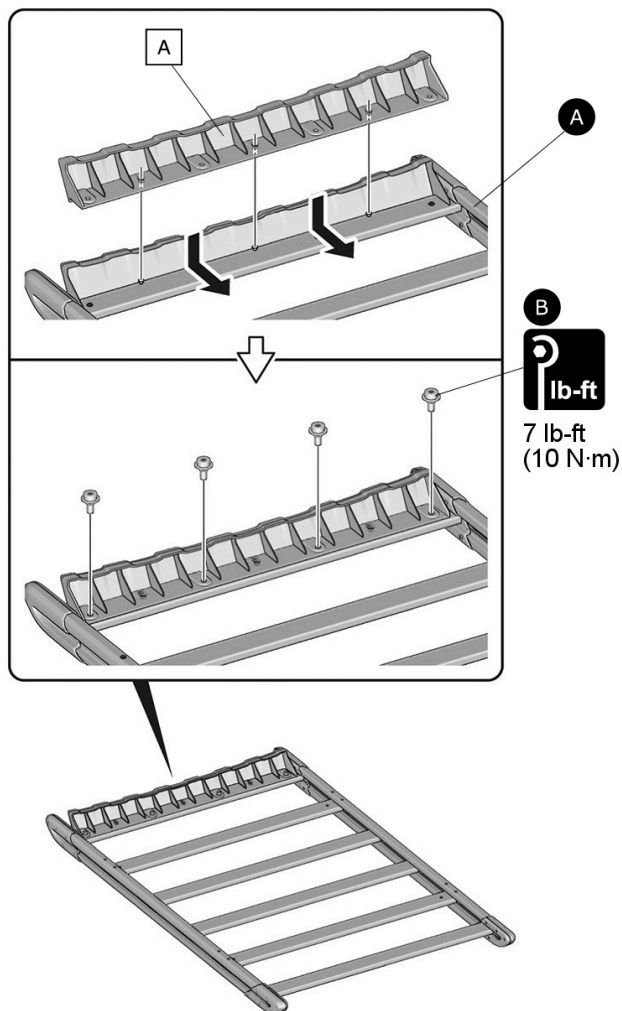


A	WIND DEFLECTOR (Slide rearward and install.)
A	ROOF PLATFORM (inside)
B	SHOULDER BOLT(4)

QP61402CD

6 Loosely install the roof platform.

NOTE

Center the roof platform on the vehicle as necessary.

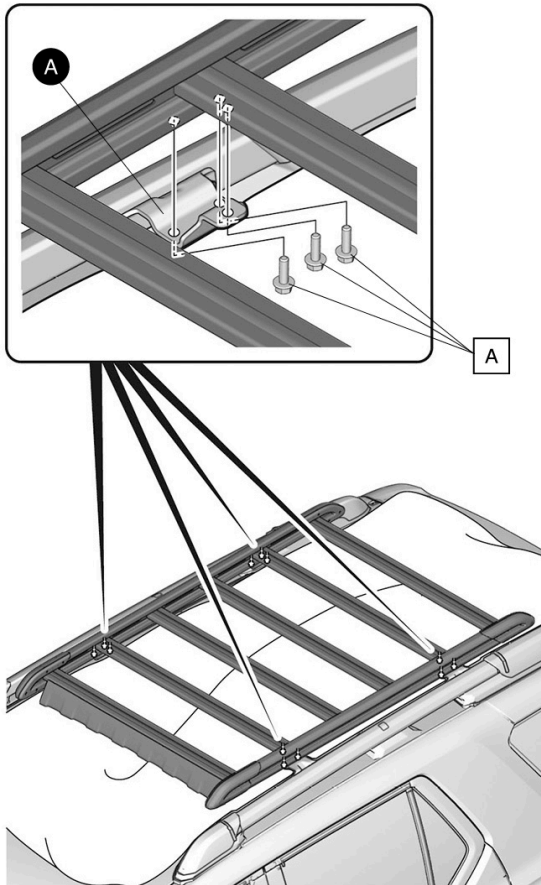


QP61702BD

A	FLANGE BOLT (Loosely secure.)(12)
A	RIGHT FRONT BRACKET, RIGHT REAR BRACKET, LEFT FRONT BRACKET, LEFT REAR BRACKET


7 Secure the roof platform.

NOTE

- When using some special tools or crowfoot-type wrenches, the torque value changes due to the added leverage. The actual torque applied will be greater than the torque reading shown.
- The torque specification given is the actual torque, not the reading on the torque wrench.
- To compensate for this additional leverage, use the formula below to calculate the torque value reading on the torque wrench.
- Always use the special tool or crowfoot-type wrench in a straight line with the torque wrench, or you will apply improper torque.

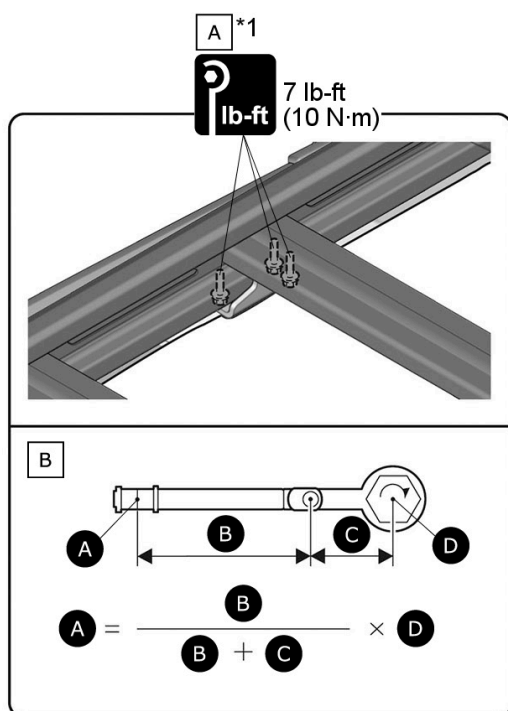

A	FLANGE BOLT (Tighten.)(12)
B	CALCULATION FORMULA
A	READING OF THE TORQUE WRENCH
B	TORQUE WRENCH EFFECTIVE LENGTH
C	SPECIAL TOOL / CROWFOOT-TYPE EFFECTIVE LENGTH
D	SPECIFIED TORQUE

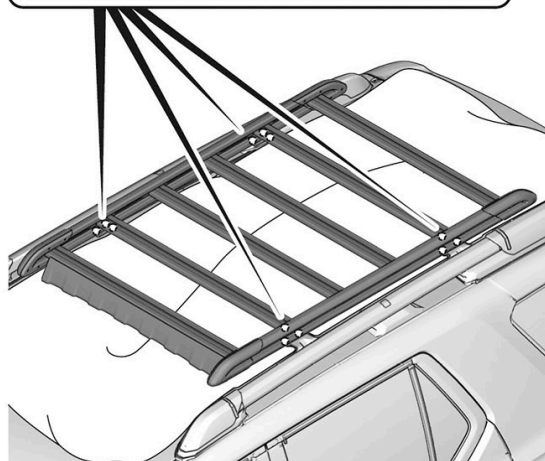

QP61703BD

*1: Loosely secured in step 6.

- 8 Remove the blanket.
- 9 Check that all parts are installed properly.

Give the following item(s) to your customer:

Accessory User's Information Manual