




RUNNING BOARDS	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
----------------	-------------------------------	-------------------------------

GENERAL VIEW

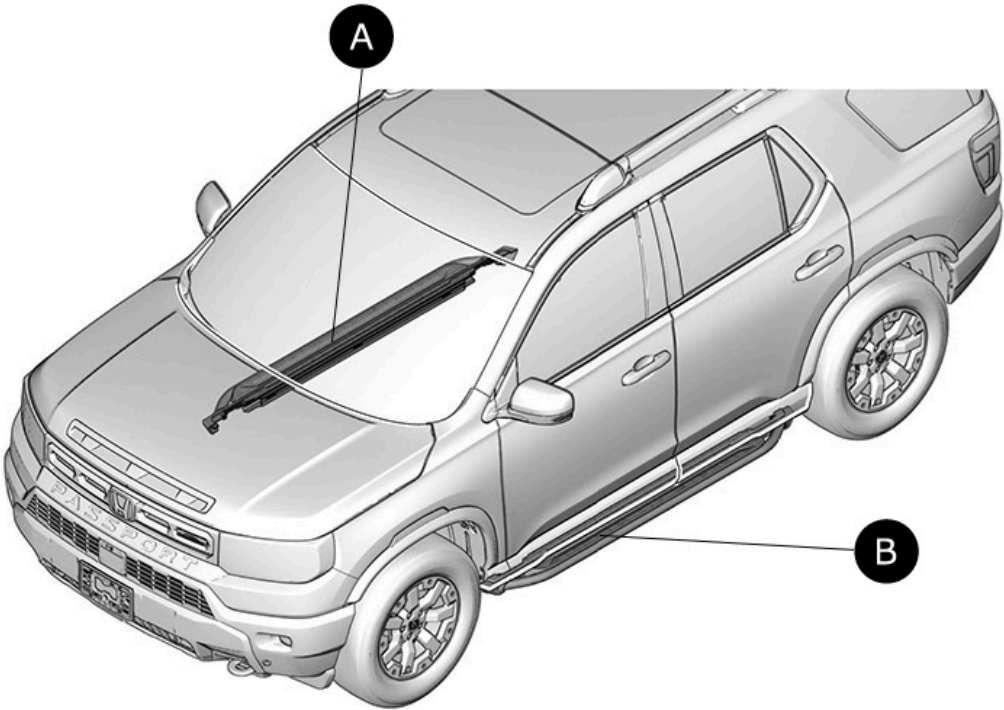

QP62701AN

A	RIGHT RUNNING BOARD
B	LEFT RUNNING BOARD

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.













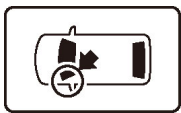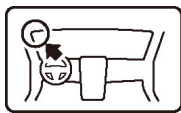



Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.







	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## PARTS LIST

### Running Boards Kit (P/N 08L33-3BM-100)

Parts	Parts name	QTY	Remarks
	Left running board	1	
	Right running board	1	
	Bracket A (P/N Ending in 11 stamped on bracket)	2	
	Bracket B (P/N Ending in 13 stamped on bracket)	2	
	Bracket C (P/N Ending in 15 stamped on bracket)	2	
	Flange bolt	18	

## REQUIRED TOOLS AND SUPPLIES

- Ratchet
- 10 mm and 13 mm Sockets
- Torque wrench
- 10 mm and 13 mm Open end wrenches
- Tin snips
- File
- Utility knife

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

INSTALLATION



Removing the Vehicle Parts

Felt Left Front Floor Under Cover or Plastic Left Front Floor Under Cover


- 1 Lift up the vehicle.
- 2 Choose one of these options.

• With felt left front floor under cover	
	Go to step 3
• With plastic left front floor under cover	
	Go to step 4

## 3 Remove the felt left front floor under cover.

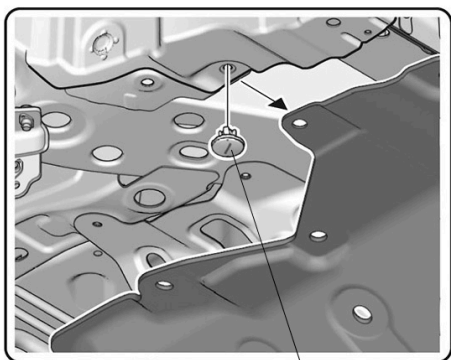



D

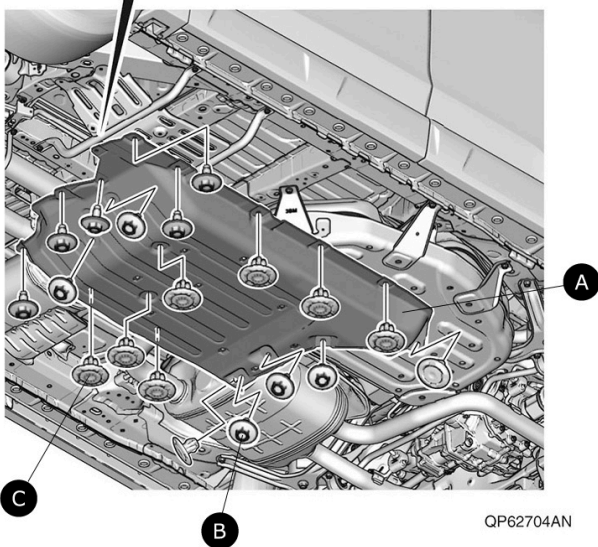

A	FELT LEFT FRONT FLOOR UNDER COVER
B	BOLT(10)
C	CLIP(9)
D	CLIP (short)


Go to step 6

## 4 Remove the plastic left front floor under cover.

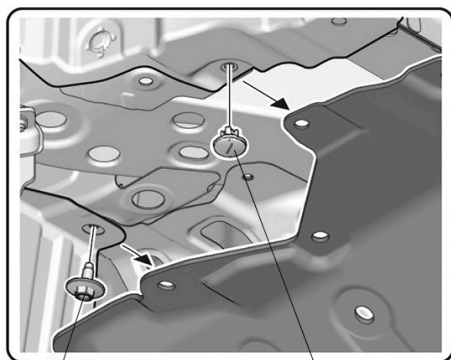

E

D

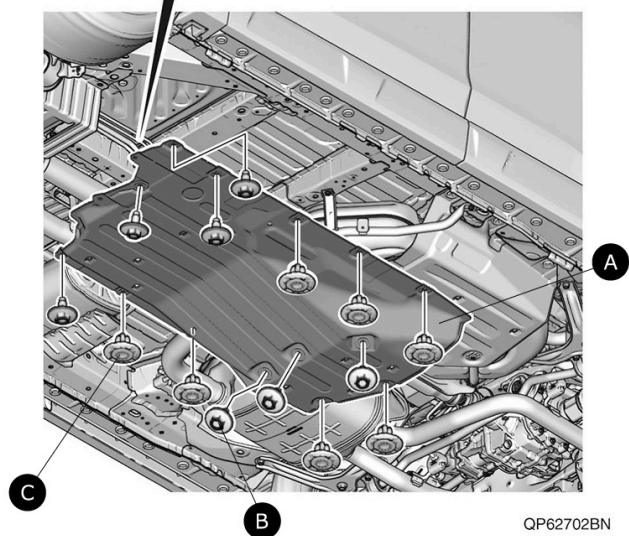



QP62702BN

<b>A</b>	PLASTIC LEFT FRONT FLOOR UNDER COVER
<b>B</b>	BOLT(7)
<b>C</b>	CLIP(7)
<b>D</b>	CLIP (short)
<b>E</b>	BOLT



● Plastic Left Rear Floor Under Cover

5 Remove the plastic left rear floor under cover.

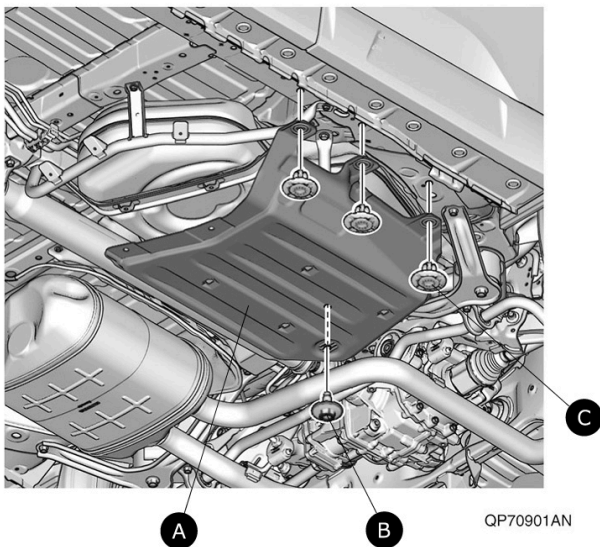


A	PLASTIC LEFT REAR FLOOR UNDER COVER
B	BOLT
C	CLIP(3)

■ Installing the Running Boards

6 Choose one of these options.

• With felt left front floor under cover	Go to step 7
• With plastic left front floor under cover	Go to step 8


**7** Cut the felt left front floor under cover.

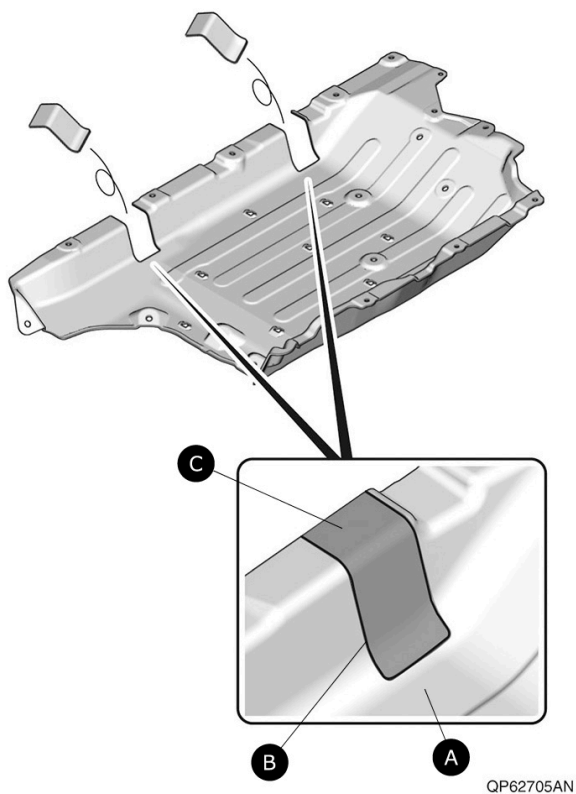

<b>A</b>	FELT LEFT FRONT FLOOR UNDER COVER (inside)
<b>B</b>	GROOVE(2)
<b>C</b>	CUTTING AREA(2)


Go to step [10](#)

- 8** Cut the plastic left front floor under cover.

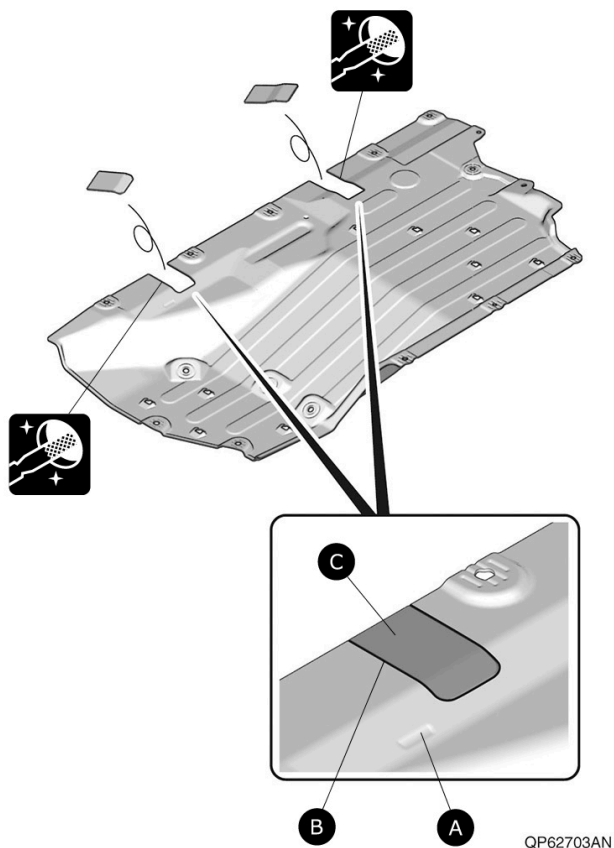

<b>A</b>	PLASTIC LEFT FRONT FLOOR UNDER COVER (inside)
<b>B</b>	GROOVE(2)
<b>C</b>	CUTTING AREA(2)

- 9** Cut the plastic left rear floor under cover.


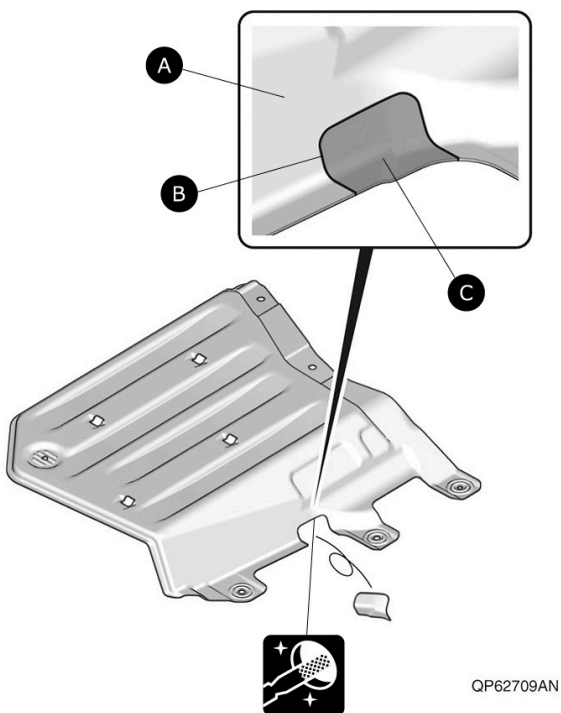


<b>A</b>	PLASTIC LEFT REAR FLOOR UNDER COVER
<b>B</b>	GROOVE
<b>C</b>	CUTTING AREA

## 10 Loosely install the bracket A, bracket B, and bracket C.

### NOTE



- Check the stamp and the installation position of the brackets.

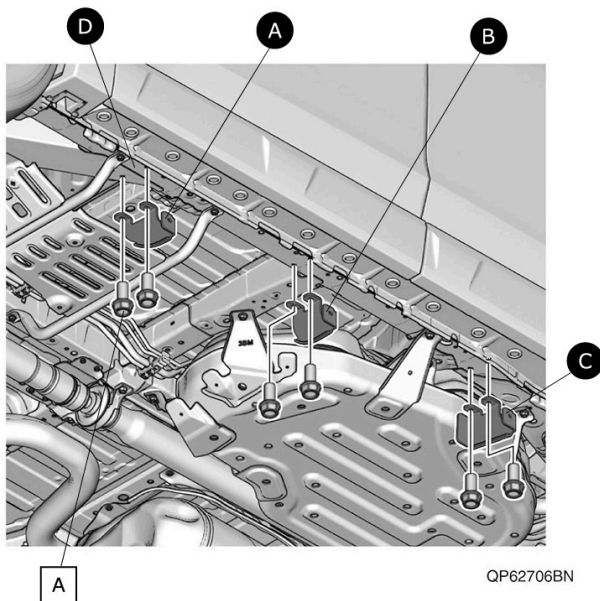

<b>A</b>	BRACKET A (P/N Ending in 11 stamped on bracket)
<b>B</b>	BRACKET B (P/N Ending in 13 stamped on bracket)
<b>C</b>	BRACKET C (P/N Ending in 15 stamped on bracket)
<b>A</b>	FLANGE BOLT (Loosely secure.)(6)
<b>D</b>	VEHICLE PANEL

# 11

Loosely install the left running board.

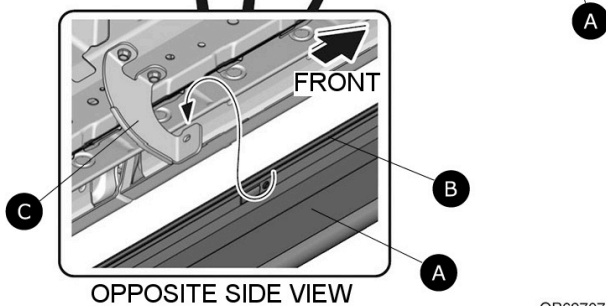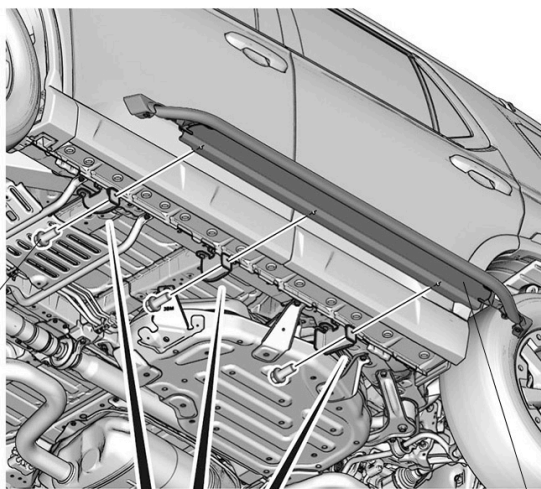


<b>A</b>	LEFT RUNNING BOARD
<b>A</b>	FLANGE BOLT (Loosely secure.)(3)
<b>B</b>	GROOVE
<b>C</b>	BRACKET A, BRACKET B, BRACKET C

QP62707AN

## 12 Tighten the flange bolts.

### NOTE


Work in the order shown.

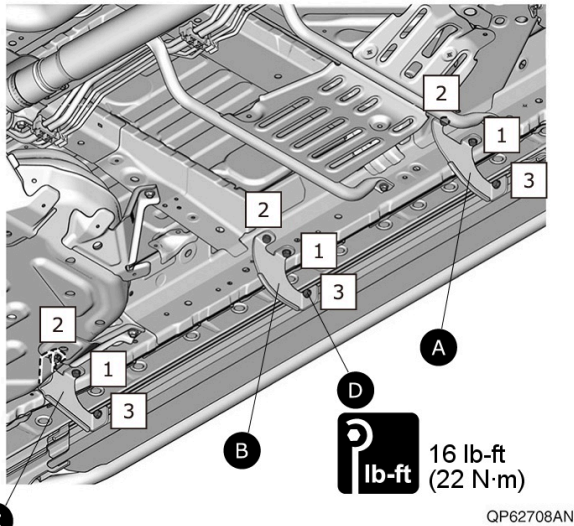

<b>A</b>	BRACKET A
<b>B</b>	BRACKET B
<b>C</b>	BRACKET C
<b>D</b>	FLANGE BOLT(9)

## 13 Install the felt left front floor under cover or plastic left rear floor under cover and plastic left front floor under cover.

**14** Repeat steps 10 through 12 on the other side.

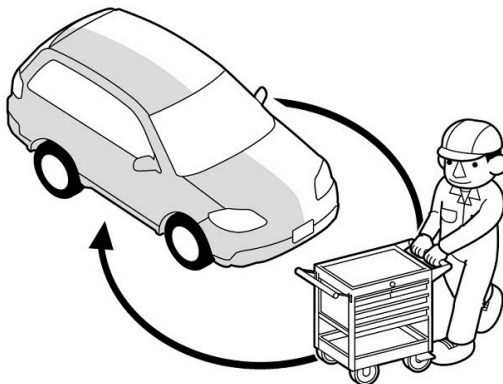

Q9D1014AM

**15** Check that all parts are installed properly.