


SEPARATION BARRIER	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
--------------------	-------------------------------	-------------------------------

GENERAL VIEW

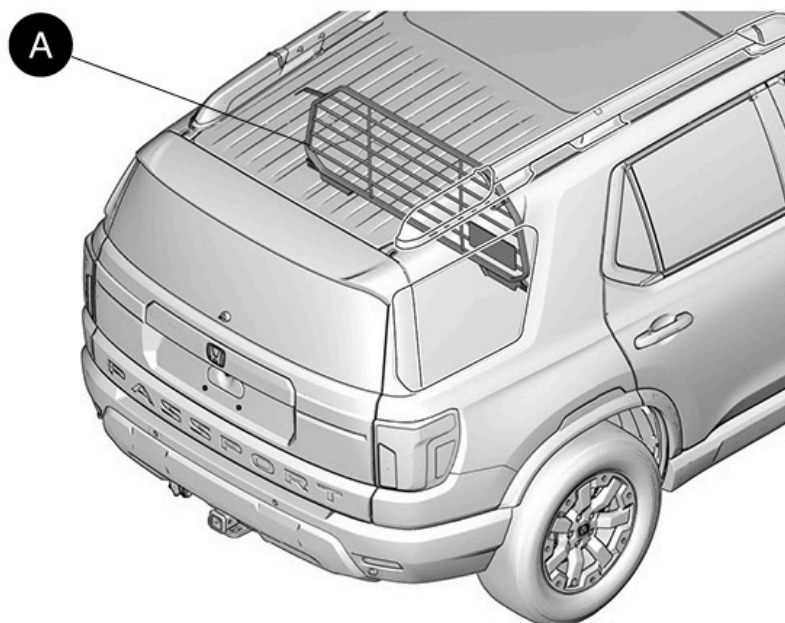

QP60401AN

A	SEPARATION BARRIER
----------	--------------------

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.















Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
---	------------------------------	--	---

	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Safety: General













- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- The illustrations may differ slightly from the actual accessory.



■ Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.

PARTS LIST

■ Separation Barrier Kit (P/N 08U35-3BM-100A) (P/N 08U35-3BM-P00A)

Parts	Parts name	QTY	Remarks
	Separation barrier	1	
	Left upper bracket (identification mark: L)	1	
	Right upper bracket (identification mark: R)	1	
	Left side bracket	1	
	Right side bracket	1	
	Handle A	2	
	Handle B	2	
	Left trim (identification mark: L)	1	
	Right trim (identification mark: R)	1	
	Flange bolt	2	
	Bolt	2	
	Collar	2	

Parts	Parts name	QTY	Remarks
	Felt seal	2	
	Accessory User's Information Manual	1	

REQUIRED TOOLS AND SUPPLIES

- Ratchet
- Torque wrench
- 8 mm Socket
- Extension
- Shop towel
- Isopropyl alcohol

The following tools are available through the Honda Tool and Equipment Program:


- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

INSTALLATION


■ Removing the Vehicle Parts

● Left Headliner Cap/Right Headliner Cap

1 Remove the left headliner cap.



A	RETAINING TAB(3)
B	LEFT HEADLINER CAP

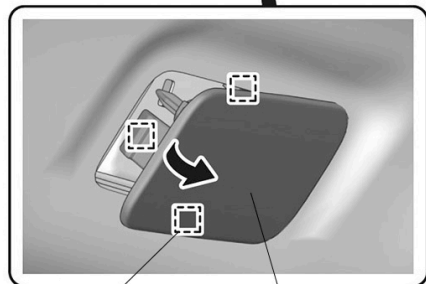

A

B



QP60402AN




2 Repeat step 1 on the other side.

Installing the Separation Barrier

3 Clean the attaching area.

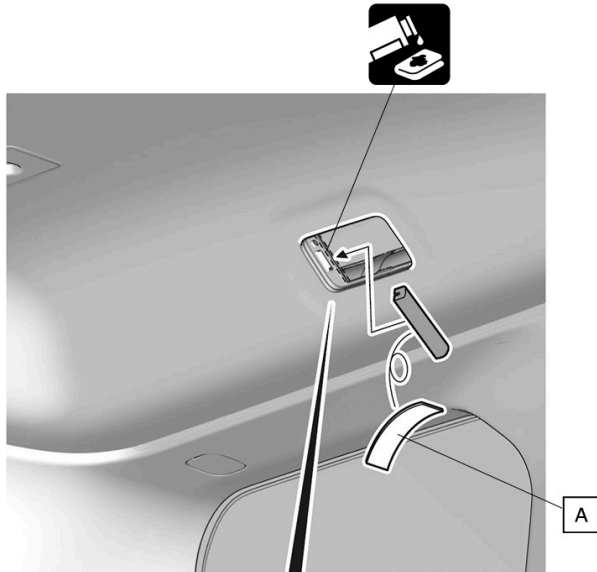

SECTION VIEW

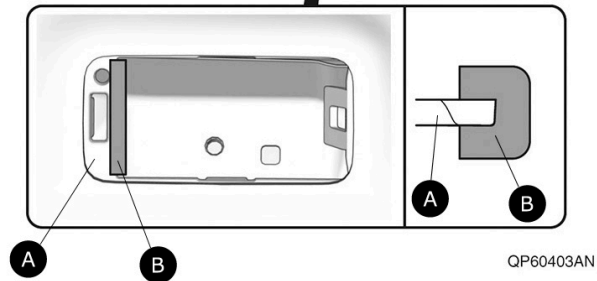

A	ADHESIVE BACKING (Remove.)
A	HEADLINER
B	FELT SEAL

4 Attach the felt seal.


- 5** Pre-install the flange bolt into the left upper bracket to prevent it from falling when installing the left upper bracket.


WARNING

- Items dropped in the headliner can become projectiles when the side curtain airbag deploys, causing serious injury or death.
- Take steps to avoid dropping items, such as the flange bolt, into the headliner and if such items are dropped immediately retrieve them.

NOTE

Check the identification mark and the installation position of the upper bracket.



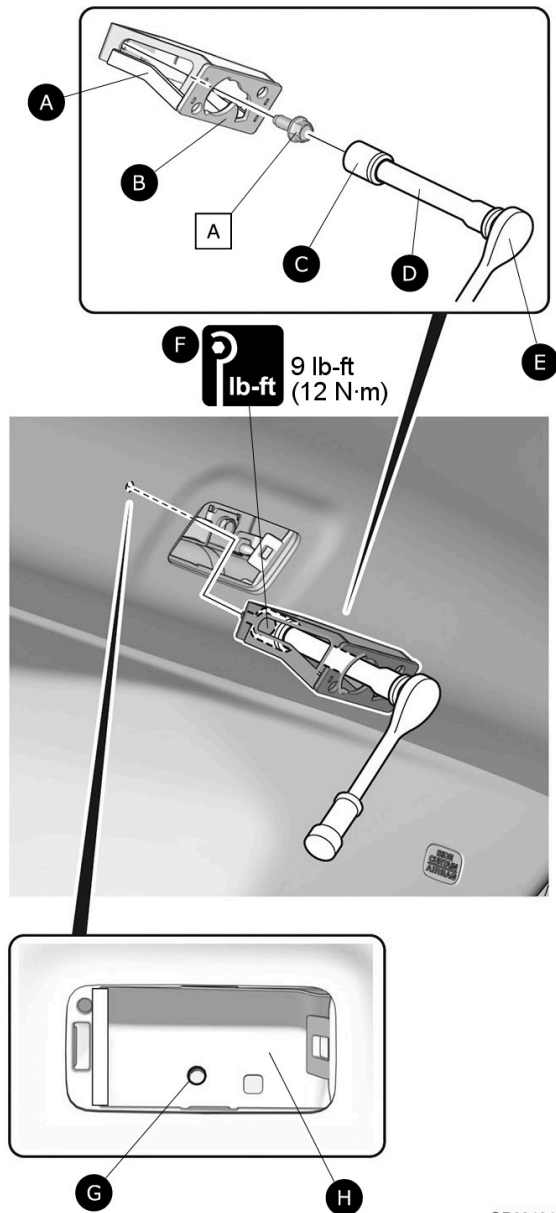

A	FELT
B	LEFT UPPER BRACKET (identification mark: L)
A	FLANGE BOLT (Pre-install.)
C	8 mm SOCKET
D	EXTENSION
E	RATCHET
F	FLANGE BOLT
G	FLANGE BOLT INSTALLING HOLE
H	VEHICLE PANEL

6 Install the left upper bracket.


NOTE

Check the orientation of the upper bracket.

7 Install the left trim.

NOTE


Check the identification mark and the installation position of the trim.

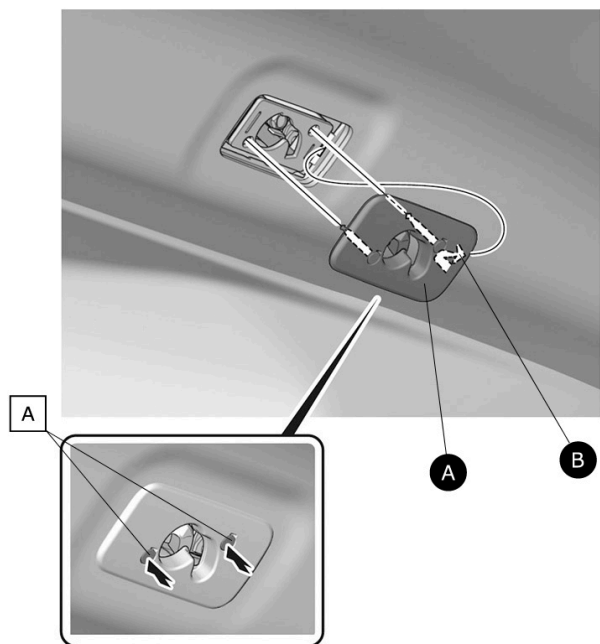

A	LEFT TRIM (identification mark: L)
B	HOOK
A	PIN (Push.)(2)


QP60405AN

8 through 7 on the other side.

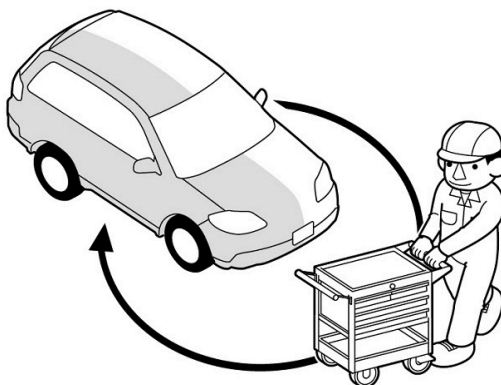

Q9D1014AM

9 Loosely install the handles A and collars.

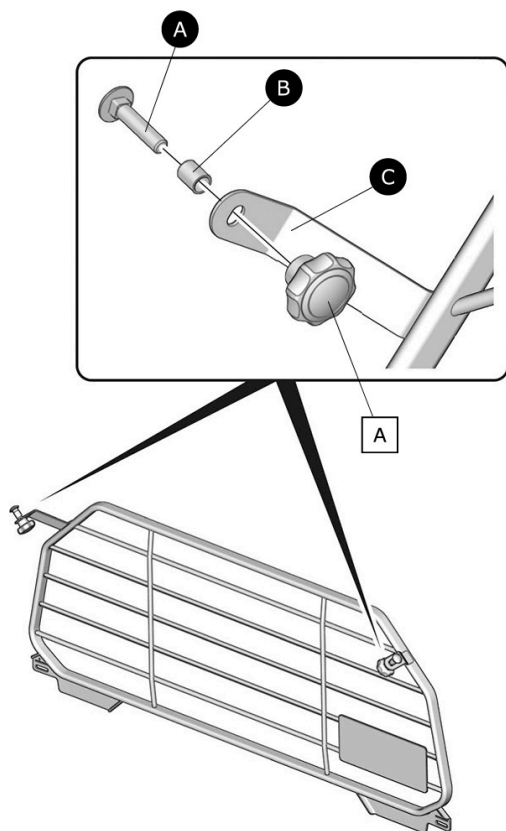



A	BOLT(2)
B	COLLAR(2)
C	SEPARATION BARRIER
A	HANDLE A (Loosely install.)(2)

QP60406AN

10 Loosely install the left and right side brackets.

NOTE

Make sure to install the side brackets in the correct position.

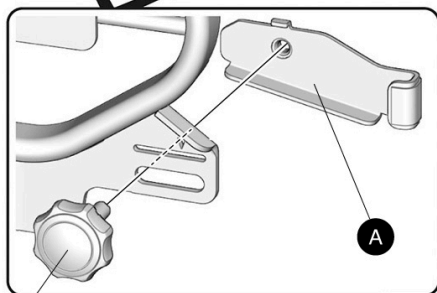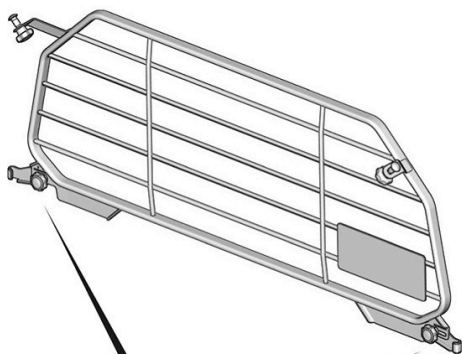

A

QP60407AN



A	HANDLE B (Loosely install.)(2)
A	RIGHT SIDE BRACKET, LEFT SIDE BRACKET

11

Install the separation barrier.

NOTE


- Be careful not to scratch the interior.
- Make sure to install the separation barrier in the correct location.

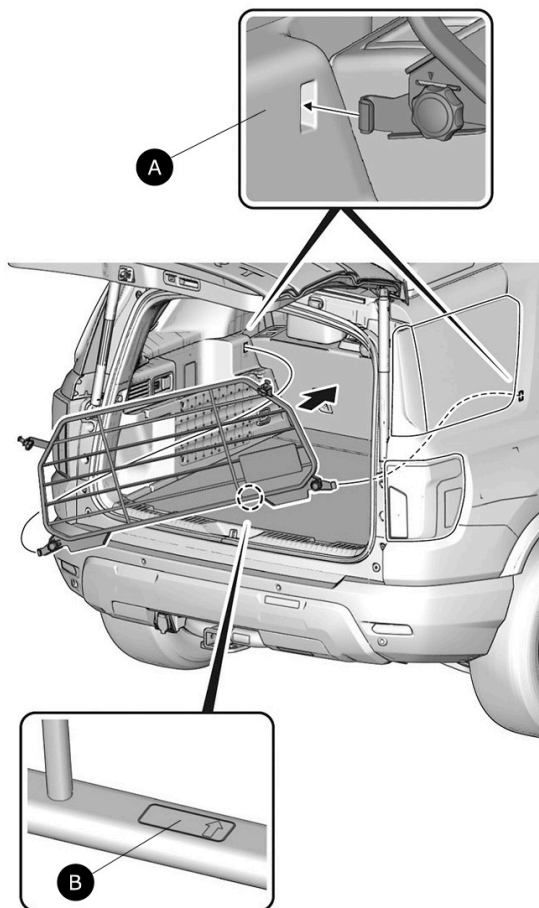

A	LEFT REAR SIDE TRIM PANEL, RIGHT REAR SIDE TRIM PANEL
B	ARROW LABEL

QP60408AN

12 Install the separation barrier.

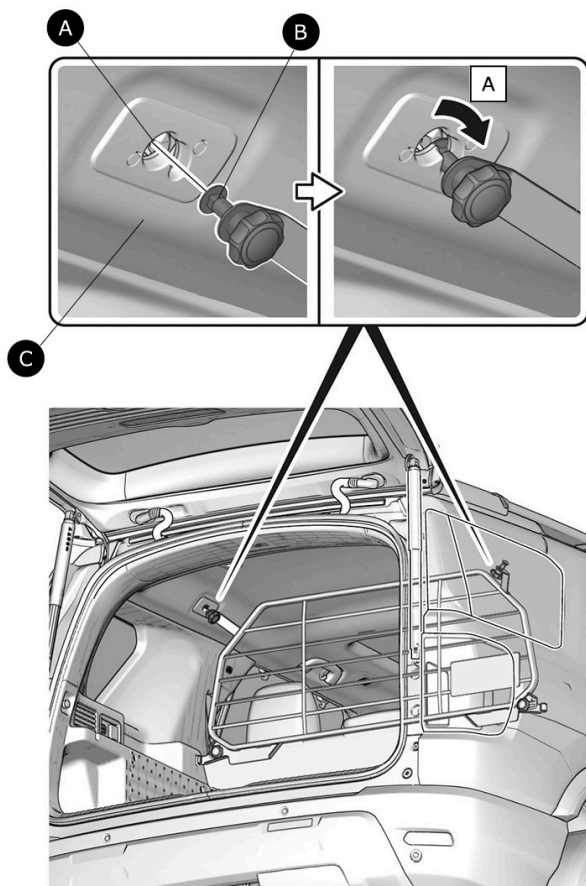


A	HOLE(2)
B	UPPER MOUNTING HARDWARE SET(2)
C	HEADLINER
A	Slide to the front side of the vehicle.

QP60409AN


13 Secure the separation barrier.

NOTE

Work in the order shown.

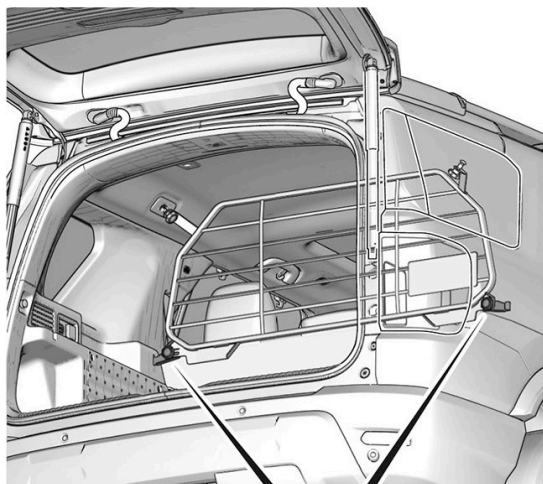

A	Slide.
B	Tighten.
C	TAB (Make sure that the tab is passed arrow.)(2)
A	ARROW

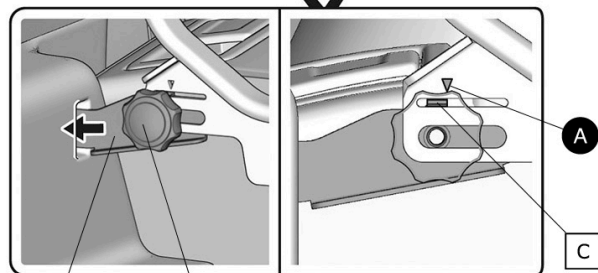


1 A 2 B

QP60410AN

14

Secure the separation barrier.

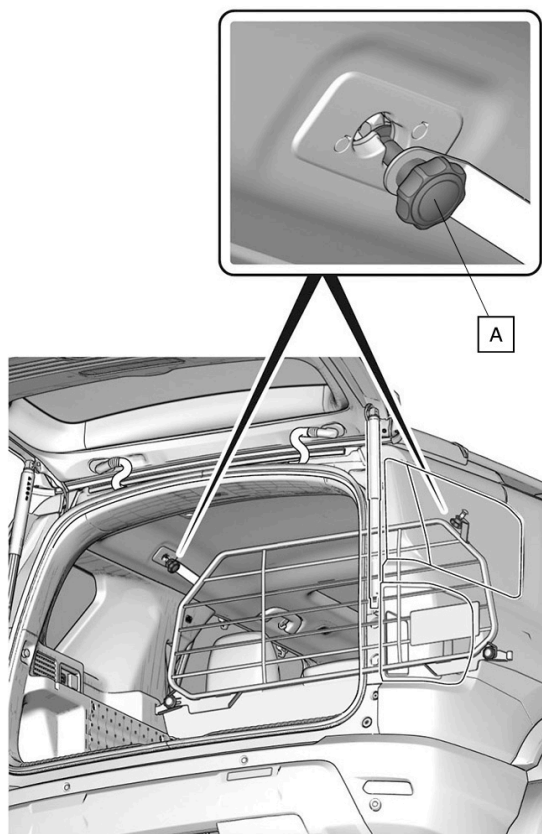

QP60411AN

A	Tighten.
---	----------

15

Check that all parts are installed properly.

Give the following item(s) to your customer:

Accessory User's Information Manual