


FULL-SIZE SPARE	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
-----------------	-------------------------------	-------------------------------

### GENERAL VIEW

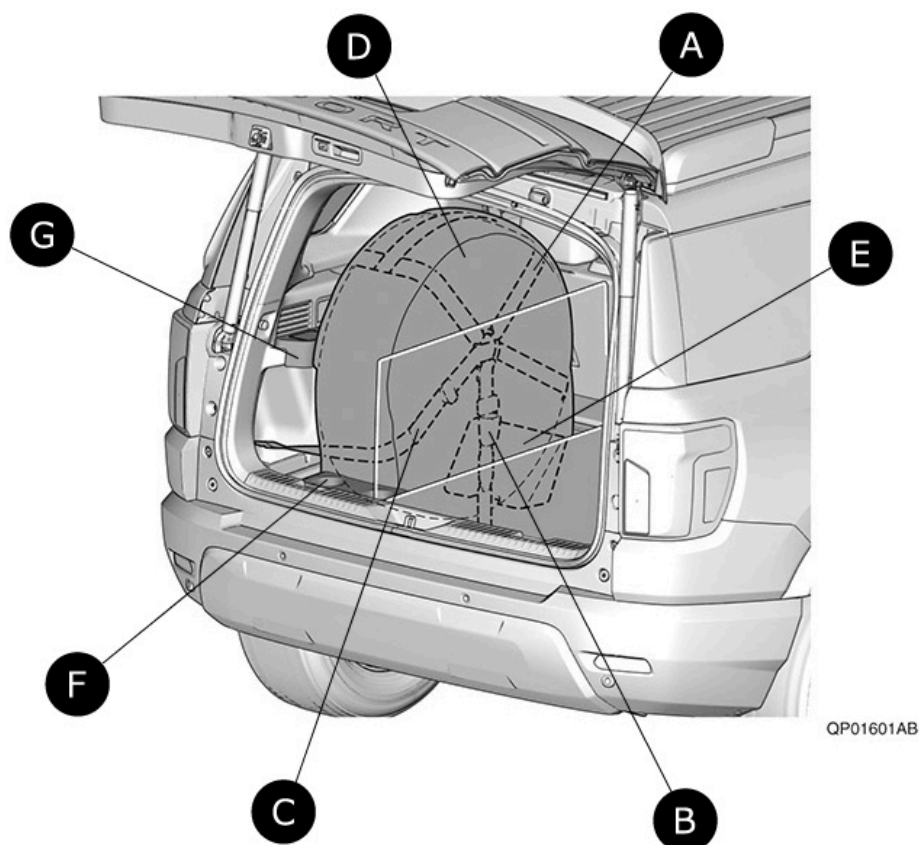

<b>A</b>	STRAP A
<b>B</b>	STRAP B
<b>C</b>	STRAP C
<b>D</b>	COVER
<b>E</b>	FRONT SPACER
<b>F</b>	REAR SPACER
<b>G</b>	SIDE SPACER

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.















Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
---	------------------------------	--	---

	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

## Safety: General











- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## ■ Safety: Accessory

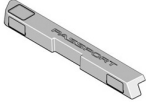- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Not to wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.
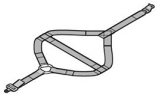
## PARTS LIST

### Full-Size Spare Kit (P/N 08U02-3BM-100)

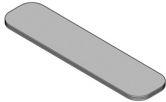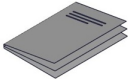Parts	Parts name	QTY	Remarks
	Side spacer	1	
	Front spacer	1	
	Rear spacer	1	
	Strap A	1	
	Strap B	1	
	Strap C	1	
	Cover	1	
	Primer pen	1	
	Double sided fastener	2	
	Accessory User's Information Manual	1	

## REQUIRED TOOLS AND SUPPLIES

- 10 mm and 14 mm Sockets
- Ratchet
- Torque wrench
- Drill
- 3 mm, 6 mm, 8 mm, and 10 mm Drill bits
- Pushpin
- File
- Utility knife
- Scissors
- Isopropyl alcohol
- Masking tape
- Shop towel
- Eye protection (face shield, safety goggles, etc.)
- Ruler
- Hacksaw

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

## INSTALLATION

### Removing the Vehicle Parts



#### ● Removing the Vehicle Parts

##### NOTICE

The full-size spare tire and separation barrier accessory can not be installed at the same time. Remove the separation barrier before loading the full-size spare tire.

#### ● Cargo Lid

**1** Remove the cargo lid.

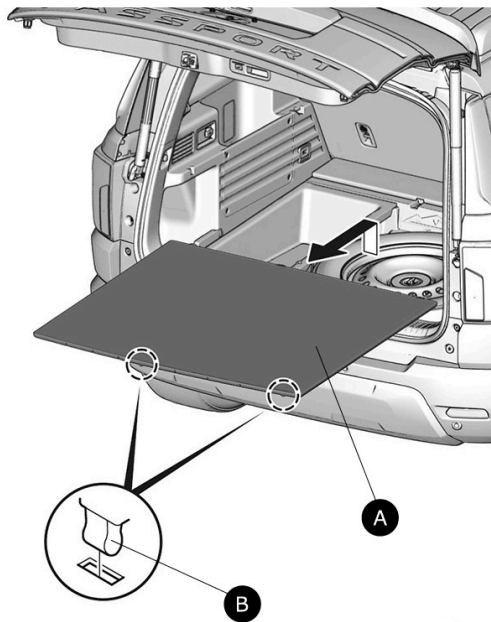



QP62603AB

<b>A</b>	CARGO LID
<b>B</b>	CLIP(2)

## ● Cargo Bin

**2** Remove the cargo bin.

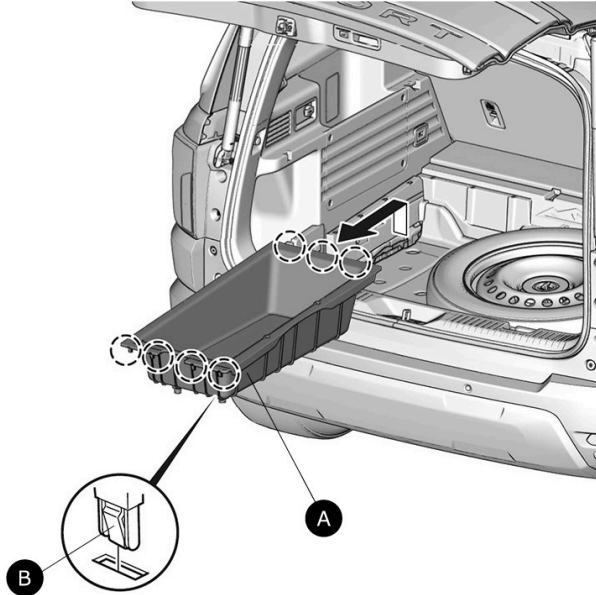



QP62604AB

<b>A</b>	CARGO BIN
<b>B</b>	CLIP(7)



## ● Compact Spare Tire

**3** Remove the compact spare tire.

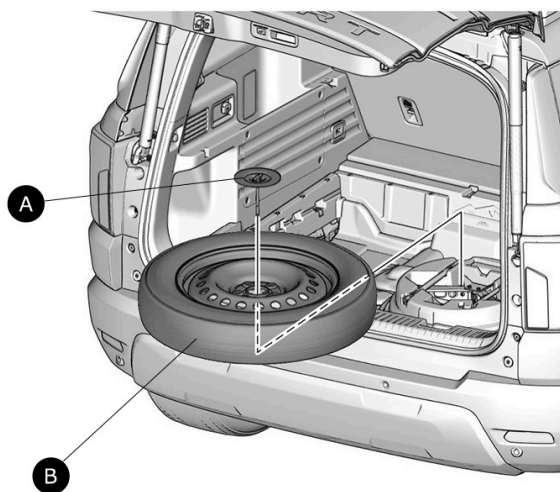

QP01602AB



<b>A</b>	ANCHOR
<b>B</b>	COMPACT SPARE TIRE

## Installing the Full-Size Spare


### 4 Cut the left rear side trim panel.

#### NOTE

- Do not cut the insulator.
- Be careful not to damage the vehicle panel.

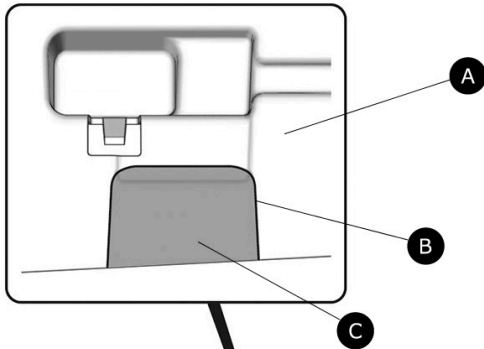

A	LEFT REAR SIDE TRIM PANEL
B	SCRIBE LINE
C	CUTTING AREA

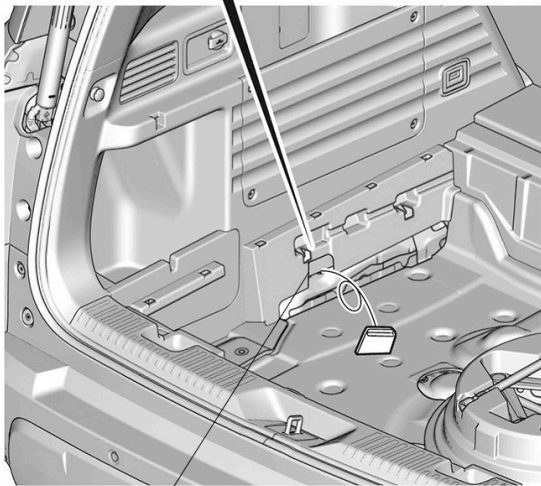


QP01603AB

## 5 Remove the bolt.


### NOTE

Inspect the bolt for any corrosion or damage, and replace if any is seen on the bolt threads. If no damage is noted, keep the bolt for re-use.

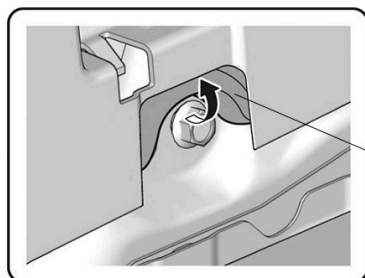

A

A	INSULATOR (Peel.)
A	BOLT

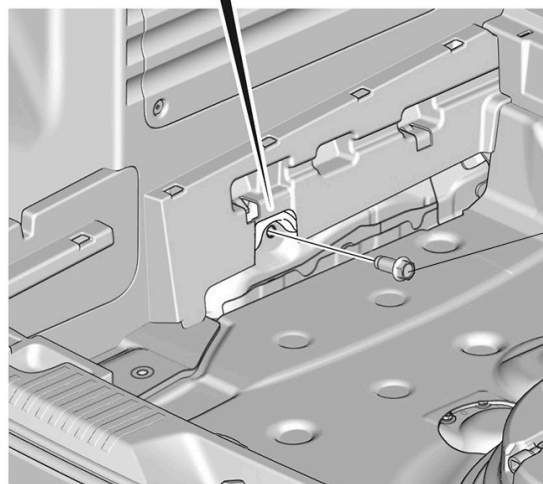




A

QP01604AB

## 6 Cut the floor insulator.

### NOTE

Be careful not to damage the vehicle panel.

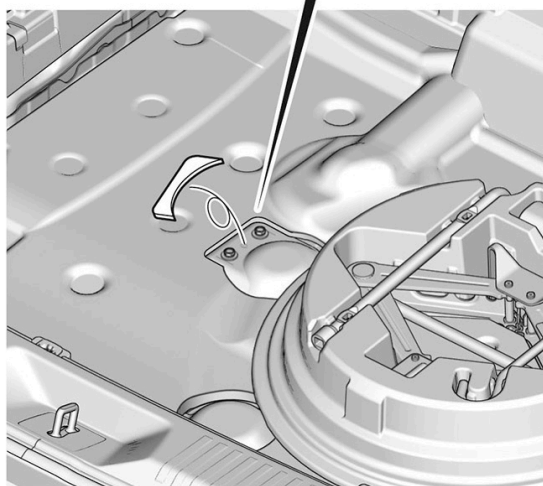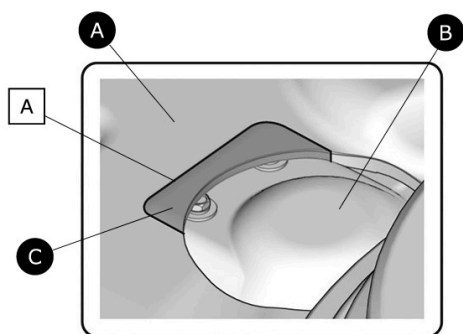


QP01605AB

<b>A</b>	FLOOR INSULAOR
<b>B</b>	VEHICLE PANEL
<b>C</b>	CUTTING AREA
<b>A</b>	Cut along the vehicle panel shape.

## 7 Remove the washer-bolt.

### NOTE


Inspect the washer-bolt for any corrosion or damage, and replace if any is seen on the washer-bolt threads. If no damage is noted, keep the washer-bolt for re-use.

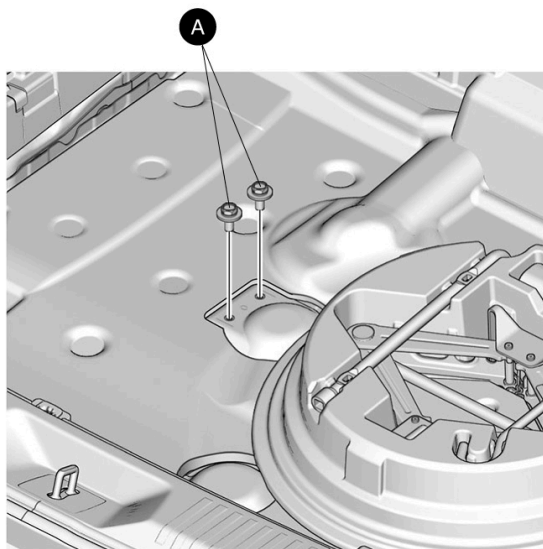

QP01606AB

**A** WASHER-BOLT(2)


## 8 Pierce the cargo bin.

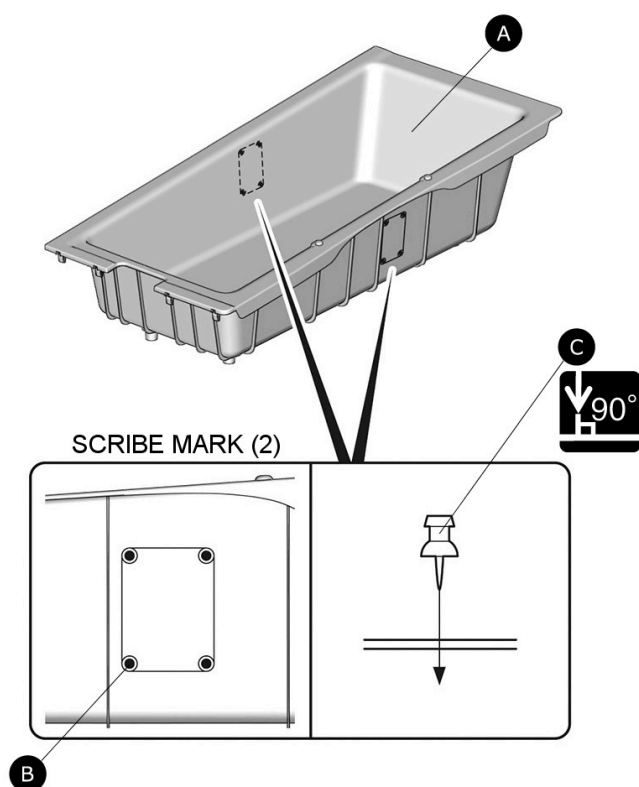


QP01607AB

A	CARGO BIN
B	MARK(8)
C	PUSHPIN

## 9 Drill the cargo bin.

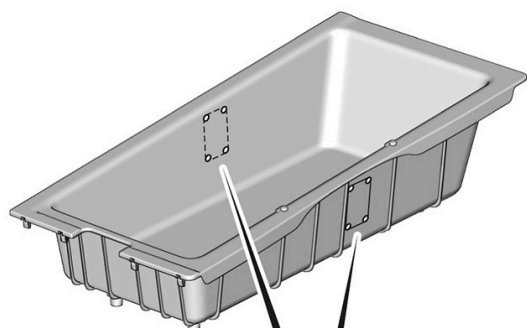

A	MARK(8)
B	DRILL BITS

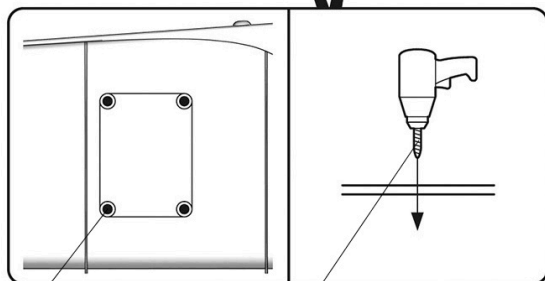

A


B

QP01608AB

3 mm → 6 mm →  
8 mm → 10 mm



## 10 Cut the cargo bin.

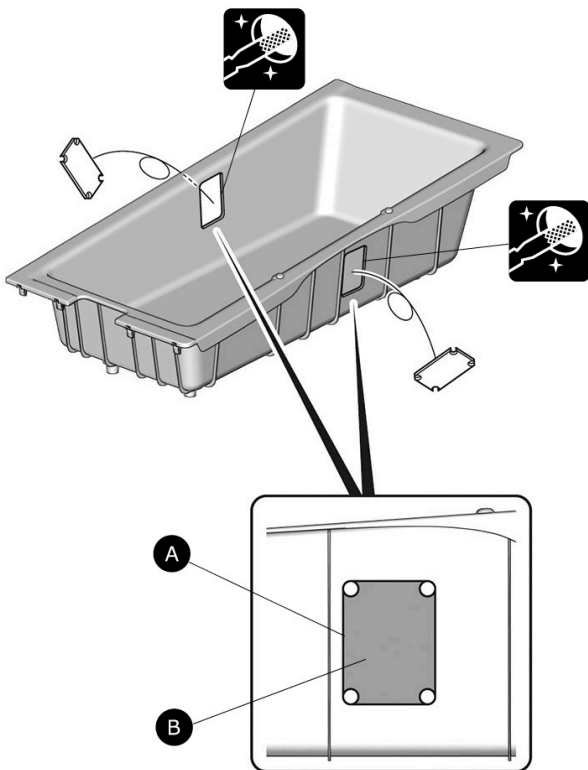


A	SCRIBE LINE(2)
B	CUTTING AREA(2)

QP01609AB





## 11 Feed the strap A.

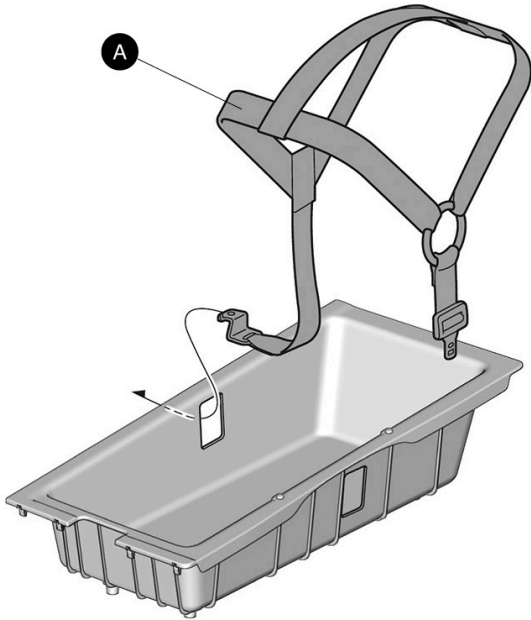

QP01610AB

A	STRAP A
---	---------

## 12 Install the strap A.

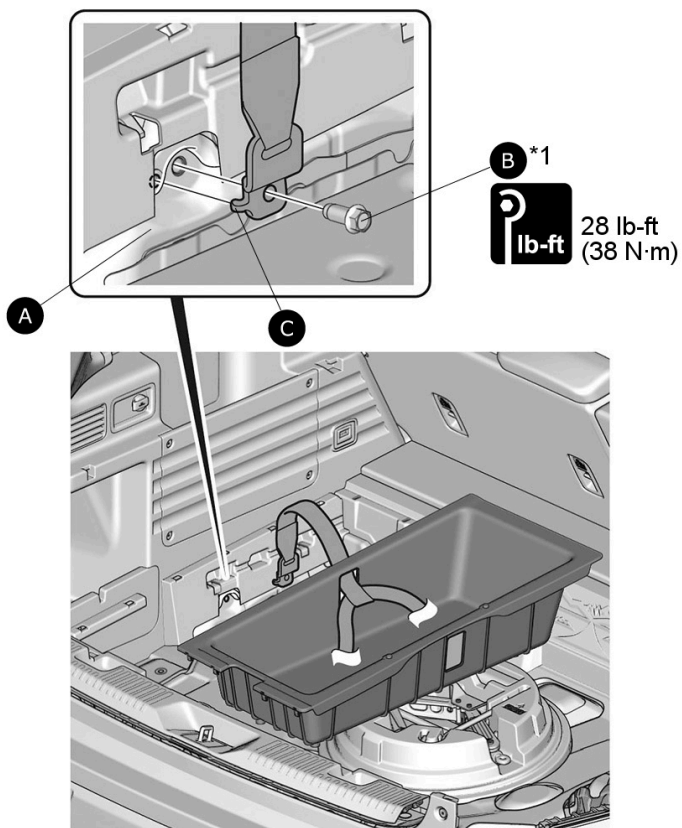



<b>A</b>	VEHICLE PANEL
<b>B</b>	BOLT
<b>C</b>	STOPPER

QP01611AB

\*1: Removed in step 5.


## 13 Feed the strap B.

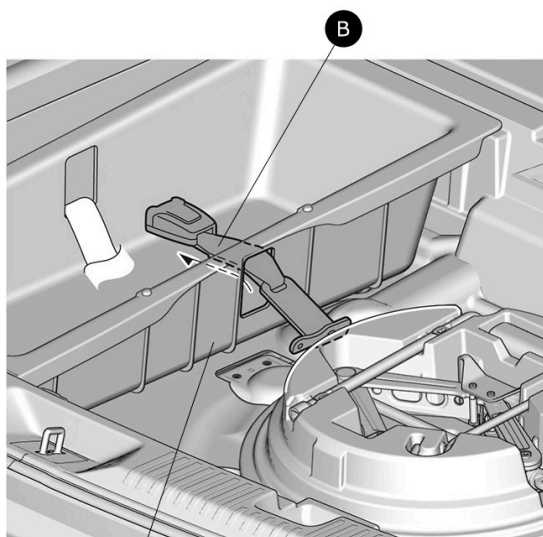

QP01801BB

A	CARGO BIN
B	STRAP B

## 14 Install the strap B and cargo bin.

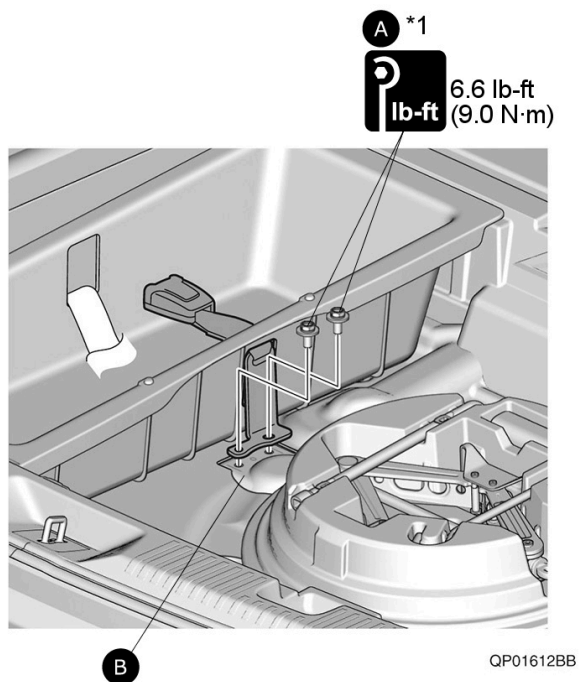



A	WASHER-BOLT(2)
B	VEHICLE PANEL

\*1: Removed in step 7.

## 15 Install the compact spare tire and cargo lid.

# 16

Open the cargo lid.

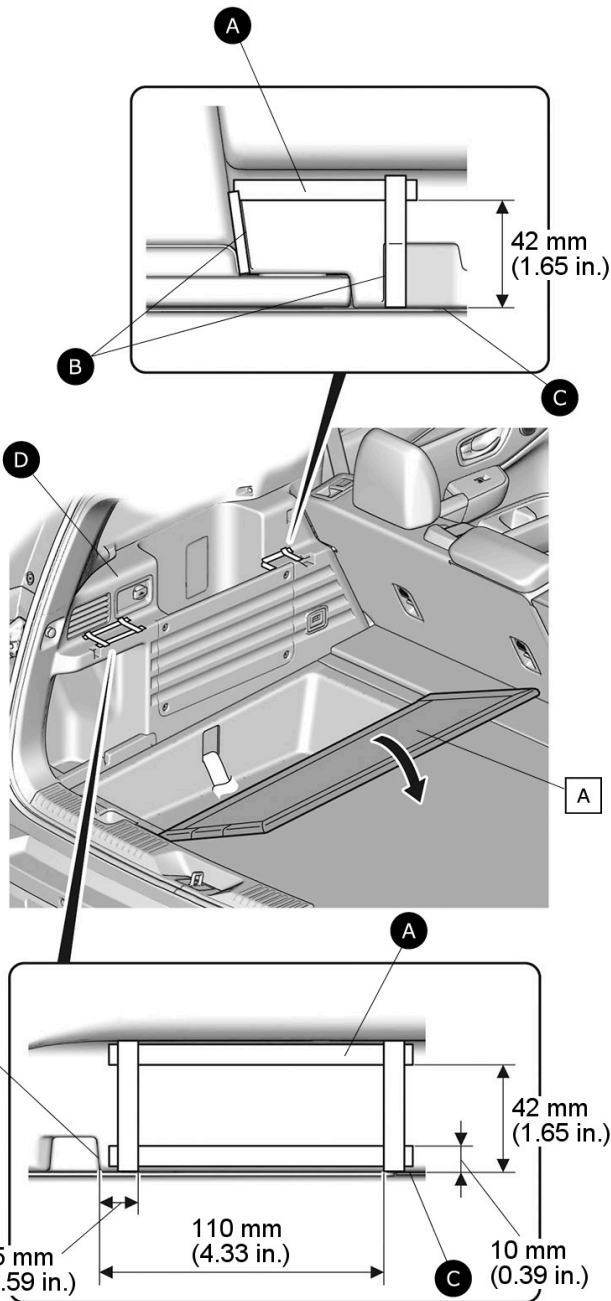


<b>A</b>	MASKING TAPE
<b>B</b>	END OF THE CURVED SURFACE
<b>C</b>	EDGE OF THE LEFT REAR SIDE TRIM PANEL
<b>D</b>	LEFT REAR SIDE TRIM PANEL
<b>E</b>	EDGE OF THE GROOVE
<b>A</b>	CARGO LID (Open.)

QP01802AB

# 17

Attach masking tape.


# 18 Attach masking tape.

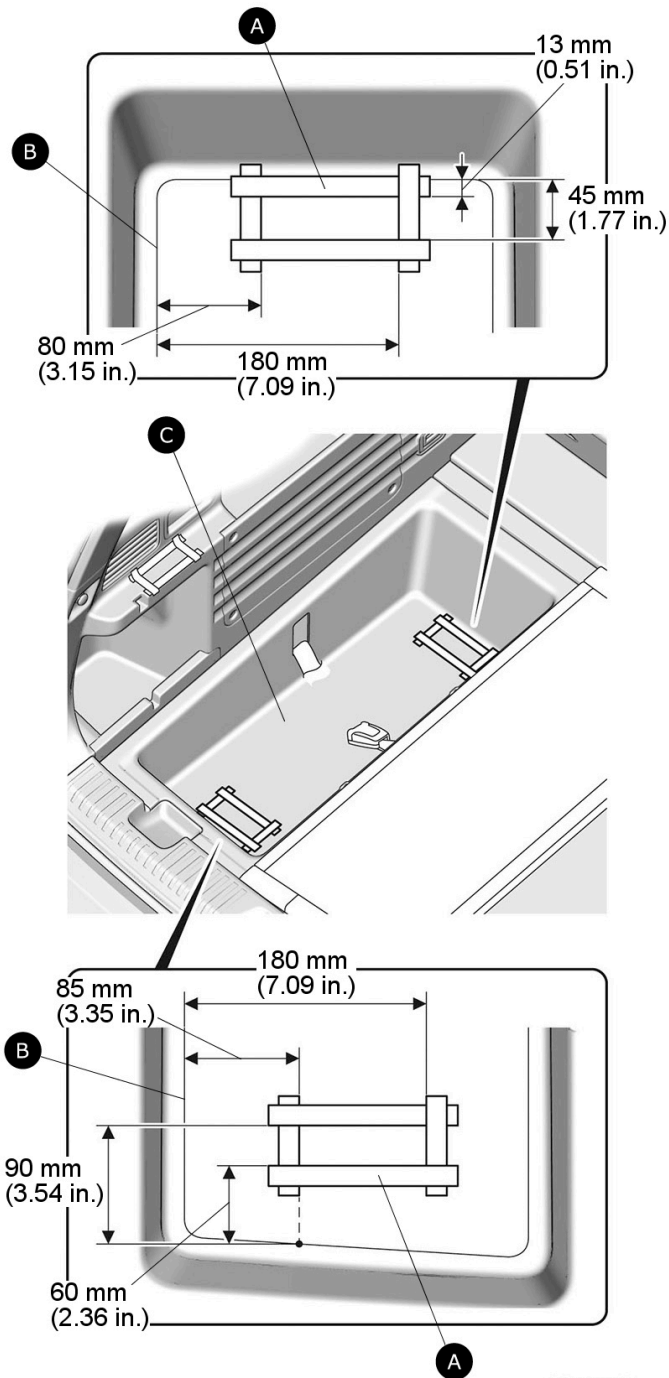

A	MASKING TAPE
B	END OF THE CURVED SURFACE
C	CARGO BIN

# 19

Clean the attaching areas.

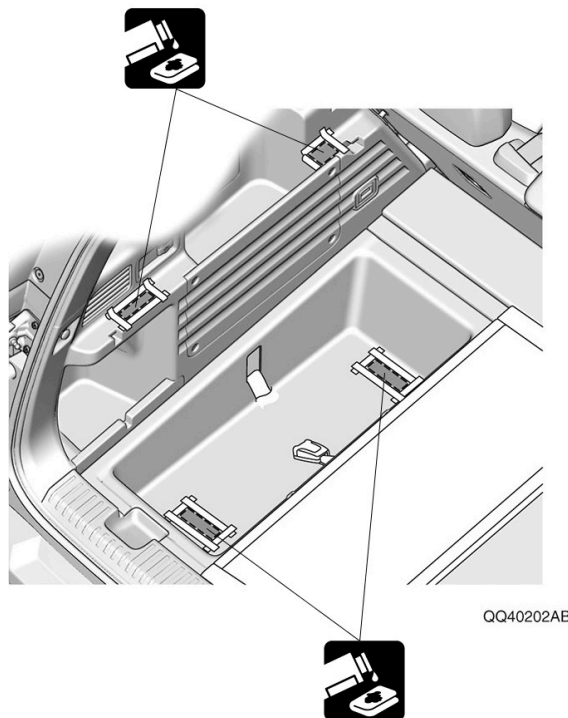


QQ40202AB

## 20 Apply the primer.

### NOTE

- Only apply primer to the indicated area.
- Do not apply additional primer.
- Crush the pen to activate the primer.
- Allow primer to dry thoroughly, at least 10 minutes, before applying tape.
- Attach the accessories within 1 hour after applying the primer.

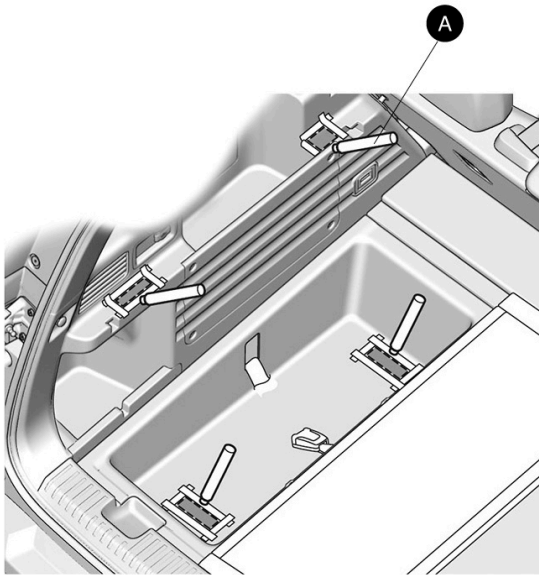


QP02101AB

**A** PRIMER PEN

## 21 Remove the masking tape.



## 22 Install the side spacer.

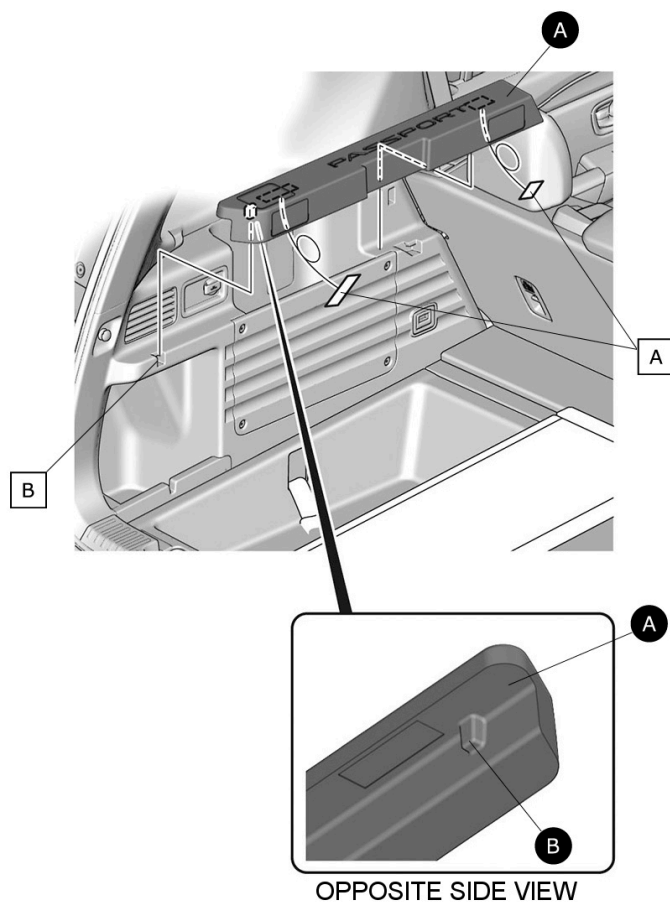


A	SIDE SPACER
B	PROJECTION
A	ADHESIVE BACKING (Remove.)(2)
B	Engage the projection with the groove.

## 23 Secure the side spacer.

### NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

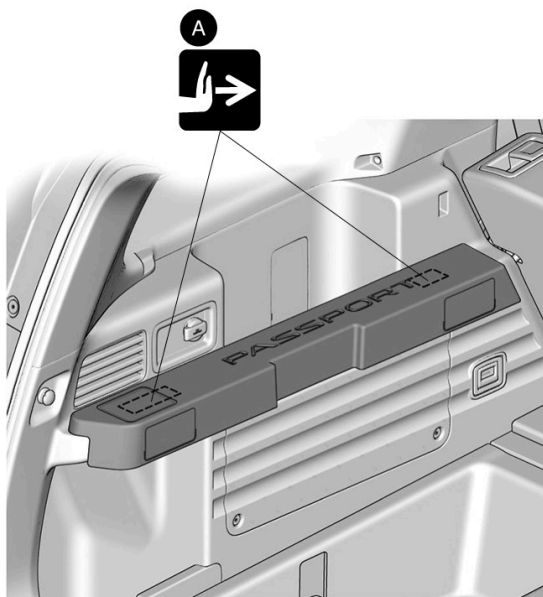


QP02103AB

**A** DOUBLE-SIDED ADHESIVE TAPE(2)

# 24

Install the front and rear spacers.

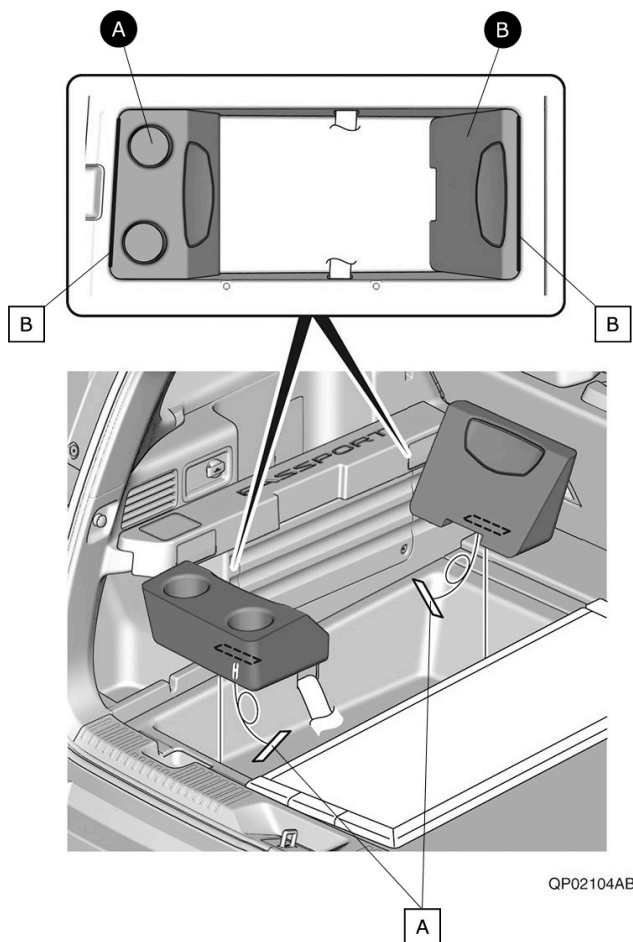


<b>A</b>	REAR SPACER
<b>B</b>	FRONT SPACER
<b>A</b>	ADHESIVE BACKING (Remove.)(2)
<b>B</b>	Line up.

## 25 Secure the front and rear spacers.

### NOTE


Check the position of double-sided adhesive tapes and make sure to press firmly.

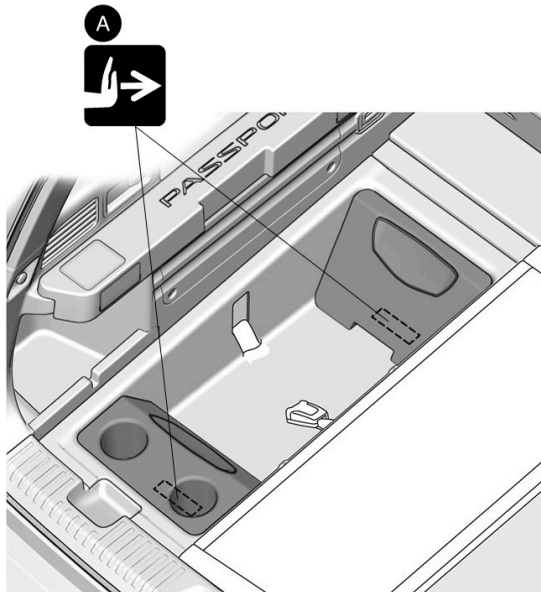

QP02105AB

<b>A</b>	DOUBLE-SIDED ADHESIVE TAPE(2)
----------	-------------------------------


## 26 Place the strap A and strap B out of the way of the tire.

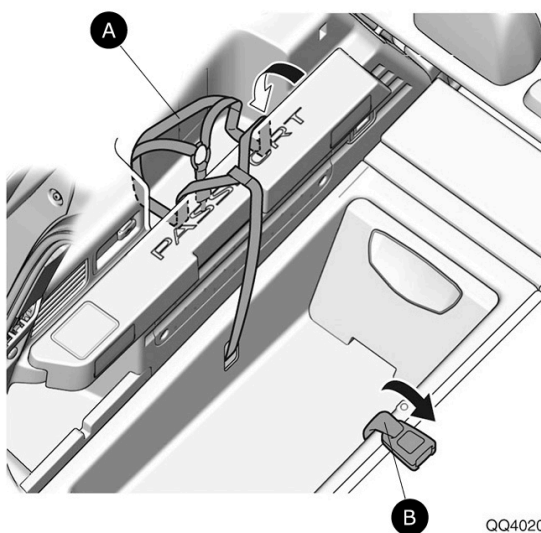

QQ40203AB

<b>A</b>	STRAP A
<b>B</b>	STRAP B


## 27 Install the full-size spare tire.

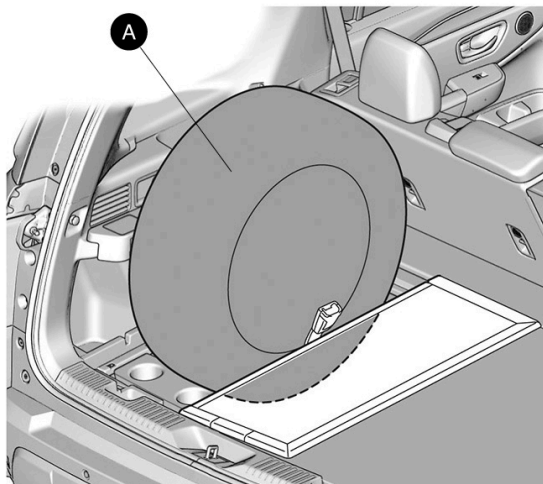

QP02106AB

<b>A</b>	FULL-SIZE SPARE TIRE (sold separately)
----------	--


## 28 Install the strap A.

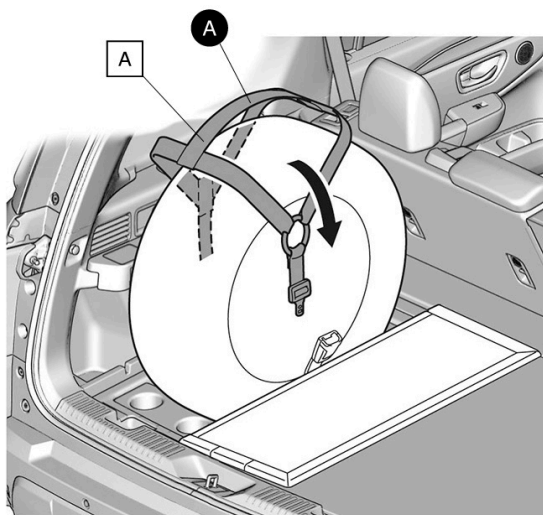


QP02107AB

<b>A</b>	STRAP A
<b>A</b>	Make sure that the strap A is not twisted or caught on anything.

## 29 Adjust the strap A position.

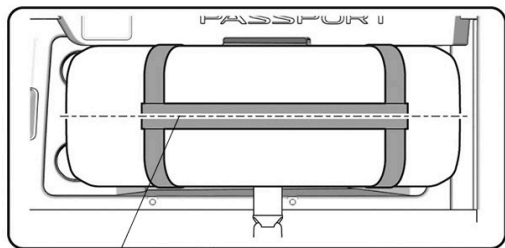


A

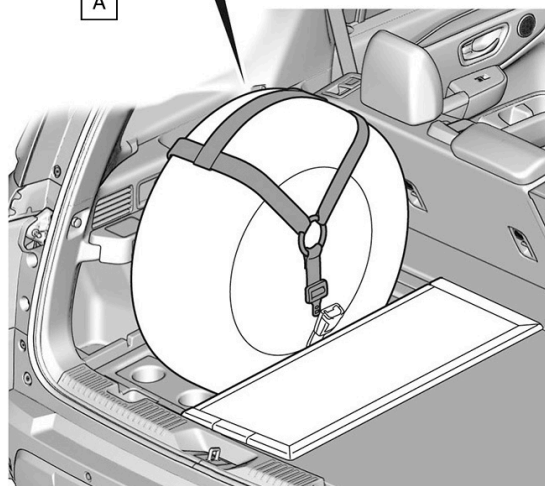

A Make sure that the top strap of the strap A is fully extended and laying flat across the center of the full-size spare tire.

QP02108AB

## 30 Secure the strap A.


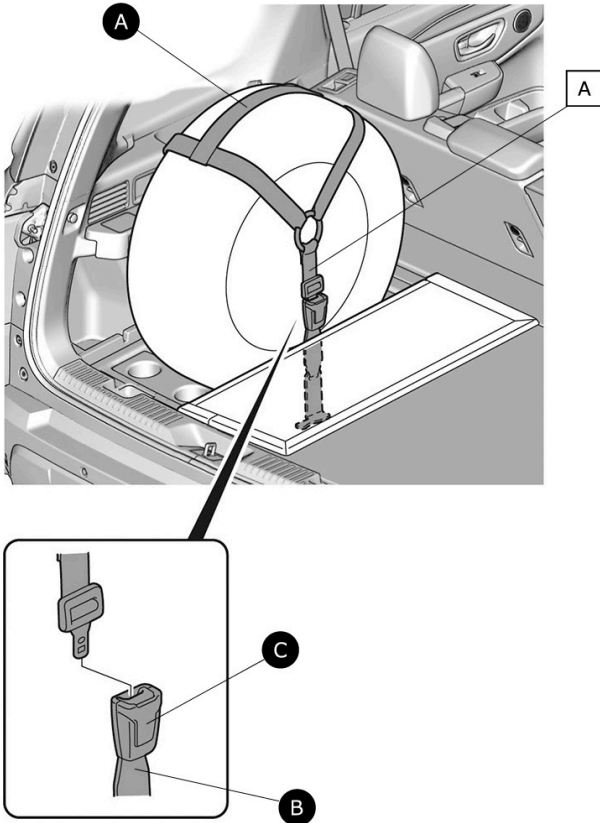


<b>A</b>	STRAP A
<b>B</b>	STRAP B
<b>C</b>	BUCKLE
<b>A</b>	Tug on the strap A to make sure the buckle is secure.

QP02201AB

# 31

Secure the strap A.

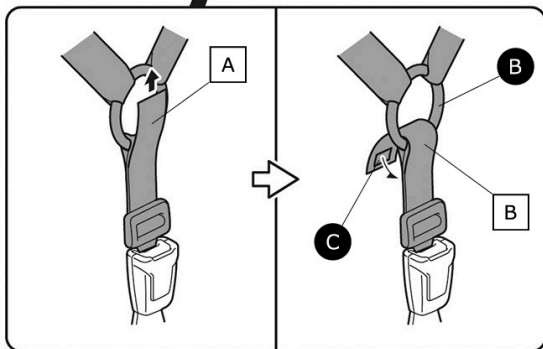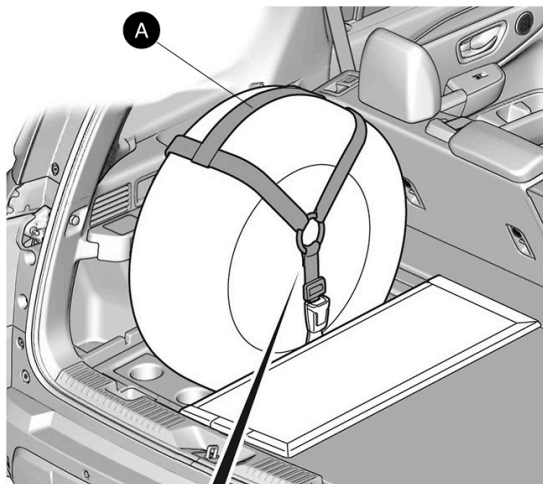

<b>A</b>	STRAP A
<b>B</b>	RING
<b>C</b>	FASTENER
<b>A</b>	Pull until snug.
<b>B</b>	Feed the excess strap through the ring.



QP02202AB




## 32 Install the hook.

### NOTE

Ensure the hook with the warning label is to the rear of the vehicle.

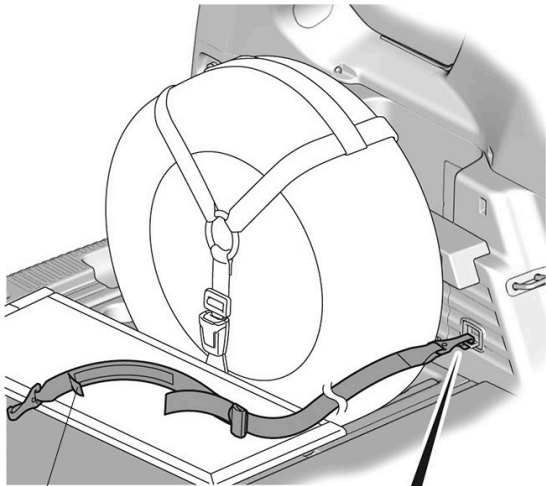

D

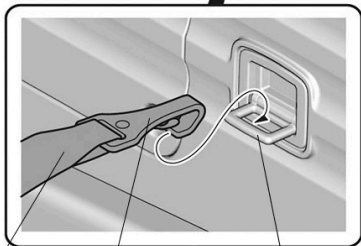

A





B

C

QP02203BB

A	STRAP C
B	HOOK
C	FRONT TIE-DOWN HOOK
D	WARNING LABEL



# 33 Install the hook.

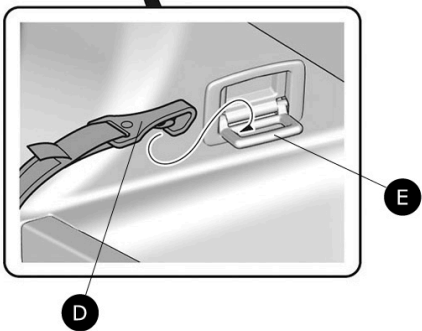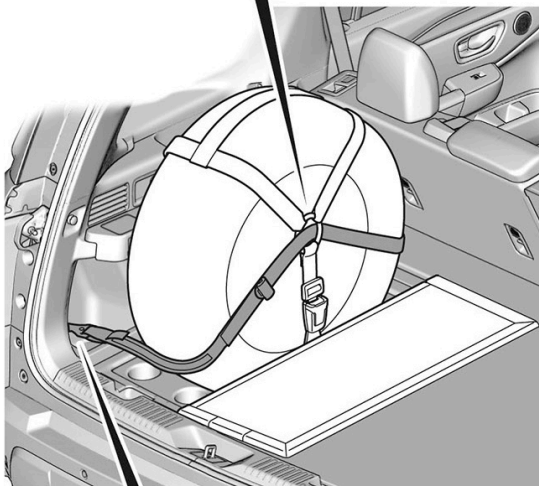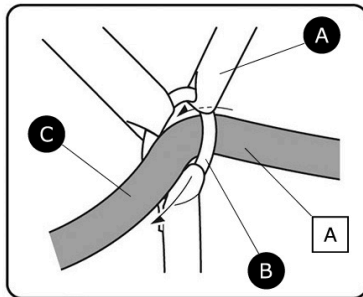

<b>A</b>	STRAP A
<b>B</b>	RING
<b>C</b>	STRAP C
<b>D</b>	HOOK
<b>E</b>	REAR TIE-DOWN HOOK
<b>A</b>	Feed through the ring.

QP02204BB


## 34 Secure the strap C.

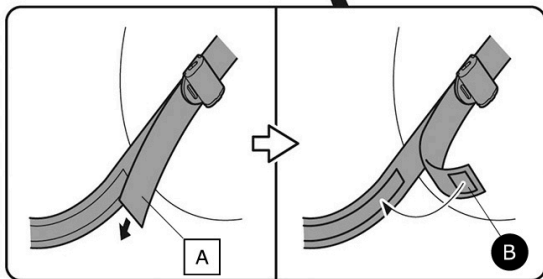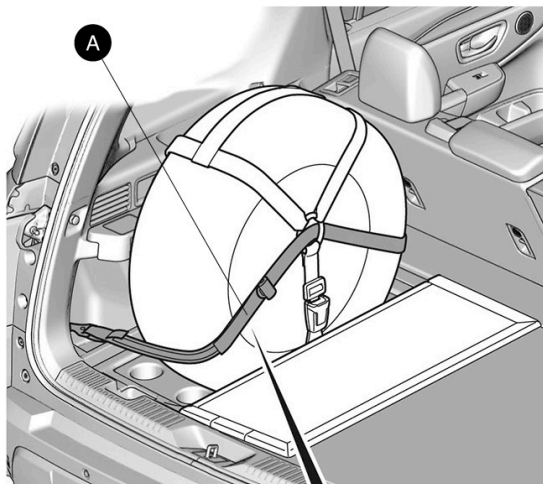

A	STRAP C
B	FASTENER
A	Pull until snug.

QP02205BB

## 35 Install the cover.

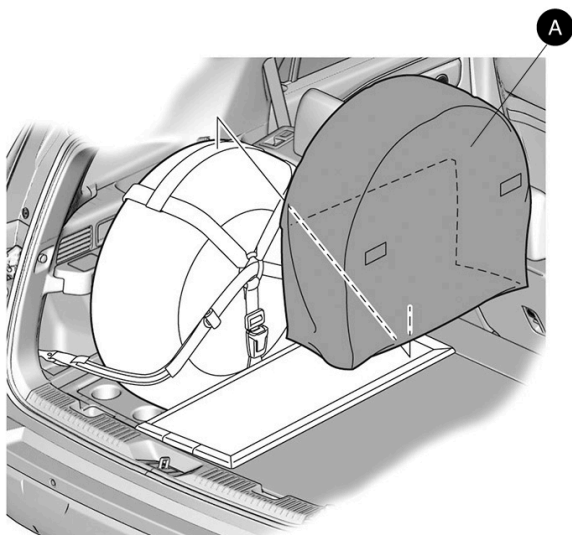


A	COVER
---	-------

QP02206BB

# 36

Attach the double sided fasteners.

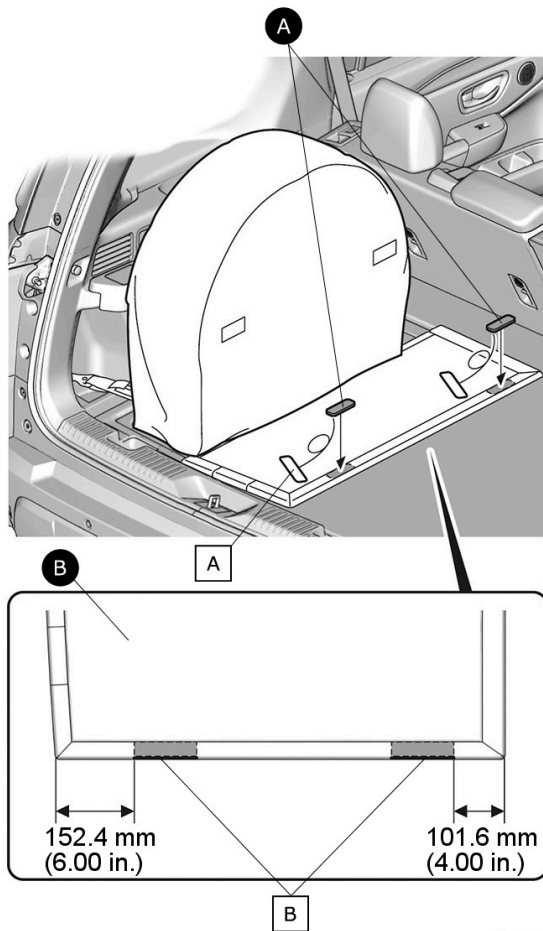


<b>A</b>	DOUBLE SIDED FASTENER(2)
<b>B</b>	CARGO LID
<b>A</b>	PROTECTIVE CLOTH (Remove.)(2)
<b>B</b>	Line up with the edge of the cargo lid.

QP02207BB

# 37


Check that the double sided fasteners are lined up with the cover fasteners.

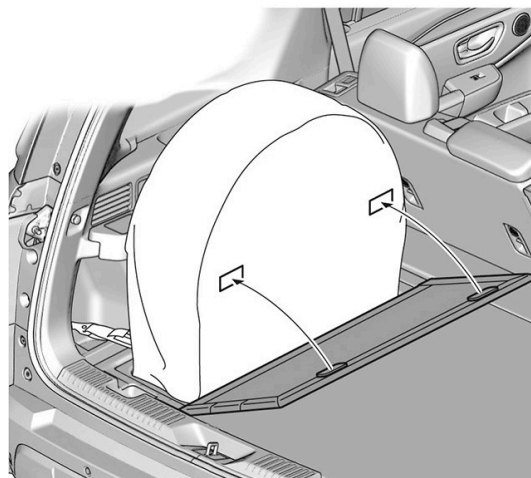

QP02209BB

# 38



Secure the double sided fasteners.

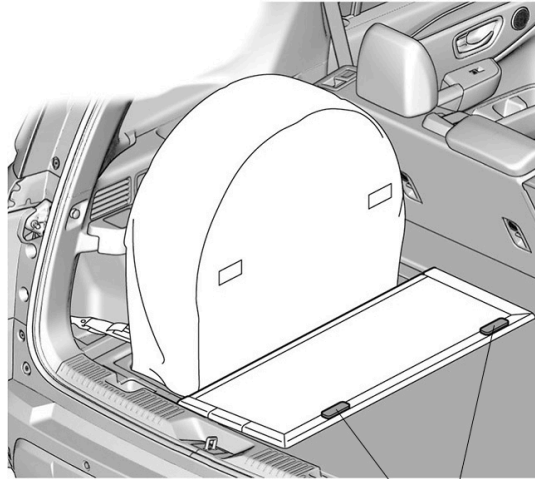

QP02210BB



## 39 Raise the cargo lid and attach the cover to the strap C.

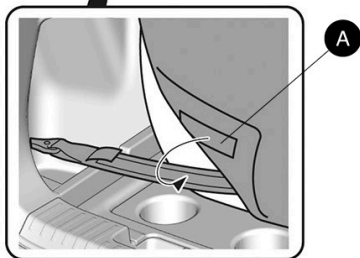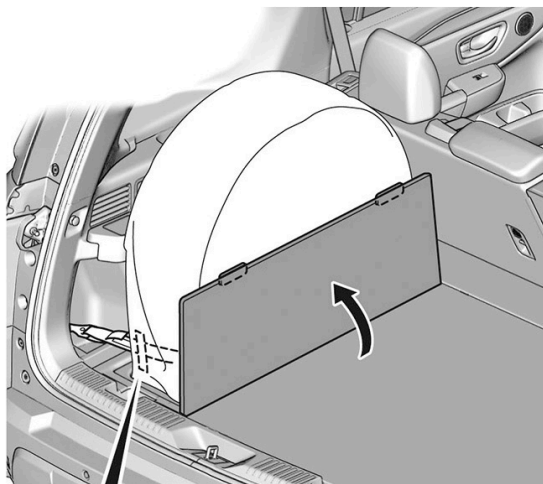

A	FASTENER
---	----------

QP02211BB

## 40 Check that all parts are installed properly.

## **Give the following item(s) to your customer:**

Accessory User's Information Manual