




TRAILER HITCH	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
---------------	-------------------------------	-------------------------------

GENERAL VIEW

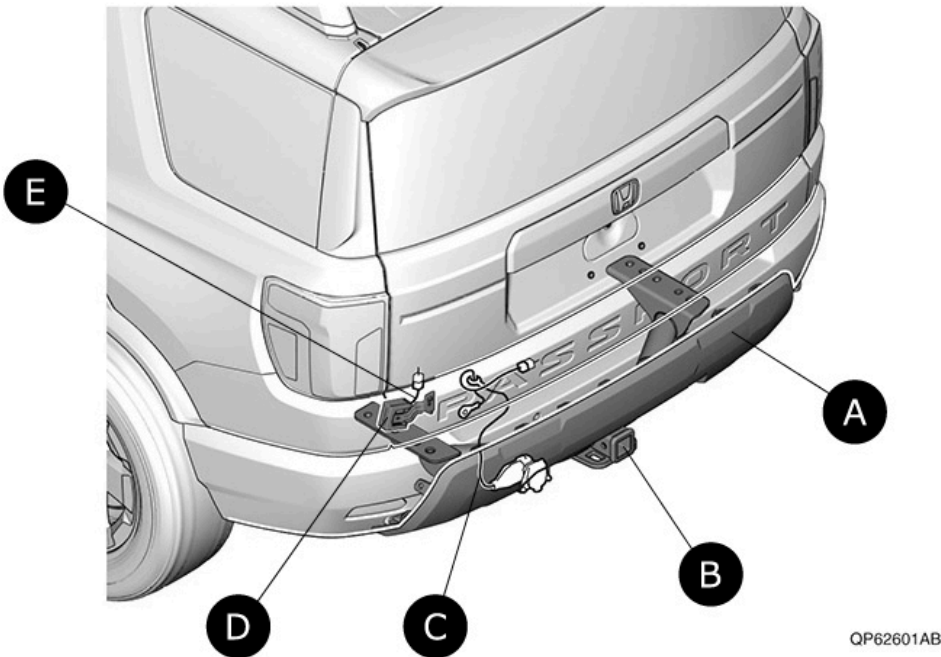

A	HITCH COVER PANEL
B	TRAILER HITCH
C	HARNESS B
D	UNIT
E	HARNESS A

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.













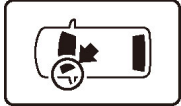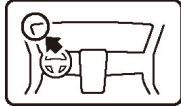



Indicates a prohibited action.



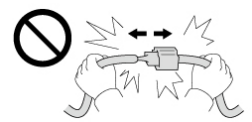
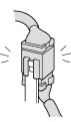
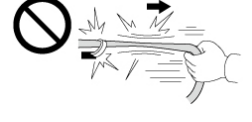



Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

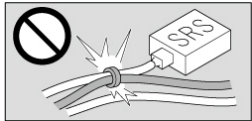Wire Harness Routing Precaution

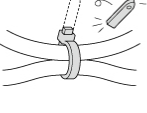	Do not secure the accessory harness to the SRS harness. (except for instruction cases.)		Push the connectors and terminals together until they lock.
	Do not pull the harness to unplug the connectors.		Install removed connectors in their original location.
	Do not pull the harness.		Secure the accessory harness as shown.
	Do not pinch the harness.		Cut off the excess wire tie.

Safety: General


- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts





Always disconnect the negative cable from the battery before beginning work.

PARTS LIST

Trailer Hitch Kit (P/N 08L92-3BM-100) (P/N 08L92-3BM-P00)

Parts	Parts name	QTY	Remarks
	Trailer hitch	1	
	14 x 50 mm Flange bolt	8	






Towing Kit (P/N 08L92-3BM-100A) (P/N 08L92-3BM-P00A)

Parts	Parts name	QTY	Remarks
	Ball mount	1	
	Hitch pin	1	
	Hitch pin clip	1	
	Cover	1	

Hitch Cover Panel Kit (P/N 08L92-3BM-100C) (P/N 08L92-3BM-P00C)

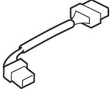Parts	Parts name	QTY	Remarks
	Hitch cover panel	1	

Trailer Harness Kit (P/N 08L91-3BM-100) (P/N 08L91-3BM-P00)

Parts	Parts name	QTY	Remarks
	Harness A	1	
	Harness B	1	
	Unit	1	
	6 x 16 mm Flange bolt	2	
	Ground bolt	1	
	Washer-bolt	1	
	10A Fuse	2	
	20A Fuse	1	
	30A Fuse	1	
	Relay	2	
	Subharness kit	1	

REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- Torque wrench
- 10 mm, 12 mm, and 21 mm Sockets
- Ratchet
- 5 mm Hex wrench
- Blanket
- Stubby Phillips screwdriver
- 10 mm Open end wrench
- Masking tape

The following tools are available through the Honda Tool and Equipment Program:



- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

INSTALLATION

■ Disconnecting the Battery Cable

● Resonator

- 1 Remove the resonator.

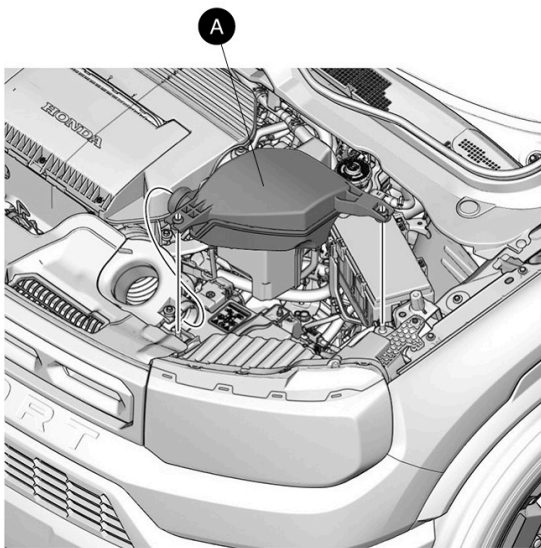

QP62602AB


A	RESONATOR
----------	-----------

● Negative Cable

2 Disconnect the negative cable from the battery.

NOTE

Follow the “12 Volt Battery Terminal Disconnection and Reconnection” described in the service information since the work differs depending on the vehicle.

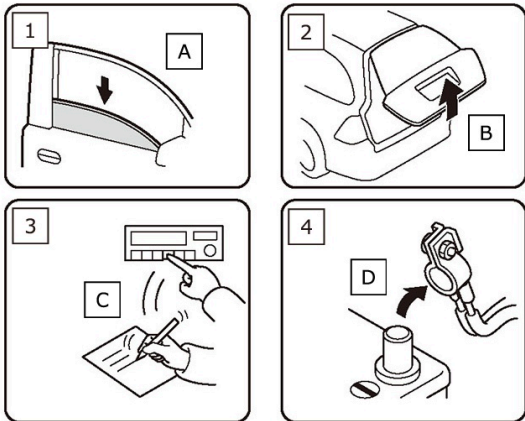



QCD0504BM

A	Lower.
B	Open.
C	Record.
D	Disconnect.

Removing the Vehicle Parts

● Cargo Lid

3 Remove the cargo lid.

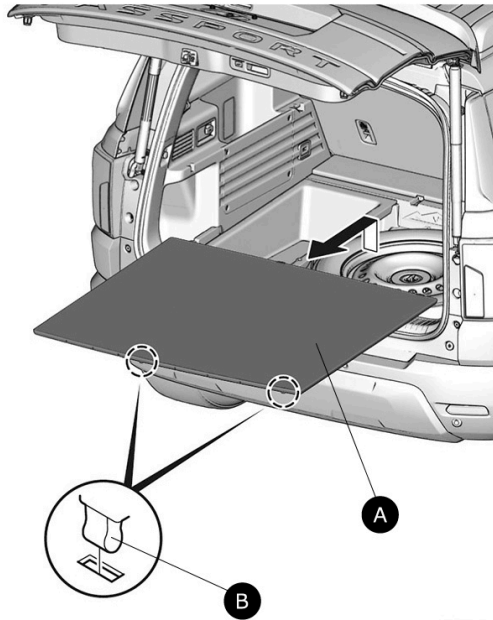



QP62603AB

A	CARGO LID
B	CLIP(2)

● Cargo Bin

4 Remove the cargo bin.

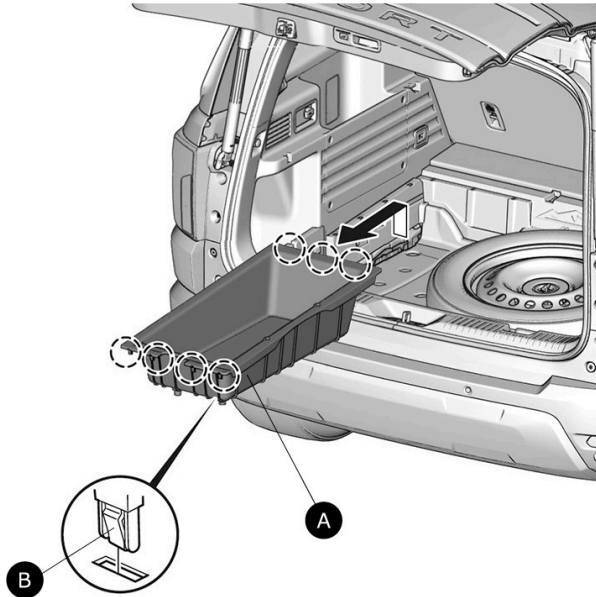



QP62604AB

A	CARGO BIN
B	CLIP(7)

● Rear Trim Panel

5 Remove the rear trim panel.

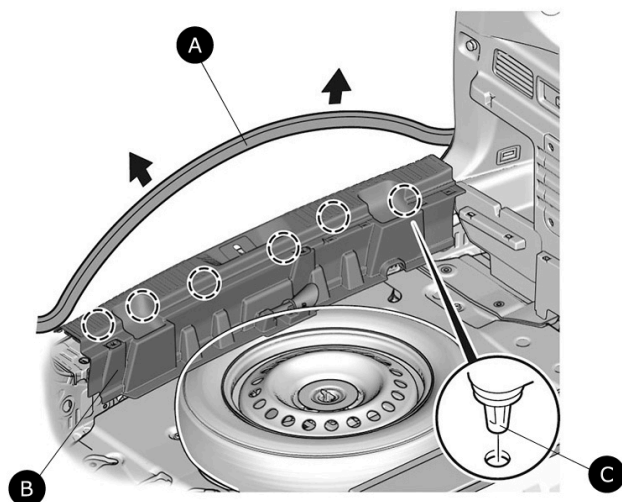



QP62605AB

A	WEATHERSTRIP
B	REAR TRIM PANEL
C	CLIP(6)

● Left Rear Wheel Arch Protector/Right Rear Wheel Arch Protector

6 Release the left rear wheel arch protector.

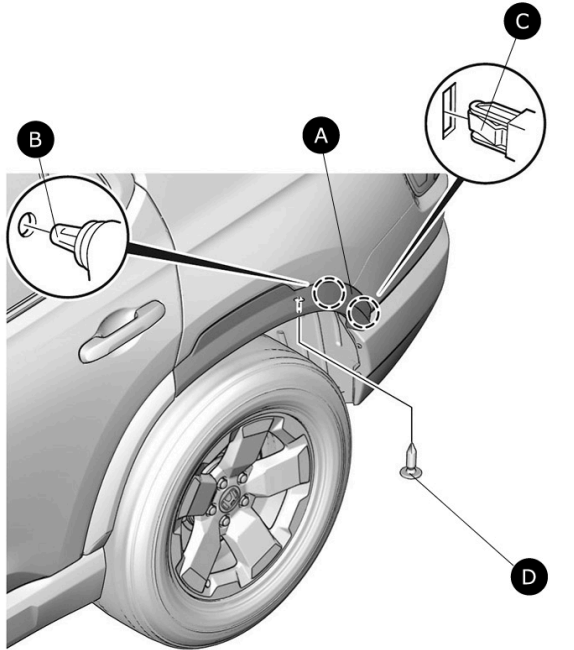

QP62606BB

A	LEFT REAR WHEEL ARCH PROTECTOR
B	CLIP
C	CLIP
D	SELF-TAPPING SCREW




7 Repeat step 6 on the other side.

● Rear Bumper

8 Attach masking tape to protect the vehicle.

NOTE


To prevent damage, do not remove the masking tape until after the parts are installed.

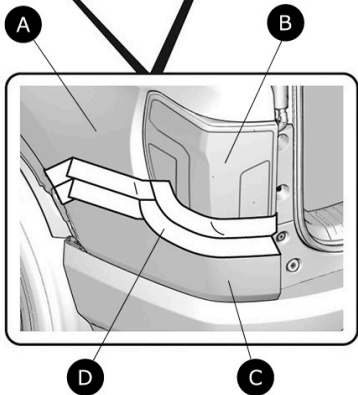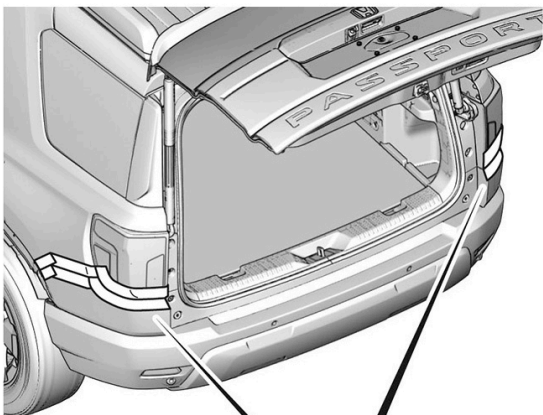

QP62701AB

A	REAR FENDER
B	TAILLIGHT
C	REAR BUMPER
D	MASKING TAPE

9 Remove the self-tapping screws, clips, and hex bolts.


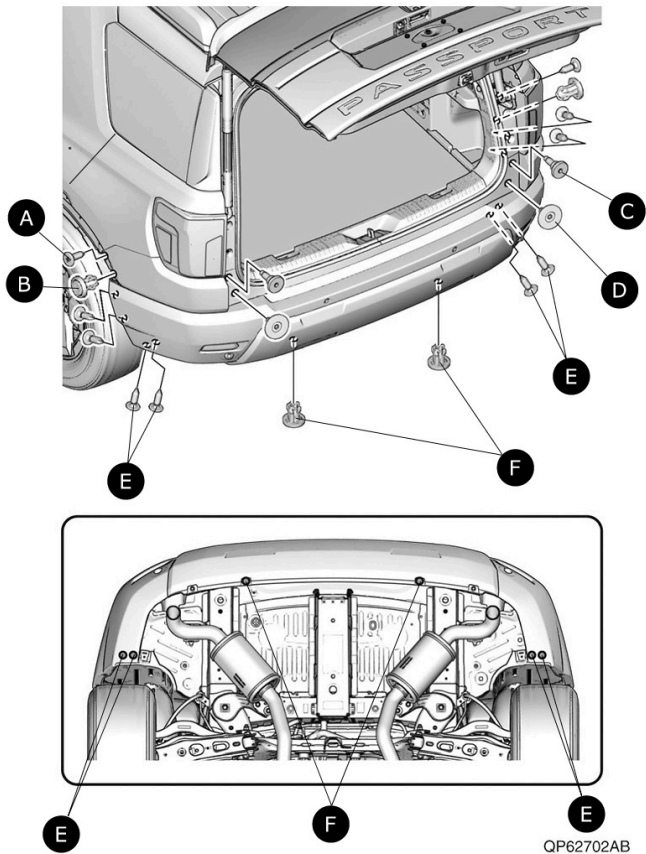


A	SELF-TAPPING SCREW(6)
B	CLIP(2)
C	HEX BOLT(2)
D	HEX BOLT (large)(2)
E	SELF-TAPPING SCREW(2)
F	CLIP(2)


10 Release the retaining tabs.

NOTE

- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.

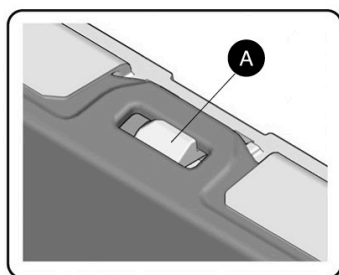



A	RETAINING TAB(7)
B	REAR BUMPER

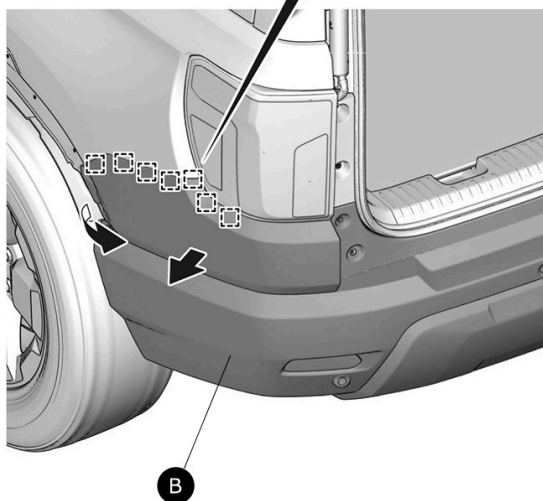

QP62703AB

11 Repeat step 10 on the other side.

12 Remove the rear bumper.

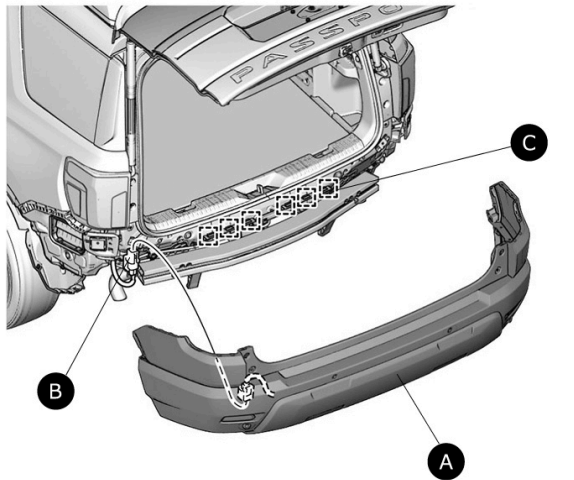


QP62704AB

A	REAR BUMPER
B	VEHICLE CONNECTOR
C	RETAINING TAB(6)

Installing the Hitch Cover Panel

13 Remove the clip.

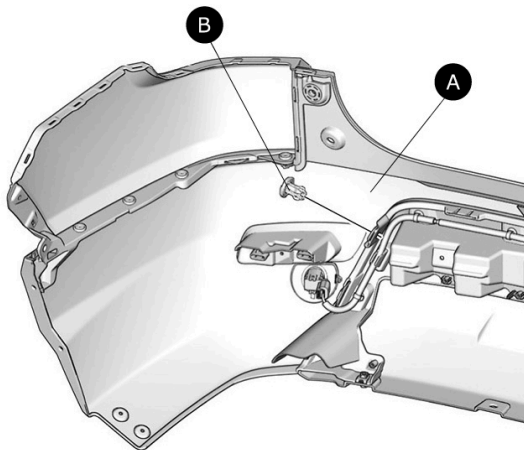


QP62705AB

A	REAR BUMPER (inside)
B	CLIP

14 Repeat step 13 on the other side.


15 Remove the rear bumper lower trim.

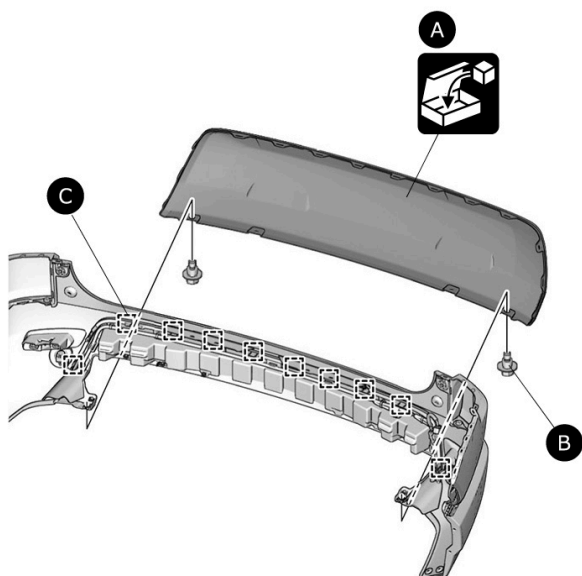

QP62706AB

A	REAR BUMPER LOWER TRIM
B	BOLT(2)
C	RETAINING TAB(10)

16 Install the hitch cover panel.

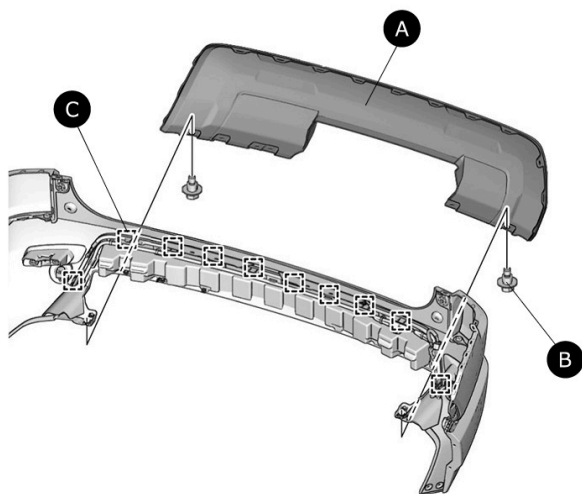


QP62707BB

A	HITCH COVER PANEL
B	BOLT(2)
C	RETAINING TAB(10)

17

Secure the hitch cover panel.

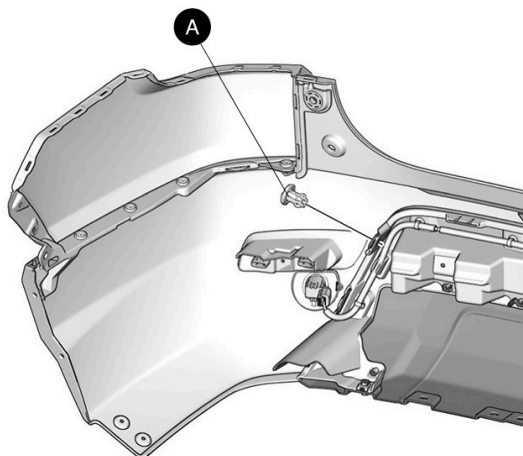

A	CLIP
----------	------



QP62708BB

18

Repeat step 17 on the other side.

Installing the Trailer Hitch

19 Release the left muffler.

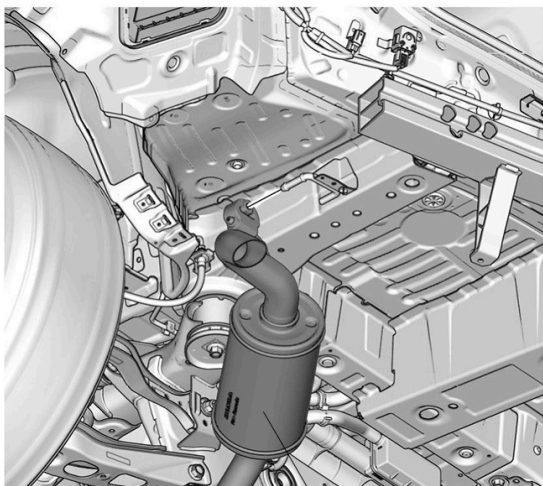



A

QP62709AB

A LEFT MUFFLER

20 Repeat step 19 on the other side.

21 Loosely install the trailer hitch.

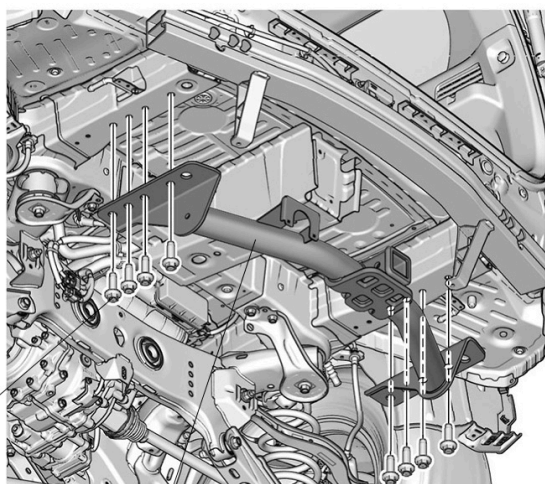

A


QP62710AB

A	TRAILER HITCH
A	14 x 50 mm FLANGE BOLT (Loosely secure.)(8)

22 Loosely secure the trailer hitch.


NOTE

Work in the order shown.

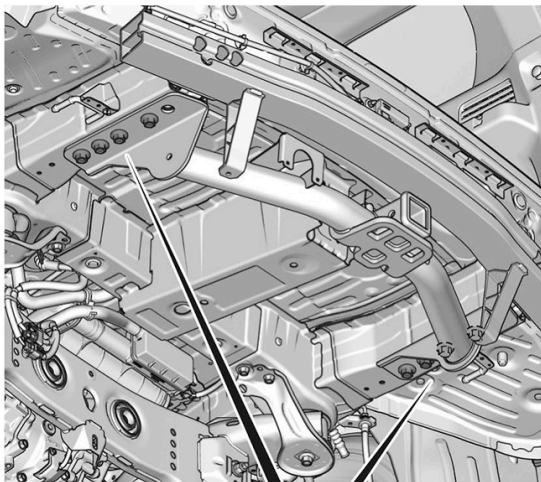

A

14 x 50 mm FLANGE BOLT (Loosely secure.)(8)

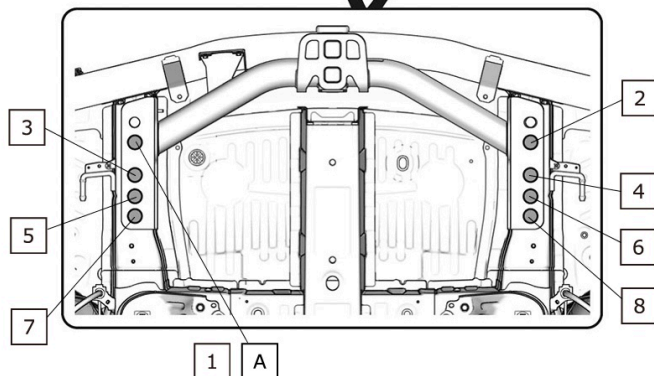


48 lb-ft
(65 N·m)

QP62711AB

23 Secure the trailer hitch.


NOTE

- Work in the order shown.
- After retightening all the bolts, recheck their torque.

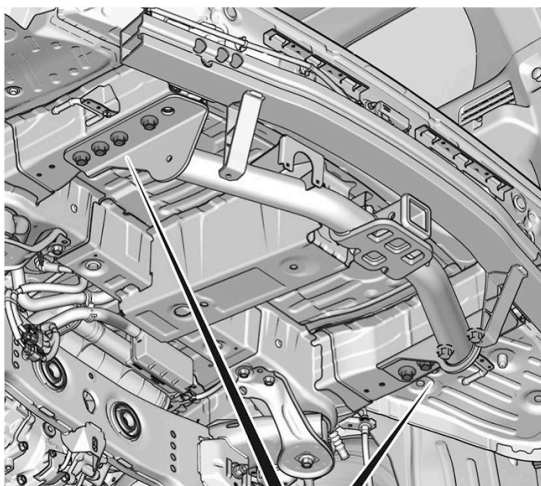

A

14 x 50 mm FLANGE BOLT(8)

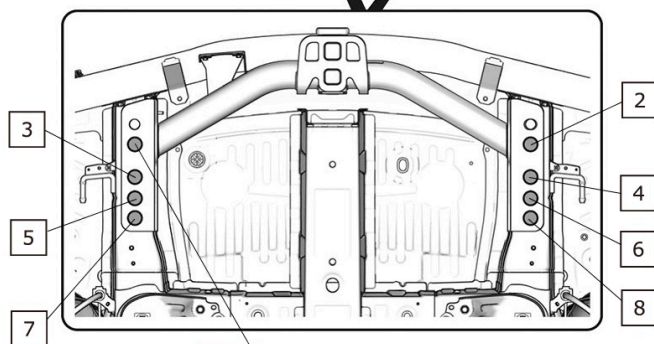

1

A






96 lb-ft
(130 N·m)

QP62711AB

Installing the Unit and Routing the Harness A


24 Install the unit.

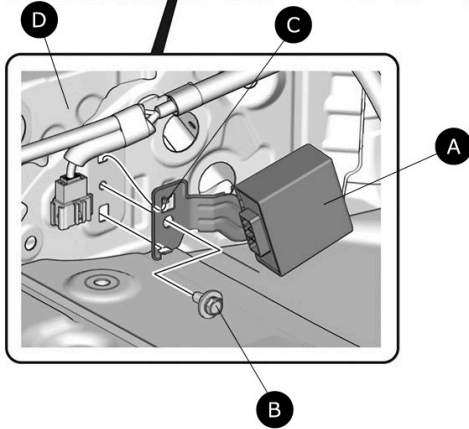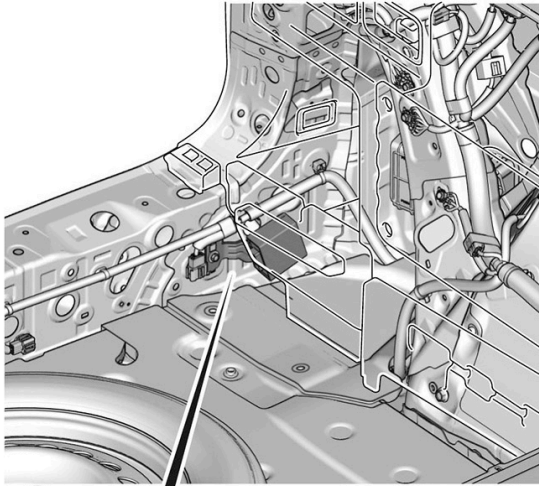

A	UNIT
B	WASHER-BOLT
C	STOPPER(2)
D	VEHICLE PANEL

QP62801AB



25 Plug-in the harness A connectors.

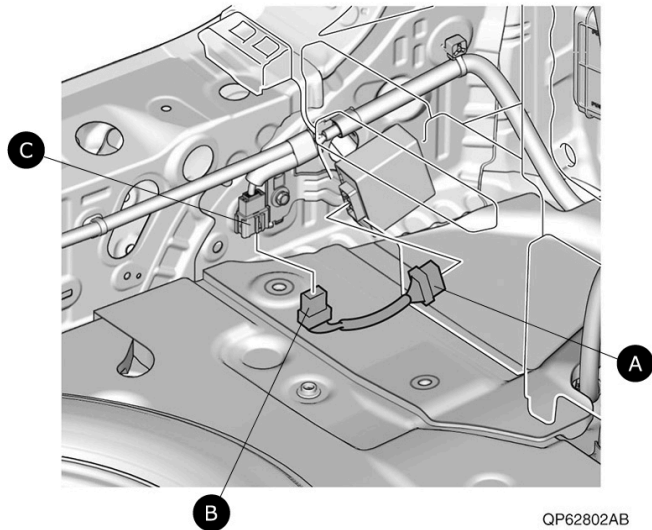

A	HARNESS A 12-PIN CONNECTOR
B	HARNESS A 14-PIN CONNECTOR
C	VEHICLE 14-PIN CONNECTOR


Routing the Harness B

26 Remove the vehicle grommet.

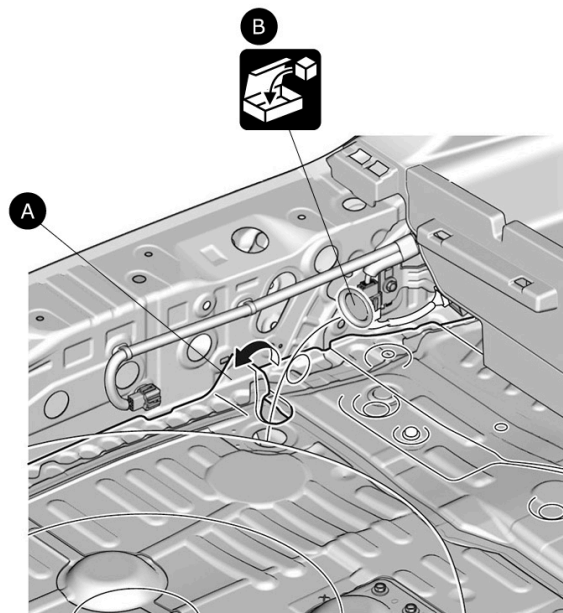


A	FLOOR CARPET
B	VEHICLE GROMMET

27 Install the harness B grommet.




NOTE

- Install the harness by holding the grommet.
- Make sure the grommet is seated properly.
- Make sure to install the grommet in the correct orientation.

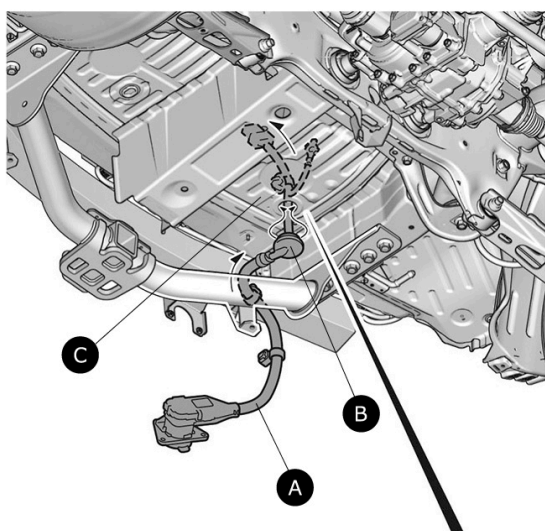


A	HARNESS B
B	HARNESS B GROMMET
C	VEHICLE PANEL

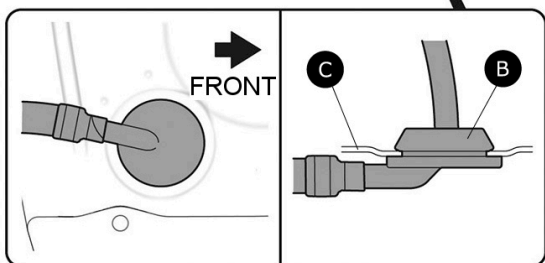



SECTION VIEW

QP62804AB

28 Secure the harness B.



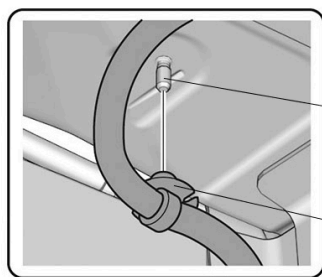


A	STUD BOLT
B	HARNESS B CLIP
C	HARNESS B CLIP

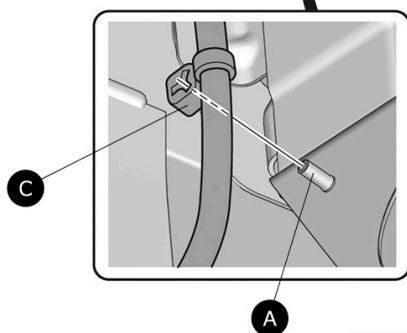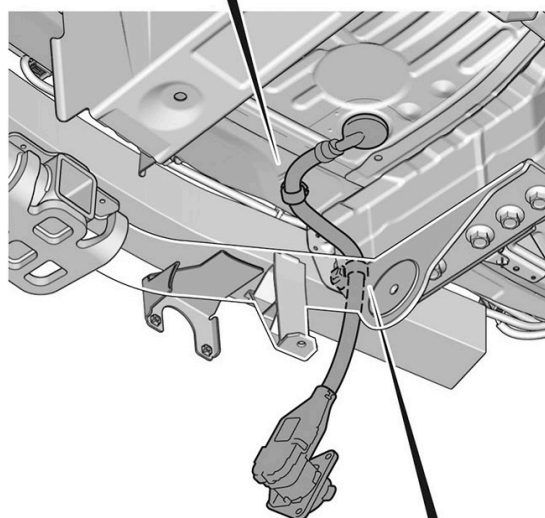

QP62805AB



29 Secure the harness B connector.

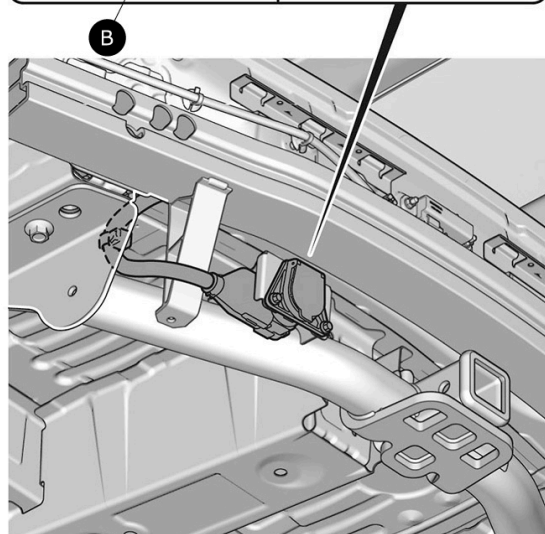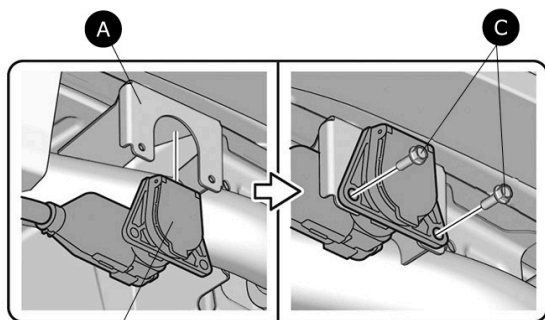

A	TRAILER HITCH
B	HARNESS B 7-PIN CONNECTOR
C	6 x 16 mm FLANGE BOLT(2)

QP70101AB


30 Plug-in the harness B connector.

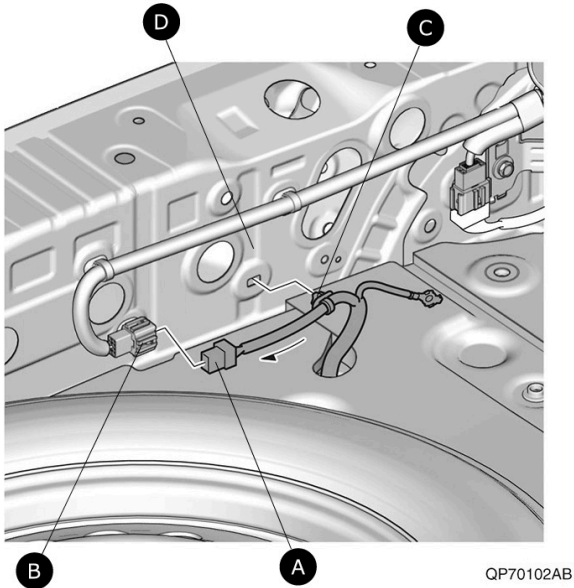

A	HARNESS B 8-PIN CONNECTOR
B	VEHICLE 8-PIN CONNECTOR
C	HARNESS B CLIP
D	VEHICLE PANEL

31 Secure the harness B.



32 Secure the harness B ground terminal.

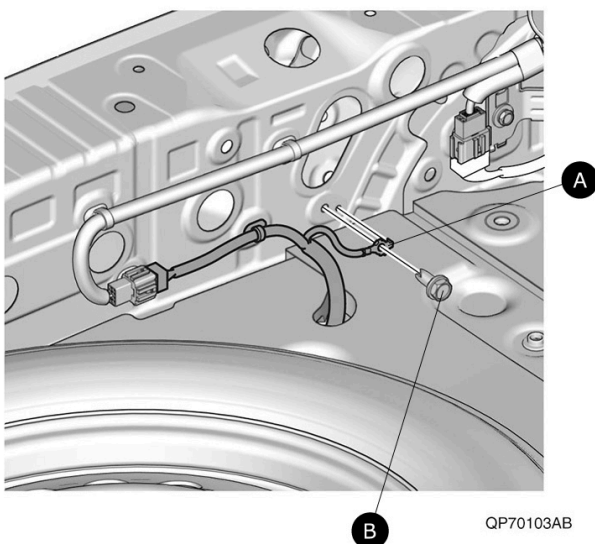

A	HARNESS B GROUND TERMINAL
B	GROUND BOLT

Installing the Fuses and Relays

33 Remove the sub fuse box cover.

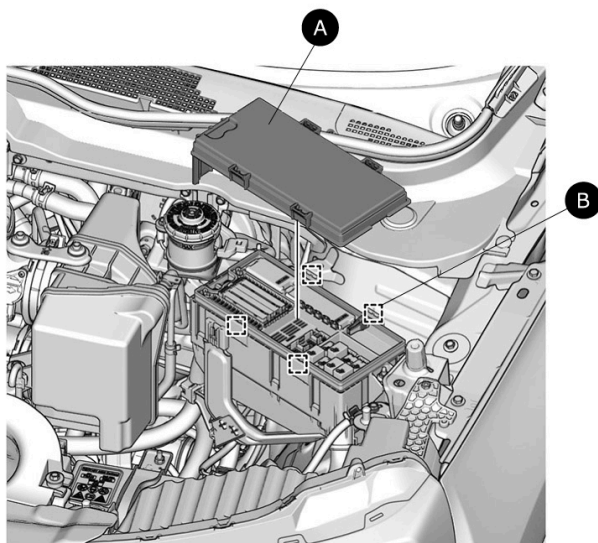


QP70104AB

A	SUB FUSE BOX COVER
B	RETAINING TAB(4)

34 Install the 10A fuses, 20A fuses, 30A fuse, and relays.

NOTE

- Make sure to install the fuses in the correct position.
- One 20A fuse is included in the subharness kit.

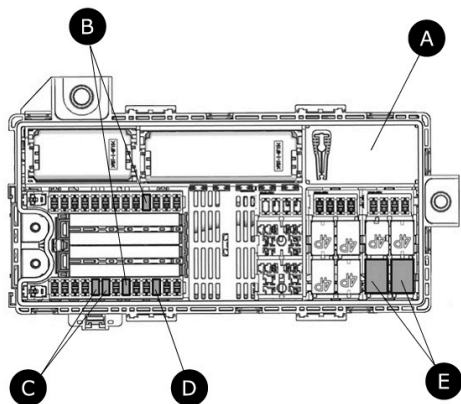

QP70105AB

A	SUB FUSE BOX
B	10A FUSE(2)
C	20A FUSE(2)
D	30A FUSE
E	RELAY(2)

Check After Installation

35 Check that all parts are installed and properly routed.

NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

Installing All Removed Parts

36 Install all removed parts except for the resonator.

Operation Check

37 Connect the negative cable to the battery.

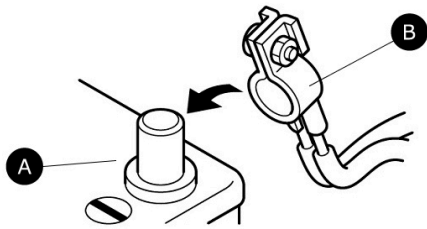

Q060702BM

A	BATTERY
B	NEGATIVE CABLE

38 Install the resonator.

39 Make sure the accessory operates as described in the vehicle owner's manual.

Vehicle Check

40 Make sure all accessories and systems operate properly.

41 If necessary, restore the systems back to normal operation as described in the service information.


42 Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.

Give a copy of this pages to your customer.

TRAILER HITCH

● Use and Care


Whenever you remove the hitch pin clip, the hitch pin, and the ball mount, store them securely in the cargo area. Install the cover into the opening at the end of the trailer hitch. When you reinstall the ball mount, store the cover in the cargo area.

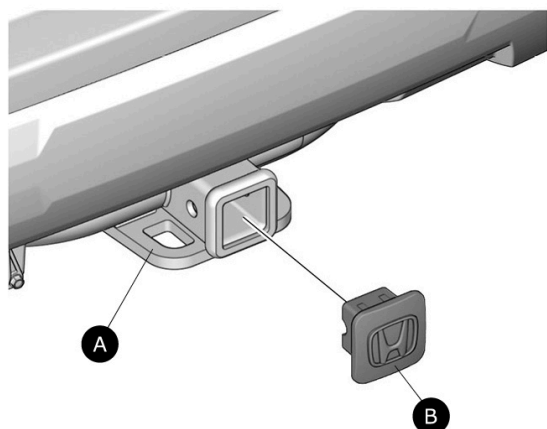

QP70106AB

A	TRAILER HITCH
B	COVER

Install the ball mount into the trailer hitch using a hitch pin clip and hitch pin.

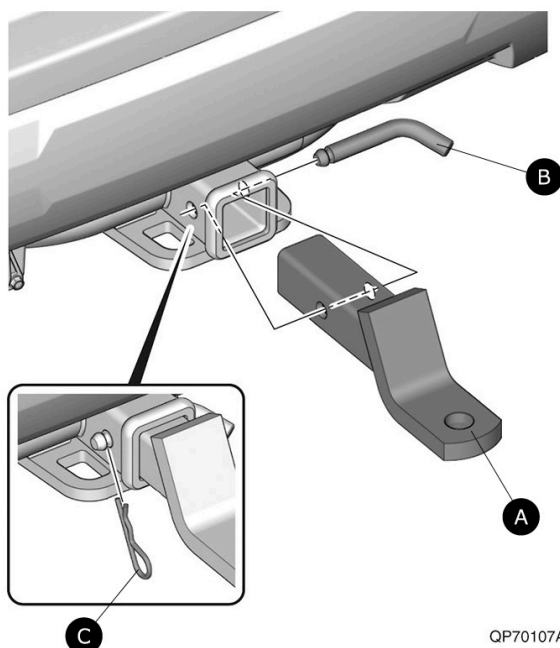


QP70107AB

A	BALL MOUNT
B	HITCH PIN
C	HITCH PIN CLIP

After the first 600 miles (1,000 km) of towing, have your Honda Dealer re-check the tightness of the trailer hitch bolts.

TRAILER HITCH HARNESS

This subharness is designed for use with the installation of an electric brake controller. Refer to the vehicle's owner's manual for detailed information about handling this subharness.

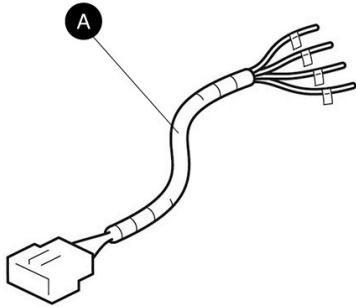

QBN0730AH

A	SUBHARNESS
---	------------