




**INSTALLATION
INSTRUCTIONS**

<p>Accessory FRONT LOWER TRIM P/N 08P46-SZA-100</p>	<p>Application 2010 PILOT</p>	<p>Publications No. All 41644</p>
		<p>Issue Date MAY 2009</p>

PARTS LIST

Front lower trim

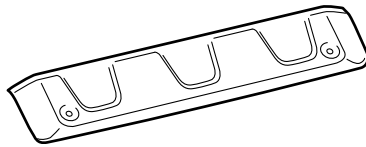

2 Washer-nuts



2 Special bolts



2 Washers



2 Spacers



TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver

Ratchet

10 mm Socket

Hex wrench

Pushpin


Drill

3 mm and 10 mm Drill bits

Eye protection (safety goggles, face shield, etc.)

Blanket

Illustration of the Front Lower Trim Kit Installed on the Vehicle

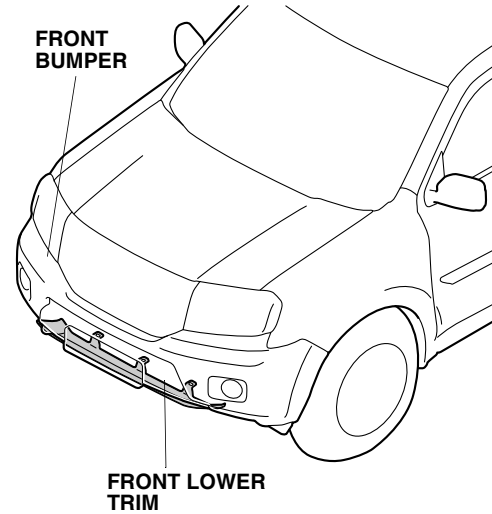


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE:

Do not damage the body paint finish. To prevent damage, place a blanket under the front bumper during the installation.


1. Remove the front bulkhead cover (nine clips).

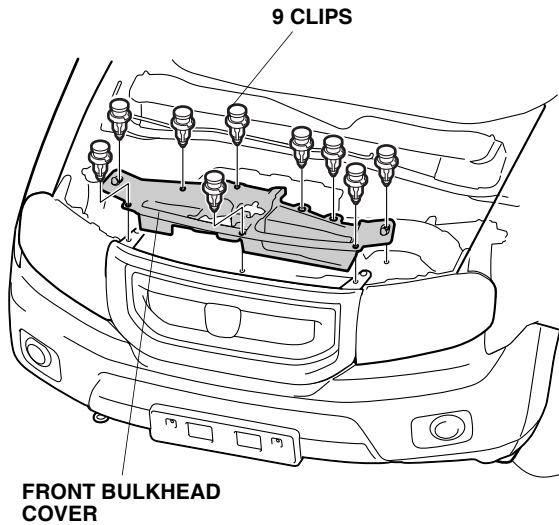


2. Remove the front bumper (nine clips, four bolts, and four self-tapping screws). Have an assistant help you when removing and installing the front bumper. If the vehicle is equipped with the foglight or the front corner sensors, unplug the connectors. Place the front bumper on a blanket after removal.

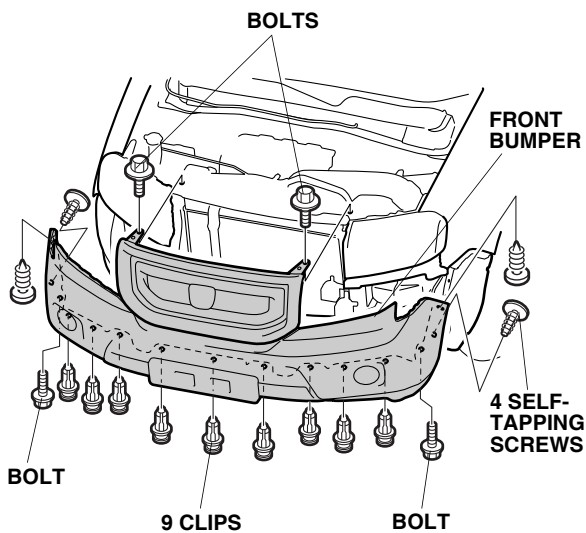


3. Inside the front bumper, mark the center of the two scribe marks with a pushpin as shown.

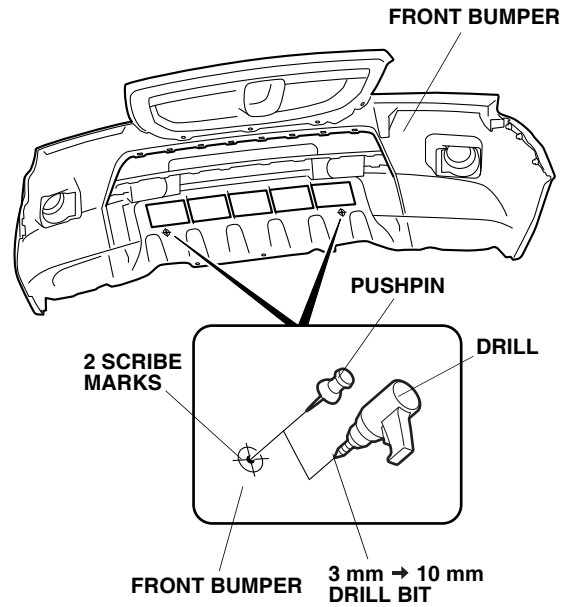

4. While wearing eye protection, first drill with a 3 mm drill bit and finish with a 10 mm drill bit, and remove all burrs.
5. Position the front lower trim to the front bumper, and install the two washer-nuts, two washers, two spacers, and two special bolts as shown. Torque the special bolts to 4 N·m (0.4 kgf·m, 3 lbf·ft).

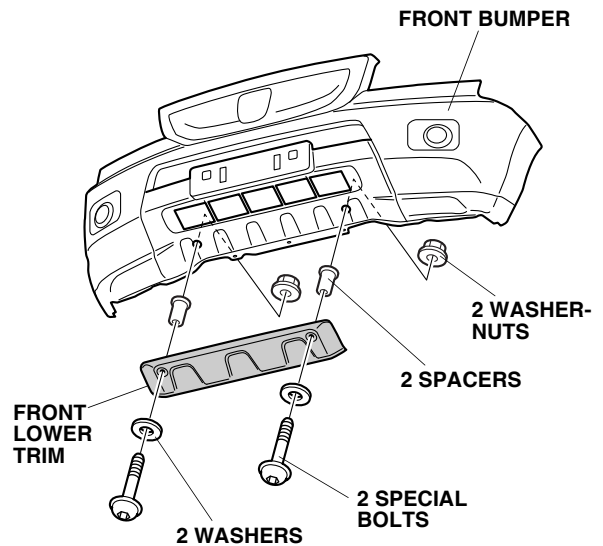

6. Reinstall the front bumper.

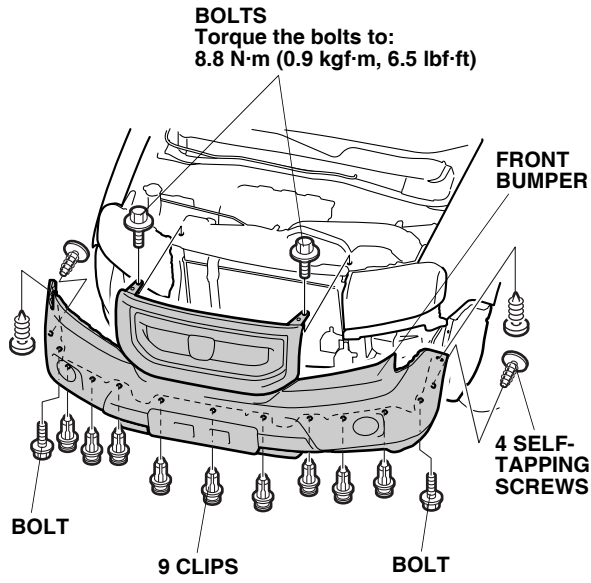

7. Reinstall all removed parts.