



INSTALLATION INSTRUCTIONS

Accessory
FRONT BUMPER CHROME TRIM
 P/N 08F23-TG7-100

Application
2017 PILOT

Publications No.
VERSION 1
 Issue Date
OCT 2016

PARTS LIST

Left front bumper chrome trim



Right front bumper chrome trim




TOOLS AND SUPPLIES REQUIRED

- 10 mm Open end wrench
- Masking tape
- Shop towel

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Plastic trim tool (T/N SILTRIMTL10)

Illustration of the Front Bumper Chrome Trim on the Vehicle


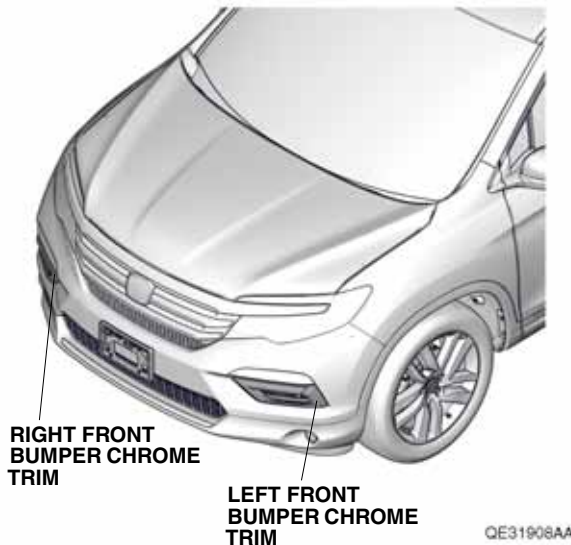


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Wrap a shop towel around the hood latch

HOOD LATCH
 (Wrap with a shop towel.)

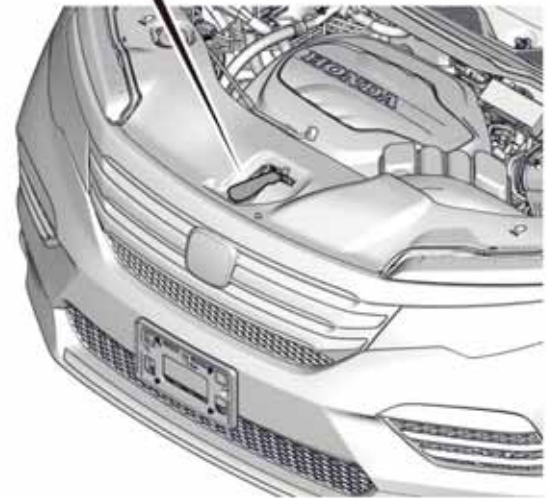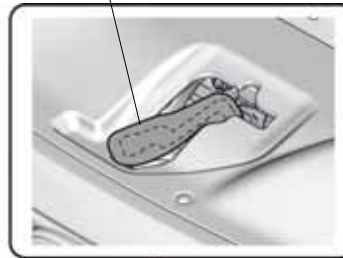


QDN1301AA


- Remove the front bulkhead cover.

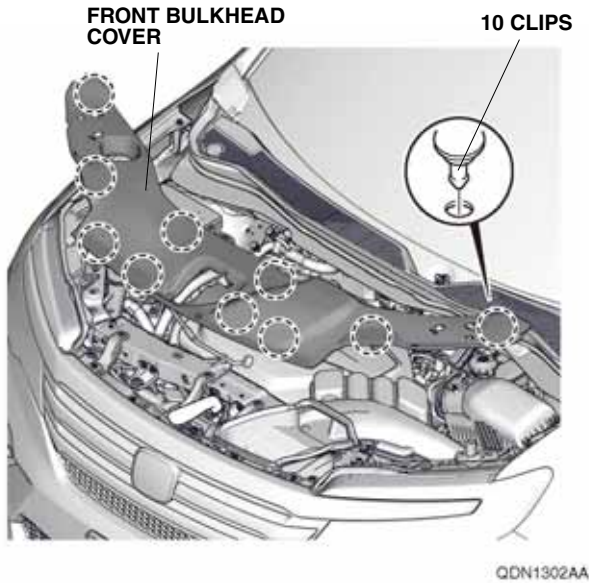


- Remove the intake air tube.
- Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.

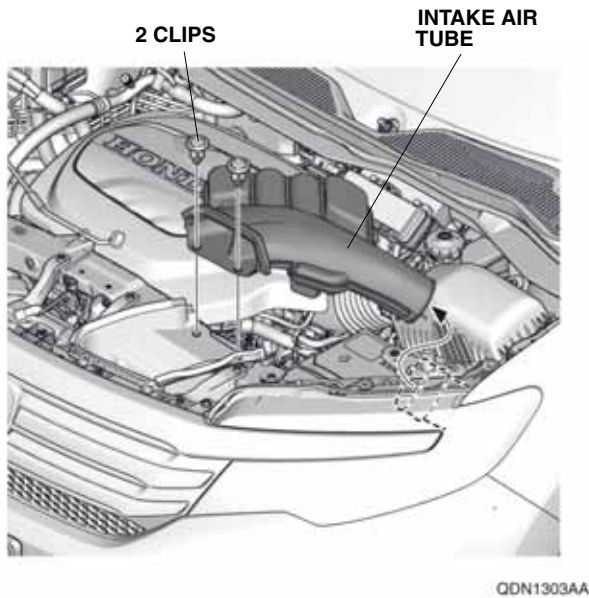


- Attach the masking tape to the front bumper as shown.

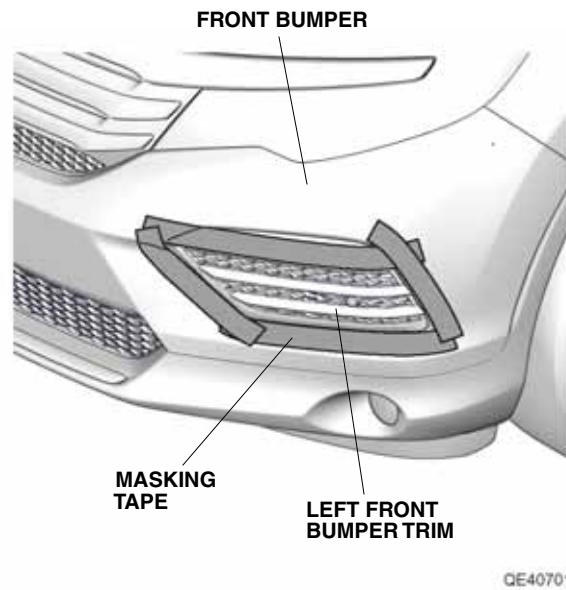


- Using a plastic trim tool wrapped with the masking tape, remove the left front bumper trim and unplug the vehicle connector.

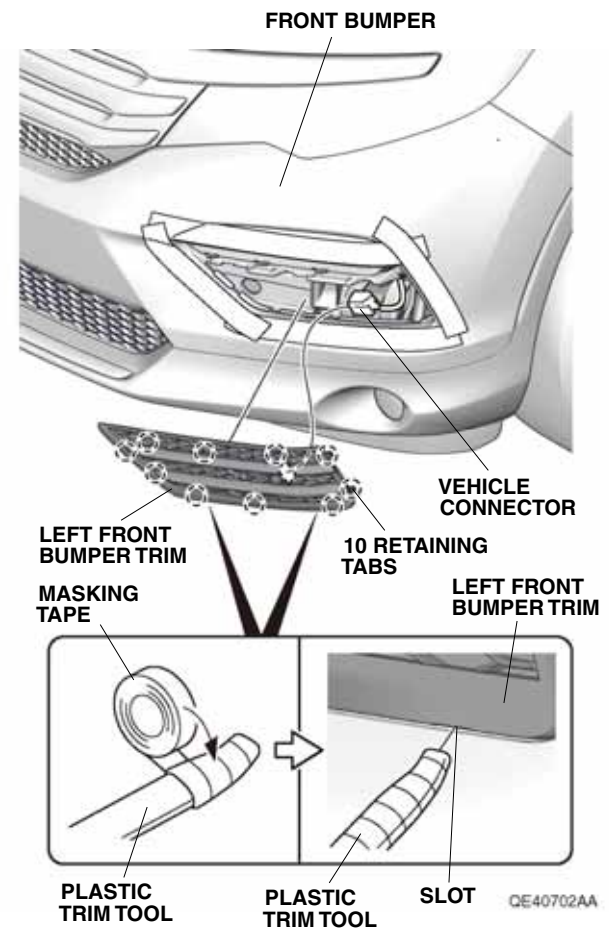


4. Remove the left front parking sensor.

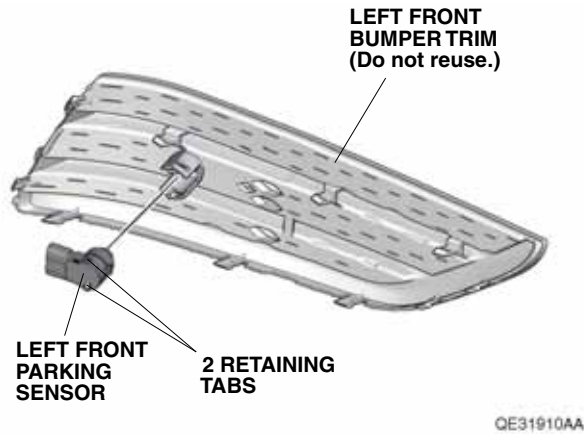

5. Install the left front parking sensor removed from step 4 into the left front bumper chrome trim.

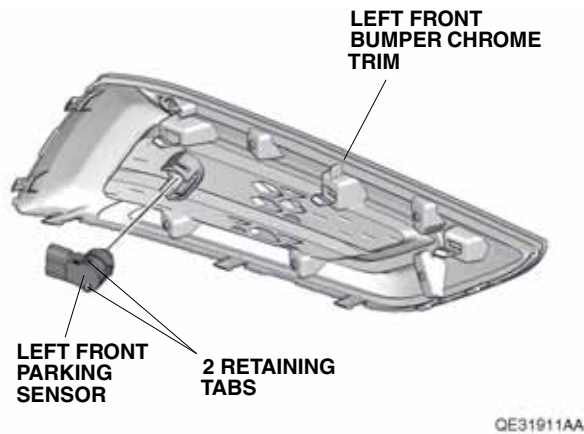

6. Plug the vehicle connector into the left front parking sensor.

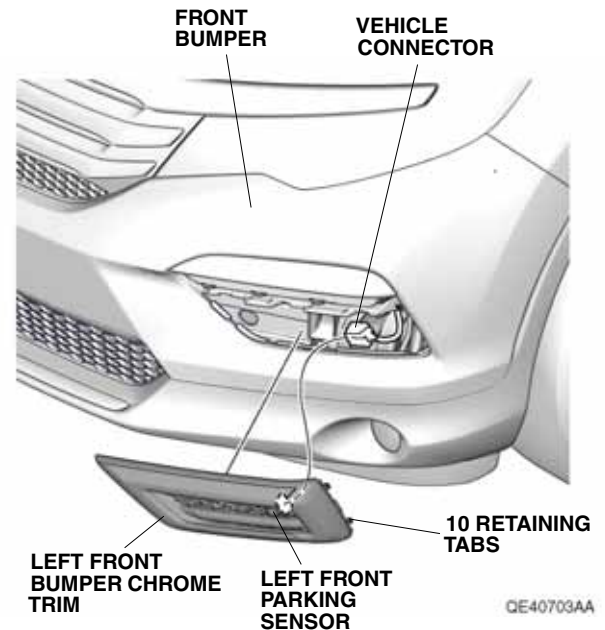

7. Install the left front bumper chrome trim to the front bumper with ten retaining tabs.
8. Repeat steps 2 through 7 on the right side of the front bumper.
9. Check that all wire harnesses are routed properly and all connectors are plugged in.
10. Connect the negative cable to the battery.
11. Install the front bulkhead cover and the intake air tube.
12. Press and hold the audio unit power button for two seconds to restore the audio and navi (if equipped) system functions.
13. Set the clock on vehicles without navigation.
14. If necessary, restore the systems back to normal operation as described in the service information.