



INSTALLATION INSTRUCTIONS

Accessory
TAILGATE CHROME TRIM
 P/N 08F52-TG7-100

Application
2020 PILOT

Publications No.
VERSION 1
 Issue Date
JUL 2019

PARTS LIST

Tailgate chrome trim



Alcohol swab



TOOLS AND SUPPLIES REQUIRED

Masking tape

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Rubber Roller (T/N MHLE54D)

Illustration of the Tailgate Chrome Trim on the Vehicle




INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Do not damage the paint finish.
 - This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
 - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
1. Using one alcohol swab, thoroughly clean the area where the tailgate chrome trim will attach.

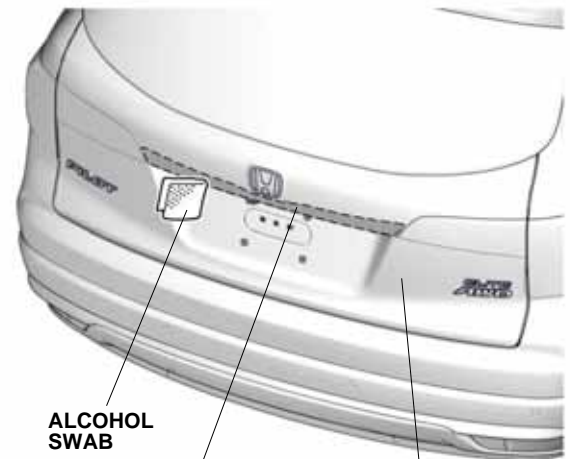


QE32002AA


2. Peel back the adhesive backings, and tape them to the front surface of the tailgate chrome trim with masking tape. Remove the small piece of adhesive backings.

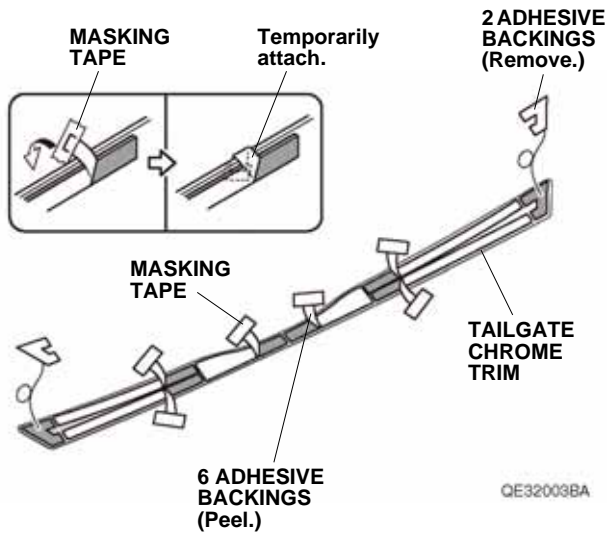

3. Line up and attach the tailgate chrome trim as shown.

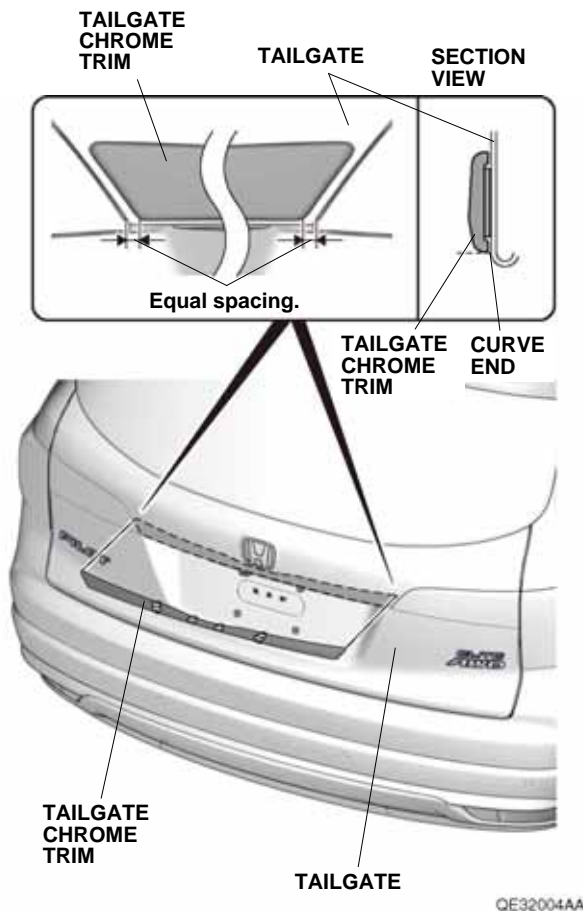

4. While applying light pressure against the tailgate chrome trim, carefully remove the taped adhesive backings.

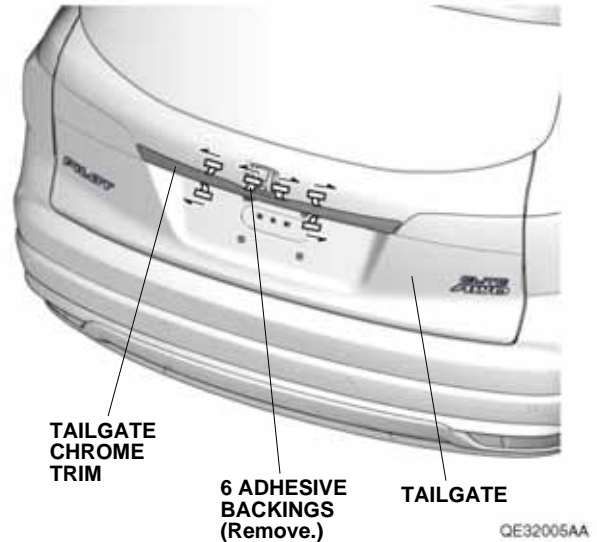

5. Using a rubber roller, apply firm pressure against the tailgate chrome trim and roll from one end to the other. Apply firm pressure especially at the ends.

