

# Germain Honda of College Hills




## INSTALLATION INSTRUCTIONS

Accessory  
**BLACK EMBLEMS**

Application  
**2023 PILOT  
MODEL SERIES**

Publications No.  
**VERSION 1**  
Issue Date  
**NOV 2022**

### GENERAL VIEW

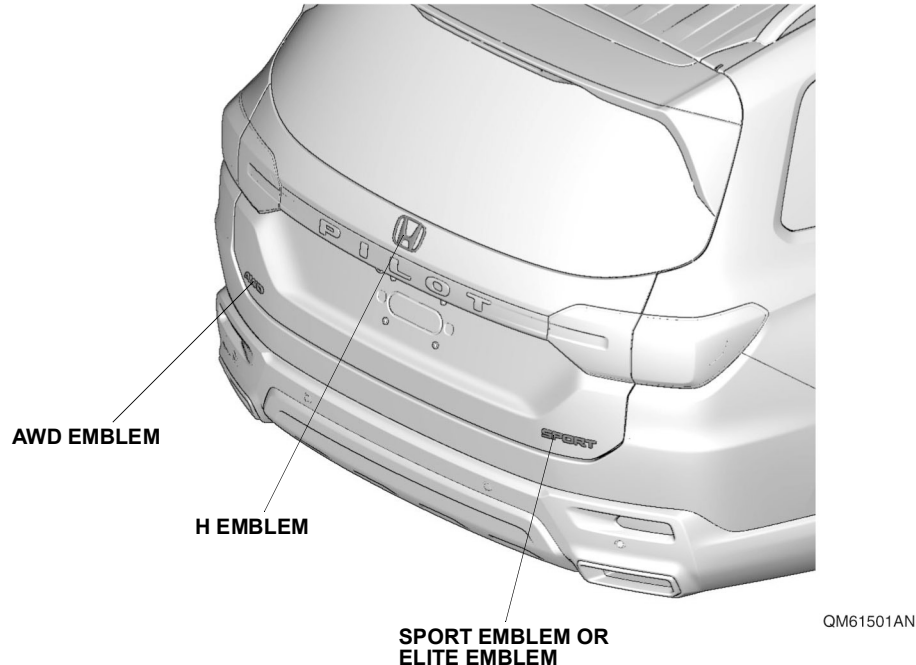

### FOR YOUR SAFETY (Read carefully.)

#### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

# Germain Honda of College Hills


## PARTS LIST

### H Emblem Kit (P/N 08F20-T90-100)

H emblem



Alcohol wipe




### AWD Emblem Kit (P/N 08F20-T90-100A)

AWD emblem



Alcohol wipe




### SPORT Emblem Kit (P/N 08F20-3V0-100B)

SPORT emblem




Alcohol wipe




### ELITE Emblem Kit (P/N 08F20-THR-100G)

ELITE emblem



Alcohol wipe



## REQUIRED TOOLS AND SUPPLIES

- Nylon string
- Masking tape
- Needle nose pliers

The following tool is available through the Honda Tool and Equipment Program:

Rubber Roller (T/N MHLE54D)


# Germain Honda of College Hills

## INSTALLATION

1. Remove the vehicle H emblem.


### NOTE

- Do not damage the tailgate when removing the vehicle H emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tapes from the tailgate.




NYLON STRING  
MOVEMENT


VEHICLE  
H EMBLEM

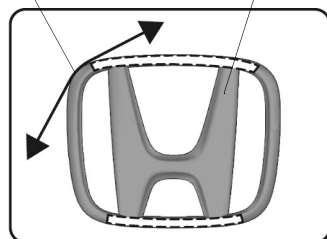

Do not reuse.

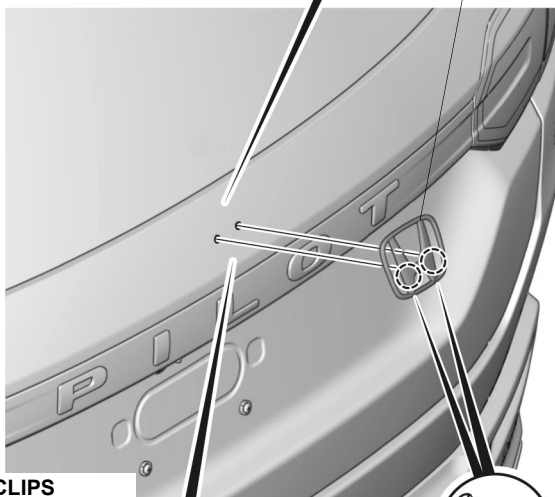

2 CLIPS  
(Do not reuse.)

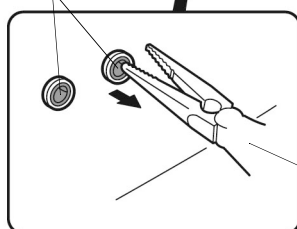

IF CLIP REMAINS

2 CLIPS

NEEDLE NOSE  
PLIERS


QM61502AN

2. Clean the attaching area.

### NOTE

Allow to dry thoroughly.

TAILGATE

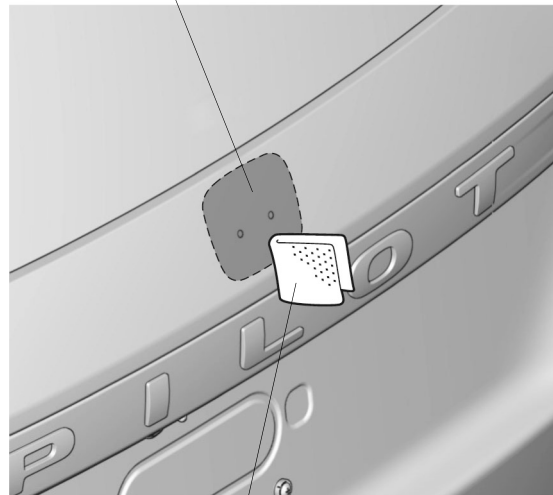

ALCOHOL WIPE

QM61503AN

3. Install the new H emblem.


### NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

4 DOUBLE-SIDED  
ADHESIVE TAPES



NEW  
H EMBLEM

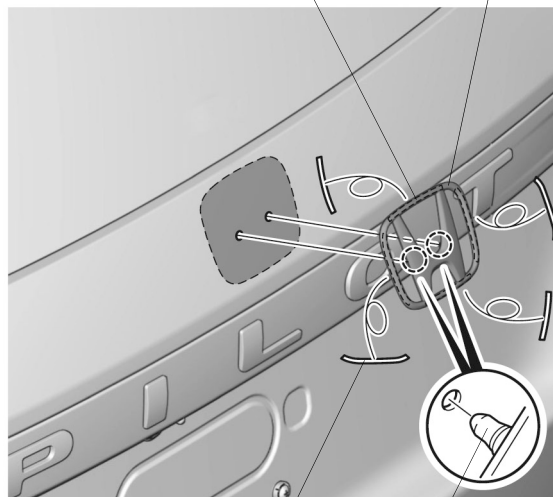

4 ADHESIVE  
BACKINGS  
(Remove.)

2 CLIPS

QM61504AN

# Germain Honda of College Hills

4. Secure the new H emblem.



QM61505AN

5. Choose one of these options.


- Replace the AWD emblem

Go to step 6

- Do not replace the AWD emblem



Go to step 18

6. Remove the guide form.

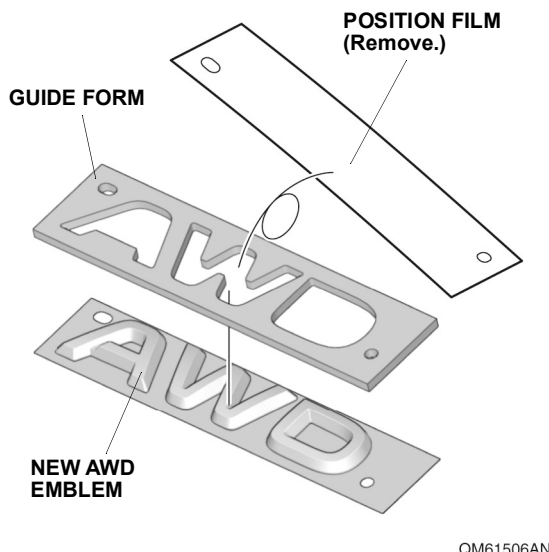

QM61506AN

7. Install the guide form.

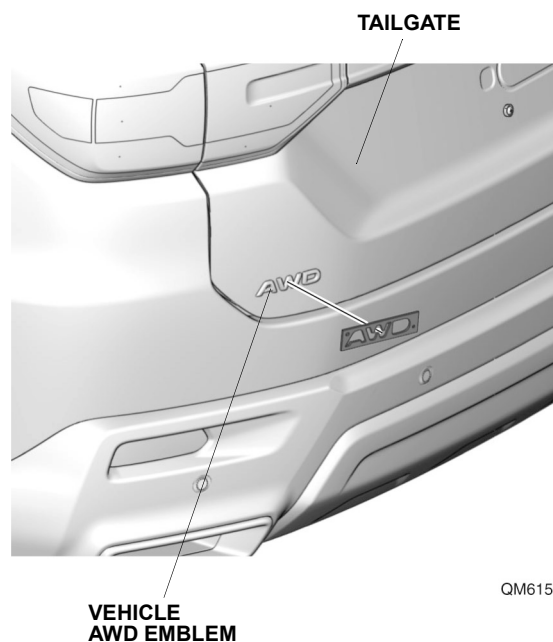

QM61507AN

8. Attach masking tape.



QM61508AN

# Germain Honda of College Hills

9. Remove the guide form.




QM61509AN

10. Remove the vehicle AWD emblem.

## NOTE

- Do not damage the tailgate when removing the vehicle AWD emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

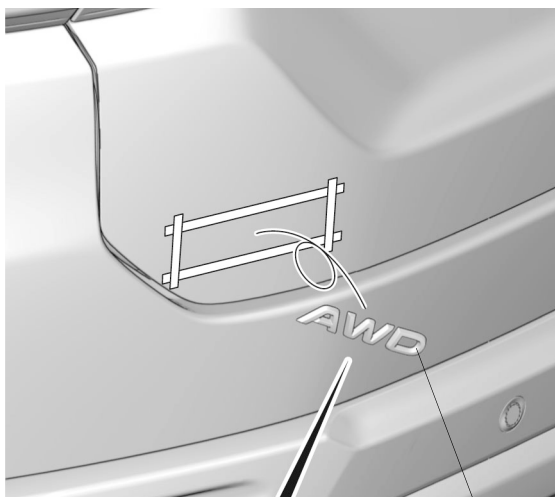


Do not reuse.



NYLON STRING  
MOVEMENT

QM61510AN

11. Install the guide form.

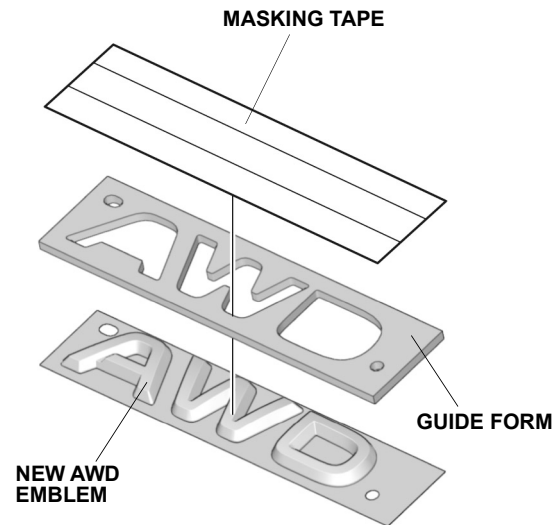


QM61511AN

12. Attach masking tape.

13. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

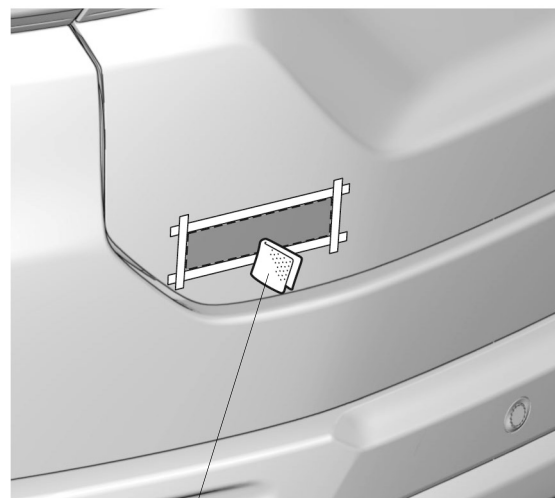

ALCOHOL WIPE


QM61512AN

# Germain Honda of College Hills

14. Attach the new AWD emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

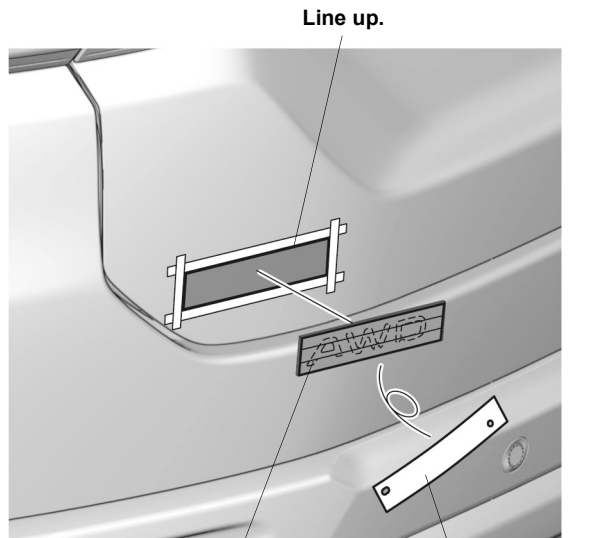


QM61513AN

3 DOUBLE-SIDED  
ADHESIVE TAPES




ADHESIVE BACKING  
(Remove.)

15. Secure the new AWD emblem.

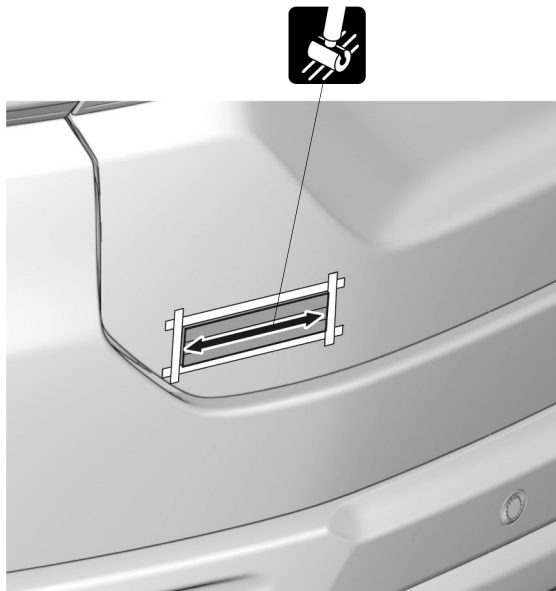

QM61514AN

16. Remove the guide form.

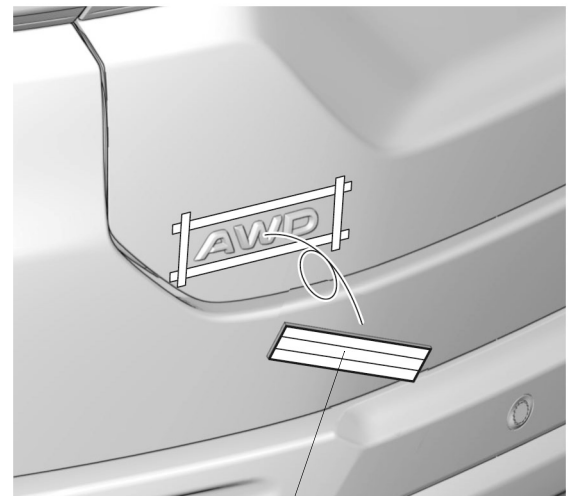

QM61515AN

Remove.

17. Remove the masking tape.

18. Choose one of these options.


- Replace the SPORT emblem

Go to step 19

- Do not replace the SPORT emblem

Go to step 31

19. Remove the guide form.

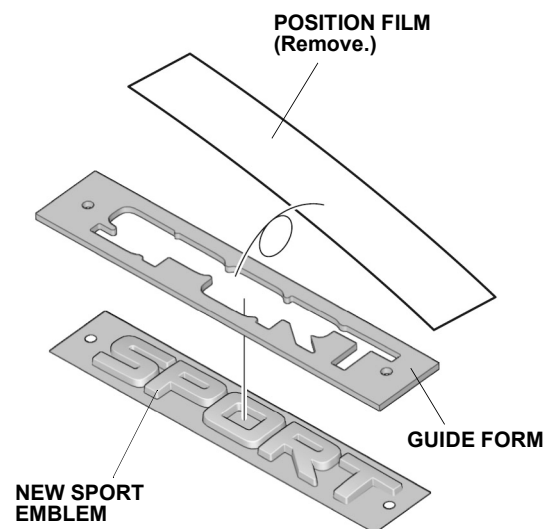


QL52707AB



# Germain Honda of College Hills

20. Install the guide form.

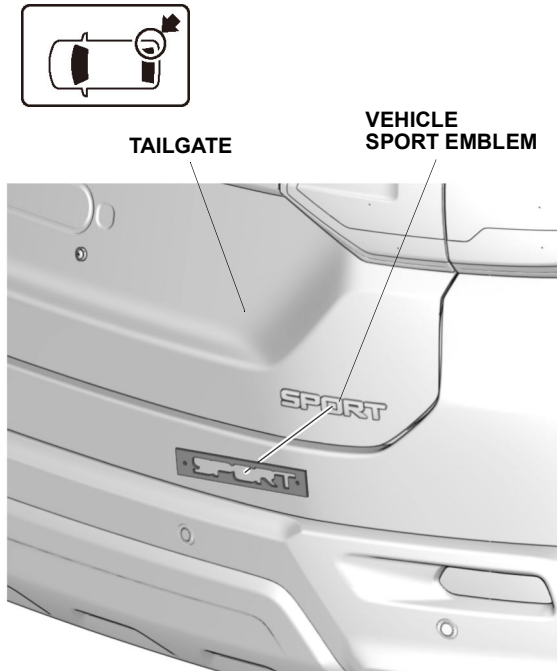


QM61516AN

21. Attach masking tape.



QM61517AN


22. Remove the guide form.

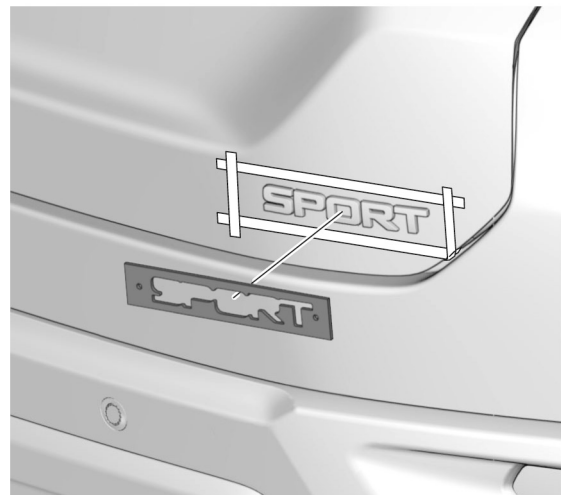

23. Remove the vehicle SPORT emblem.

## NOTE

- Do not damage the tailgate when removing the vehicle SPORT emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

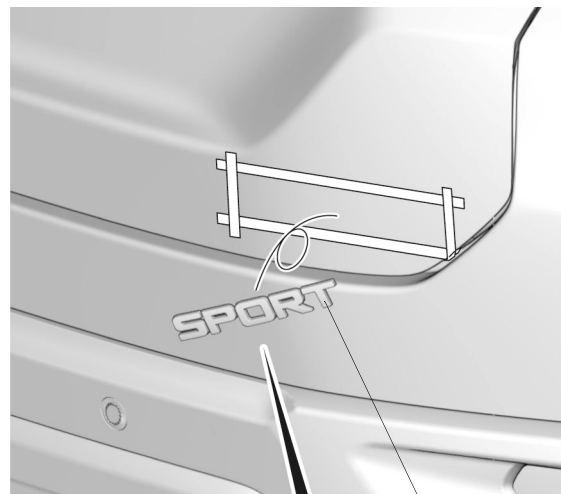

NYLON STRING  
MOVEMENT


Do not reuse.





# Germain Honda of College Hills

24. Install the guide form.

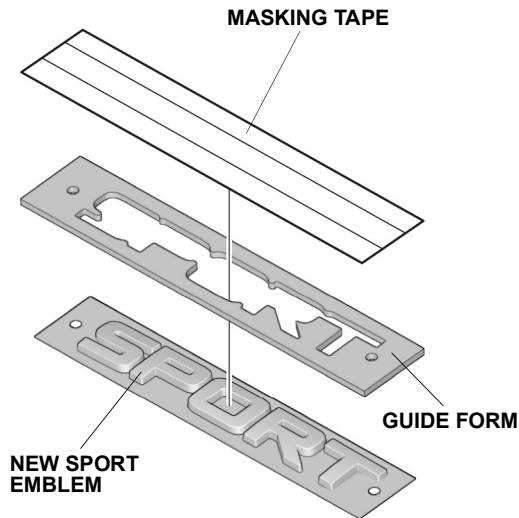


QL52712AB

25. Attach masking tape.

26. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

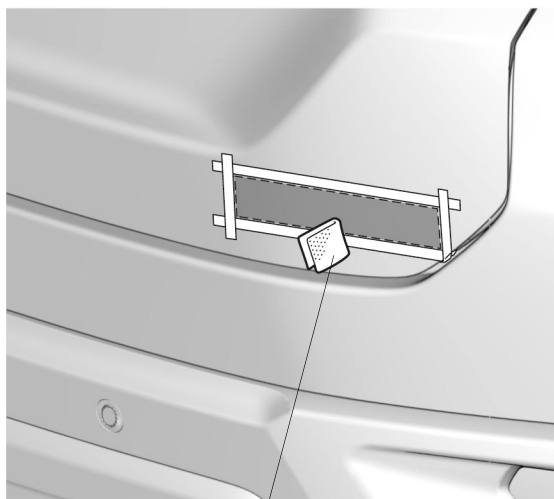


ALCOHOL WIPE

QM61520AN

27. Attach the new SPORT emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

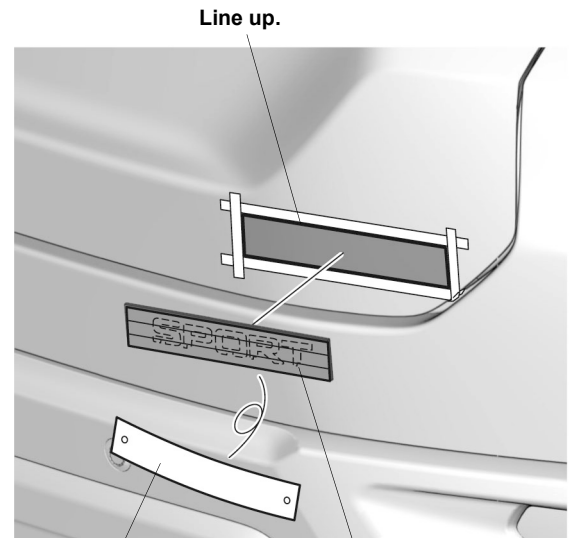

QM61521AN

ADHESIVE BACKING  
(Remove.)

5 DOUBLE-SIDED  
ADHESIVE TAPES




28. Secure the new SPORT emblem.



QM61522AN

# Germain Honda of College Hills

29. Remove the guide form.

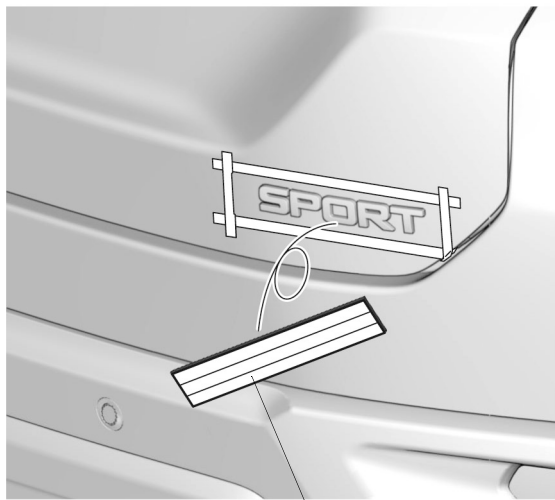

Remove.

QM61523AN

30. Remove the masking tape.

31. Choose one of these options.


- Replace the ELITE emblem

Go to step 32

- Do not replace the ELITE emblem

Go to step 44

32. Remove the guide form.

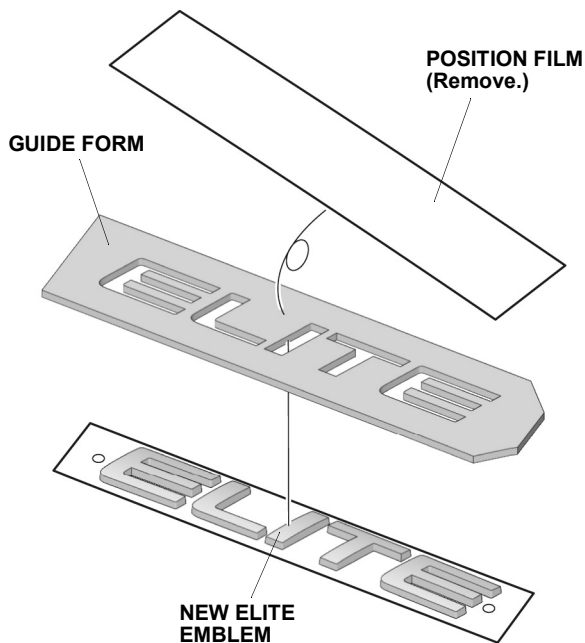


POSITION FILM  
(Remove.)

GUIDE FORM

NEW ELITE  
EMBLEM


QL92407AB

33. Install the guide form.




TAILGATE

VEHICLE  
ELITE EMBLEM

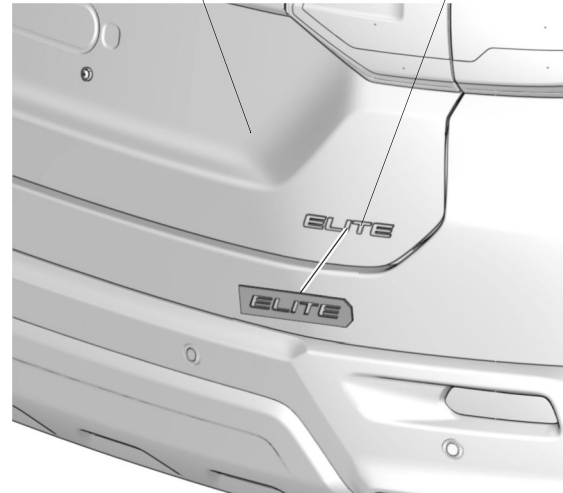

QM61524AN

34. Attach masking tape.

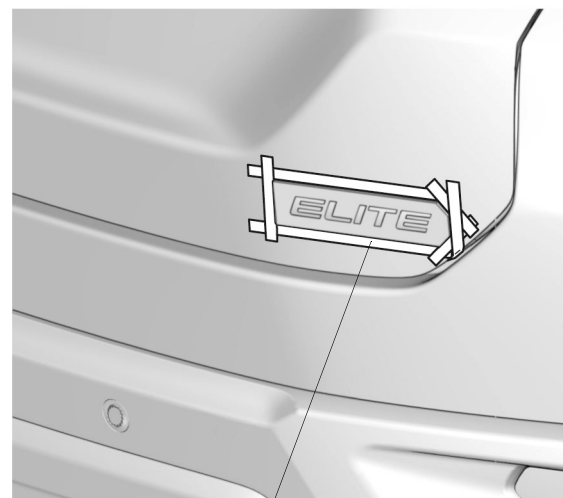


MASKING TAPE

QM61525AN

# Germain Honda of College Hills

35. Remove the guide form.

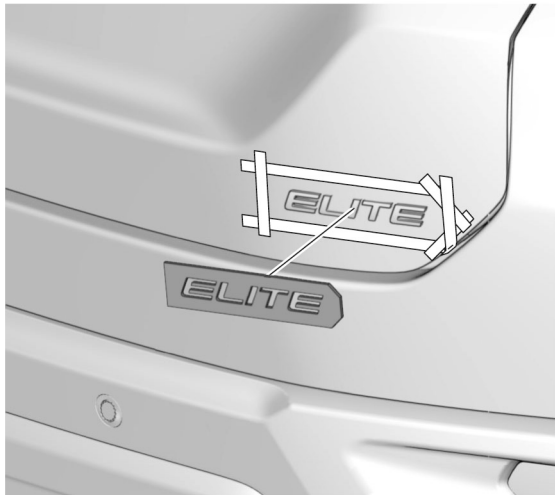


QM61526AN

36. Remove the vehicle ELITE emblem.

## NOTE

- Do not damage the tailgate when removing the vehicle ELITE emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

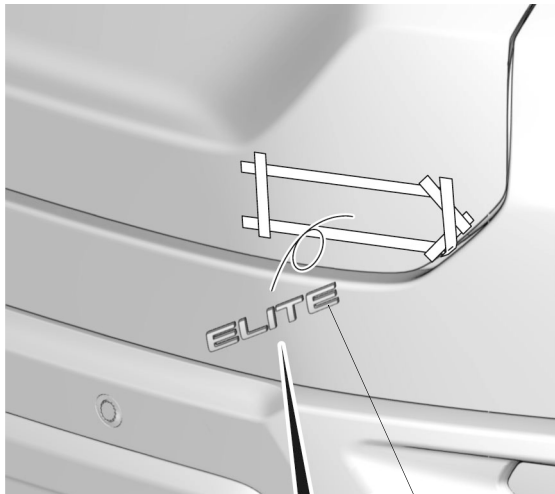


NYLON STRING  
MOVEMENT

Do not reuse.



QM61527AN

37. Install the guide form.

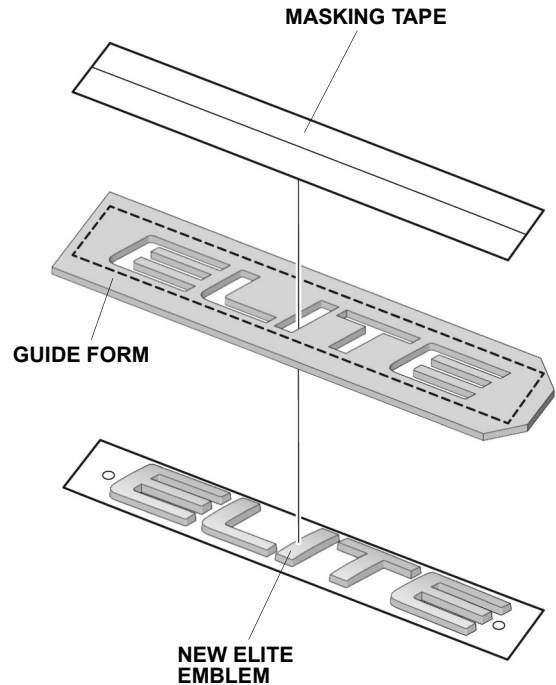


QL92408AB

38. Attach masking tape.

39. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

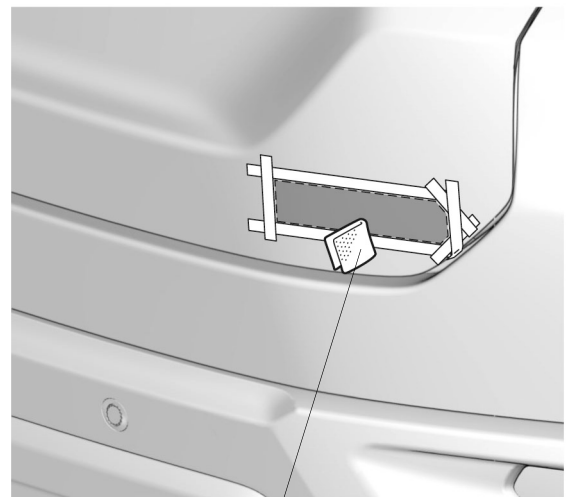

ALCOHOL WIPE


QM61528AN

# Germain Honda of College Hills

40. Attach the new ELITE emblem.

## NOTE


Check the position of the double-sided adhesive tapes and make sure to press firmly.

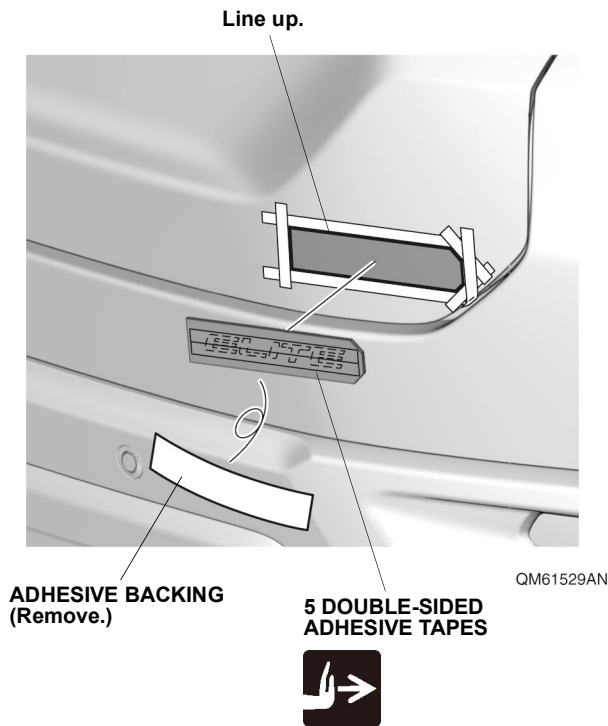

41. Secure the new ELITE emblem.



42. Remove the guide form.

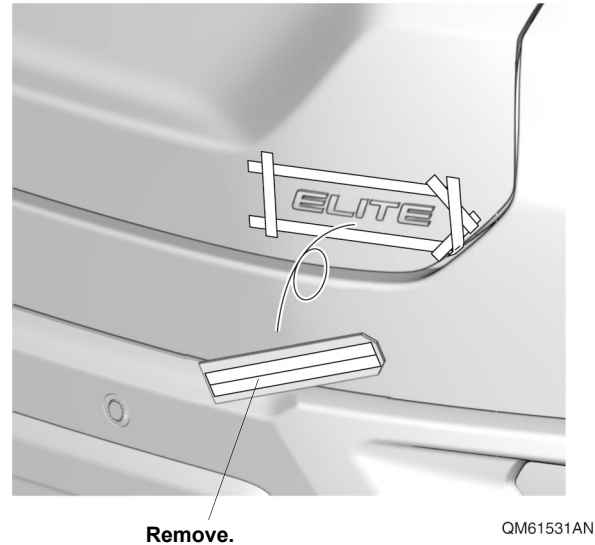

43. Remove the masking tape.

44. Check that all parts are installed properly.