

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

BODY SIDE MOLDINGS

Application

2023 PILOT
MODEL SERIES


Publications No.

VERSION 1

Issue Date

NOV 2022

GENERAL VIEW

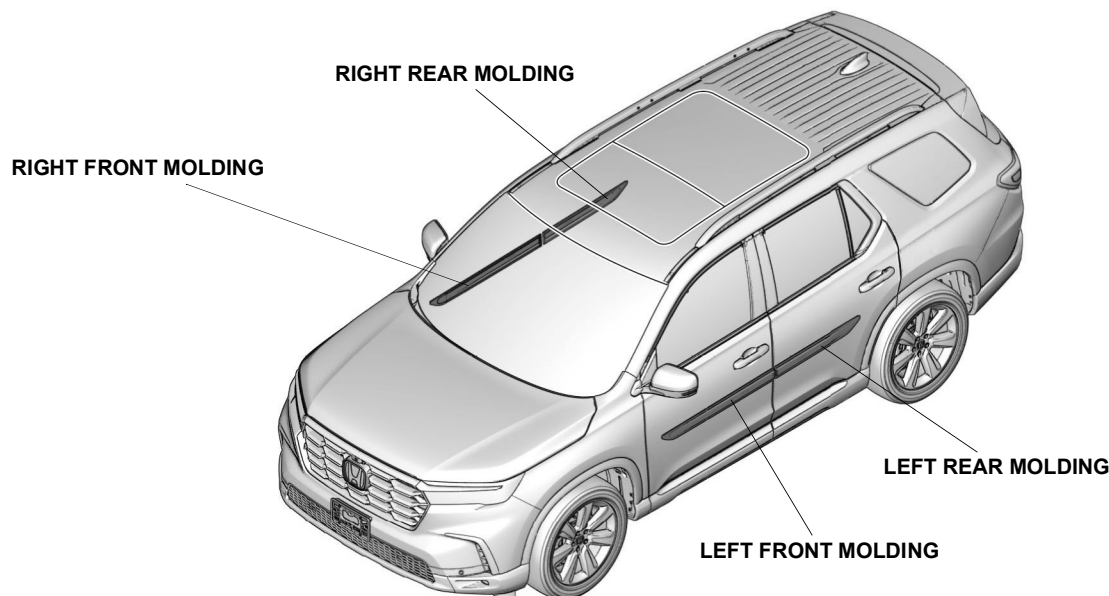

QM50901AB

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Body Side Moldings Kit (P/N 08P05-T90-100)

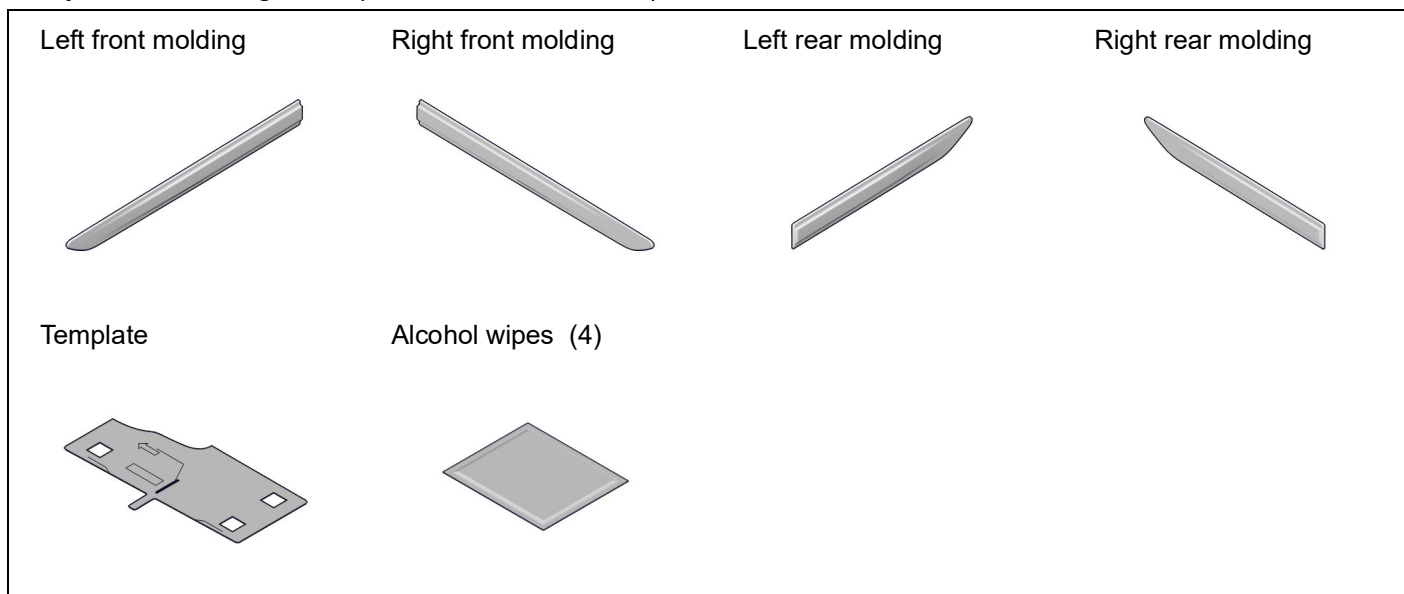

REQUIRED TOOLS AND SUPPLIES

- Masking tape
- Ruler
- Felt-tip pen


The following tool is available through the Honda Tool and Equipment Program:

Rubber Roller (T/N MHLE54D)




Germain Honda of College Hills

INSTALLATION

1. Secure the template.



Line up with the end of the curved surface.

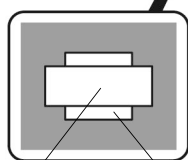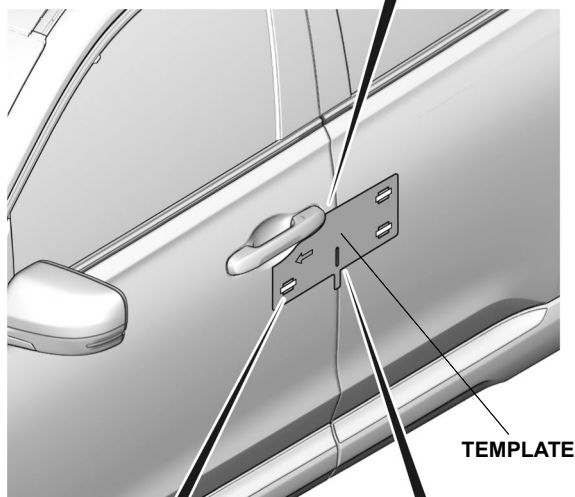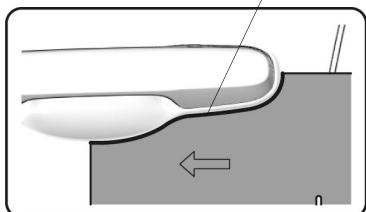


MASKING TAPE

3 HOLES

Line up with the center of the door gap.

LEFT FRONT DOOR

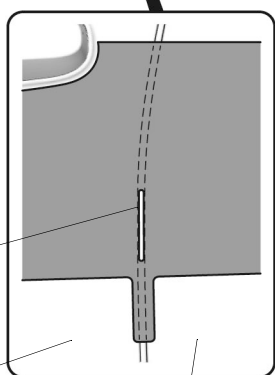

Q50902AB

LEFT REAR DOOR

2. Choose one of these options.


- With door edge films or door edge guards

Go to step 3


- Without door edge films or door edge guards

Go to step 4

3. Mark the template.

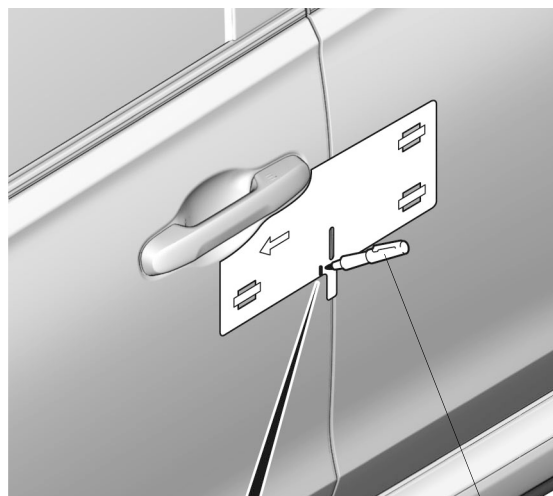

FELT-TIP PEN

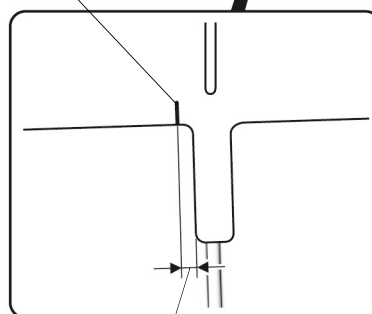

6 mm
(0.24 in.)


QM50903AB

Germain Honda of College Hills

4. Clean the attaching area.



NOTE

Allow to dry thoroughly.

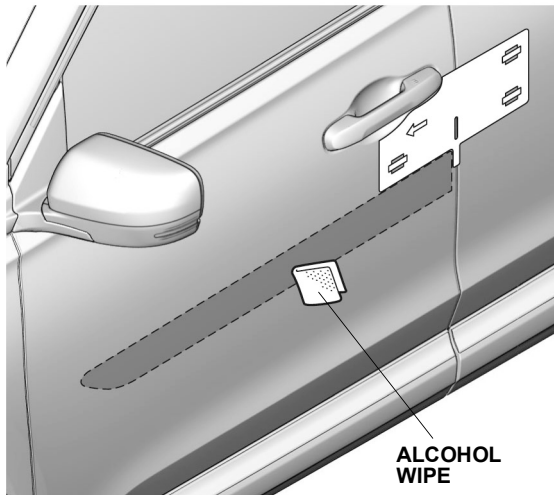

QM50904AB



5. Temporarily attach the adhesive backings.

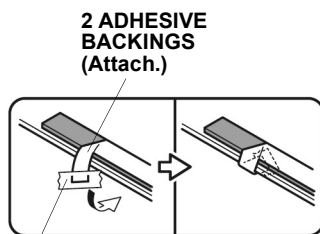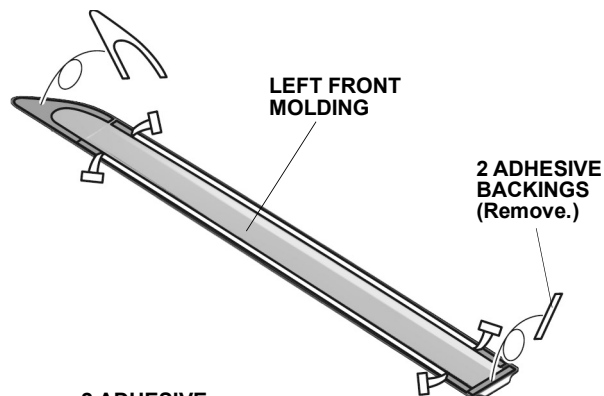

QM51001AB

6. Remove the adhesive backings.

7. Line up the left front molding.

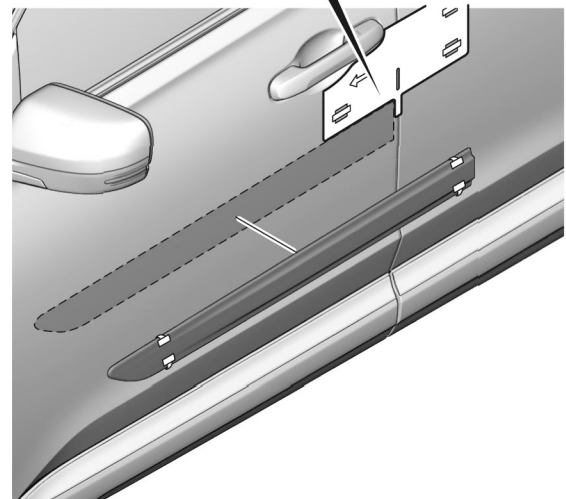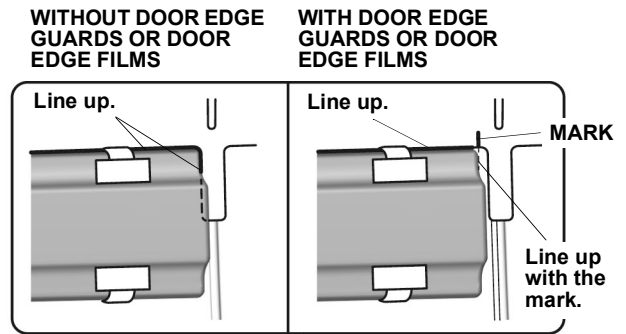


QM51002AB

Germain Honda of College Hills


8. Secure the left front molding.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

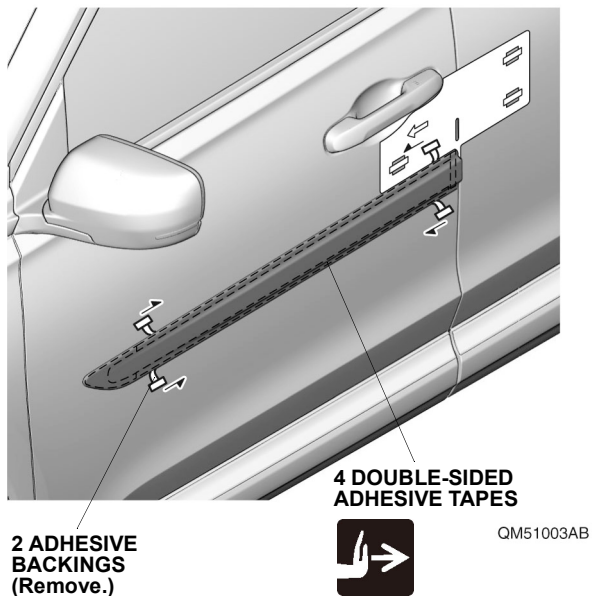



9. Secure the left front molding.

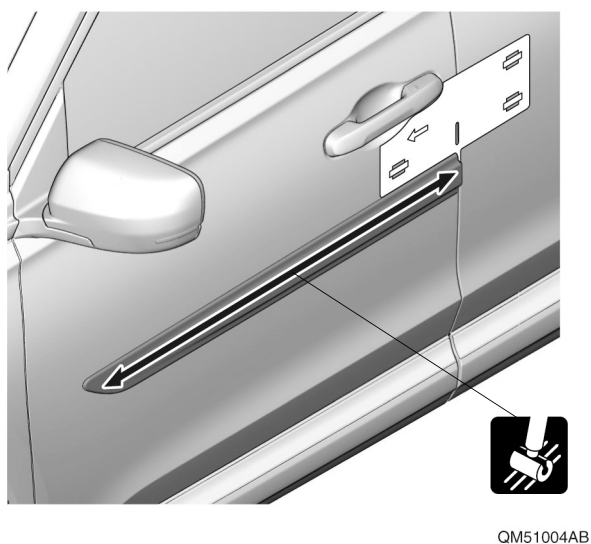


10. Clean the attaching area.

NOTE

Allow to dry thoroughly.

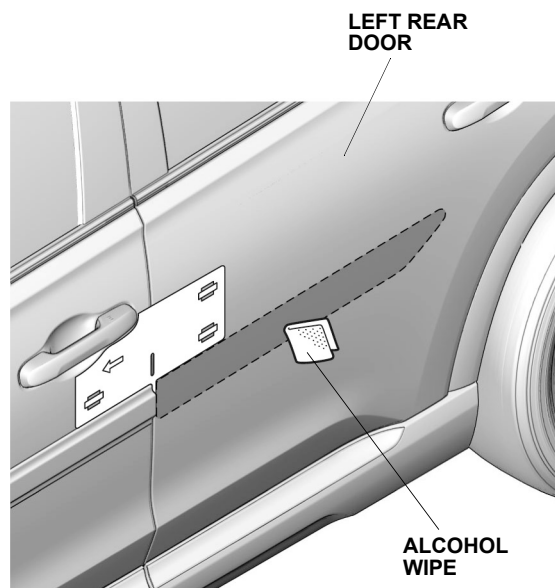



11. Temporarily attach the adhesive backings.

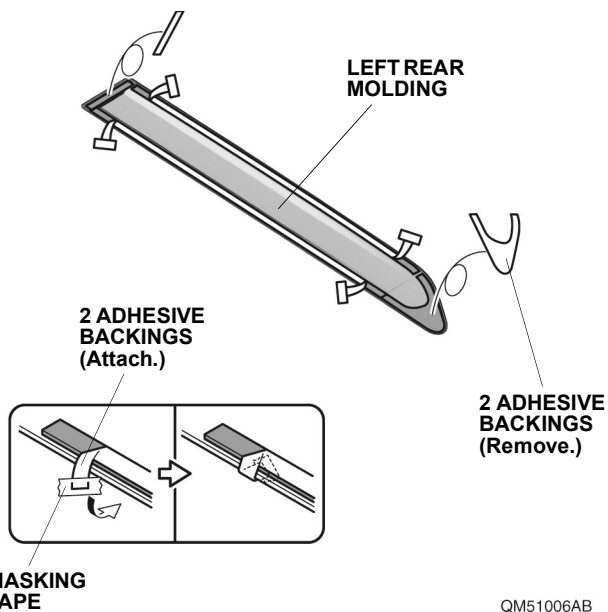

12. Remove the adhesive backings.

Germain Honda of College Hills

13. Line up the left rear molding.

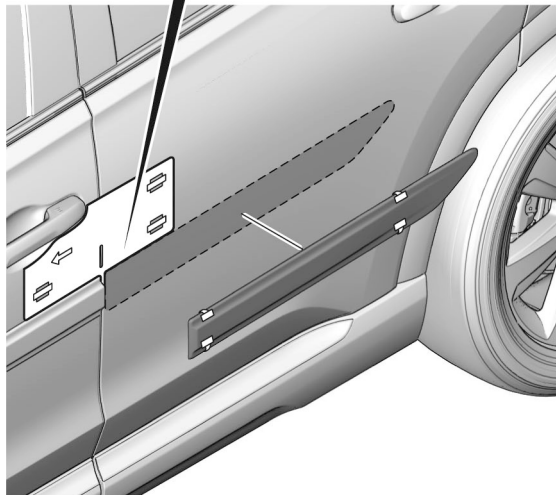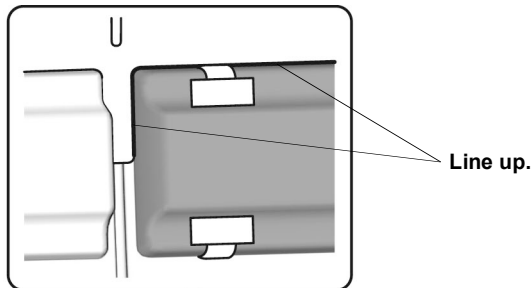


QM51007AB

14. Secure the left rear molding.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

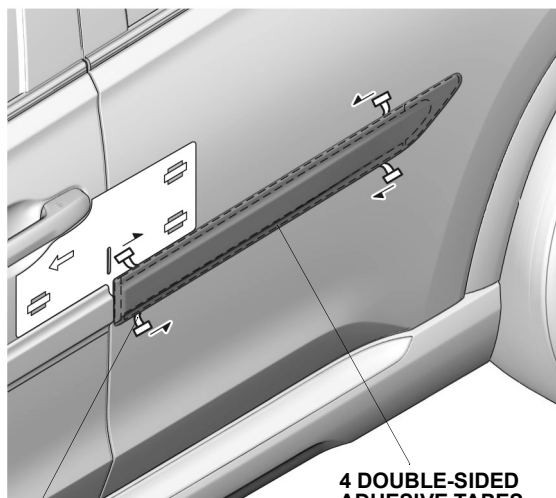


2 ADHESIVE BACKINGS
(Remove.)




QM51008AB

15. Secure the left rear molding.

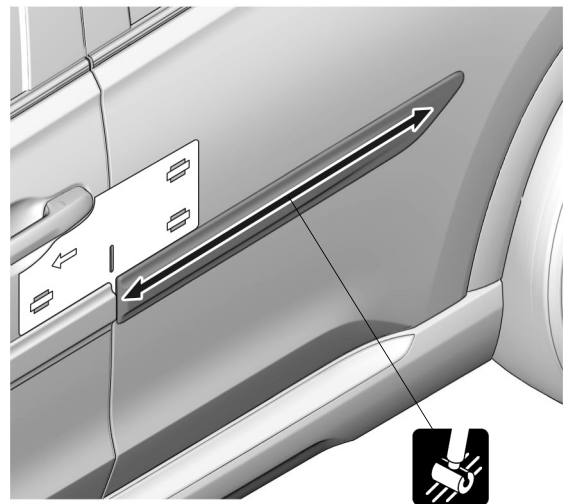

QM51009AB

16. Remove the template.
17. Flip the template, and repeat the same procedures on the other side.

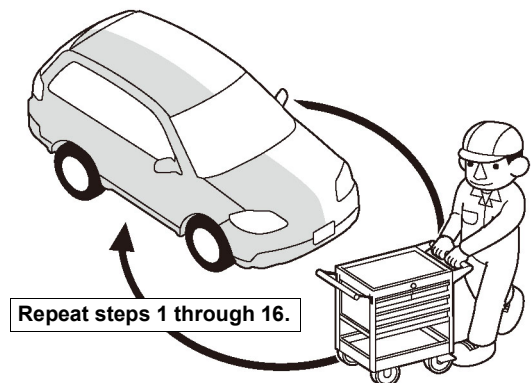

Q9D1012AE

18. Check that all parts are installed properly.