

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

SEPARATION BARRIER

Application

2023 PILOT
MODEL SERIES


Publications No.

VERSION 1

Issue Date

NOV 2022

GENERAL VIEW

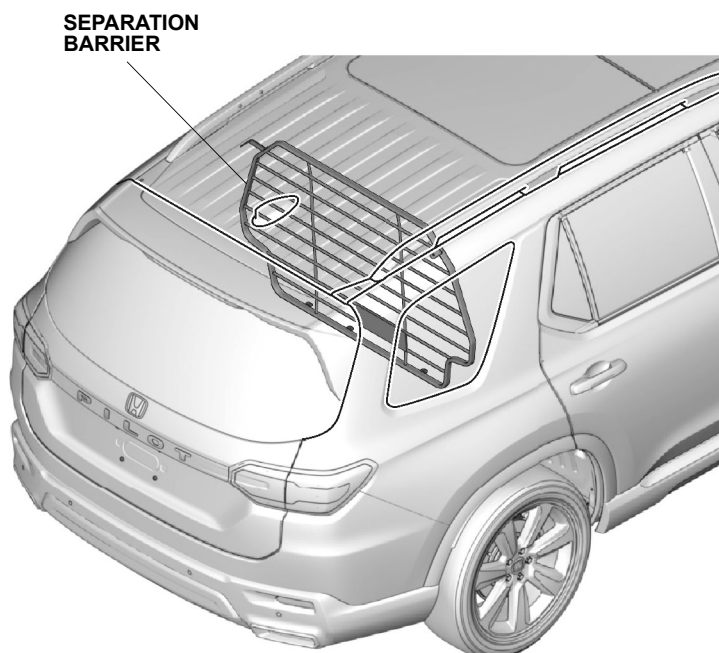

QM42601AA

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.

Germain Honda of College Hills




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

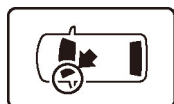

The location on the vehicle.

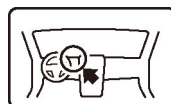

The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory









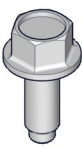




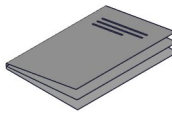
- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.

Germain Honda of College Hills

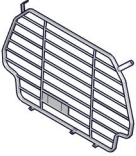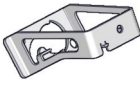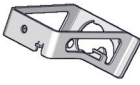- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.

PARTS LIST

Separation Barrier Kit (P/N 08U35-T90-100A)

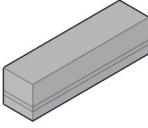Separation barrier 	Left upper bracket (identification mark: L) 	Right upper bracket (identification mark: R) 	Lower brackets (3) 
Handles A (2) 	Handles B (6) 	Left trim (identification mark: L) 	Right trim (identification mark: R) 
Flange bolts (2) 	Bolts (2) 	Collars (2) 	Felt seals (2) 
Pins (4) 	Accessory User's Information Manual 		

REQUIRED TOOLS AND SUPPLIES

Germain Honda of College Hills

- Ratchet
- Extension

- Torque wrench
- Shop towel

- 8 mm Socket
- Isopropyl alcohol



The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)



INSTALLATION

1. Fold down the third row seats.
2. Remove the left headliner cap.

Germain Honda of College Hills

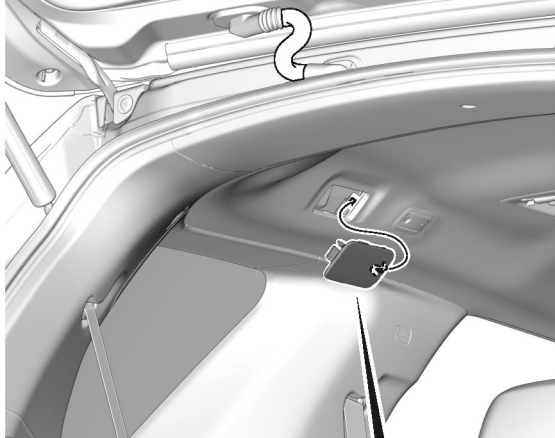

3. Attach the felt seal.

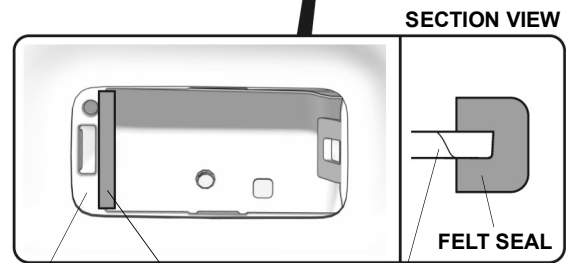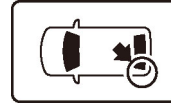

HEADLINER FELT SEAL HEADLINER QM42603BA

4. Pre-install the flange bolt into the left upper bracket to prevent it from falling when installing the left upper bracket.


⚠ WARNING

- Items dropped in the headliner can become projectiles when the side curtain airbag deploys, causing serious injury or death.
- Take steps to avoid dropping items, such as the flange bolt, into the headliner and if such items are dropped immediately retrieve them.

NOTE

Make sure to check the identification mark before installation.

Germain Honda of College Hills

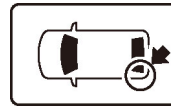

LEFT UPPER BRACKET
(identification mark: L)

**8 mm
SOCKET**

EXTENSION

FELT


FLANGE BOLT
(Pre-install.)

FLANGE BOLT



9 lb-ft
(12 N·m)

RATCHET

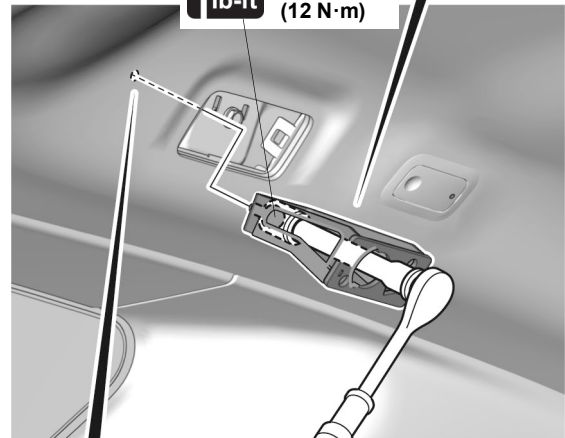

Germain Honda of College Hills

5. Install the left upper bracket.


NOTE

Make sure to install the left upper bracket in the correct orientation.


6. Install the left trim.

NOTE

Make sure to check the identification mark before installation.

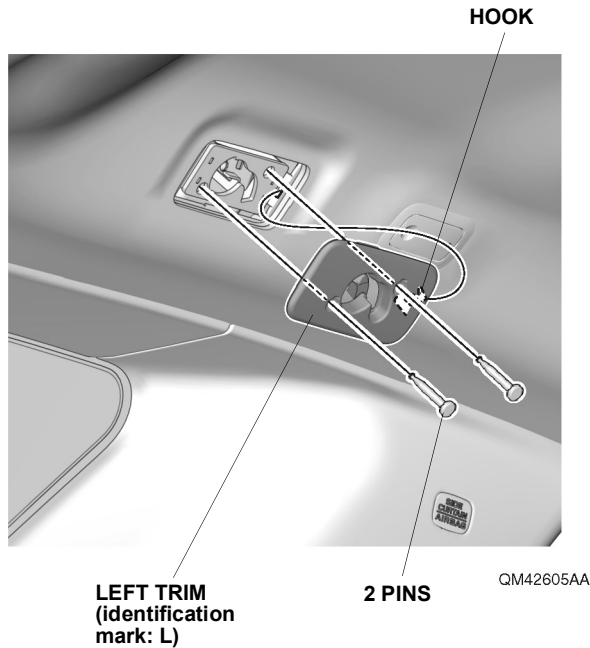


7. Repeat the same procedures on the other side.

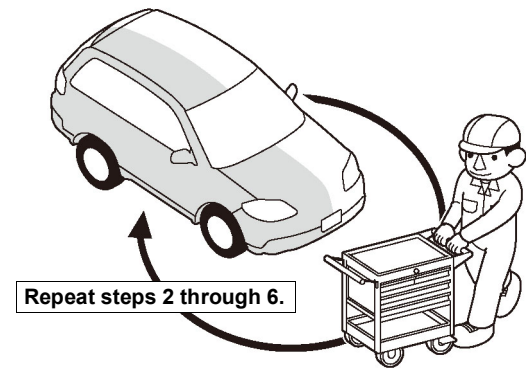

Q9D1014AM

8. Loosely install the handles A and collars.



Germain Honda of College Hills

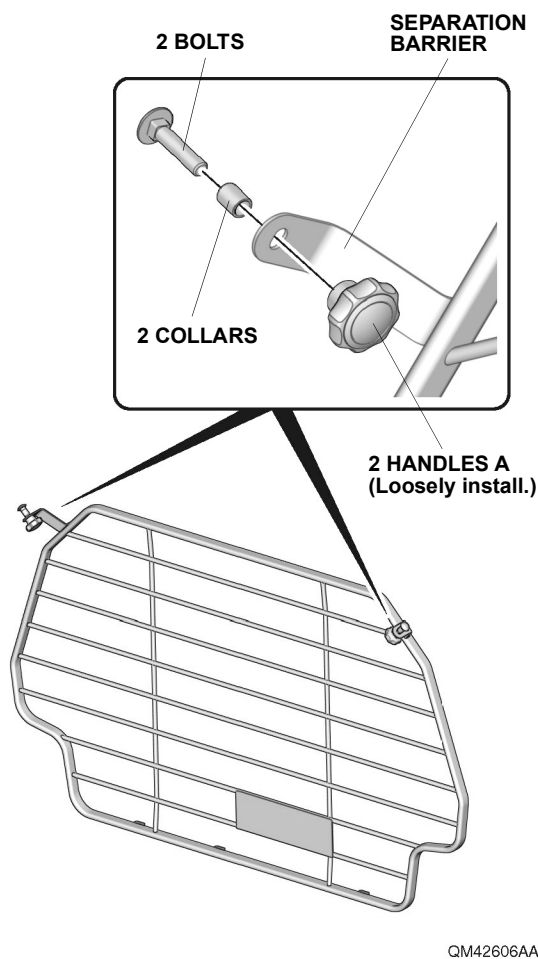

9. Install the separation barrier.

NOTICE

- Be careful not to scratch the interior.
- Make sure to install the separation barrier in the correct orientation.

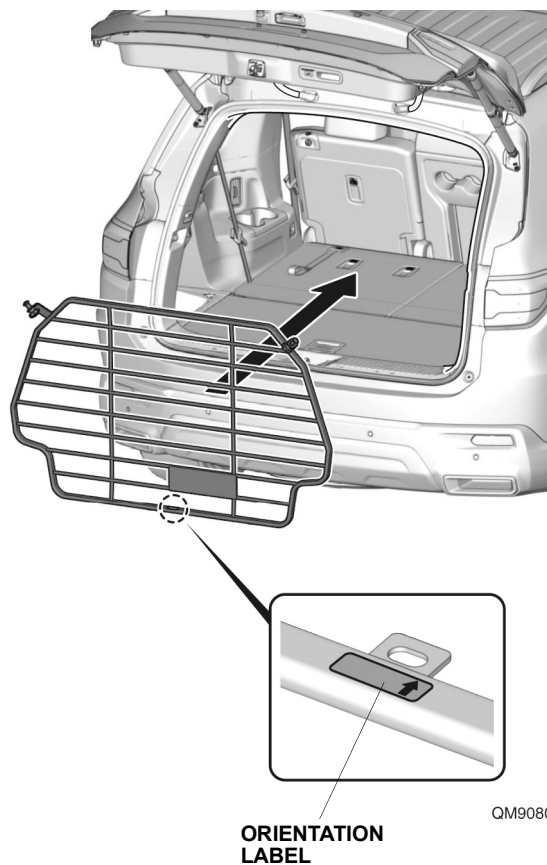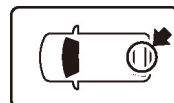


10. Install the separation barrier.

NOTICE

- Be careful not to scratch the interior.
- Ensure that the hardware is set all the way forward in the headliner mounting feature.

Germain Honda of College Hills

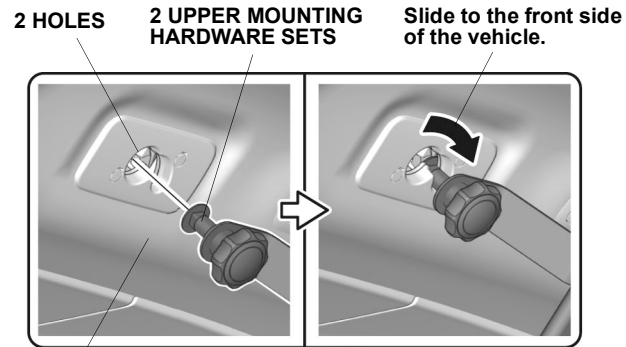


HEADLINER



QM42607BA


11. Install the lower brackets.

6 HANDLES B

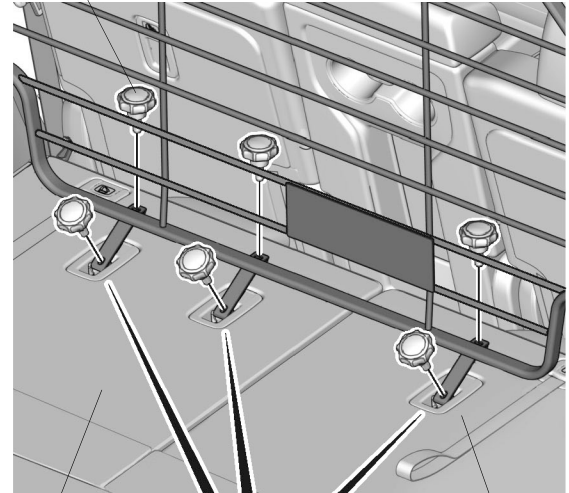

LEFT THIRD ROW SEAT-BACK

RIGHT THIRD ROW SEAT-BACK

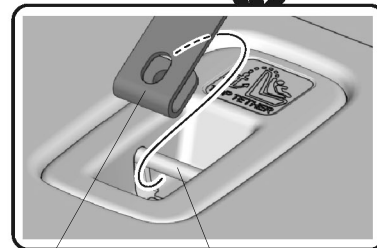


3 LOWER BRACKETS

3 TETHER ANCHORS

QM42608AA

12. Secure the separation barrier.

Germain Honda of College Hills

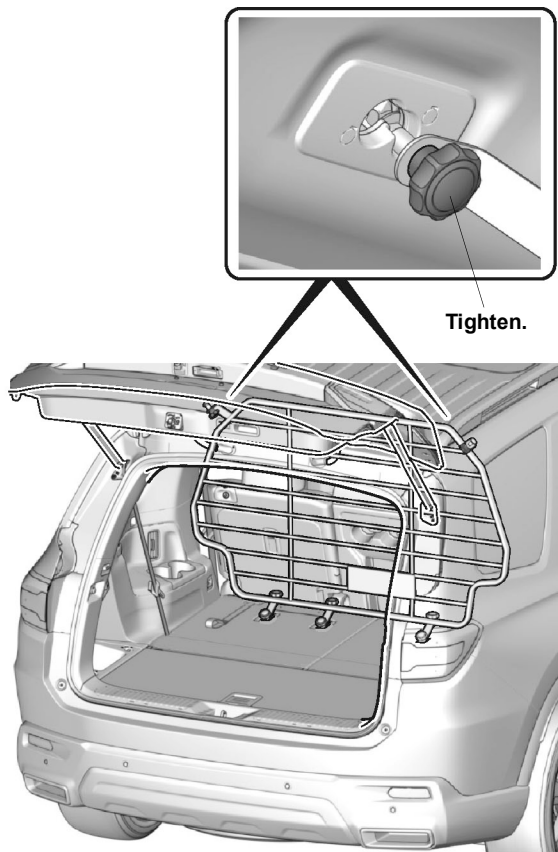

Tighten.

QM42609AA

13. Check that all parts are installed properly.
14. Give the Accessory User's Information Manual to the customer.