

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
SPLASH GUARDS

Application
**2023 PILOT
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
NOV 2022

GENERAL VIEW

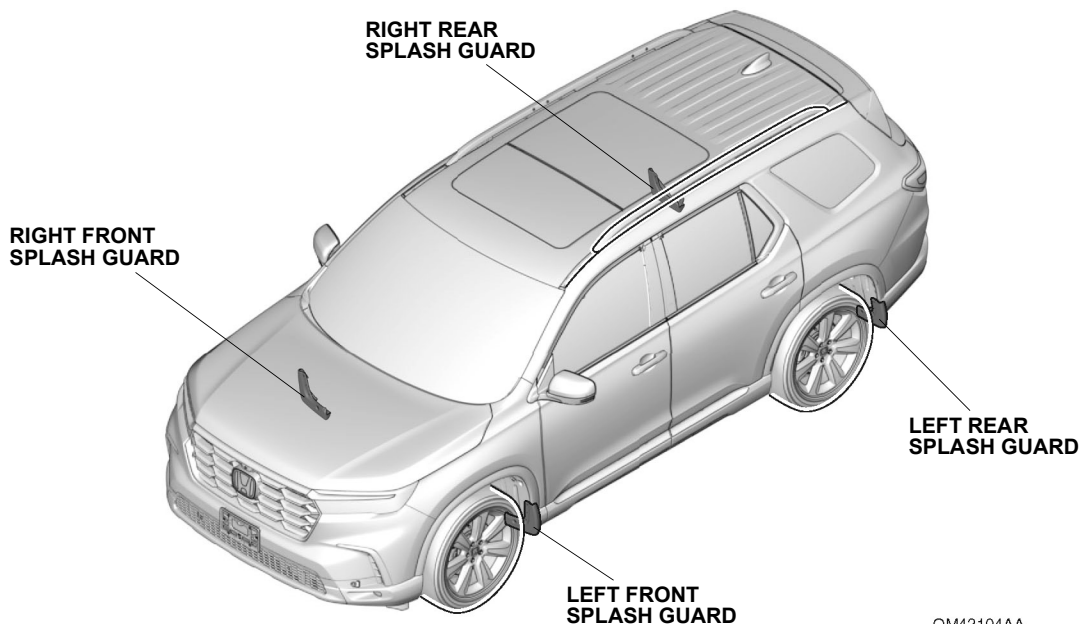

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

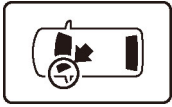

The location on the vehicle.

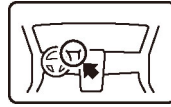

The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.






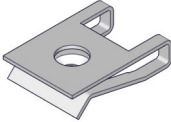

Safety: Accessory

Always use the parts and tools specified in the installation instructions.

Germain Honda of College Hills

PARTS LIST

Splash Guards Kit (P/N 08P00-T90-100)

Left front splash guard	Right front splash guard	Left rear splash guard	Right rear splash guard
			
Self-tapping screws (18)	Spring nuts A (4)	Spring nuts B (2)	
			


REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- Stubby Phillips screwdriver
- Pushpin
- Utility knife


Germain Honda of College Hills

INSTALLATION

1. Turn the steering wheel fully counterclockwise.




● : 3 MARKS

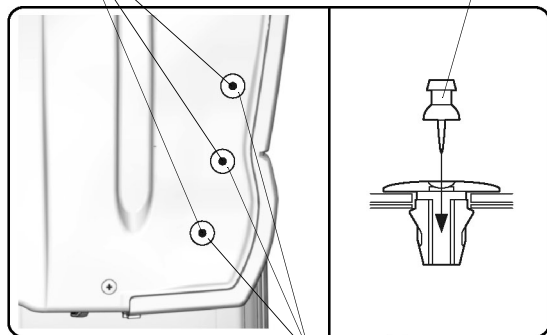

PUSHPIN




3 CLIPS

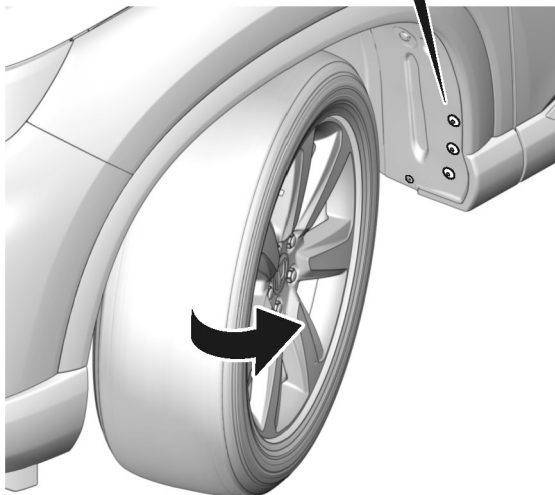

QM42105AA

2. Pierce the clips.

3. Remove the self-tapping screw.

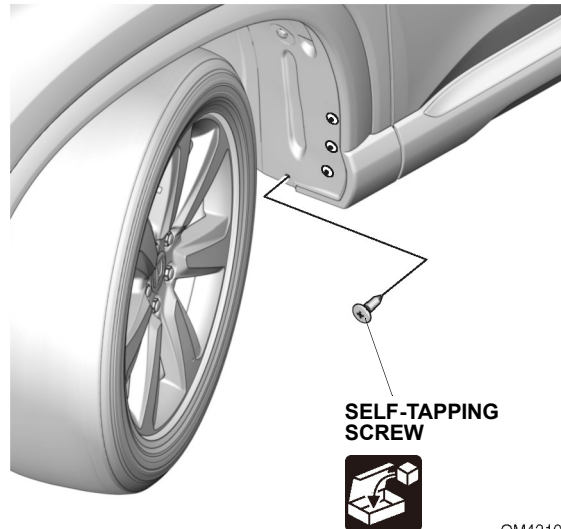

SELF-TAPPING SCREW


QM42106AA

4. Install the left front splash guard.

NOTE

- Install in the order shown.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

LEFT FRONT INNER FENDER

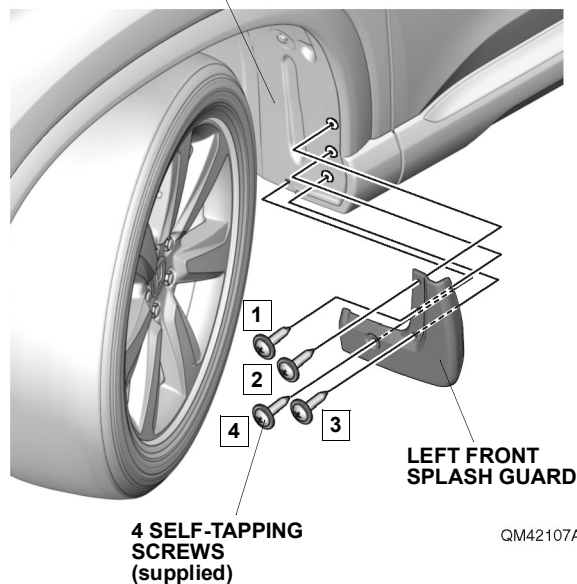


4 SELF-TAPPING SCREWS (supplied)

QM42107AA



Germain Honda of College Hills

5. Turn the steering wheel fully clockwise, and repeat the same procedures on the other side.

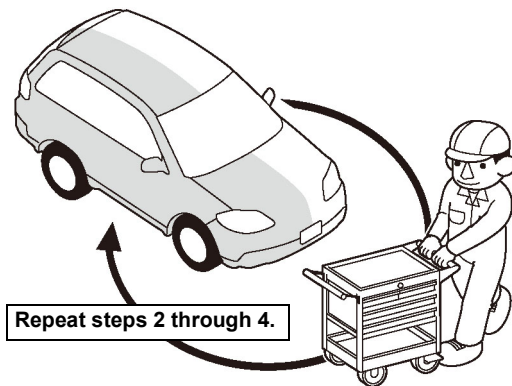

Q9D1012AE

6. Remove the self-tapping screws.

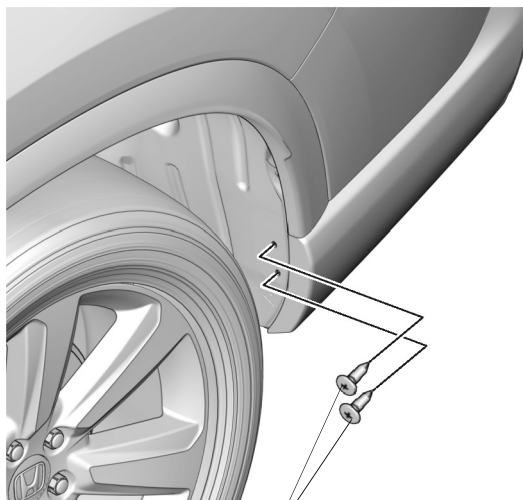


2 SELF-TAPPING
SCREWS





QM42201AA

7. Pierce the left rear inner fender.

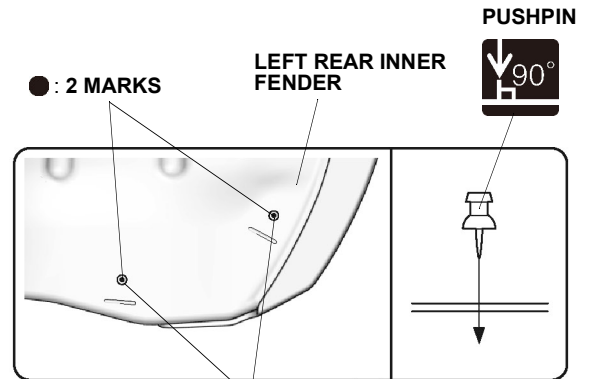

2 DIMPLES

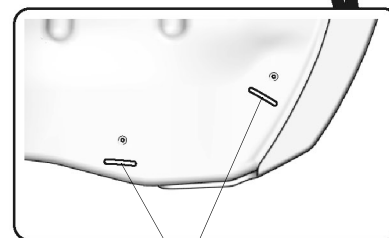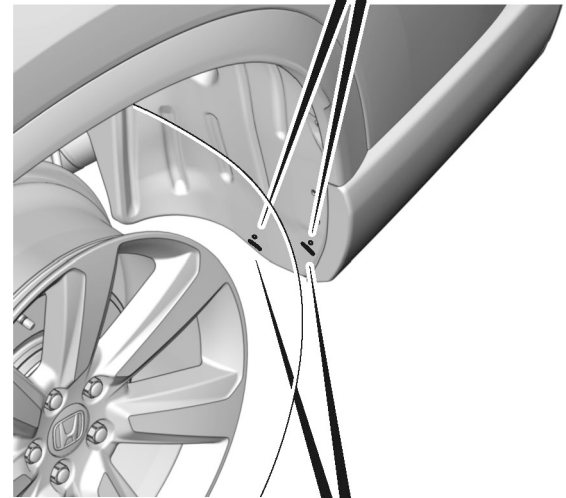

2 SLITS
(Cut.)

QM42202AA


8. Cut the left rear inner fender.

Germain Honda of College Hills

9. Install the spring nuts A.

NOTE

Make sure to install the spring nut in the correct orientation and with the large hole facing out.

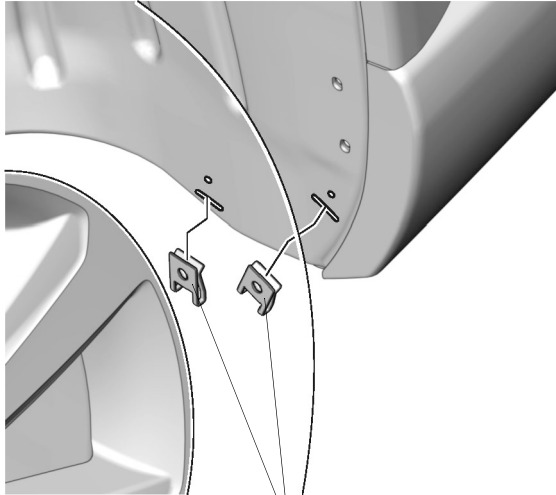


2 SPRING NUTS A

QM42203AA

10. Install the spring nut B.

NOTE

Make sure to install the spring nut in the correct orientation and with the large hole facing out.

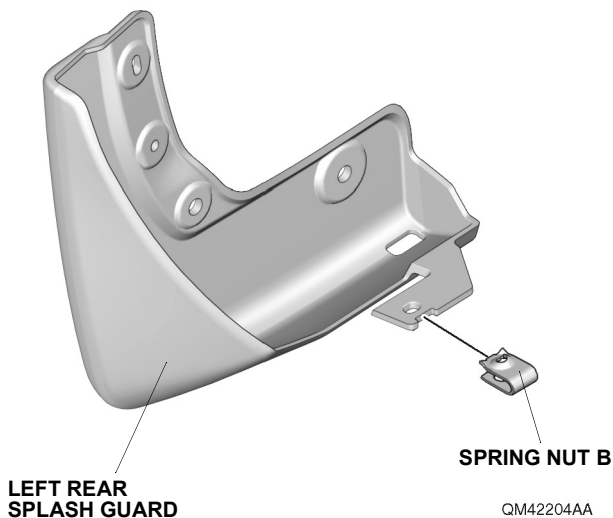

LEFT REAR
SPLASH GUARD


SPRING NUT B

QM42204AA

11. Install the left rear splash guard.


NOTE

- Install in the order shown.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

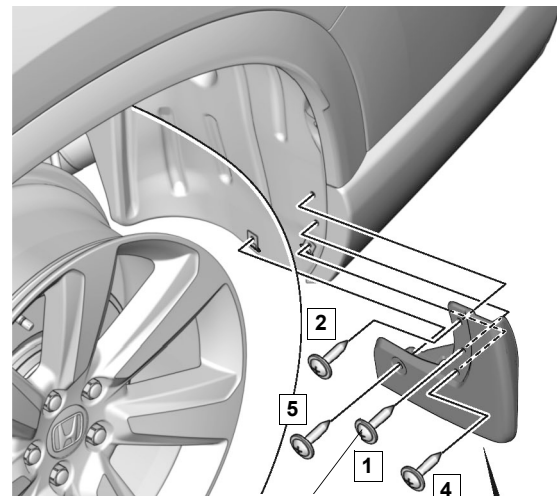

4 SELF-TAPPING
SCREWS
(supplied)

REAR
BUMPER

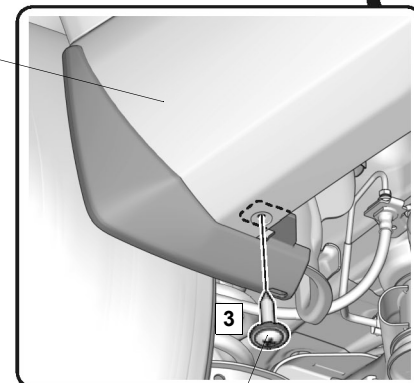


SELF-TAPPING
SCREW
(supplied)

QM42205AA

Germain Honda of College Hills

12. Repeat the same procedures on the other side.

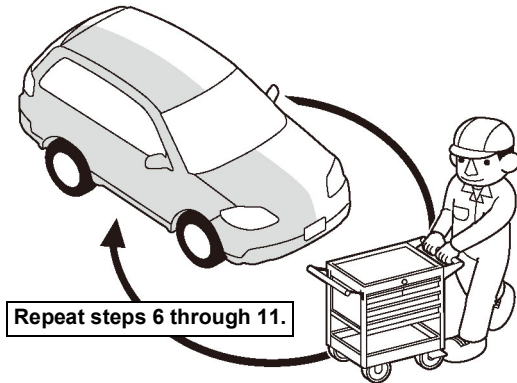

Q9D1012AE

13. Check that all parts are installed properly.