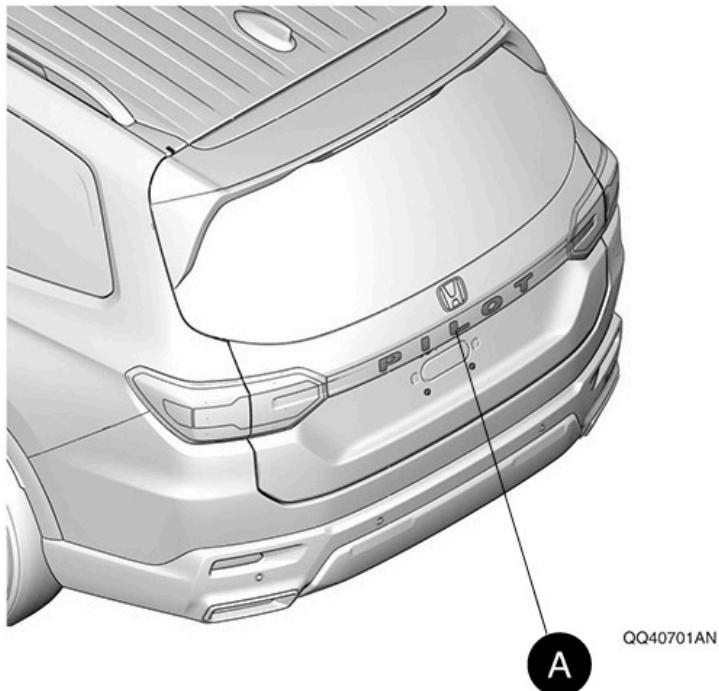


REAR BLACK EMBLEM

2026 PILOT  
MODEL SERIESPublications No.  
VERSION 1

## GENERAL VIEW

**A** PILOT EMBLEM

## FOR YOUR SAFETY (Read carefully.)

### ■ Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.





Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

## Safety: General


- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory


- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST

### Rear Black Emblem Kit (P/N 08F20-T90-100D)

Parts	Parts name	QTY	Remarks
	PILOT emblem	1	
	Alcohol wipe	1	

### Rear Black Emblem Kit (P/N 08F20-T90-P00D)

Parts	Parts name	QTY	Remarks
	PILOT emblem	1	

## REQUIRED TOOLS AND SUPPLIES


- Masking tape
- Nylon string

The following tool is available through the Honda Tool and Equipment Program:  
Rubber Roller (T/N MHLE54D)

## INSTALLATION

### Installing the PILOT Emblem



- 1 Remove the guide form.

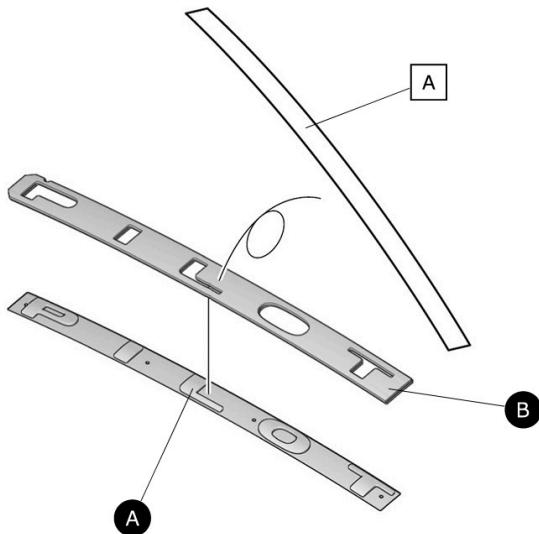

A	NEW PILOT EMBLEM
A	POSITION FILM (Remove.)
B	GUIDE FORM

QQ40702AN


- 2 Install the guide form.

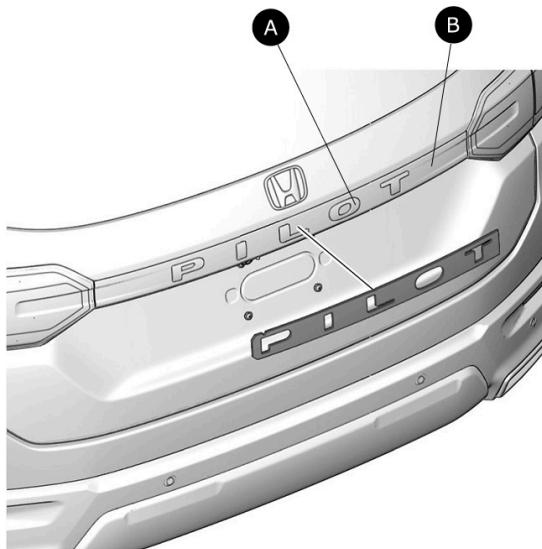

A	VEHICLE PILOT EMBLEM
B	REAR LICENSE TRIM

QQ40703AN


**3** Attach masking tape.

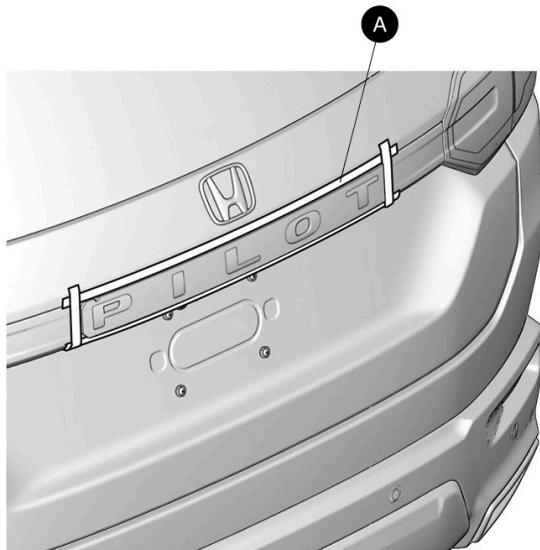

**A** MASKING TAPE

QQ40704AN

**4** Remove the guide form.

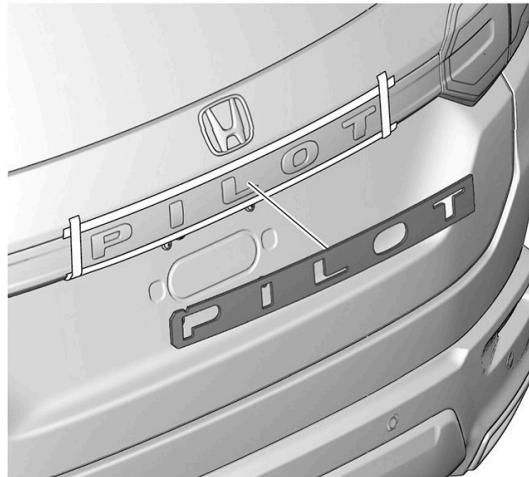

QQ40705AN


## 5 Remove the vehicle PILOT emblem.

### NOTICE

Do not damage the rear license trim when removing the vehicle PILOT emblem with the nylon string.

### NOTE

Make sure to thoroughly remove the adhesive tapes from the rear license trim.

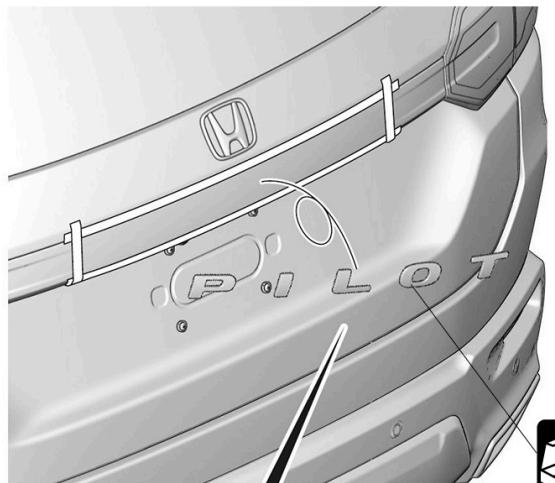


**A** NYLON STRING MOVEMENT



QQ40706AN

## 6 Install the guide form.

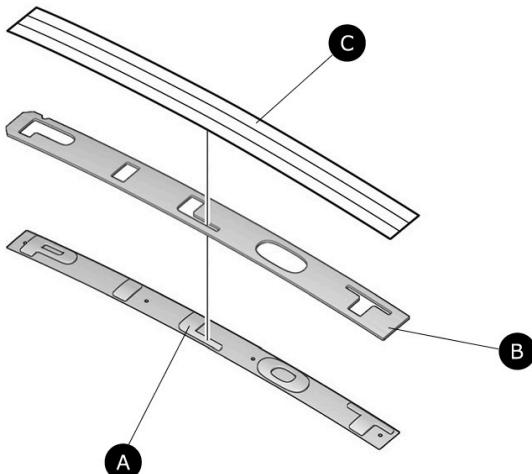

A	NEW PILOT EMBLEM
B	GUIDE FORM
C	MASKING TAPE


QQ40707AN

## 7 Attach masking tape.

## 8 Clean the attaching area.

 NOTE

Allow to dry thoroughly.

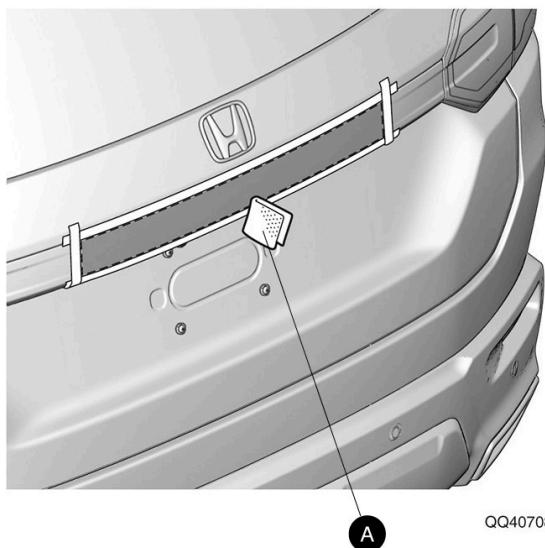


A	ALCOHOL WIPE
---	--------------

9

Attach the new PILOT emblem.

 **NOTE**

Check the position of double-sided adhesive tapes and make sure to press firmly.

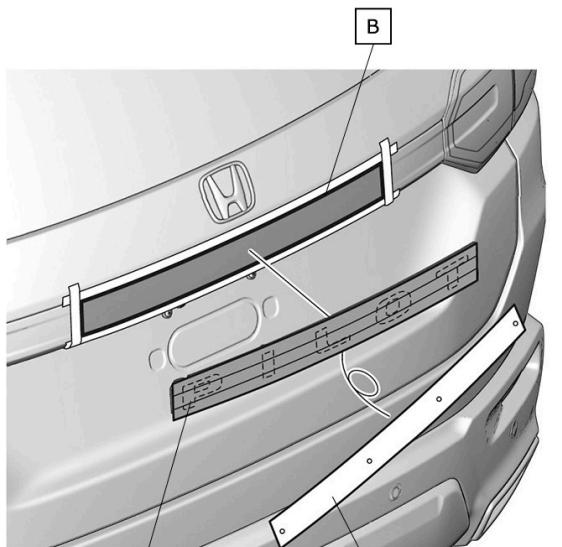

QQ40709AN




	ADHESIVE BACKING (Remove.)
	Line up.
	DOUBLE-SIDED ADHESIVE TAPE(5)

**10** Secure the new PILOT emblem.



QQ40710AN

**11** Remove the guide form.

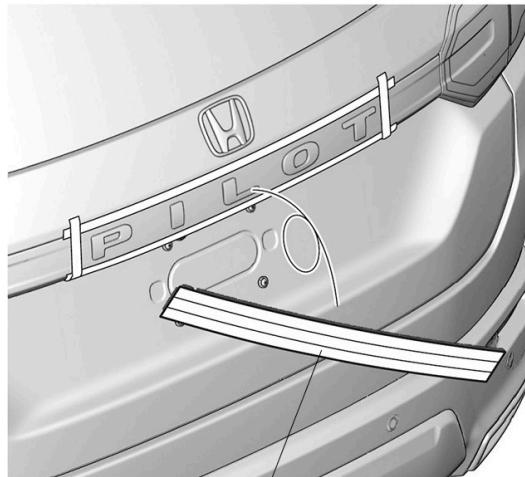

QQ40711AN



**12** Remove the masking tape.

**13** Check that all parts are installed properly.