### HONDA

### **INSTALLATION INSTRUCTIONS**


NOV. 2025

BEVERAGE HOLDER & CONSOLE ILLUMINATIONS

2026 Prelude MODEL SERIES

Publications No. VERSION 1

### **GENERAL VIEW**

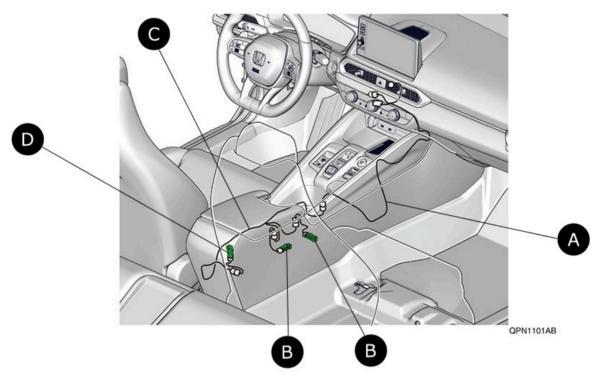

- A HARNESS A
- B LIGHT A
- A HARNESS B
- LIGHT B

### FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

#### **▲** WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### **CAUTION**

You can be hurt if you do not follow the instructions.

#### MOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### ■ NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

### Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)

	·		
	Wear eye protection.	Man	Wear heavy gloves.
<b>ķ</b> ─¾	Work by two or more people.		Place the part on a blanket.
. All	Mark with felt-tip pen.	<b>1</b>	Mark with pushpin. (Pierce through.)
Ţ	Mark with center punch.	+	Remove any burrs.
ŢĒ	Use touch-up paint and allow to dry.	Z	Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)	77.0	Apply firm pressure while rolling, especially at the ends, to set the adhesive.
4>	Press firmly.	lb-ft	Tighten to the specified torque.
<b>4</b> 90°	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

<b>A B G</b>	Name of part or location, etc.
A B C	Action or work instruction
123	Order of work
00 <b>0</b>	Position of clip
	Position of retaining tab
(x 2) (x 3) (x 4)	Quantity

### Wire Harness Routing Precaution

Do not secure the accessory harness to the SRS harness. (except for instruction cases.)	Push the connectors and terminals together until they lock.
Do not pull the harness to unplug the connectors.	Install removed connectors in their original location.
Do not pull the harness.	Secure the accessory harness as shown.
Do not pinch the harness.	Cut off the excess wire tie.

### Safety: General

#### **CAUTION**

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

#### MOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.

#### ■ NOTE

The illustrations may differ slightly from the actual accessory.

### ■ Safety: Electric Parts

#### MOTICE

Always disconnect the negative cable from the battery before beginning work.

### Safety: Accessory

#### MOTICE

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- · Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

### **PARTS LIST**

### **■** Beverage Holder & Console Illuminations Kit (P/N 08E16-36W-100)

Parts	Parts name	QTY	Remarks
	Light A (identification mark: W-EXH)	2	
	Light B (identification mark: W-H)	1	
	Harness A	1	
	Harness B	1	
	Mat	2	
	Trim A	2	
	Trim B	1	
	Self-tapping screw	3	
	Fuse label	1	
	Aluminum tape	3	
	Wire tie	14	

Parts	Parts name	QTY	Remarks
S AN	Wire tie with clip A	1	
	Wire tie with clip B	1	
	Primer	1	

### **REQUIRED TOOLS AND SUPPLIES**

- Phillips screwdriver
- 10 mm Open end wrench
- 10 mm Socket
- Ratchet
- · Shop towel
- · Isopropyl alcohol
- Scissors
- Ruler
- Diagonal cutters
- Pushpin
- Drill
- · 3 mm, 6 mm, and 8 mm Drill bits
- File
- · Masking tape
- · Eye protection (face shield, safety goggles, etc.)

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)


### **INSTALLATION**


### Removing the Vehicle Parts

- Disconnecting the Battery Cable
  - Disconnect the negative cable from the battery.

### NOTE

Follow the "12 Volt Battery Terminal Disconnection and Reconnection" described in the service information since the work differs depending on the vehicle.







Α	Lower.
В	Record.
С	Disconnect.

#### Center Trim

2 Attach masking tape to protect the vehicle.

#### **◆** NOTE


To prevent damage, do not remove the masking tape until after the parts are installed.






QPN1102AB

Remove the center trim.

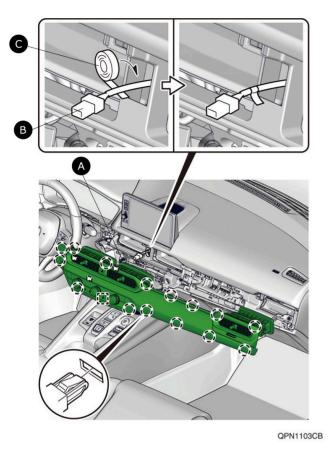

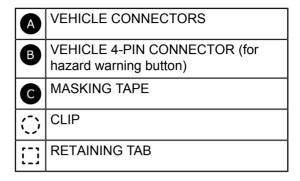

4

Attach masking tape to prevent incorrect connection.


### Console Panel


- **5** Open the armrest console.
- 6 Remove the console panel.

#### **S** NOTE

Record the vehicle connector colors and positions before disconnecting.



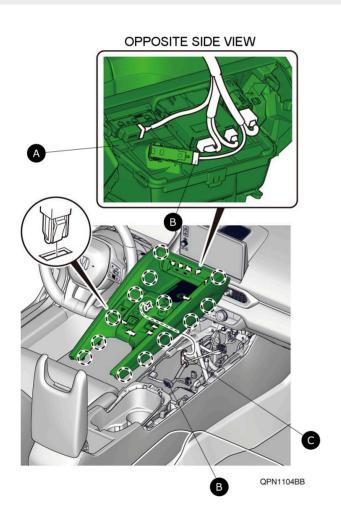

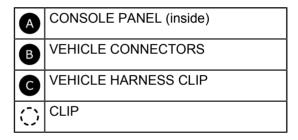


#### Center Lower Cover

7

Remove the center lower cover.



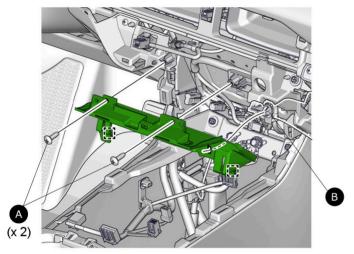

QPN1105AB


A	SELF-TAPPING SCREW
В	VEHICLE CLIP
	RETAINING TAB

#### Rear Center Console Panel

Close the armrest console.

Remove the rear center console panel.



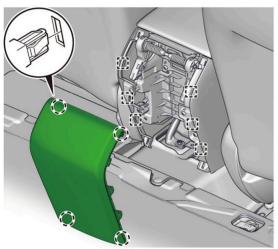

QPN1106AB


0	CLIP
	RETAINING TAB

### Beverage Holder

Open the armrest console.

Remove the beverage holder.



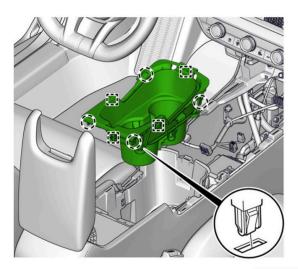


CLIP
RETAINING TAB


QPN1107AB

#### Center Console

12 Remove the center console.




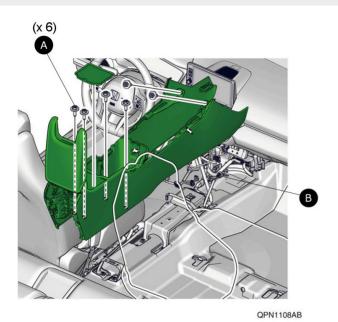



### ■ Drilling the Beverage Holder and Applying the Primer


13 Pierce the beverage holder.

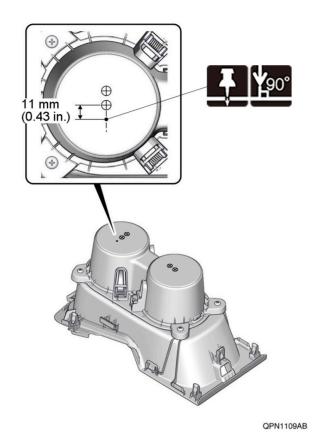


Pierce the beverage holder.

**S** NOTE


Make sure to locate the correct scribe marks.

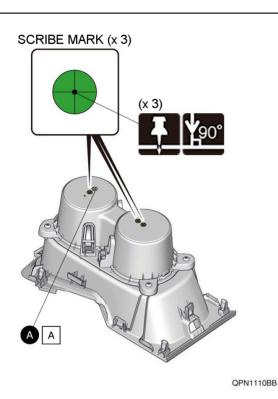




15 Drill the beverage holder.



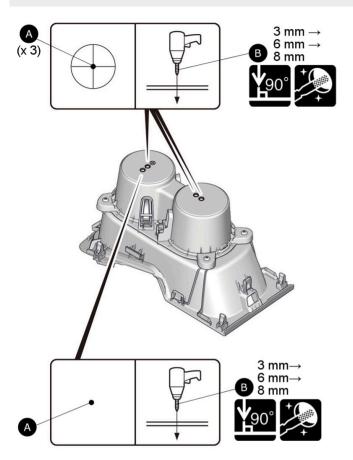




QPN1111AB

16 Secure the levers.




Secure the lever while pushing it so that it does not get in the way during subsequent work.

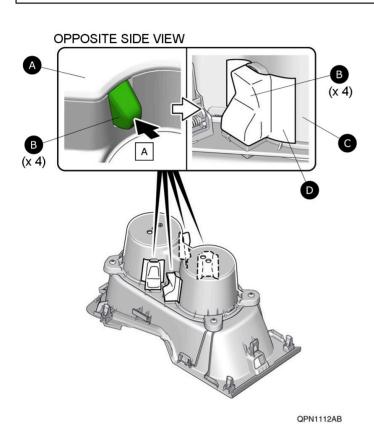


A	BEVERAGE HOLDER (outside)
В	LEVER
0	BEVERAGE HOLDER (inside)
D	MASKING TAPE
Α	Push.


1 7 Attach masking tape to protect the vehicle.

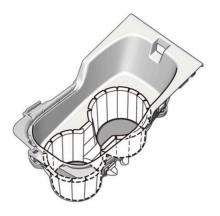

QPN1113AB

18 Clean the attaching areas.

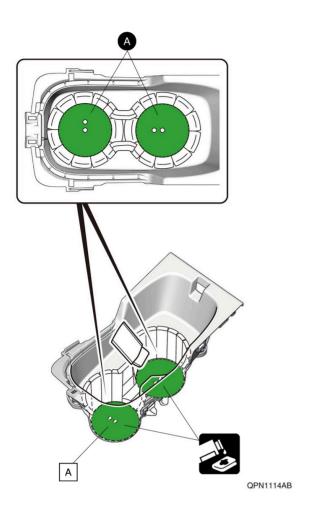




19 Apply the primer.

#### **S** NOTE

- Apply the primer evenly.
- Be careful not to apply the primer anywhere except the indicated areas.
- · Do not apply additional primer.
- Attach the accessories within 24 hours after applying the primer.
- Do not use an expired primer.
- 20 Remove the masking tape attached in step 17.

### Routing the Harness A

21 Attach masking tape to prevent incorrect connection.

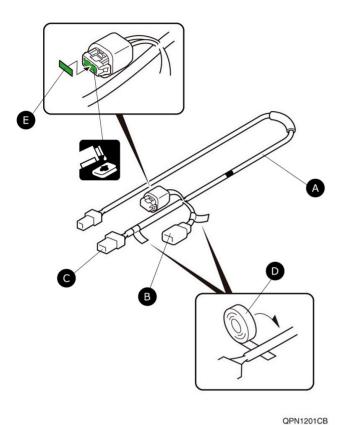


A	HARNESS A
B	4-PIN CONNECTOR-1
0	4-PIN CONNECTOR-2
D	MASKING TAPE
<b>3</b>	FUSE LABEL (2A OPTION)

22 Attach the fuse label.

23 Secure the harness A.




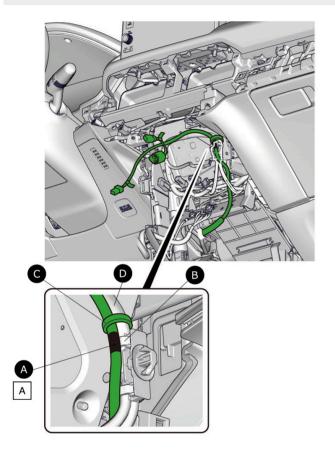

A	GREEN TAPE
В	VEHICLE CLIP
0	WIRE TIE
D	VEHICLE HARNESS
Α	Line up the vehicle clip.

QPN1202BB

Plug-in the vehicle connector, and route the harness A connector.

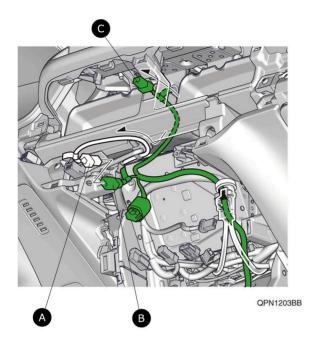


A VEHICLE 4-PIN CONNECTOR (with masking tape)

B HARNESS A 4-PIN CONNECTOR-1 (with masking tape)


C HARNESS A 4-PIN CONNECTOR-2 (with masking tape)

25 Secure the connectors, fuse case, and harness A.

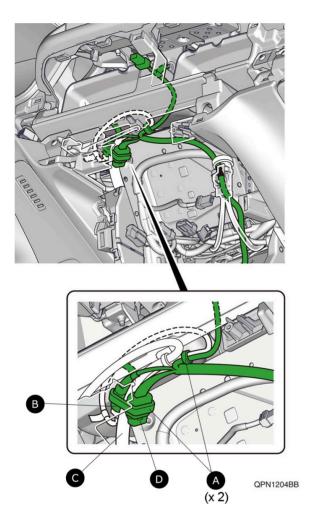

A	WIRE TIE
В	4-PIN CONNECTORS
0	VEHICLE HARNESS
D	FUSE CASE


### 26 Secure the harness A.

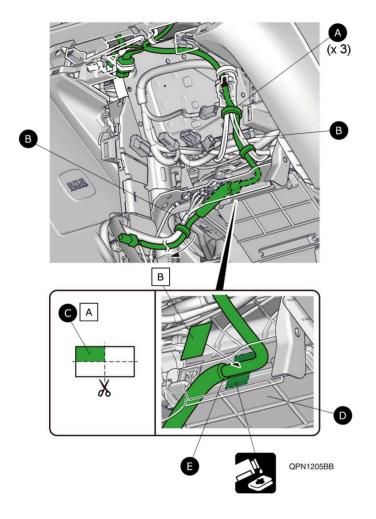

A	WIRE TIE
B	VEHICLE HARNESS
0	ALUMINUM TAPE
D	VEHICLE UNIT
<b>3</b>	EDGE OF THE URETHANE TAPE ON THE HARNESS A
Α	Cut in quarter.
В	Line up the edge of the urethane tape on the harness A.

27 Secure the harness A.



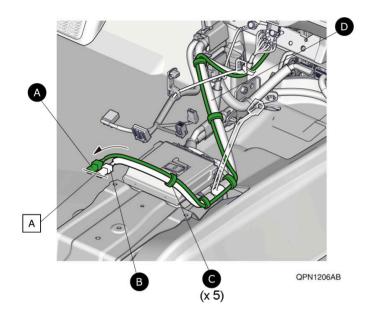


A	HARNESS A 2-PIN CONNECTOR
В	VEHICLE 2-PIN CONNECTOR
0	WIRE TIE
D	VEHICLE HARNESS
А	Line up the length.


### Installing the Lights and Routing the Harness B

**28** Loosely secure the trims A.

**★** NOTE

Make sure to secure the trims in the correct position and orientation.

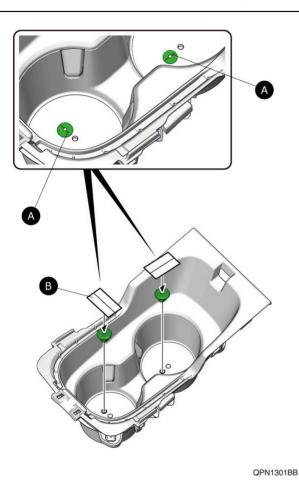






29 Install the lights A.



- Check the identification mark and the installation position of the lights.
- · Make sure to secure the lights in the correct orientation.

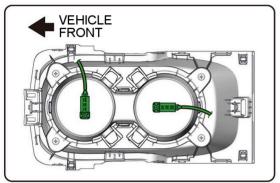



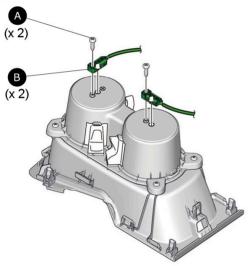


QPN1302BB

Remove the masking tape attached in step 28.

31 Install the mats.

#### **S** NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

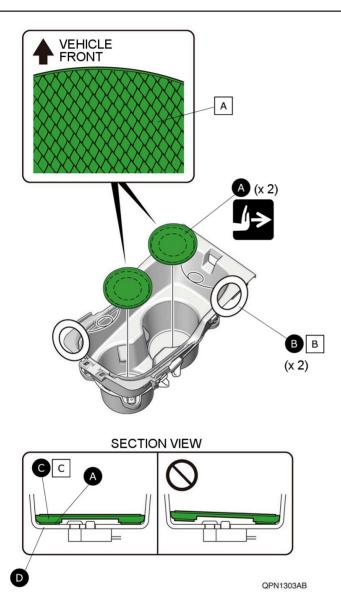

A DOUBLE-SIDED ADHESIVE TAPE

B ADHESIVE BACKING

MAT

D BEVERAGE HOLDER


A Line up the direction of the grain.

B Remove.

C Make sure that there is no gap.

**32** Remove the masking tape attached in step 16.


33 Secure the light A harnesses and connectors.

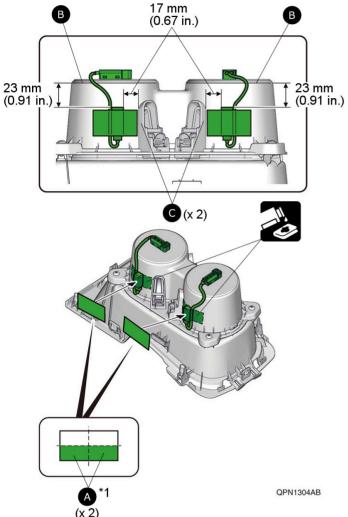


(x 2) \*1: Cut in step 26.

A	ALUMINUM TAPE
В	END OF THE CURVED SURFACE
0	RIB


Remove the left center console panel.

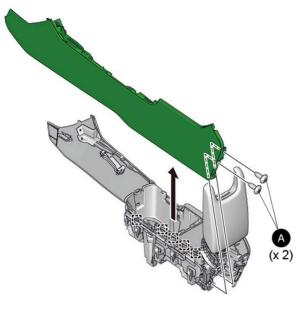



QPN1305AB


### 35 Pierce the center console.

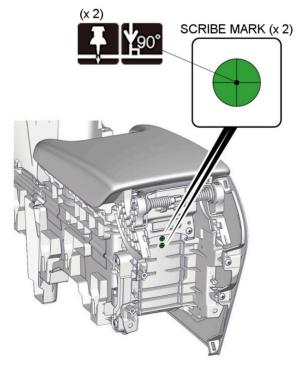


QPN1306BB

36 Drill the center console.



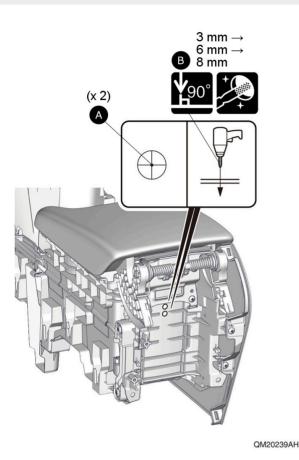




37 Install the light B and trim B.




Check the identification mark and the installation position of the light.

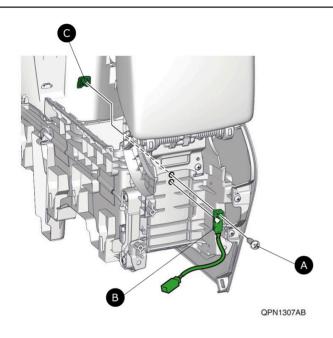

A	SELF-TAPPING SCREW
В	LIGHT B (identification mark: W-H)
0	TRIM B


38 Secure the harness B.

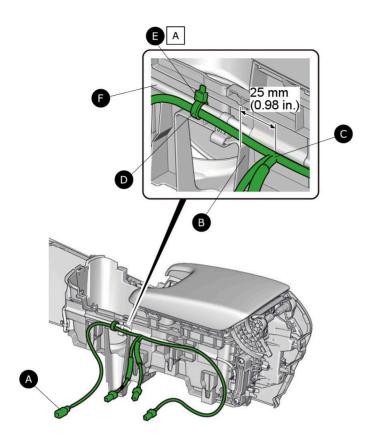


A	HARNESS B 2-PIN CONNECTOR (with urethane tape)
B	RIB
0	HARNESS B BRANCH SECTION
D	WIRE TIE
<b>3</b>	LOCK PORTION
<b>B</b>	VEHICLE HARNESS
Α	Turn upward.


QPN1308AB

39 Secure the harness B.

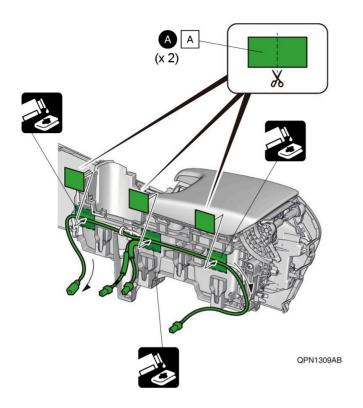




40 Secure the harness B and connector.

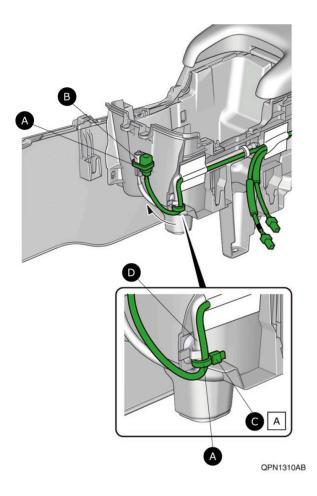


A	WIRE TIE
B	VEHICLE CONNECTOR
0	LOCK PORTION
O	VEHICLE HARNESS
Α	Turn rearward.

### Secure the harness B.

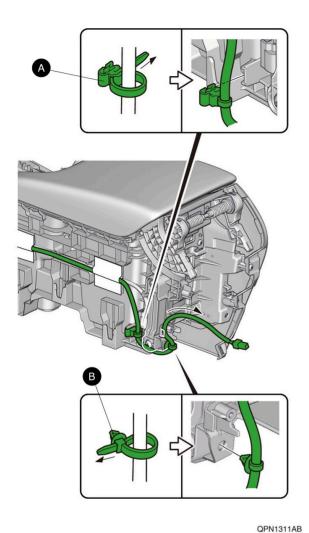




42 Secure the harness B.

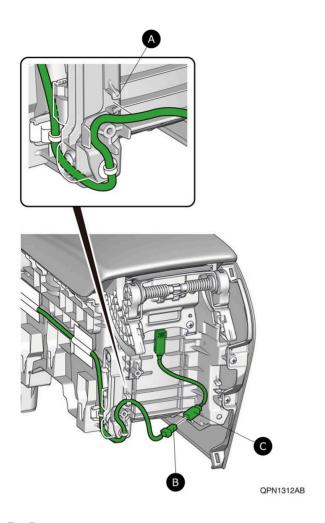


A	HARNESS HOLDER
В	HARNESS B 2-PIN CONNECTOR
0	LIGHT B 2-PIN CONNECTOR

44

Secure the harness B, light B harness, and connectors.

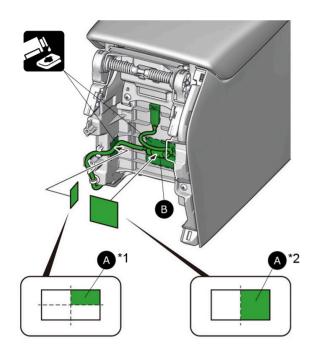



ALUMINUM TAPE

QPN1313AB


- \*1: Cut in step 26.
- \*2: Cut in step 39.

45

Install the left center console panel.

46 Plug-in the harness A connector.



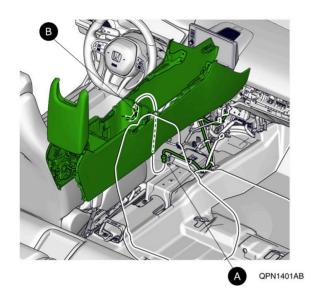

A HARNESS A 2-PIN CONNECTOR


B HARNESS B 2-PIN CONNECTOR

17 Install the center console.

48 Plug-in the harness B connectors.



Make sure to correctly position of the connectors.

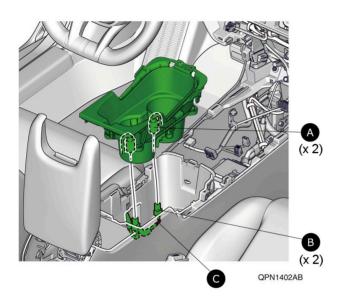

A LIGHT A 2-PIN CONNECTOR

B HARNESS B 2-PIN CONNECTOR


G GREEN TAPE

- Install the beverage holder.
- 50 Install the center lower cover.

Install the console panel.




Plug-in the vehicle connectors in the order shown, then plug-in the remaining vehicle connectors.

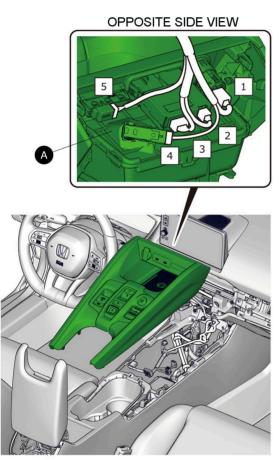



**52** Plug-in the harness A connector.



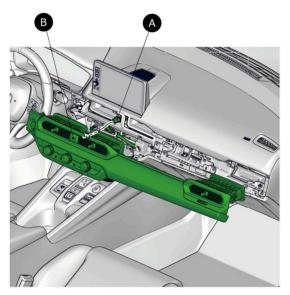

- A HARNESS A 4-PIN CONNECTOR-2 (with masking tape)
  - B HAZARD WARNING BUTTON

QPN1403BB

- Remove the masking tape from the harness A connectors and vehicle connector.
- 54 Install the center trim.

### ■ Check After Installation

Check that all parts are installed and properly routed.

#### **♦** NOTE


- · Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

### Installing the All Removed Parts

56 Install all removed parts.

### Operation Check

**57** Connect the negative cable to the battery.

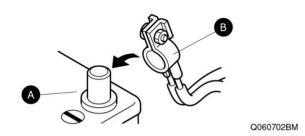


A	BATTERY
B	NEGATIVE CABLE

58 Check that the lights are turned while the position lights and the headlights are on.

### Vehicle Check

59 Check that the passenger airbag off indicator comes on when the power mode is set to ON.



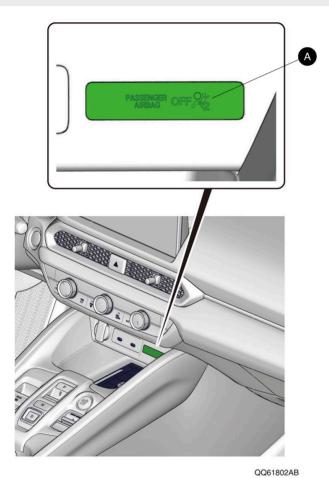



- Check that the hazard warning button and lights function properly.
- Make sure all accessories and systems operate properly.
- If necessary, restore the systems back to normal operation as described in the service information.
- Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.