




REAR FENDER PROTECTION FILMS	2026 Prelude MODEL SERIES	Publications No. VERSION 1
------------------------------	------------------------------	-------------------------------

GENERAL VIEW

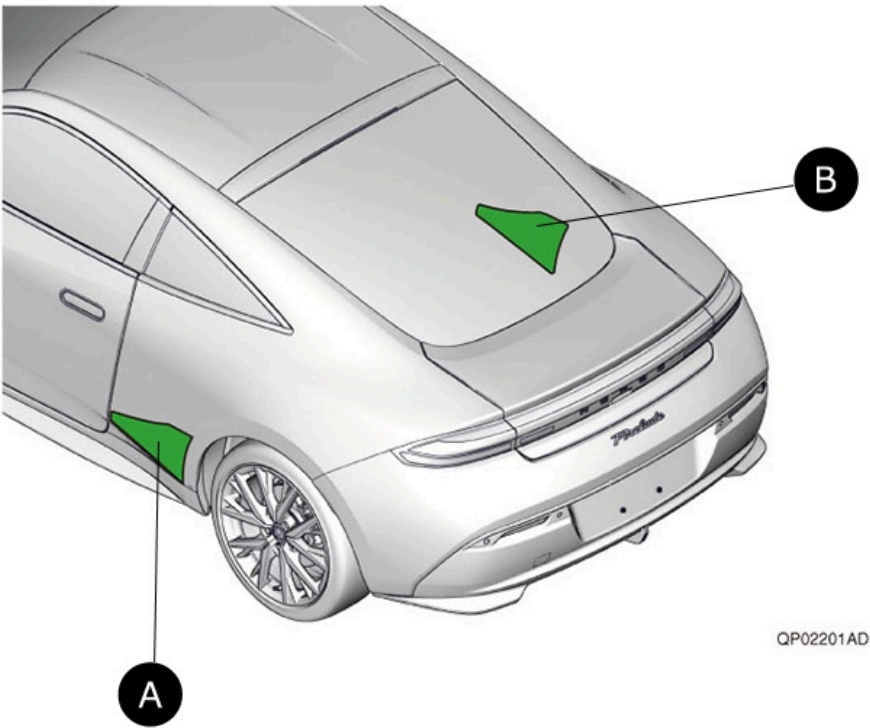

A	LEFT PROTECTION FILM
B	RIGHT PROTECTION FILM

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.





















Indicates a prohibited action.
















Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Work by two or more people.		Place the part on a blanket.
	Mark with felt-tip pen.		Mark with pushpin. (Pierce through.)
	Mark with center punch.		Remove any burrs.
	Use touch-up paint and allow to dry.		Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)		Apply firm pressure while rolling, especially at the ends, to set the adhesive.
	Press firmly.		Tighten to the specified torque.
	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

   ...	Name of part or location, etc.
   ...	Action or work instruction
   ...	Order of work
   ...	Position of clip
   ...	Position of retaining tab
(x 2) (x 3) (x 4) ...	Quantity

Safety: General

CAUTION

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

NOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.

NOTE

The illustrations may differ slightly from the actual accessory.

Safety: Accessory

CAUTION

Always wear gloves when working with 3M Protective tape application solution.

NOTICE

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Use the 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

■ Rear Fender Protection Films Kit (P/N 08P48-36W-100A)

Parts	Parts name	QTY	Remarks
	Left protection film	1	
	Right protection film	1	
	Alcohol wipe	2	
	Applicator	1	

REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Gloves
- 3M Protective tape application solution



INSTALLATION

■ Installing the Protection Films

1 Clean the attaching area.

NOTE

Allow to dry thoroughly.

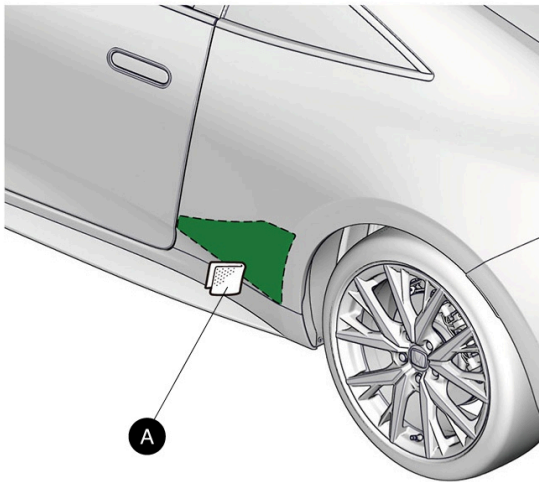


QP02202AD

A


ALCOHOL WIPE

2 Spray the left rear fender.

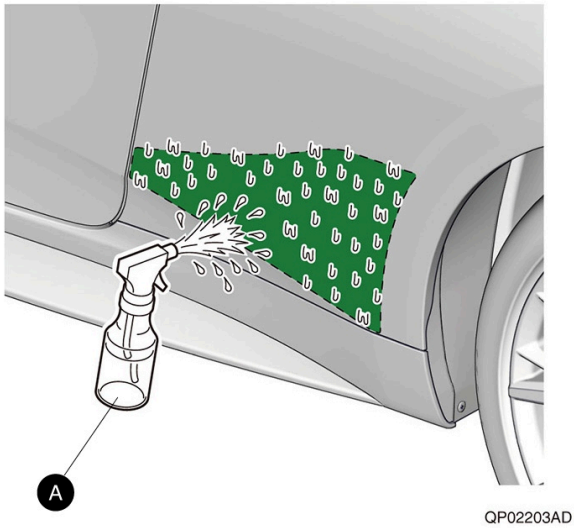

A	3M PROTECTIVE TAPE APPLICATION SOLUTION
---	---


3 Remove the adhesive backing.

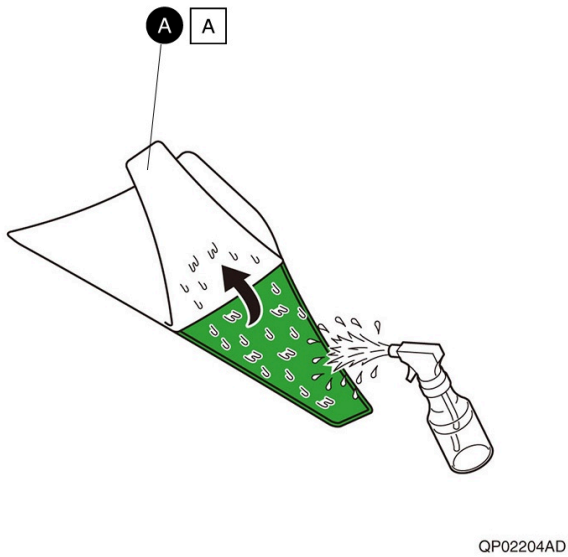

A	ADHESIVE BACKING
A	Remove.

4 Spray the left protection film.

5 Line up the left protection film.

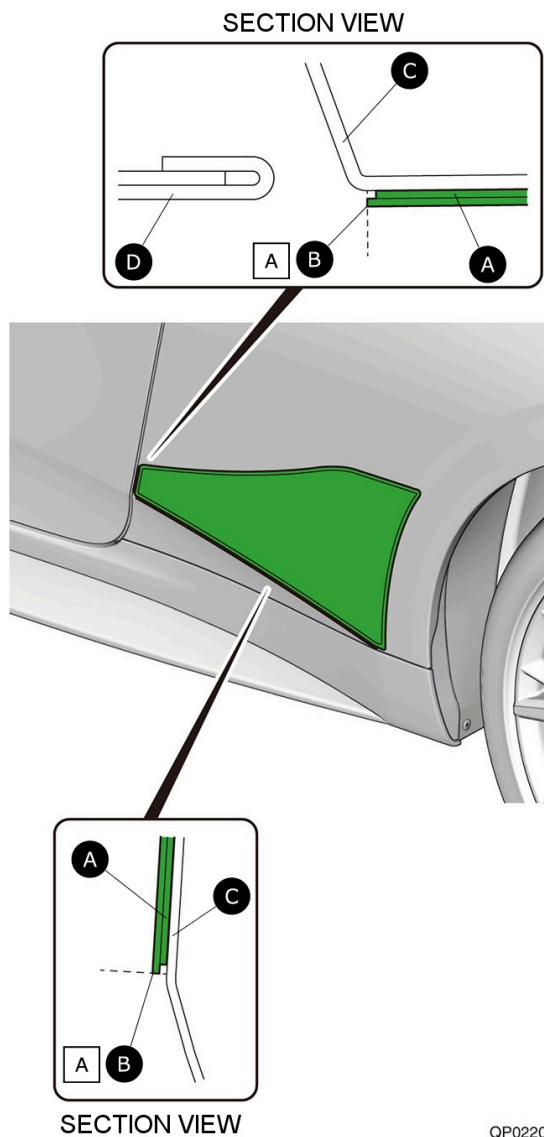


A	PROTECTION FILM
B	PROTECTIVE FILM
C	LEFT REAR FENDER
D	LEFT DOOR
A	Line up with the end of the curved surface.

6 Secure the left protection film.

NOTE

- Work in one direction only.
- Make sure that there are no air bubbles.

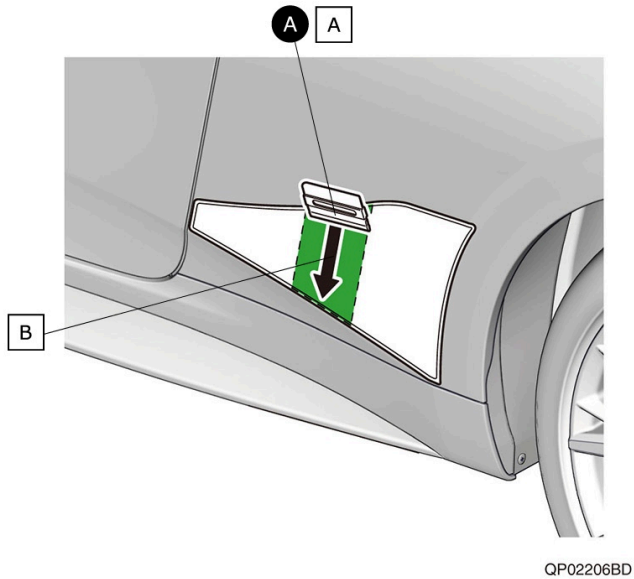


A	APPLICATOR
A	Use the felt side.
B	Work from the top to the bottom.

7 Secure the left protection film.


NOTE

- Work in one direction only.
- Make sure that there are no air bubbles.

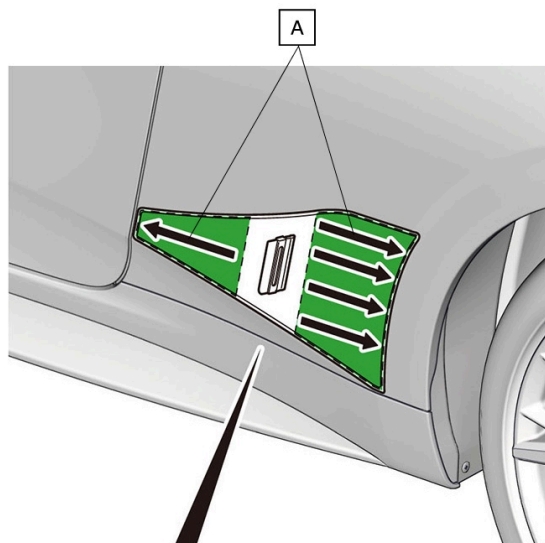


A

Work from the center to the outside.

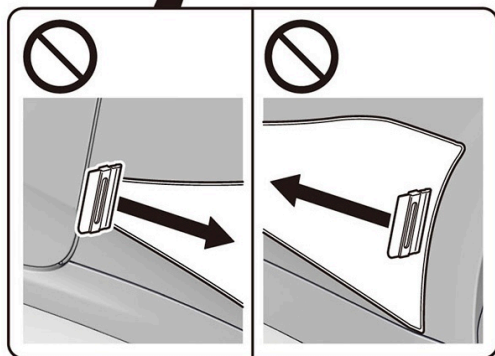


QP02207CD

8 Remove the protective film.

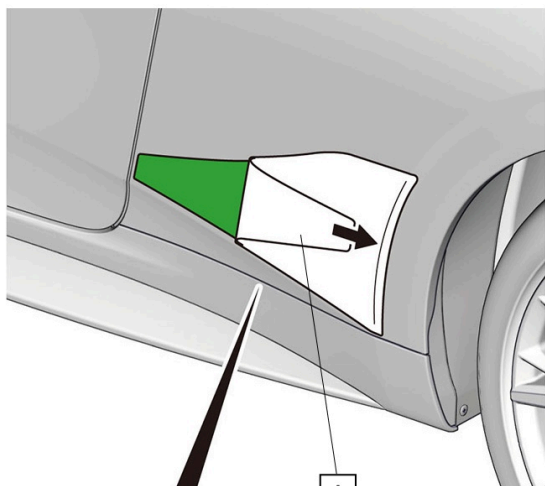

A

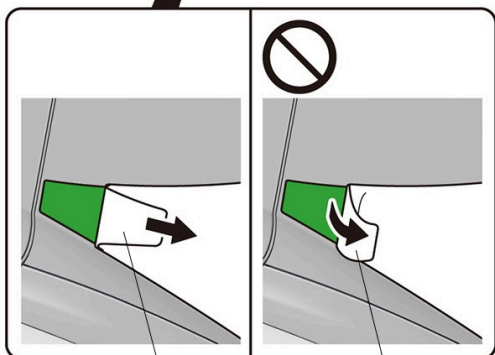

B

C


QP02301AD

A	Remove.
B	Peel along the left protection film.
C	Do not pull up.

- 9** Wipe off the 3M protective tape application solution.


 **NOTE**

Allow to dry thoroughly.

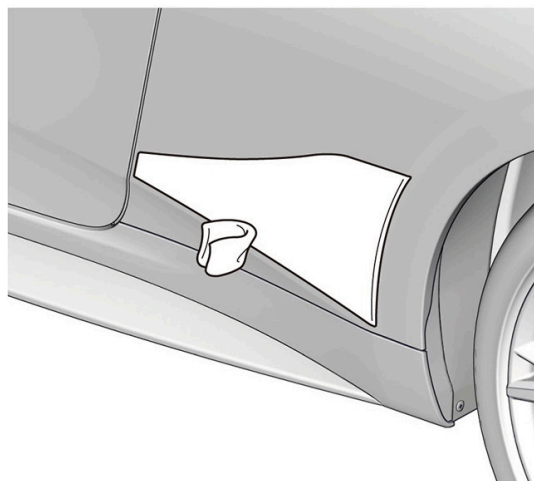

QP02302AD

- 10** Repeat steps 1 through 9 on the other side.

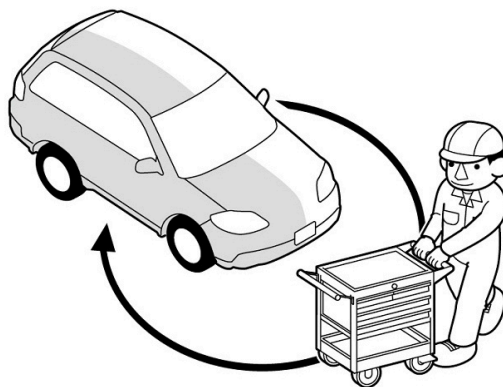

Q9D1014AM

- 11** Check that all parts are installed properly.