
### HONDA

### **INSTALLATION INSTRUCTIONS**

NOV. 2025

FRONT UNDER SPOILERS	2026 Prelude MODEL SERIES	Publications No. VERSION 1
----------------------	------------------------------	-------------------------------

### **GENERAL VIEW**

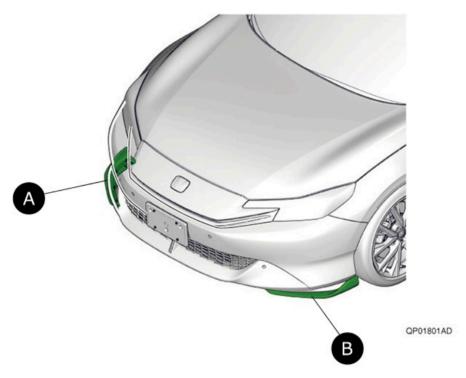

A	RIGHT SPOILER
В	LEFT SPOILER

### FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### **A** DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### **▲** WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### **A** CAUTION

You can be hurt if you do not follow the instructions.

#### MOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### ■ NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

### Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)

	Wear eye protection.		Wear heavy gloves.
<b>K</b> —X	Work by two or more people.		Place the part on a blanket.
, political de la constantia della constantia della constantia della constantia della constantia della const	Mark with felt-tip pen.	<b>1</b>	Mark with pushpin. (Pierce through.)
Ţ	Mark with center punch.	+	Remove any burrs.
ŢĒ	Use touch-up paint and allow to dry.	L	Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)	5,0	Apply firm pressure while rolling, especially at the ends, to set the adhesive.
4>	Press firmly.	lb-ft	Tighten to the specified torque.
<b>¥</b> 90°	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

<b>A B G</b>	Name of part or location, etc.
A B C	Action or work instruction
123	Order of work
00 <b>0</b>	Position of clip
	Position of retaining tab
(x 2) (x 3) (x 4)	Quantity

### Wire Harness Routing Precaution

Do not secure the accessory harness to the SRS harness. (except for instruction cases.)	Push the connectors and terminals together until they lock.
Do not pull the harness to unplug the connectors.	Install removed connectors in their original location.
Do not pull the harness.	Secure the accessory harness as shown.
Do not pinch the harness.	Cut off the excess wire tie.

### Safety: General

#### **CAUTION**

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

#### MOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.

#### **★** NOTE

The illustrations may differ slightly from the actual accessory.

### Safety: Electric Parts

#### MOTICE

Always disconnect the negative cable from the battery before beginning work.

### Safety: Accessory

#### MOTICE

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

### **PARTS LIST**

### **I** Front Under Spoilers Kit (P/N 08F01-36W-100)

Parts	Parts name	QTY	Remarks
	Left spoiler	1	
	Right spoiler	1	
	Nut	8	
(i)	Washer	8	
	Alcohol wipe	2	

### **REQUIRED TOOLS AND SUPPLIES**

- · Phillips screwdriver
- Stubby Phillips screwdriver
- 10 mm Open end wrench
- Blanket
- Masking tape
- Pushpin
- Drill
- 3 mm Drill bit
- File
- Eye protection (face shield, safety goggles, etc.)
- 10 mm Socket
- Ratchet
- Ruler
- · Torque wrench

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Rotabroach Hole Cutting Kit (T/N BLR11201SO)


### **INSTALLATION**


### Removing the Vehicle Parts


- Disconnecting the Battery Cable
  - Disconnect the negative cable from the battery.

#### **◆** NOTE

Follow the "12 Volt Battery Terminal Disconnection and Reconnection" described in the service information since the work differs depending on the vehicle.

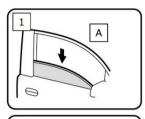

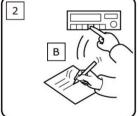

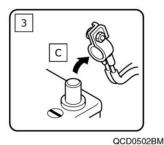

A Lower.

B Record.

Disconnect.


### Front Bumper

2 Attach masking tape to protect the vehicle.

#### **◆** NOTE

To prevent damage, do not remove the masking tape until after the parts are installed.




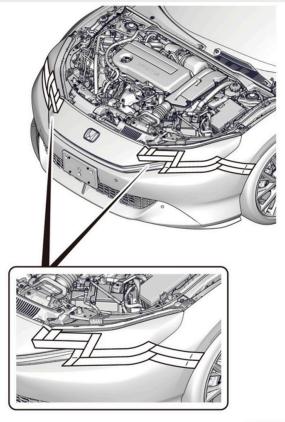

QP01802AD


Remove the clips.



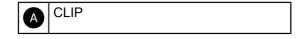

4

Remove the clips and self-tapping screws.

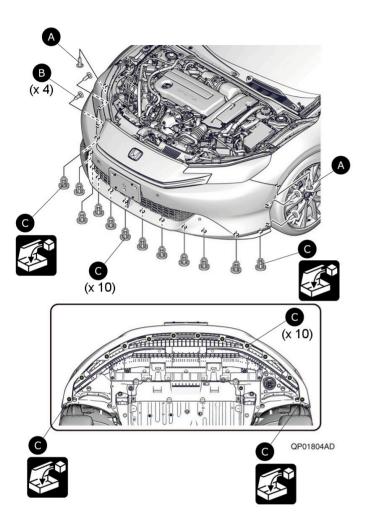

A	SELF-TAPPING SCREW (round head)
B	SELF-TAPPING SCREW (flat head)
0	CLIP


**5** Release the retaining tabs.



- · Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.





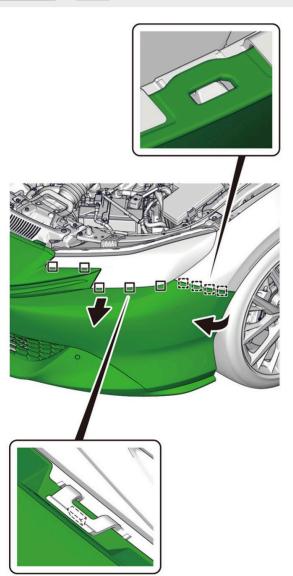

RETAINING TAB
RETAINING TAB

QP01805AD


6

Repeat step 5 on the other side.

Remove the front bumper.





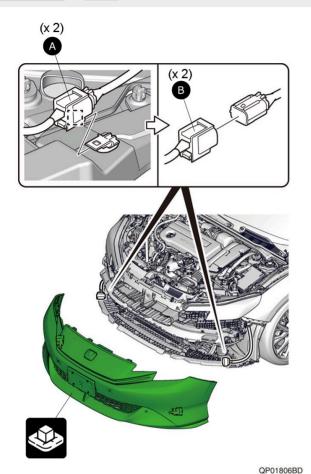


A	VEHICLE CONNECTORS
В	VEHICLE CONNECTOR
	RETAINING TAB

### Installing the Spoilers

Pierce the front bumper.

**★** NOTE


Make sure to mark the correct position.

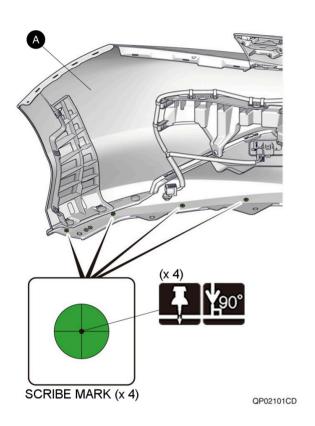



O Drill the front bumper.




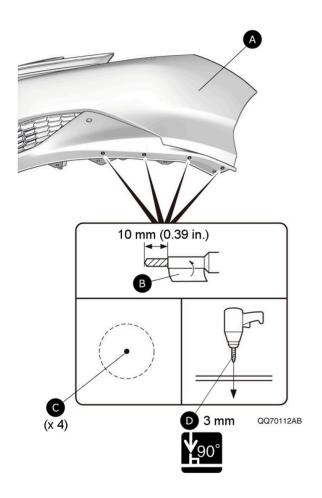


A	FRONT BUMPER (outside)
В	MASKING TAPE
0	MARK
D	DRILL BIT

10 Drill the front bumper.



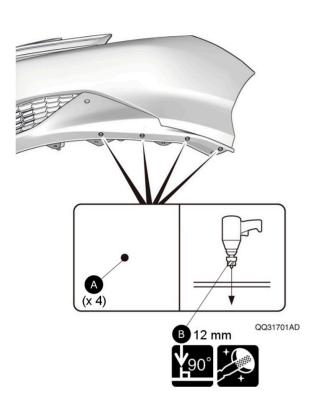


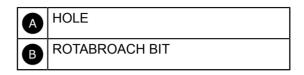

Clean the attaching area.




Allow to dry thoroughly.

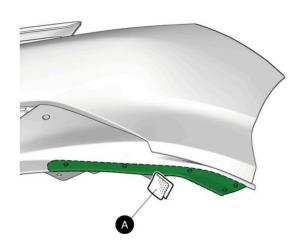

ALCOHOL WIPE


QQ12102AD

12 Temporarily attach the tabs.

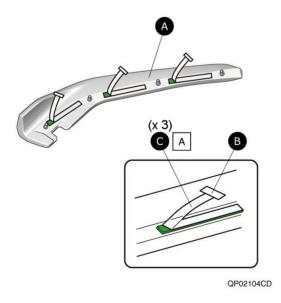

A	LEFT SPOILER
В	MASKING TAPE
0	TAB
А	Attach.

13 Loosely secure the left spoiler.

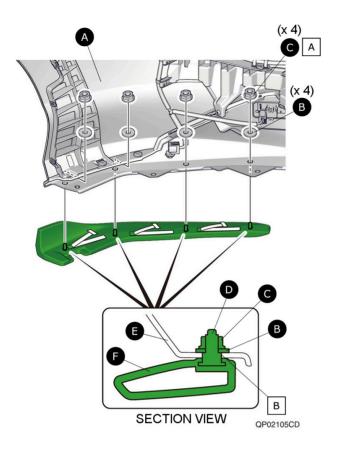


A	FRONT BUMPER (inside)	
B	WASHER	
0	NUT	
O	LEFT SPOILER BOLT	
<b>3</b>	FRONT BUMPER	
•	LEFT SPOILER	
Α	Loosely secure.	
В	Make sure that the shoulder on the left spoiler bolt is centered in the hole of the front bumper.	

Secure the left spoiler.



Check the position of double-sided adhesive tapes and make sure to press firmly.

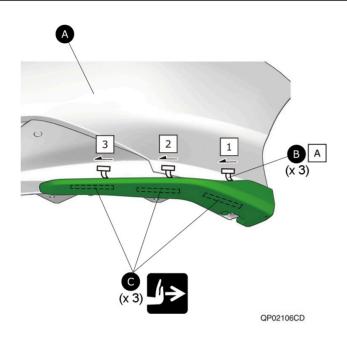


A FRONT BUMPER (outside)

B ADHESIVE BACKING

C DOUBLE-SIDED ADHESIVE TAPE


A Remove.

15 Secure the left spoiler.

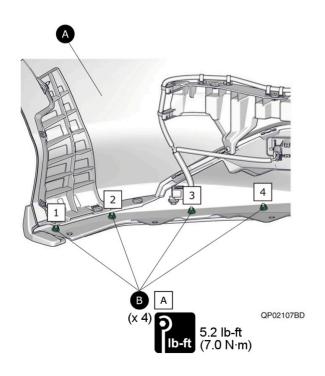

A		FRONT BUMPER (inside)
E	)	NUT
Δ		Tighten.


16 Secure the left spoiler.

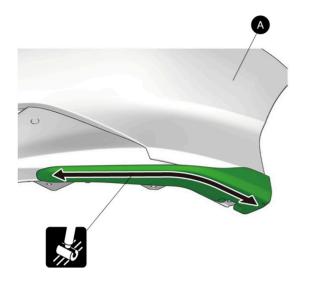



QP02108CD

Repeat steps 8 through 16 on the other side.

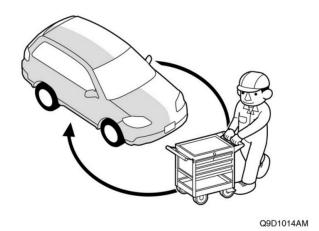

### **■ Check After Installation**

18 Check that all parts are installed and properly routed.

#### **◆** NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.


### Installing All Removed Parts

19 Install all removed parts.

### **Vehicle Check**

20 Connect the negative cable to the battery.

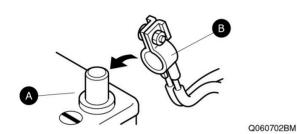

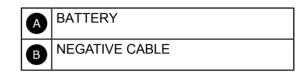

- Make sure all accessories and systems operate properly.
- 22 If necessary, restore the systems back to normal operation as described in the service information.
- Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.