HONDA


INSTALLATION INSTRUCTIONS

NOV. 2025

ILLUMINATED DOOR SILL TRIMS

2026 Prelude MODEL SERIES Publications No. VERSION 1

GENERAL VIEW

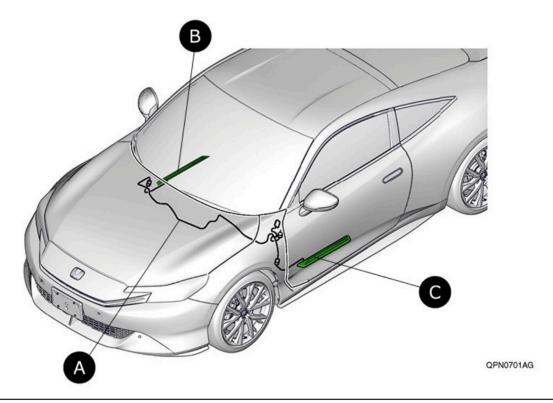

	HADNECC
A	HARNESS

RIGHT ILLUMINATED DOOR SILL TRIM

LEFT ILLUMINATED DOOR SILL TRIM

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

A DANGER

You will be killed or seriously hurt if you do not follow the instructions.

▲ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

MOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

■ NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)

	·		•
	Wear eye protection.	Main	Wear heavy gloves.
ķ —≯	Work by two or more people.		Place the part on a blanket.
	Mark with felt-tip pen.	<u>‡</u>	Mark with pushpin. (Pierce through.)
Ţ	Mark with center punch.	+	Remove any burrs.
ŢĒ	Use touch-up paint and allow to dry.	Z	Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)	No.	Apply firm pressure while rolling, especially at the ends, to set the adhesive.
4>	Press firmly.	lb-ft	Tighten to the specified torque.
4 90°	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

A B G	Name of part or location, etc.
A B C	Action or work instruction
123	Order of work
00 0	Position of clip
	Position of retaining tab
(x 2) (x 3) (x 4)	Quantity

Wire Harness Routing Precaution

Do not secure the accessory harness to the SRS harness. (except for instruction cases.)	Push the connectors and terminals together until they lock.
Do not pull the harness to unplug the connectors.	Install removed connectors in their original location.
Do not pull the harness.	Secure the accessory harness as shown.
Do not pinch the harness.	Cut off the excess wire tie.

Safety: General

CAUTION

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

MOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.

★ NOTE

The illustrations may differ slightly from the actual accessory.

■ Safety: Electric Parts

MOTICE

Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

MOTICE

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

I Illuminated Door Sill Trims Kit (P/N 08E12-36W-100)

Parts	Parts name	QTY	Remarks
	Harness	1	
	Left illuminated door sill trim (identification mark: L)	1	
	Right illuminated door sill trim (identification mark: R)	1	
	Wire tie	16	
	Wire tie with clip	1	
	Wire tie with holder	1	
	Fuse label	1	
	Aluminum tape	3	
	Urethane tape	1	
	Protective tape	2	
	Alcohol wipe	2	
	Washer-bolt	2	

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- 10 mm Socket
- Ratchet
- Shop towel
- Isopropyl alcohol
- Scissors
- Ruler
- Diagonal cutters
- · Steel wire
- · Torque wrench
- · Masking tape

The following tools are available through the Honda Tool and Equipment Program:


- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)

INSTALLATION

Before Installation

Attach masking tape.



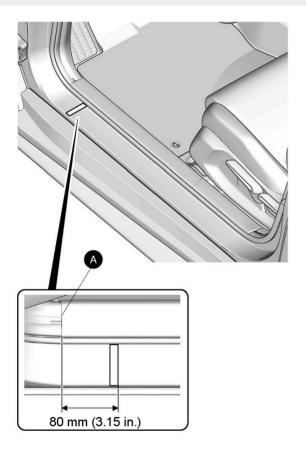

EDGE OF THE DRIVER'S DOOR SILL TRIM

QPN0702AG

Repeat step 1 on the other side.


Removing the Vehicle Parts


Disconnecting the Battery Cable


3 Disconnect the negative cable from the battery.

◆ NOTE

Follow the "12 Volt Battery Terminal Disconnection and Reconnection" described in the service information since the work differs depending on the vehicle.

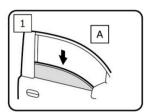

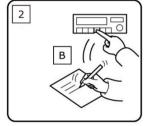

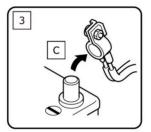


QCD0502BM


Passenger's Dashboard Under Cover

4

Remove the passenger's dashboard under cover.



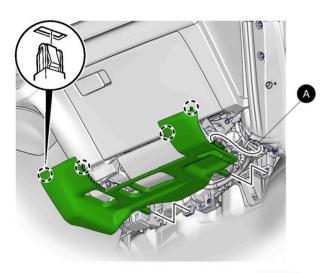

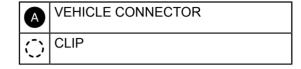


QPN0703AG

Passenger's Door Sill Trim

5

Remove the passenger's door sill trim.



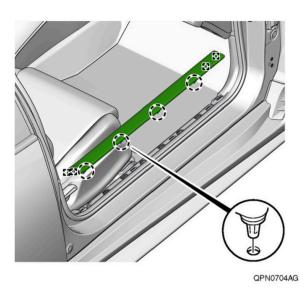


\bigcirc	CLIP
	RETAINING TAB

Passenger's Kick Panel



Remove the passenger's kick panel.



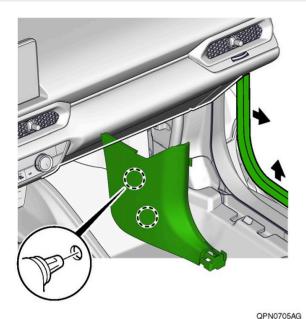





Driver's Dashboard Lower Cover

7

Remove the driver's dashboard lower cover.



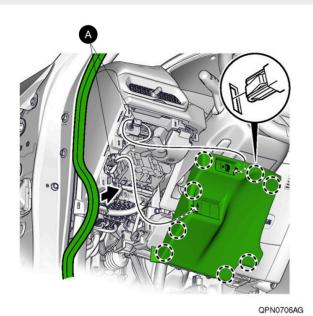

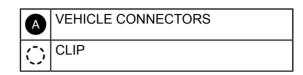


Driver's Knee Airbag

Adjust the tilt of the steering column to its highest position.





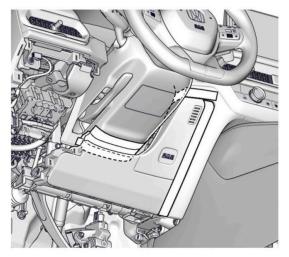


QPN0707AG

Attach masking tape to protect the vehicle.

★ NOTE

To prevent damage, do not remove the masking tape until after the parts are installed.

1 Remove the bolts.

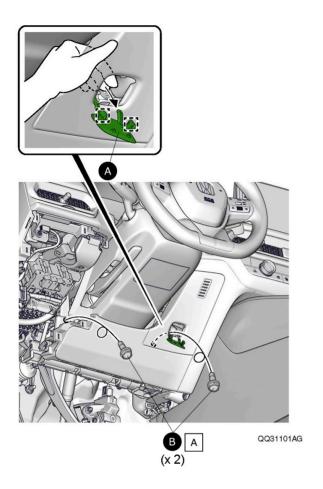


A	CAP
B	BOLT
Α	Do not reuse.
	RETAINING TAB

Remove the driver's knee airbag.

MOTICE

- Do not drop the removed airbag or hit it on an object.
- Place the removed airbag in a safe place with the padded surface (top) facing upward.

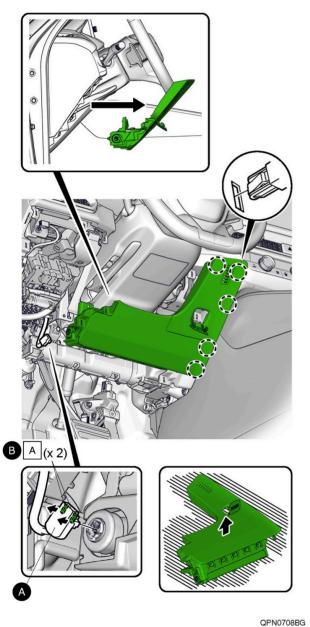


4	VEHICLE CONNECTOR
B	LOCKING TAB
Α	Pull up.
\bigcirc	CLIP

Driver's Door Sill Trim

Remove the driver's door sill trim.



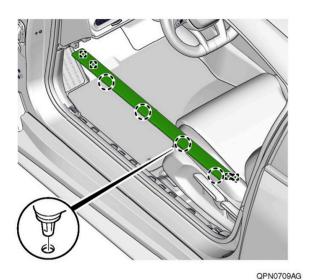



0	CLIP
	RETAINING TAB

Driver's Kick Panel

13 Remove the driver's kick panel.




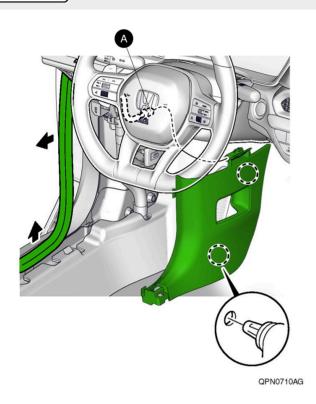

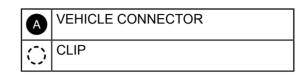

Routing the Harness


Attach the fuse label.

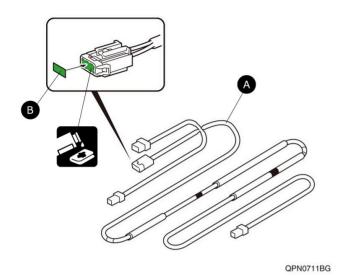





15 Plug-in the harness connector.



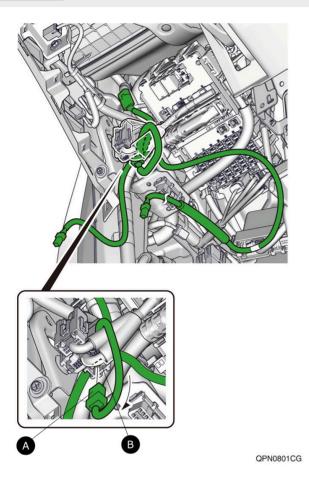

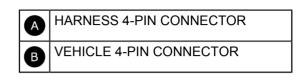

16 Secure the fuse case.

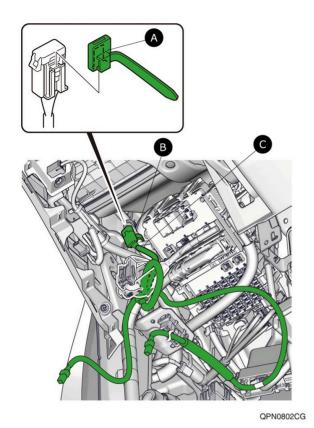


WIRE TIE WITH HOLDER

 VEHICLE HARNESS

 VEHICLE CLIP

Secure the harness.

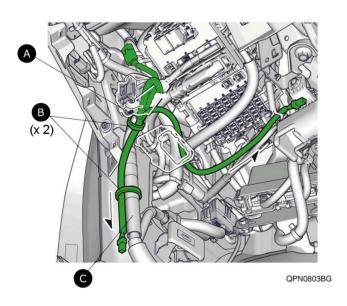


A HARNESS BRANCH SECTION

B WIRE TIE

C VEHICLE HARNESS

18 Route the harness.




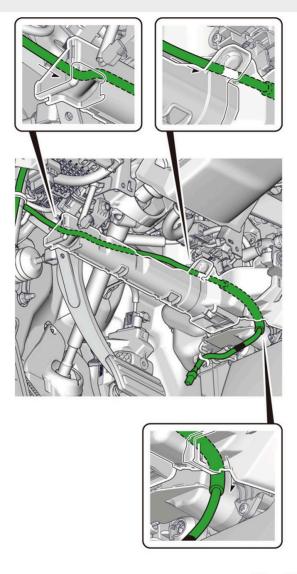

QPN0804BG


19 Route the steel wire.




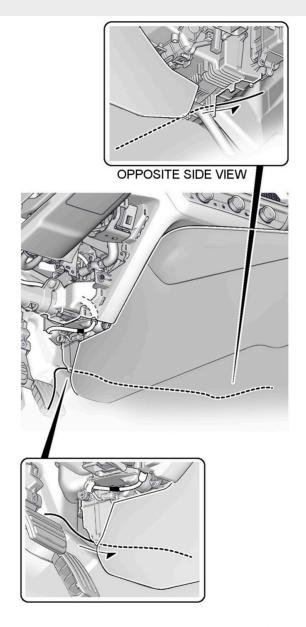

QPN0805BG

20 Attach the steel wire.

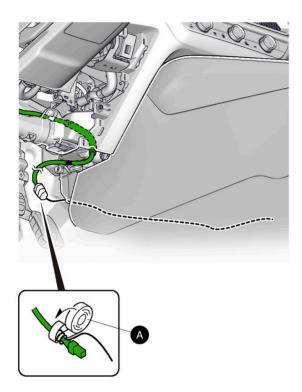





QPN0806AG

21 Route the harness.



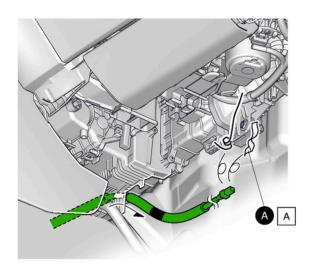

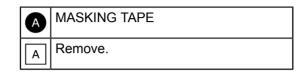

QPN0807AG


22 Remove the steel wire.

23 Secure the harness.




Make sure to install the wire tie with clip in the correct orientation.




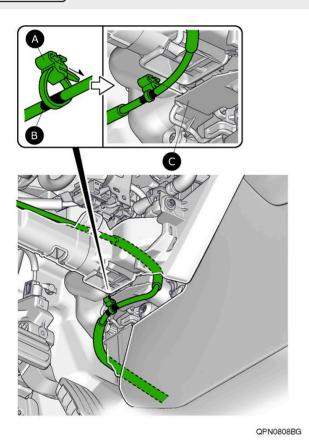

A	WIRE TIE WITH CLIP
В	GREEN TAPE
0	HEATER CONTROL UNIT

24 Secure the harness.

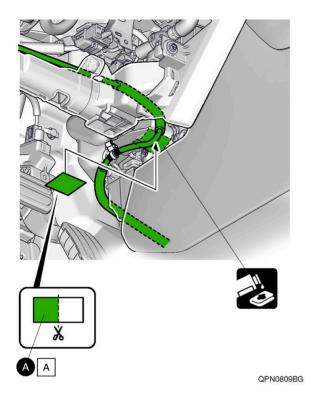

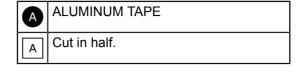


25 Secure the harness.



Do not cover the vehicle duct openings.




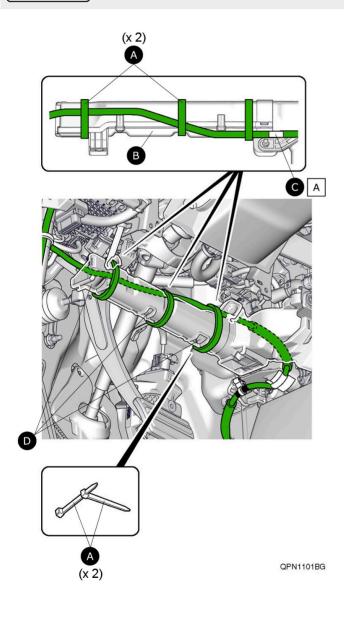


A	WIRE TIE
В	VEHICLE DUCT
0	WHITE TAPE
O	VEHICLE DUCT OPENINGS
А	Not used.

26 Secure the harness.




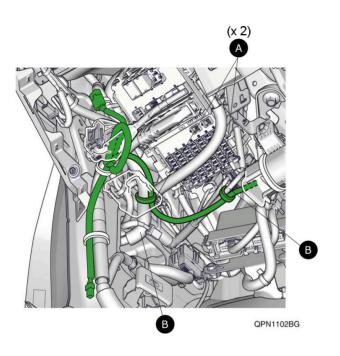

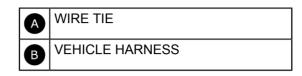

27 Secure the harness.




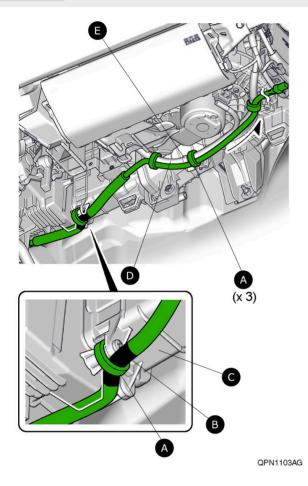

A	WIRE TIE
В	GREEN TAPE
0	HEATER CONTROL UNIT
D	VEHICLE HARNESS
3	VEHICLE CLIP

28 Route the harness.




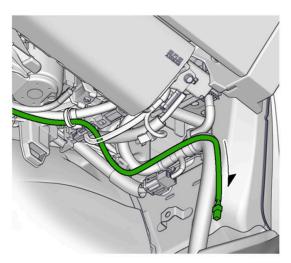

QPN1104AG


Installing the Illuminated Door Sill Trims

29 Cut the protective tape.

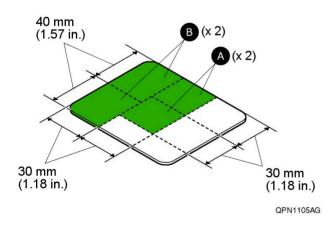

A	PROTECTIVE TAPE A
В	PROTECTIVE TAPE B

30 Cut the protective tape.

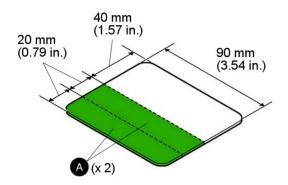




QPN1106AG


31 Clean the attaching area.

★ NOTE

Allow to dry thoroughly.



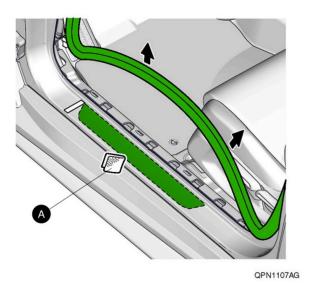




32 Temporarily attach the adhesive backings.



Make sure to check the identification mark before installation.

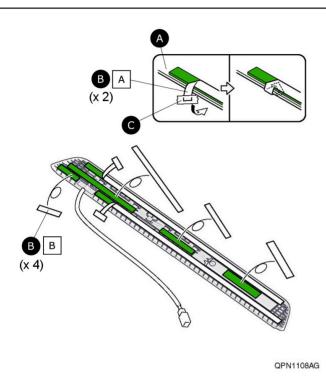

A LEFT ILLUMINATED DOOR SILL TRIM (identification mark: L)

B ADHESIVE BACKING


MASKING TAPE

A Attach.

B Remove.

Remove the adhesive backings.

34 Line up the left illuminated door sill trim.

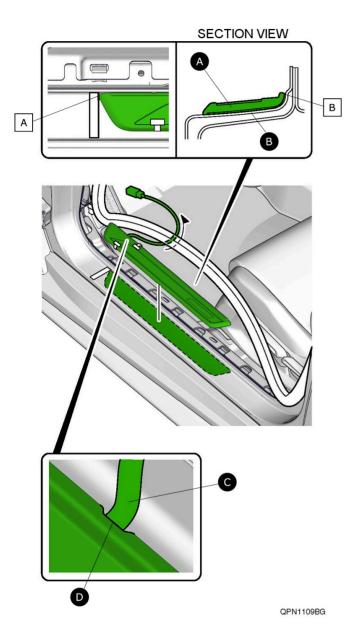



A	LEFT ILLUMINATED DOOR SILL TRIM
В	VEHICLE PANEL
0	LEFT ILLUMINATED DOOR SILL TRIM HARNESS
D	SLOT
Α	Line up with the masking tape.
В	Contact to the vehicle panel.

35 Secure the left illuminated door sill trim.




Check the position of double-sided adhesive tapes and make sure to press firmly.

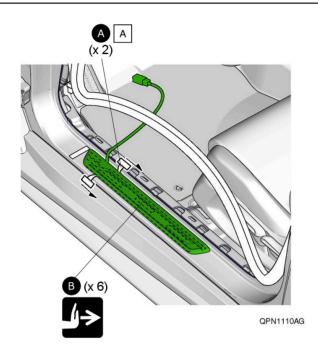

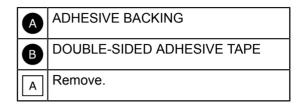


36 Remove the masking tape.


37 Secure the left illuminated door sill trim.

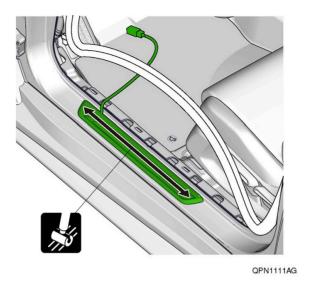

38 Attach the protective tape A.

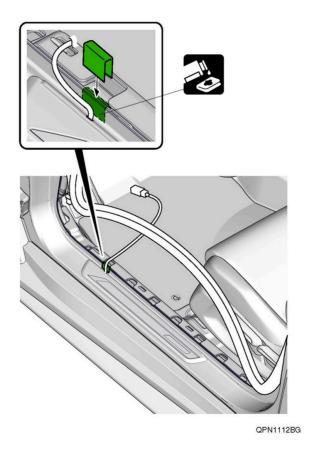


39 Secure the left illuminated door sill trim harness.

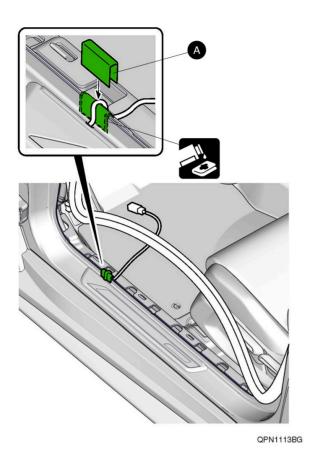





40 Pull back the floor carpet.



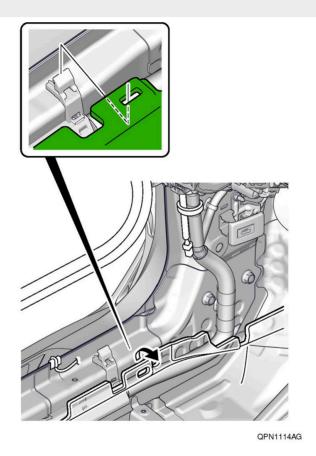

4 1 Attach the protective tape C.

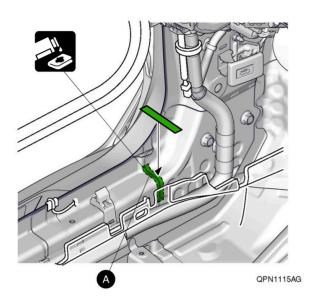





42

Secure the left illuminated door sill trim harness.




Do not cover the installation hole.

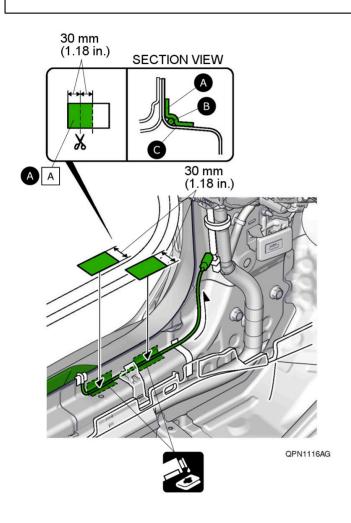

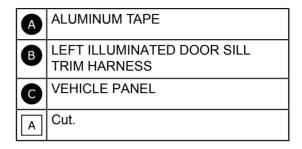

43 Attach the urethane tape.




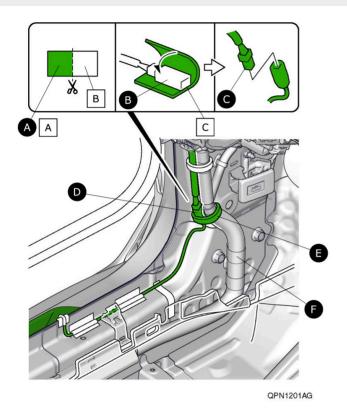

A	URETHANE TAPE
В	LEFT ILLUMINATED DOOR SILL TRIM 2-PIN CONNECTOR
0	HARNESS 2-PIN CONNECTOR
D	2-PIN CONNECTORS
B	WIRE TIE
E	VEHICLE HARNESS
Α	Cut in half.
В	Used in the other side.
С	Line up with the edge of the left illuminated door sill trim 2-pin connector.

- Plug-in the harness connector.
- 45 Secure the connectors.

46 Secure the left illuminated door sill trim harness.

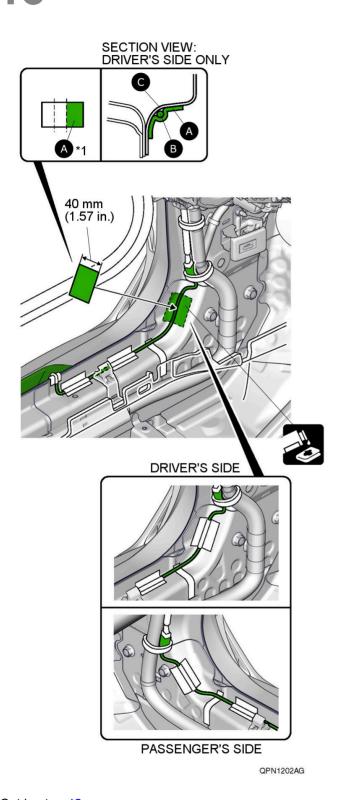

A ALUMINUM TAPE

B LEFT ILLUMINATED DOOR SILL TRIM HARNESS


C VEHICLE PANEL


*1: Cut in step 42.

47 Install the floor carpet.


48 Remove the protective film.



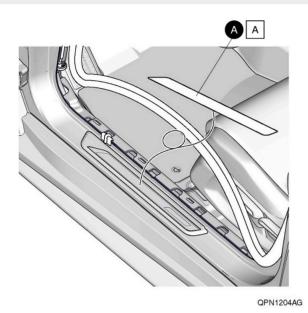

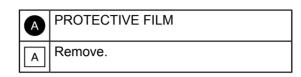



Repeat steps 31 through 48 on the other side.

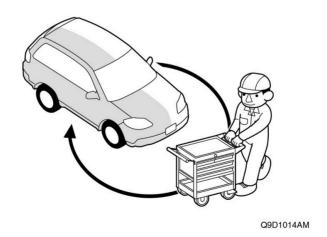

50 Secure the harness.



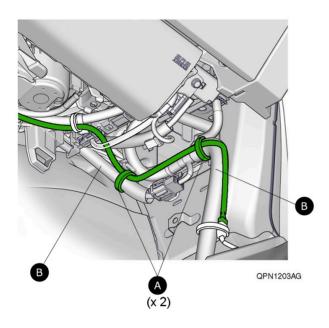

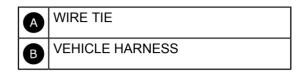

■ Check After Installation

Check that all parts are installed and properly routed.

■ NOTE

- · Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

Installing All Removed Parts

Installing All Removed Parts

52 Install all removed parts.


Installing the Driver's Knee Airbag


53 Install the driver's knee airbag.

◆ NOTE

Make sure to use the replacement washer-bolts provided in this kit.




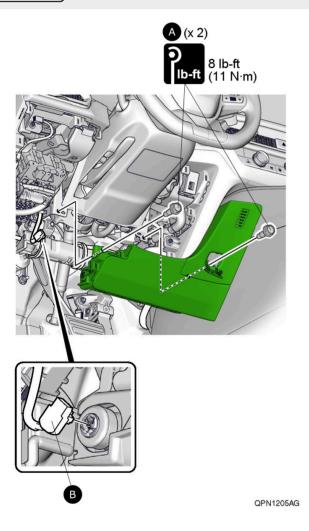

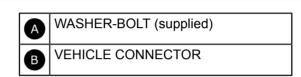

Operation Check

54 Connect the negative cable to the battery.

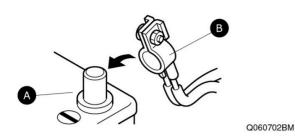

A	BATTERY
В	NEGATIVE CABLE

- Turn the POWER button to ON; the SRS indicator should come on for about 6 seconds and then go off.
- 56 Check that the illuminated door sill trim comes on when opening the door.

Vehicle Check

- Make sure all accessories and systems operate properly.
- If necessary, restore the systems back to normal operation as described in the service information.
- Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.