www.collegehillshonda.com

HONDA INSTALLATION INSTRUCTIONS NOV. 2025

SPLASH GUARDS	2026 Prelude MODEL SERIES	Publications No. VERSION 1

GENERAL VIEW

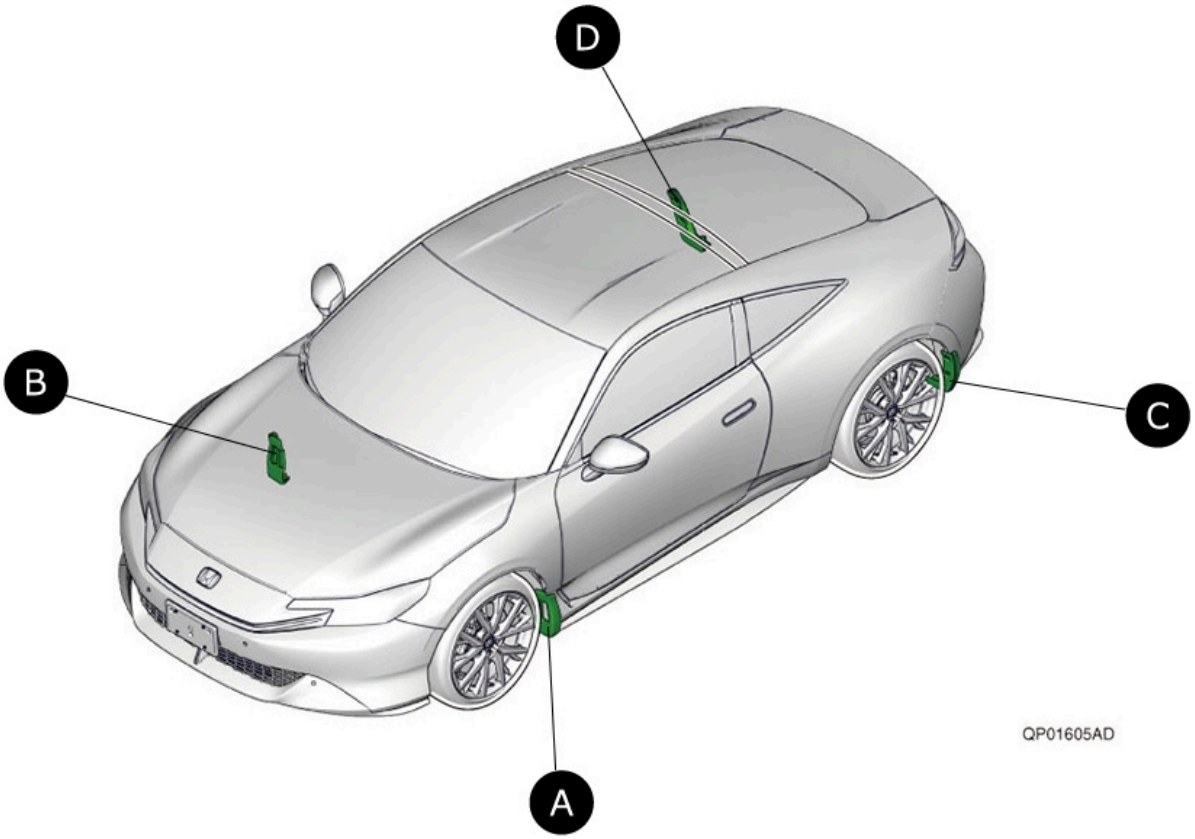

A	LEFT FRONT SPLASH GUARD
B	RIGHT FRONT SPLASH GUARD
C	LEFT REAR SPLASH GUARD
D	RIGHT REAR SPLASH GUARD

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.
You will find important safety messages preceded by one of the following symbols:
*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.

Indicates a prohibited action.

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.
*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)

	Wear eye protection.		Wear heavy gloves.
	Work by two or more people.		Place the part on a blanket.
	Mark with felt-tip pen.		Mark with pushpin. (Pierce through.)
	Mark with center punch.		Remove any burrs.
	Use touch-up paint and allow to dry.		Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)		Apply firm pressure while rolling, especially at the ends, to set the adhesive.
	Press firmly.		Tighten to the specified torque.
	Work perpendicularly.		Clean with isopropyl alcohol.

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

These icons indicate the name of part or location (also contain other instructions).

Ⓐ Ⓑ Ⓒ ...	Name of part or location, etc.
[A] [B] [C] ...	Action or work instruction
[1] [2] [3] ...	Order of work
◌ ◯ ◎ ...	Position of clip
⬚ □ ▣ ...	Position of retaining tab
(x 2) (x 3) (x 4) ...	Quantity

Safety: General

⚠ CAUTION

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

NOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.

NOTE

The illustrations may differ slightly from the actual accessory.

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

PARTS LIST

Splash Guards Kit (P/N 08P00-36W-100)

Parts	Parts name	QTY	Remarks
	Left front splash guard	1	
	Right front splash guard	1	
	Left rear splash guard	1	
	Right rear splash guard	1	
	Self-tapping screw	12	
	Spacer	8	

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- Stubby Phillips screwdriver

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

INSTALLATION

Installing the Front Splash Guards

1 Turn the steering wheel fully counterclockwise.



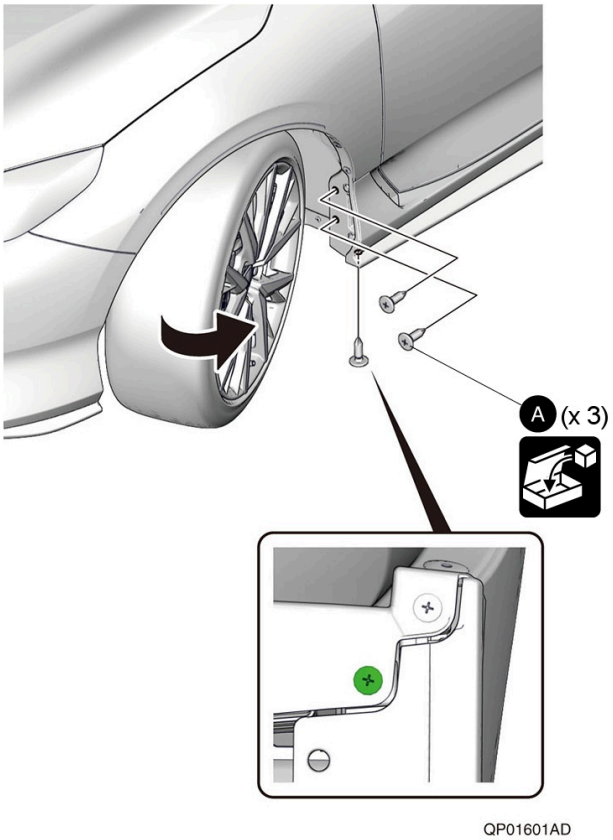

A	SELF-TAPPING SCREW

2 Remove the self-tapping screws.

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

3 Install the left front splash guard.

NOTE

- Make sure to install the spacer in the correct orientation.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

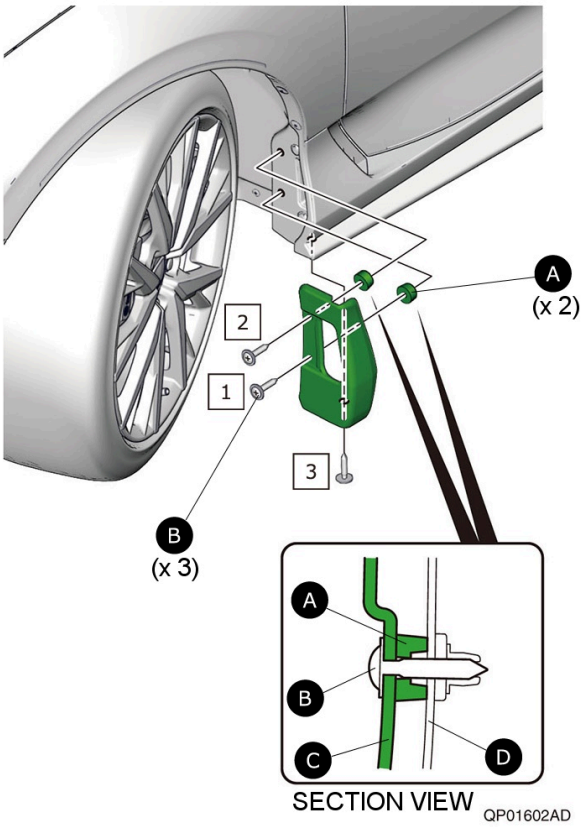

A	SPACER
B	SELF-TAPPING SCREW (supplied)
C	LEFT FRONT SPLASH GUARD
D	LEFT FRONT INNER FENDER

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

4 Turn the steering wheel fully clockwise, and repeat steps 2 and 3 on the other side.

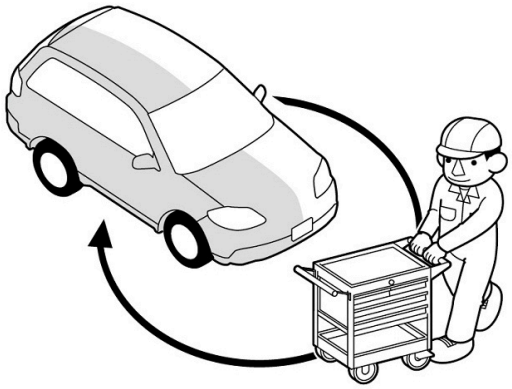

Q9D1014AM

Installing the Rear Splash Guards

5 Remove the self-tapping screws.



A	SELF-TAPPING SCREW

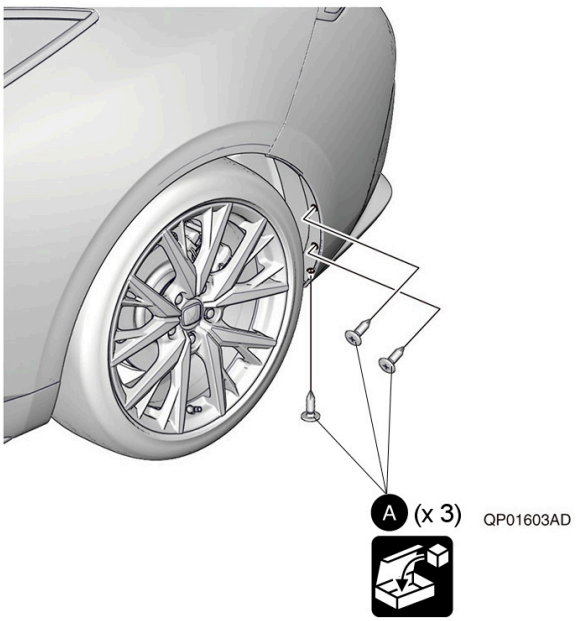

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

6 Install the left rear splash guard.

NOTE

- Make sure to install the spacer in the correct orientation.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

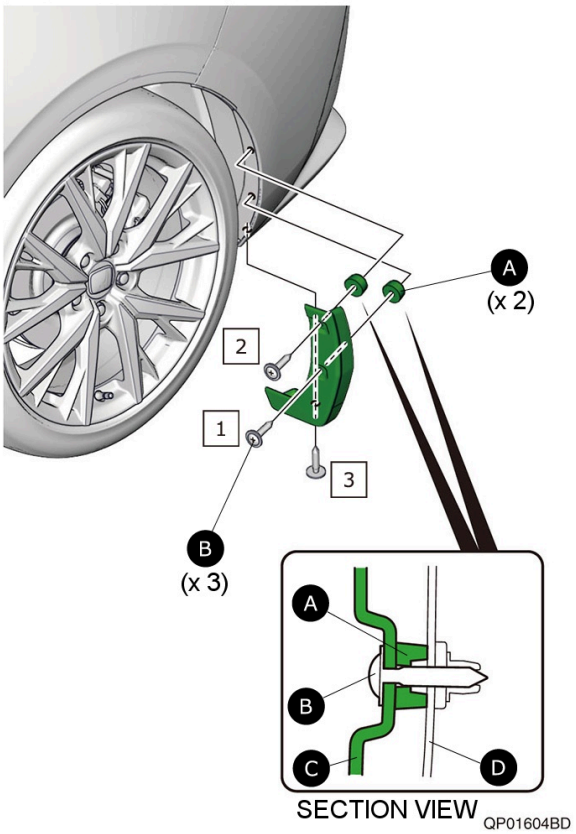

A	SPACER
B	SELF-TAPPING SCREW (supplied)
C	LEFT REAR SPLASH GUARD
D	LEFT REAR INNER FENDER

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.

www.collegehillshonda.com

7 Repeat steps 5 and 6 on the other side.

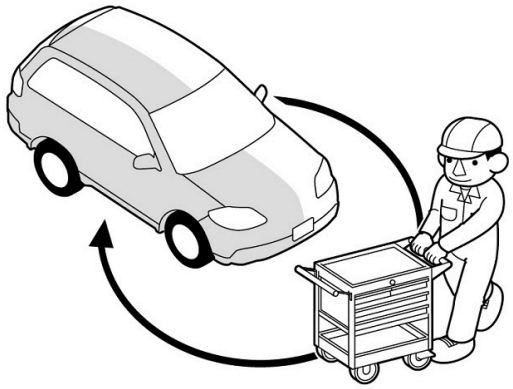

Q9D1014AM

8 Check that all parts are installed properly.

© 2025 American Honda Motor Co., Inc. -All Rights Reserved.