




TAILGATE SPOILER	2026 Prelude MODEL SERIES	Publications No. VERSION 1
------------------	------------------------------	-------------------------------

GENERAL VIEW

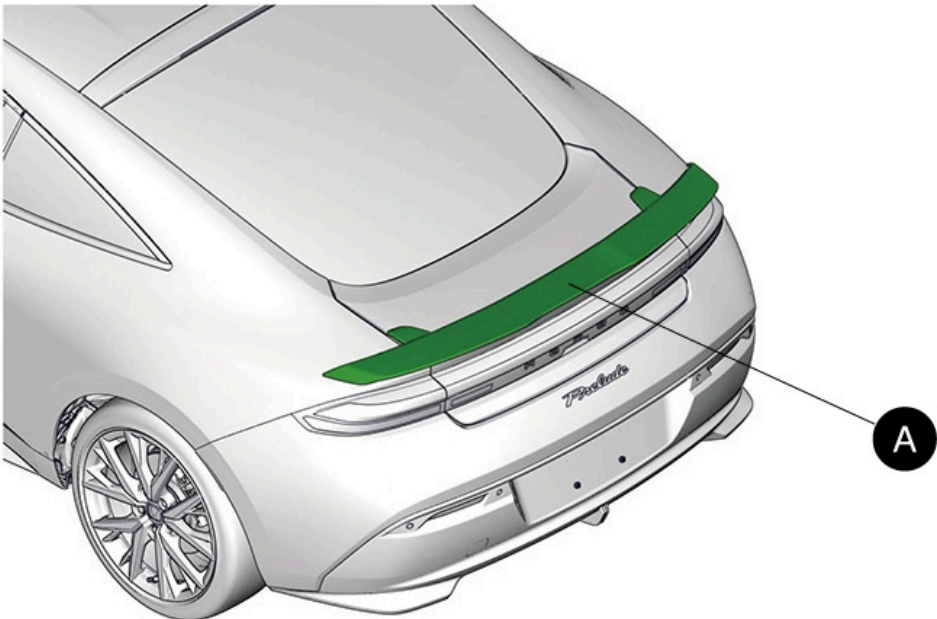

QP02201AN

<b>A</b>	SPOILER
----------	---------

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.













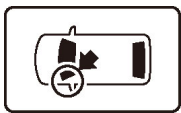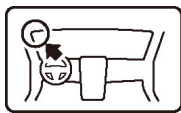







Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.








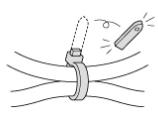
\*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Work by two or more people.		Place the part on a blanket.
	Mark with felt-tip pen.		Mark with pushpin. (Pierce through.)
	Mark with center punch.		Remove any burrs.
	Use touch-up paint and allow to dry.		Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)		Apply firm pressure while rolling, especially at the ends, to set the adhesive.
	Press firmly.		Tighten to the specified torque.
	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

<b>A B C</b> ...	Name of part or location, etc.
<b>A B C</b> ...	Action or work instruction
<b>1 2 3</b> ...	Order of work
○ ○ ○ ...	Position of clip
□ □ □ ...	Position of retaining tab
(x 2) (x 3) (x 4) ...	Quantity

## Wire Harness Routing Precaution

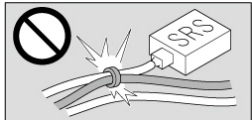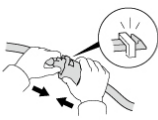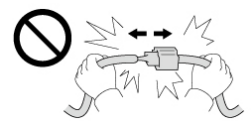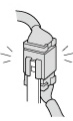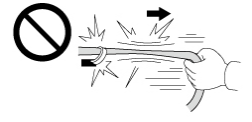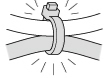	<u>Do not secure the accessory harness to the SRS harness.</u> (except for instruction cases.)		Push the connectors and terminals together until they lock.
	Do not pull the harness to unplug the connectors.		Install removed connectors in their original location.
	Do not pull the harness.		Secure the accessory harness as shown.
	Do not pinch the harness.		Cut off the excess wire tie.

## **| Safety: General**

### **CAUTION**

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

### **NOTICE**

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.

### **NOTE**

The illustrations may differ slightly from the actual accessory.

## **| Safety: Electric Parts**

### **NOTICE**

Always disconnect the negative cable from the battery before beginning work.


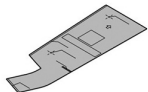
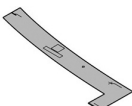





## **| Safety: Accessory**

### **NOTICE**

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST

### ■ Tailgate Spoiler Kit (P/N 08F02-36W-100)

Parts	Parts name	QTY	Remarks
	Spoiler	1	
	Template A	1	
	Template B	1	
	Left tailgate support strut (identification mark: L)	1	
	Right tailgate support strut (identification mark: R)	1	
	Bolt	2	
	Nut	4	
	Alcohol wipe	2	

## REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Phillips screwdriver
- Flat-tip screwdriver
- Masking tape
- Center punch
- Drill
- 3 mm Drill bit
- File
- Touch-up paint
- Eye protection (face shield, safety goggles, etc.)
- 10 mm Socket
- Ratchet
- Torque wrench
- Ruler
- Shop towel

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Rotabroach Hole Cutting Kit (T/N BLR11201SO)
- Deburring Tool (T/N DEBUR300)

INSTALLATION





Removing the Vehicle Parts

● Disconnecting the Battery Cable

1 Disconnect the negative cable from the battery.

NOTE

- Follow the “12 Volt Battery Terminal Disconnection and Reconnection” described in the service information since the work differs depending on the vehicle.
- Take countermeasures to prevent from locking the tailgate.

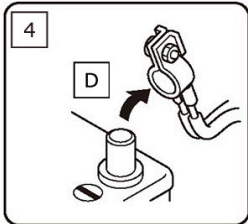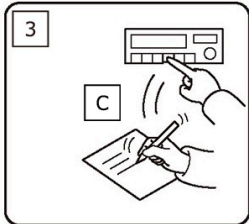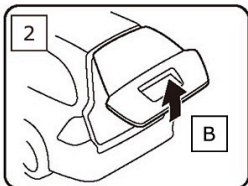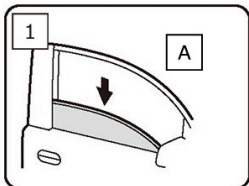



QCD0504BM

A	Lower.
B	Open.
C	Record.
D	Disconnect.



## ● Tailgate Upper Trim Panel

**2** Remove the tailgate upper trim panel.

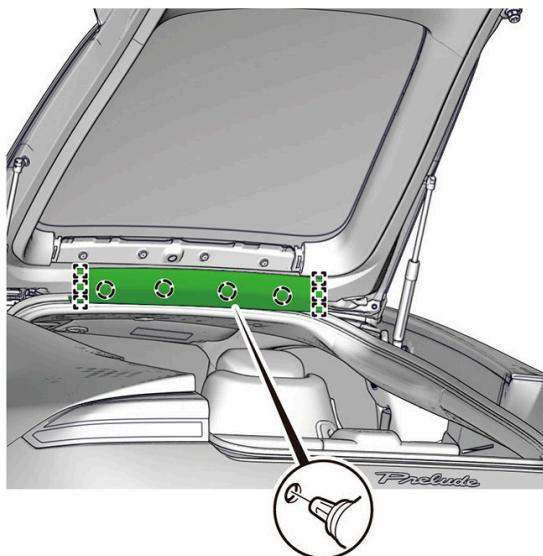
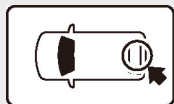


	CLIP
	RETAINING TAB



QP02202BN

## ● Left Tailgate Side Trim Panel

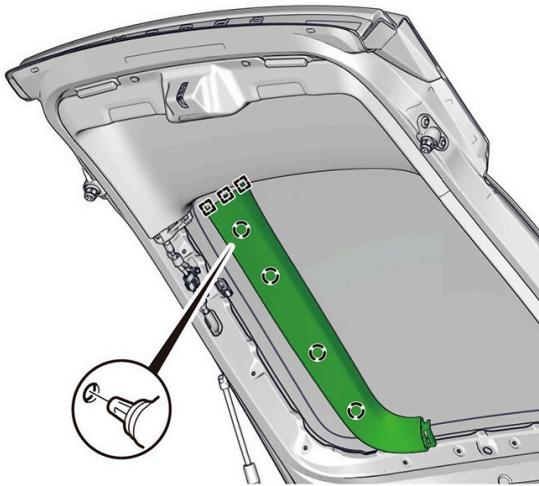**3** Remove the left tailgate side trim panel.





QP02222AN



	CLIP
	RETAINING TAB

## ● Right Tailgate Side Trim Panel

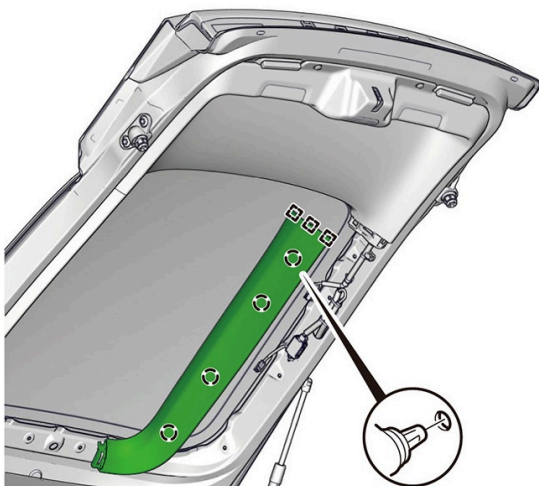**4** Remove the right tailgate side trim panel.





QP02203AN

	CLIP
	RETAINING TAB

## ● Tailgate Trim Panel


**5** Remove the tailgate trim panel.

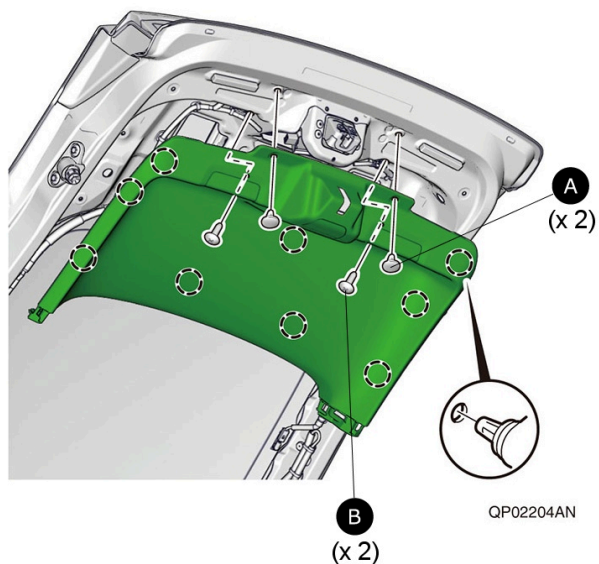

<b>A</b>	CLIP
<b>B</b>	SELF-TAPPING SCREW
	CLIP

## ● Left Tailgate Side Cover

**6** Remove the left tailgate side cover.





CLIP

QP02223AN

## ● Right Tailgate Side Cover


7 Remove the right tailgate side cover.



QP02221AN



## Installing the Spoiler

**8** Unplug the vehicle connectors.



(x 2)

**A**

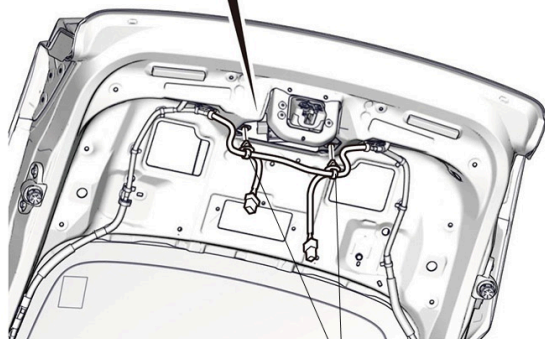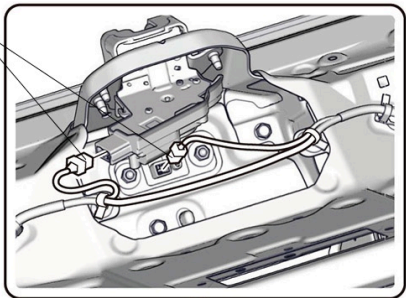

**B**

(x 2)

QP02205AN



<b>A</b>	VEHICLE CONNECTOR
<b>B</b>	VEHICLE CLIP

**9** Release the vehicle harness.


## 10 Remove the left tailgate support strut.

### CAUTION

Do not remove the clip from the tailgate support strut. The spring force of the clip is very strong and you could get hurt if the clip is ejected. Loosen the clip to remove the tailgate support strut, but do not remove the clip from the strut.

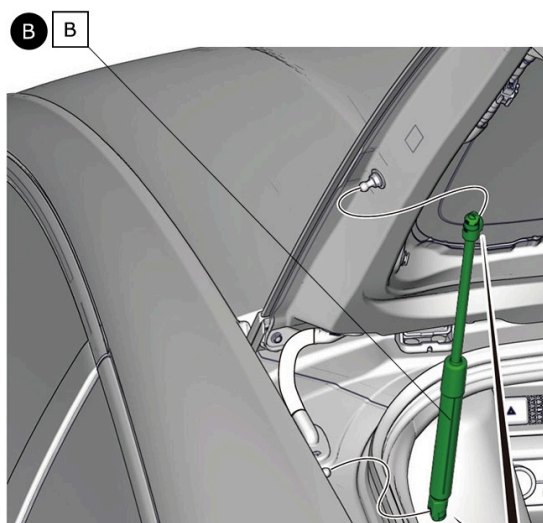

(x 2)

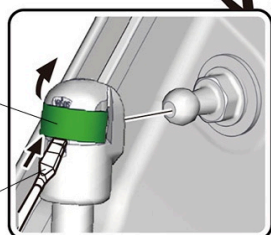

QP02206AN

A	CLIP
B	VEHICLE LEFT TAILGATE SUPPORT STRUT
A	Release.
B	Do not reuse.

## 11 Check the left tailgate support strut.

### CAUTION

If there is a gap between the clip and the removed tailgate support strut, your fingers could get pinched and you could be hurt. To avoid pinching your fingers, make sure there is no gap between the clip and the tailgate support strut.



## 12 Install the left tailgate support strut.

### ⚠ CAUTION

Make sure to check that the tailgate support strut is secured properly.

### 🎓 NOTE

Check the identification mark and the installation position of the tailgate support strut.

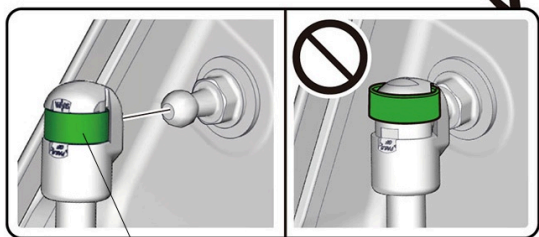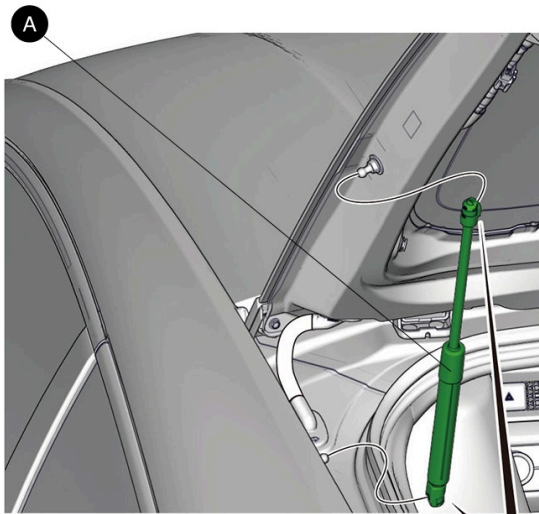


(x 2)

QP02207AN

A	NEW LEFT TAILGATE SUPPORT STRUT (identification mark: L)
B	CLIP
A	Make sure that there is no gap.




**13** Repeat steps 10 through 12 on the other side.

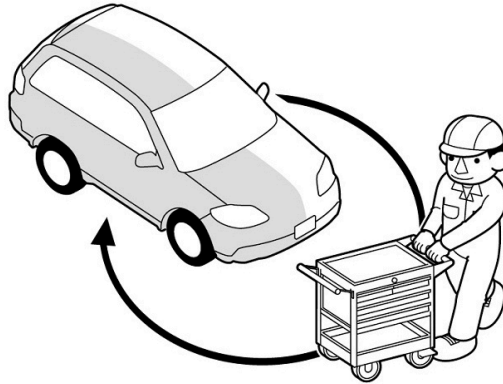


Q9D1014AM

**14** Secure the template A.

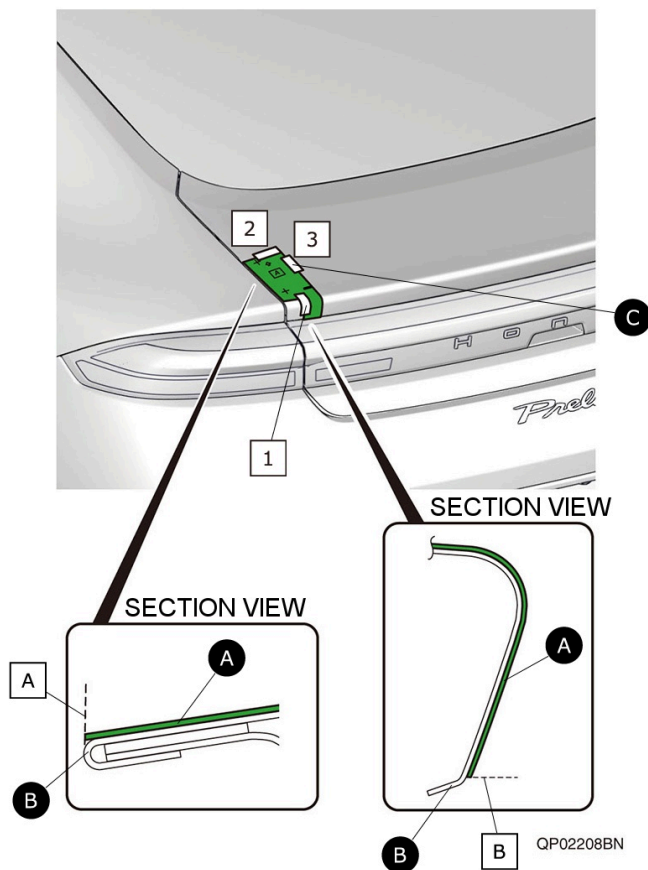

<b>A</b>	TEMPLATE A
<b>B</b>	TAILGATE
<b>C</b>	MASKING TAPE
<b>A</b>	Line up with the edge of the tailgate.
<b>B</b>	Line up with the end of the curved surface.

## 15 Secure the template B.

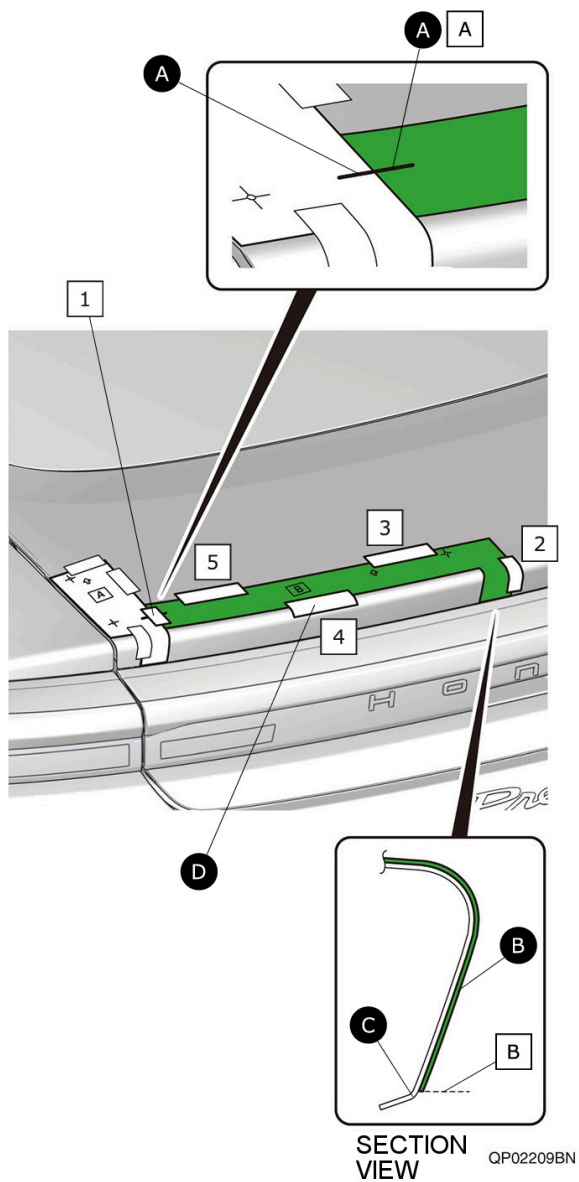


<b>A</b>	MARK
<b>B</b>	TEMPLATE B
<b>C</b>	TAILGATE
<b>D</b>	MASKING TAPE
<b>A</b>	Line up with the mark.
<b>B</b>	Line up with the end of the curved surface.


# 16 Mark the tailgate.

## NOTE

Set the center punch to the minimum setting, as the body may be deformed.

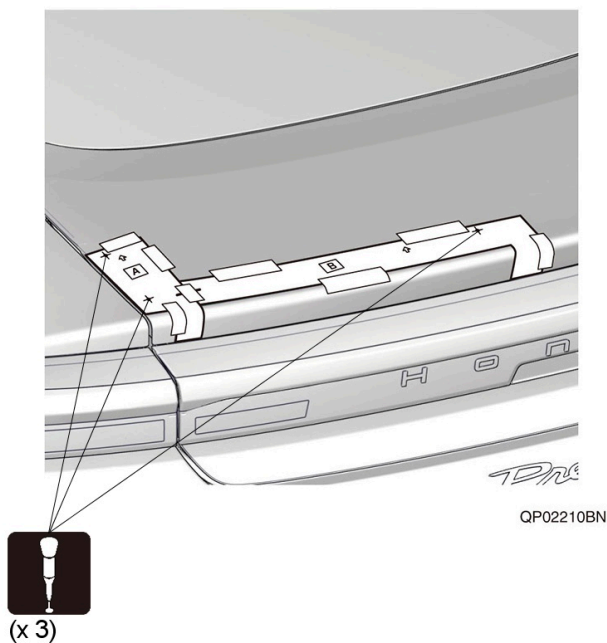

# 17 Remove the template A and template B.


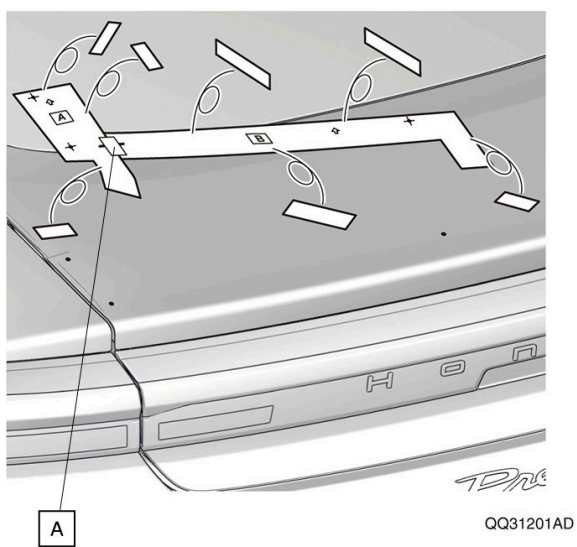


A

Do not remove.

**18** Flip the template A and template B.

**19** Secure the template A and template B.

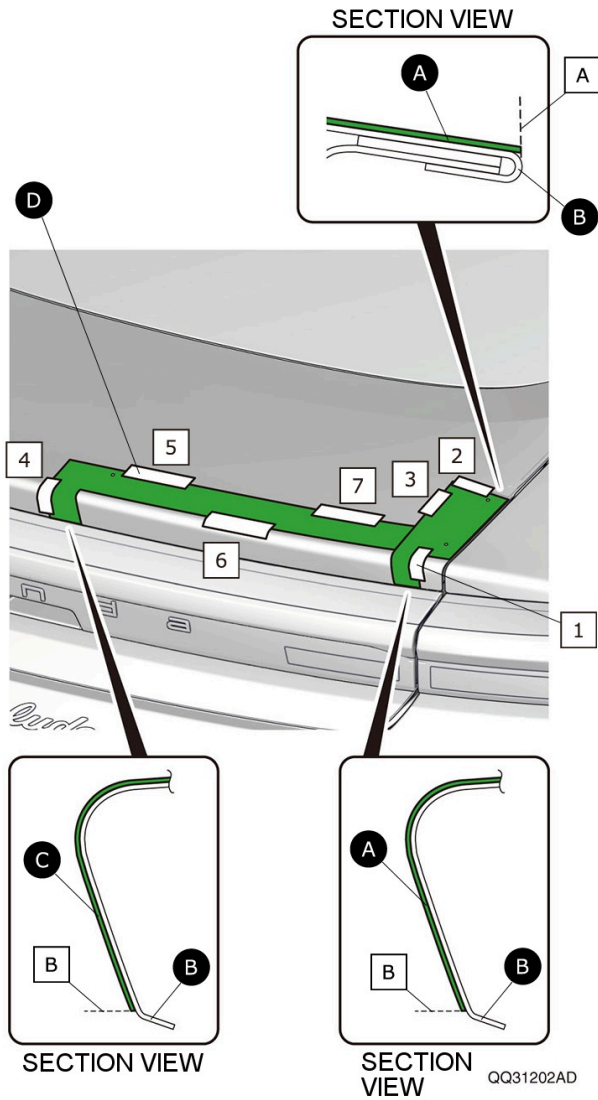


<b>A</b>	TEMPLATE A
<b>B</b>	TAILGATE
<b>C</b>	TEMPLATE B
<b>D</b>	MASKING TAPE
<b>A</b>	Line up with the edge of the tailgate.
<b>B</b>	Line up with the end of the curved surface.

## 20 Mark the tailgate.

### NOTE



Set the center punch to the minimum setting, as the body may be deformed.

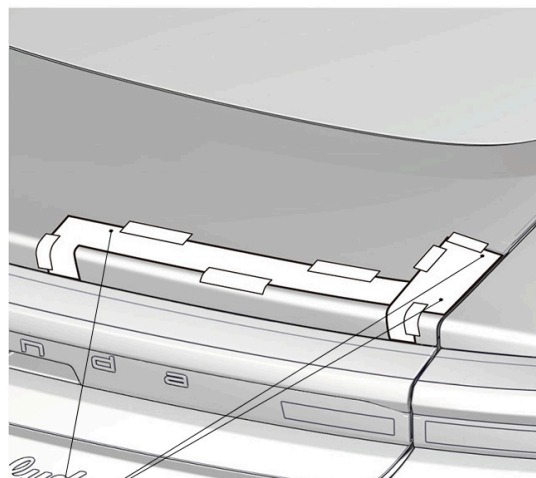

(x 3)

## 21 Remove the template A and template B.


**22** Attach masking tape to prevent metal shavings from entering.

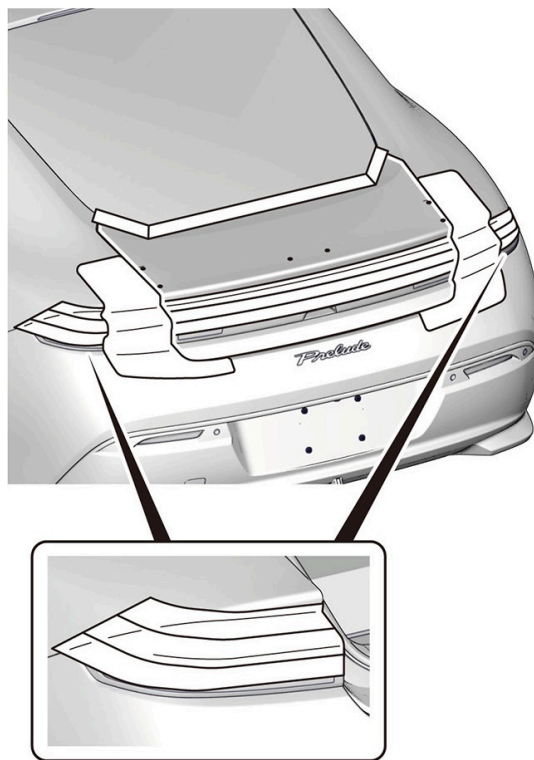

QQ31204AD

**23** Place the shop towels to prevent metal shavings from entering.


## 24 Drill the tailgate.

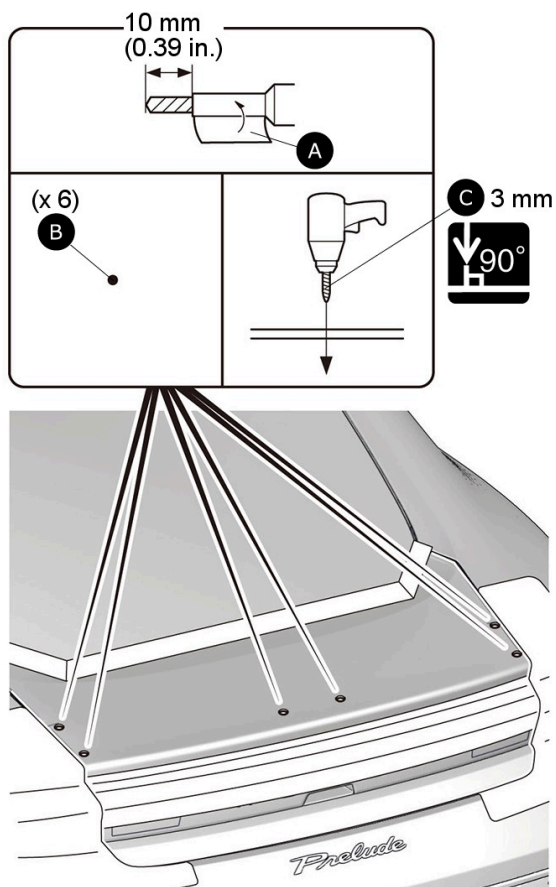


A	MASKING TAPE
B	MARK
C	DRILL BIT

QP02212BN

## 25 Attach masking tape.

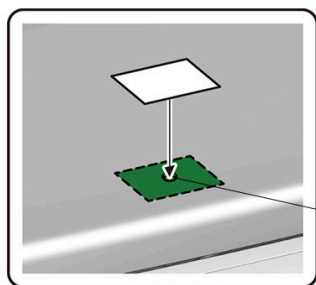

A  
(x 6)

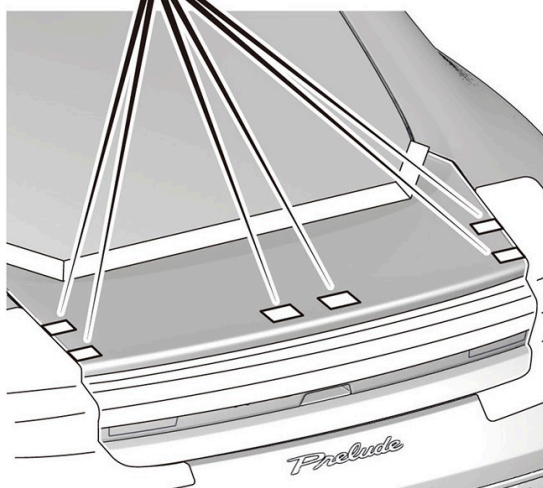


QPN2611BD


A	HOLE
---	------



## 26 Drill the tailgate.

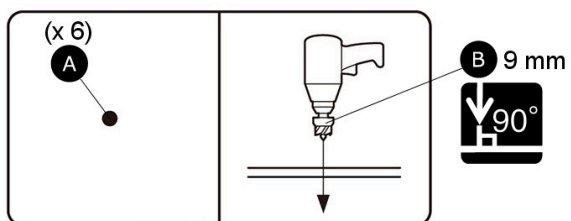


A	HOLE
B	ROTABROACH BIT

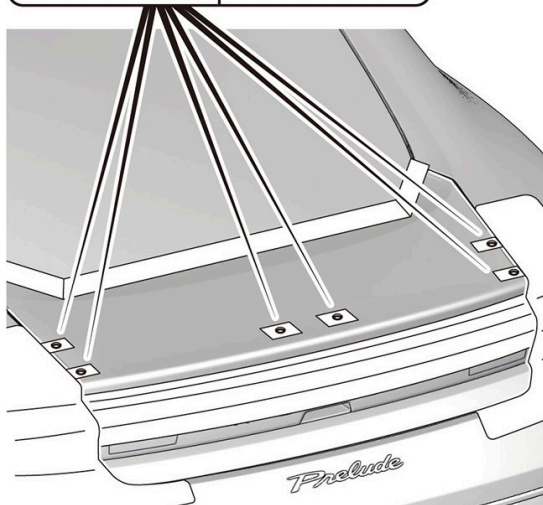

QPN2612BD

## 27 Remove the shop towels and masking tape.

## 28 Remove the burrs.

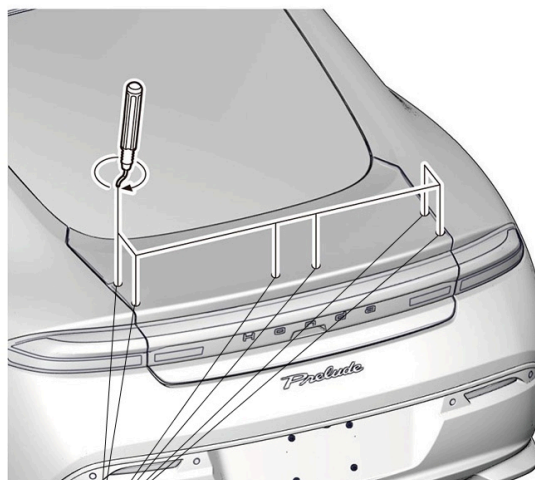


QPN2613AD



## 29 Clean the attaching area.

### NOTE

Allow to dry thoroughly.

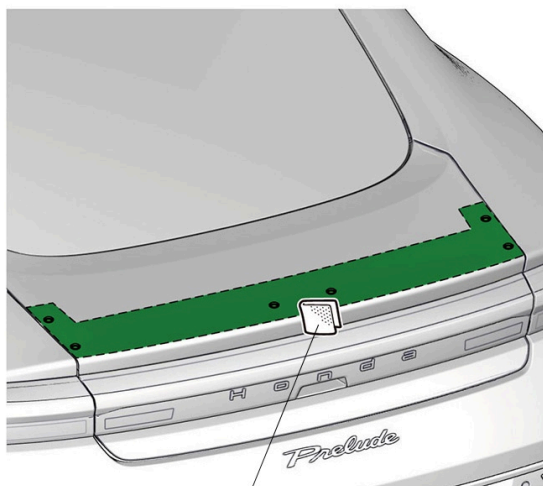

A  
(x 2)


QP02213AN

A

ALCOHOL WIPE

# 30


Temporarily attach the tabs and adhesive backings.

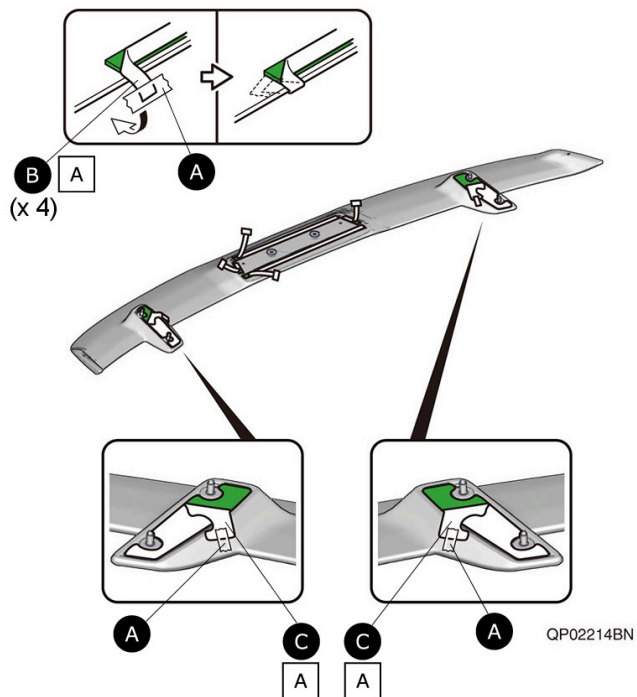

A	MASKING TAPE
B	TAB
C	ADHESIVE BACKING
A	Attach.


# 31

Install the spoiler.

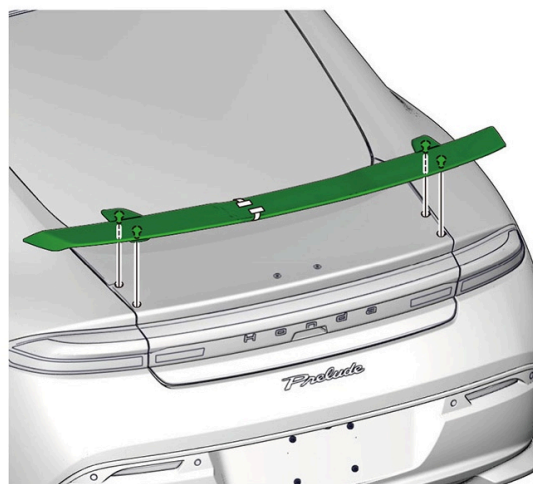


QP02215AN

## 32 Line up the spoiler.

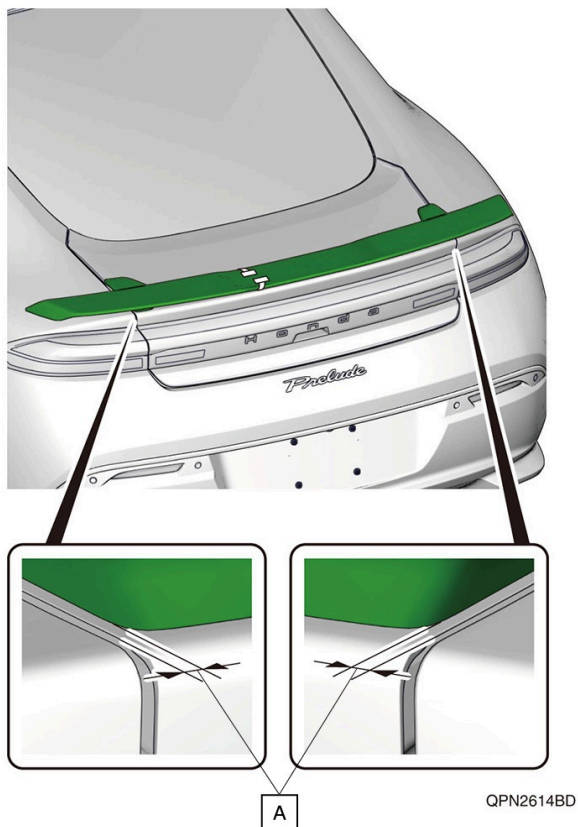

A	Equal spacing.
---	----------------

## 33 Loosely secure the spoiler.

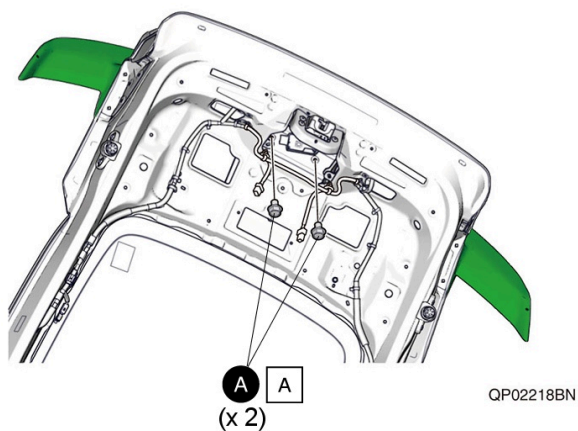


A	BOLT
A	Loosely secure.

## 34 Secure the spoiler.

### NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

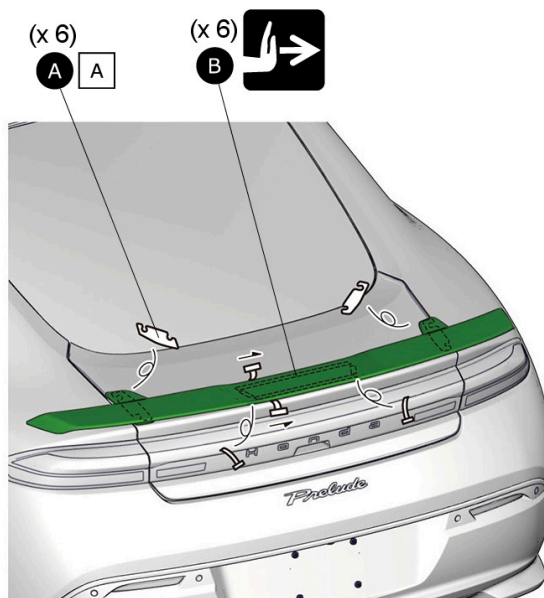


QP02216AN

<b>A</b>	ADHESIVE BACKING
<b>B</b>	DOUBLE-SIDED ADHESIVE TAPE
<b>A</b>	Remove.


# 35

Secure the spoiler.

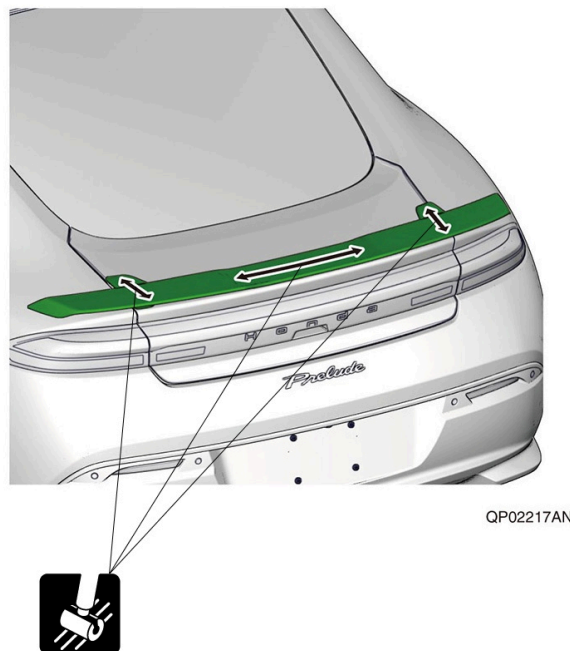


# 36

Secure the spoiler.

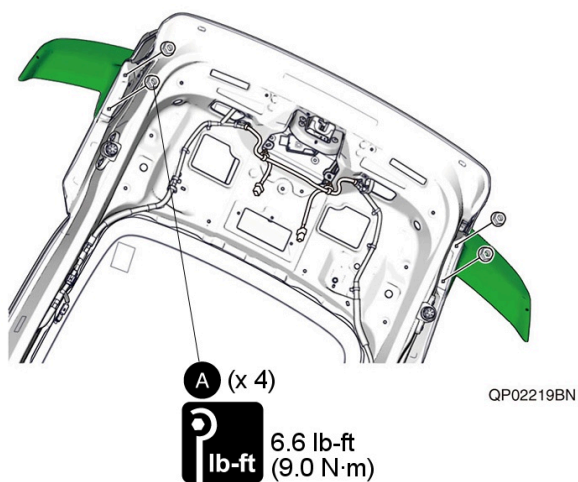

<b>A</b>	NUT
----------	-----

## 37 Secure the spoiler.

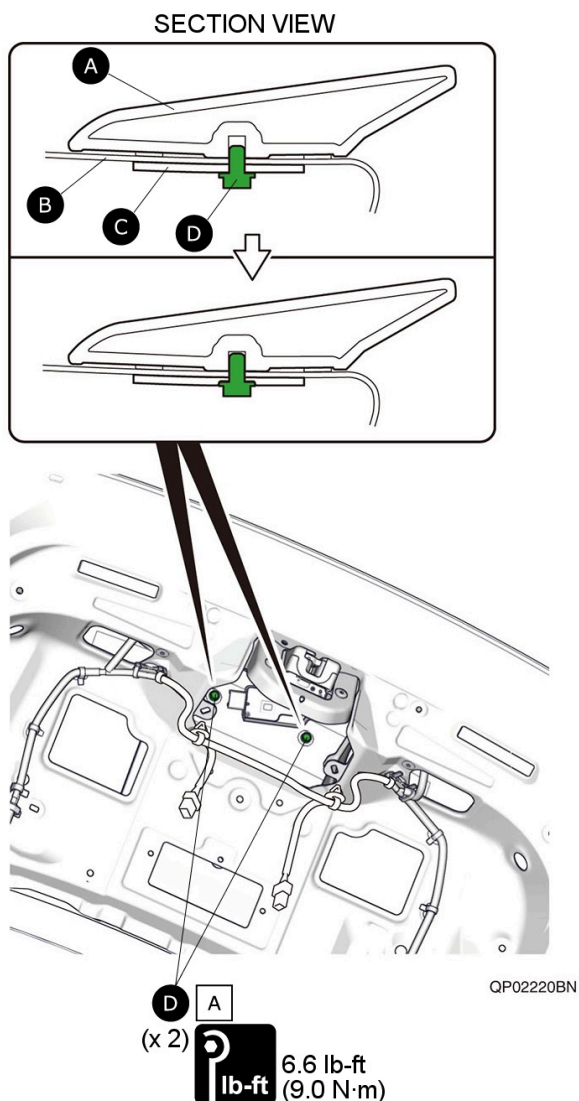

<b>A</b>	SPOILER
<b>B</b>	TAILGATE
<b>C</b>	CUSHION
<b>D</b>	BOLT
<b>A</b>	Tighten.

## Check After Installation

## 38 Check that all parts are installed and properly routed.

### NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

## ■ Installing All Removed Parts

**39** Install all removed parts.

## ■ Vehicle Check

**40** Connect the negative cable to the battery.

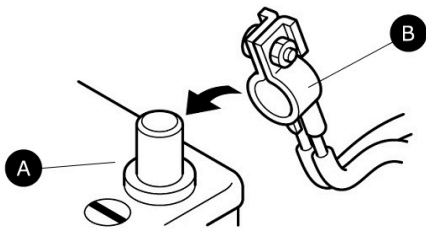

A	BATTERY
B	NEGATIVE CABLE

**41** Make sure all accessories and systems operate properly.

**42** If necessary, restore the systems back to normal operation as described in the service information.

**43** Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.