



INSTALLATION INSTRUCTIONS

Accessory
CHROME DOOR TRIMS
 P/N 08F57-T6Z-100

Application
2017 RIDGELINE

Publications No.
VERSION 1
 Issue Date
MAY 2016

PARTS LIST

Left front chrome door trim



Right front chrome door trim



Left rear chrome door trim



Right rear chrome door trim




22 Flange nuts



TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Drill
- 3 mm and 7 mm Drill bits
- Blanket
- Eye protection (safety goggles, face shield, etc.)
- Pushpin
- File
- Masking tape
- 8 mm Socket
- Ratchet
- Torque wrench

Illustration of the Chrome Door Trims on the Vehicle

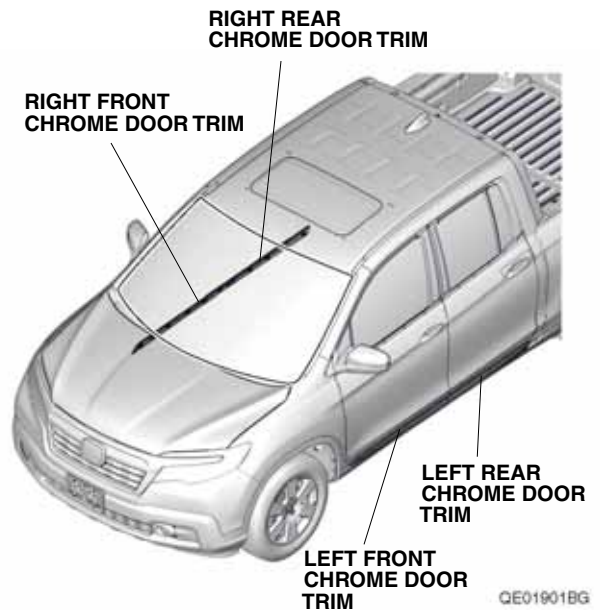


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE: Do not damage the body paint finish.

Installing the Front Chrome Door Trims


1. Open the left front door. Remove one plastic cap and one screw inside of the left front door panel.

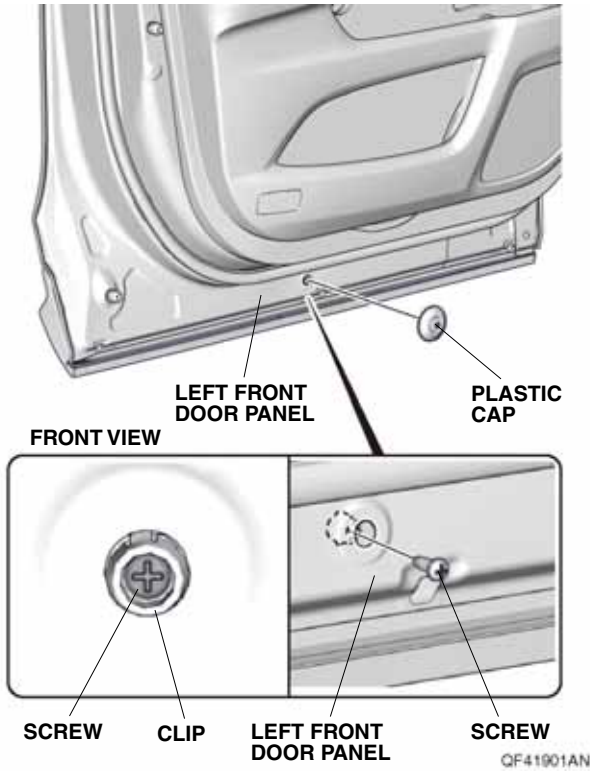


2. Slide and remove the left front door lower trim from the left front door.

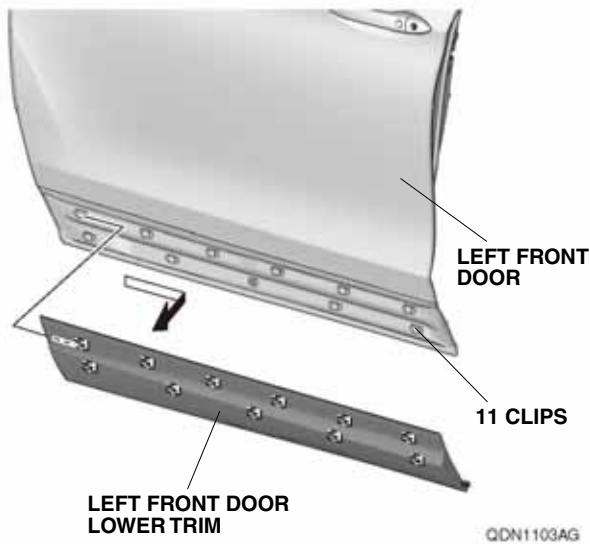


3. Remove the 11 clips from the left front door.

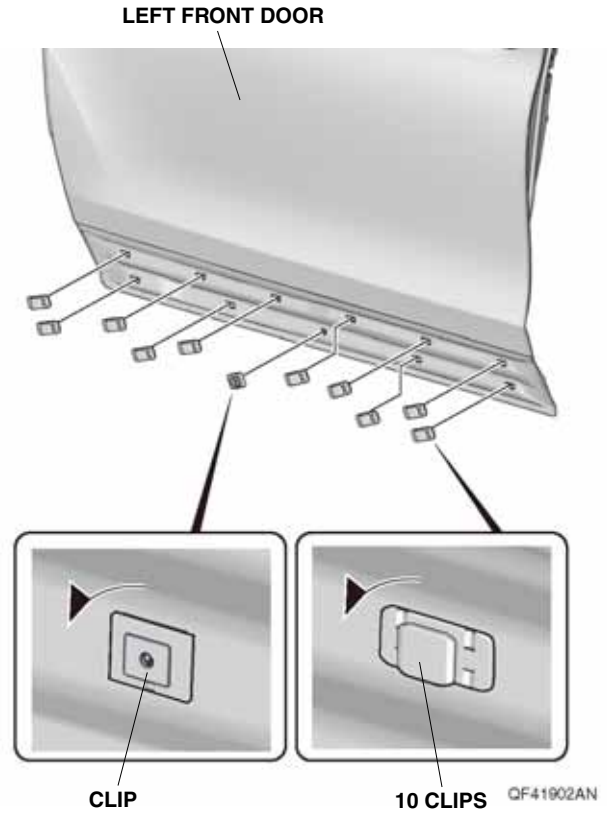

4. Reinstall the 11 clips removed in step 3 and one screw removed in step 1 to the left front door lower trim.

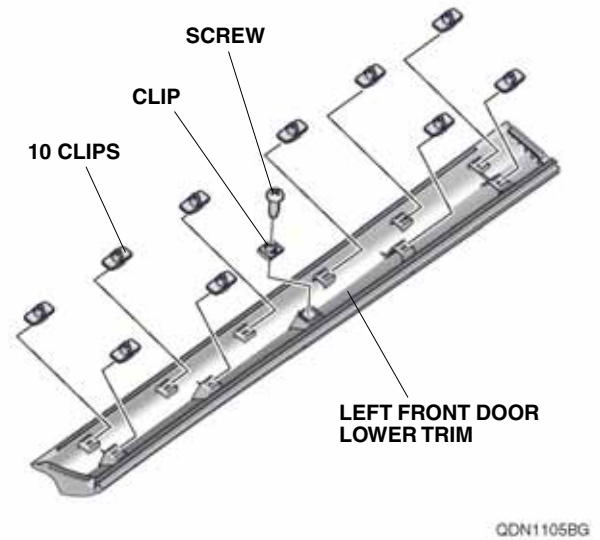


5. Attach masking tape to the left front door lower trim as shown.

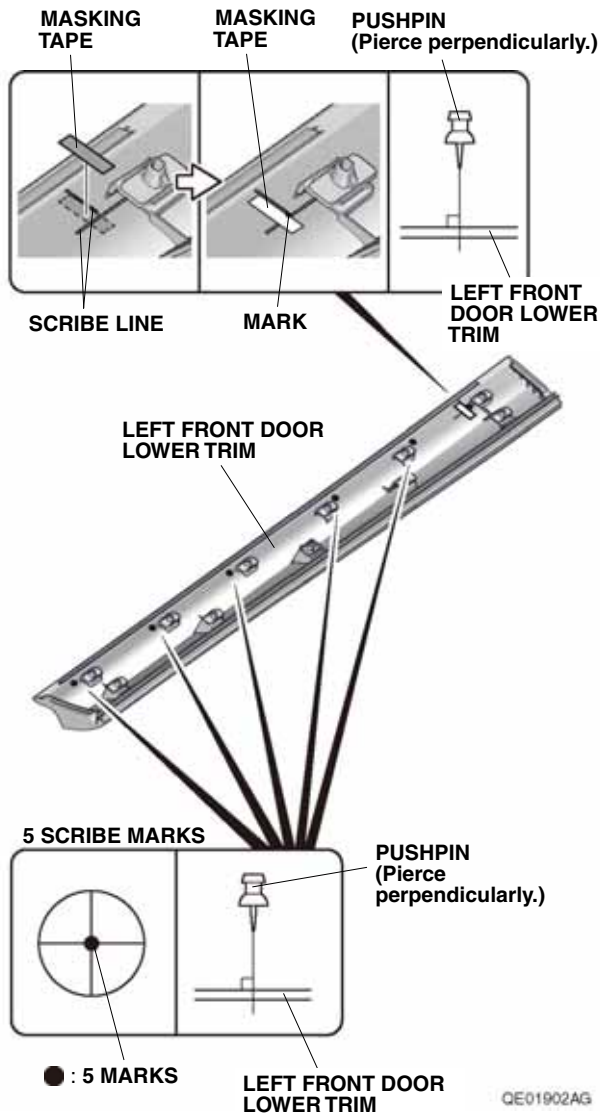


6. Using a pushpin, pierce the left front door lower trim as shown. Remove the masking tape.
NOTE: Make sure to pierce perpendicularly to the left front door lower trim.
7. Using a pushpin, pierce the left front door lower trim through the center of the five scribe marks.
NOTE: Make sure to pierce perpendicularly to the left front door lower trim.

8. While wearing eye protection, drill the six pierced marks to 7 mm. Drill first with a 3 mm drill bit, then finish with a 7 mm drill bit. Remove any burrs.
NOTE: Make sure to drill perpendicularly to the left front door lower trim.

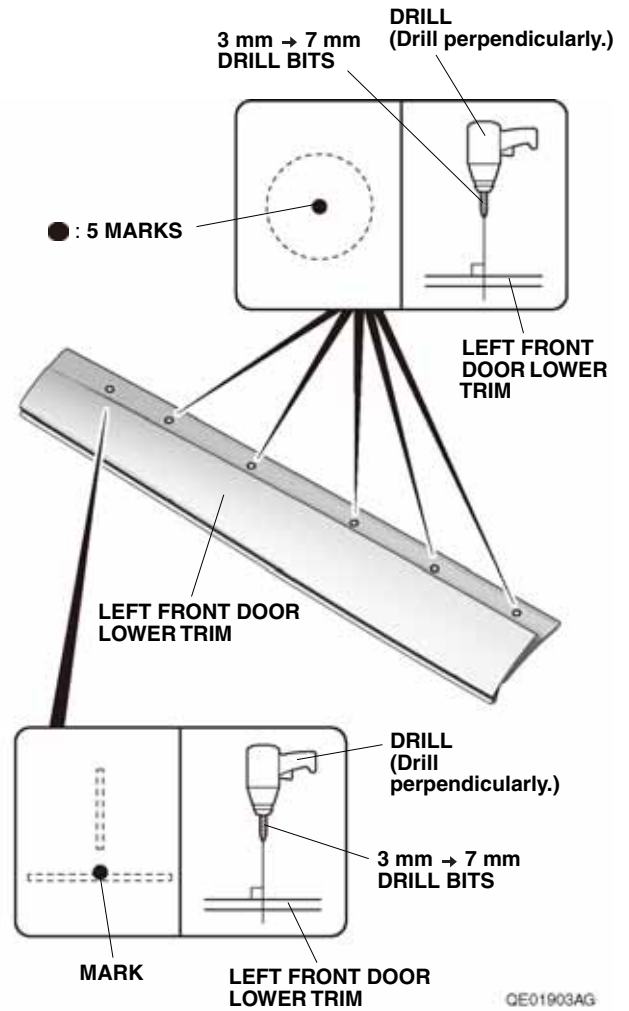


9. Install the left front chrome door trim to the left front door lower trim.

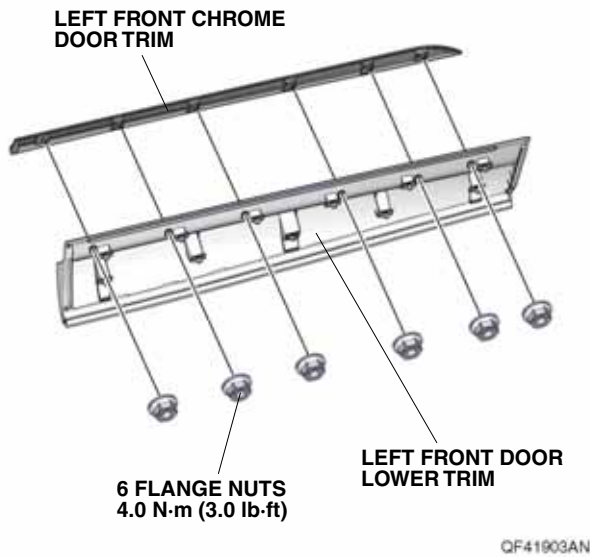

10. Secure the left front chrome door trim to the left front door lower trim with six flange nuts. Torque the flange nuts to 4.0 N-m (3.0 lb-ft).


11. Install the left front door lower trim to the left front door.

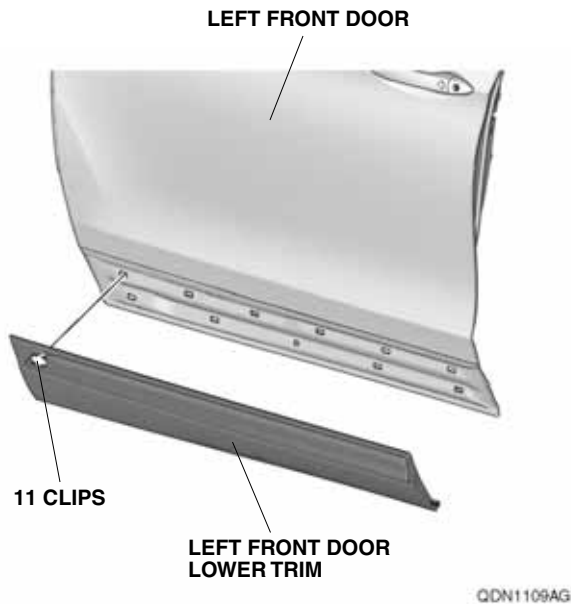


12. Reinstall the plastic cap removed in step 1 to the left front door.
13. Repeat steps 1 through 12 to install the right front chrome door trim to the right front door.

Installing the Rear Chrome Door Trims


14. Open the left rear door. Remove one plastic cap and one screw inside of the left rear door panel.

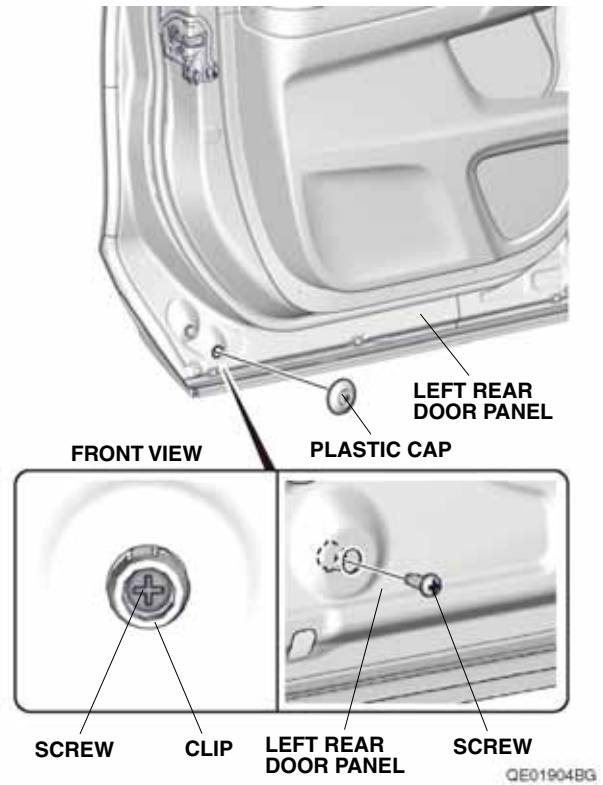


15. Slide and remove the left rear door lower trim from the left rear door.

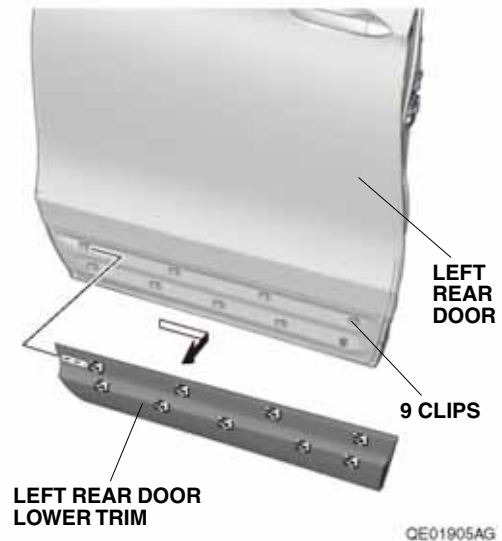


16. Remove the nine clips from the left rear door.

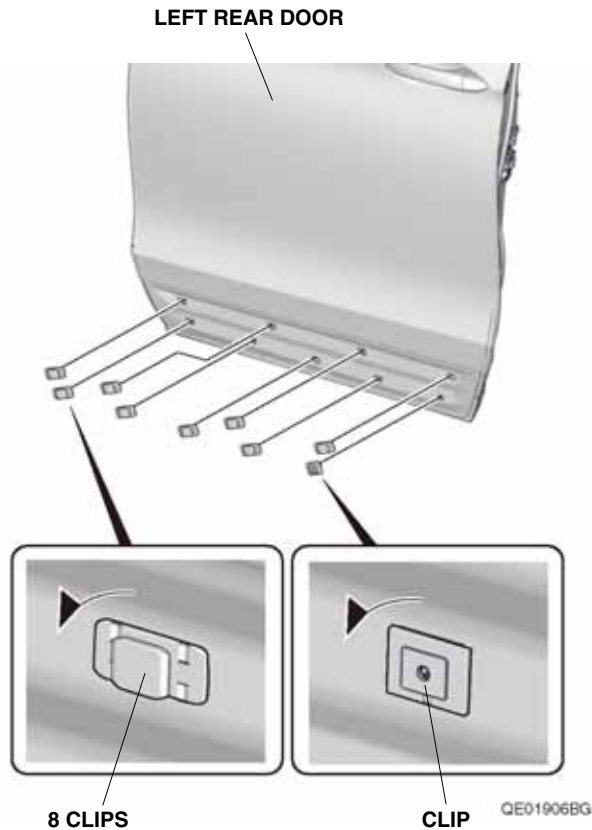


17. Reinstall the nine clips removed in step 16 and one screw removed in step 14 to the left rear door lower trim.

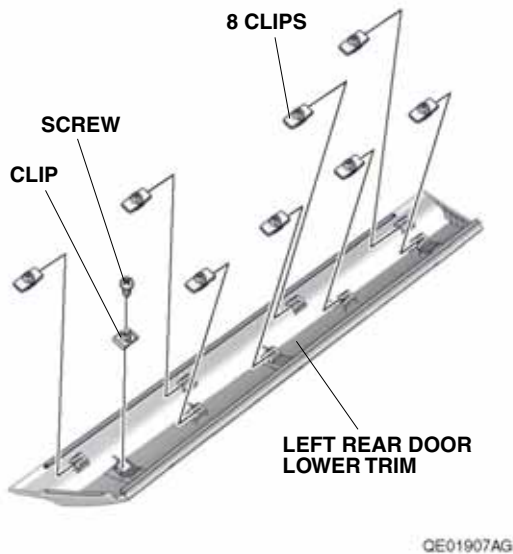


18. Using a pushpin, pierce the left rear door lower trim through the center of the five scribe marks.
NOTE: Make sure to pierce perpendicularly to the left rear door lower trim.

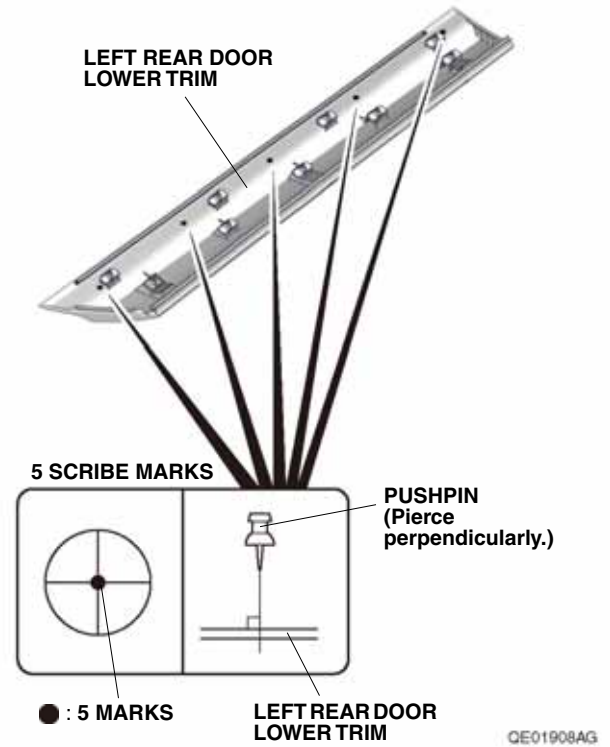

19. While wearing eye protection, drill the five pierced marks to 7 mm. Drill first with a 3 mm drill bit, then finish with a 7 mm drill bit. Remove any burrs.
NOTE: Make sure to drill perpendicularly to the left rear door lower trim.

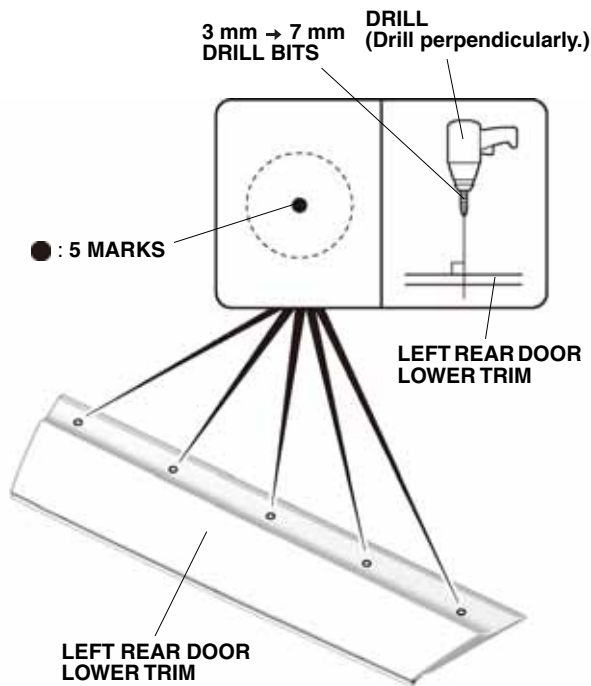

20. Install the left rear chrome door trim to the left rear door lower trim.

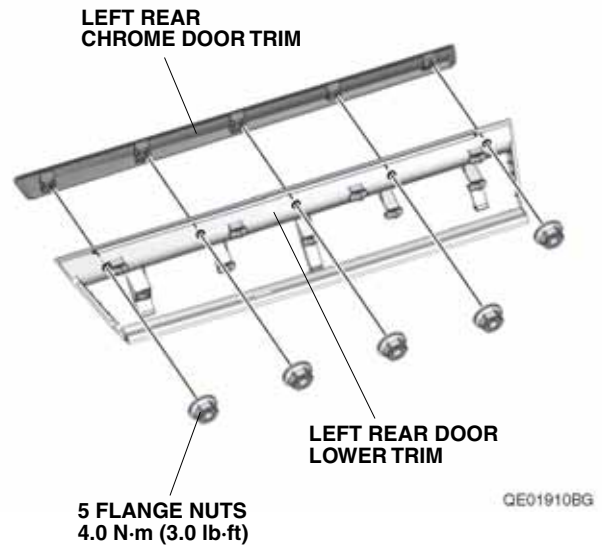

21. Secure the left rear chrome door trim to the left rear door lower trim with five flange nuts. Torque the flange nuts to 4.0 N·m (3.0 lb-ft).
22. Install the left rear door lower trim to the left rear door.



23. Install the plastic cap removed in step 14 to the left rear door.
24. Repeat steps 14 through 23 to install the right rear chrome door trim to the right rear door.