



HONDA INSTALLATION INSTRUCTIONS

Accessory

BODY SIDE MOLDINGS
P/N 08P05-T6Z-100

Application

2019 RIDGELINE

Publications No.

VERSION 1

Issue Date

FEB 2018

PARTS LIST

Left front body side molding



Right front body side molding



Left rear body side molding



Right rear body side molding



Front template



Middle template



Rear template



4 Alcohol swabs




TOOLS AND SUPPLIES REQUIRED

Masking tape

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.


Rubber Roller (T/N MHLE54D)

Illustration of the Body Side Moldings on the Vehicle

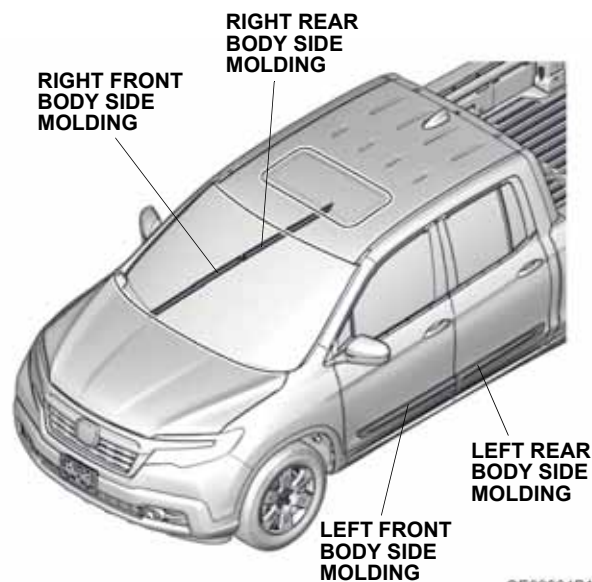


QE02904BA


2. Line up the middle template with the character line and attach it to the left front door and left rear door with masking tape as shown.

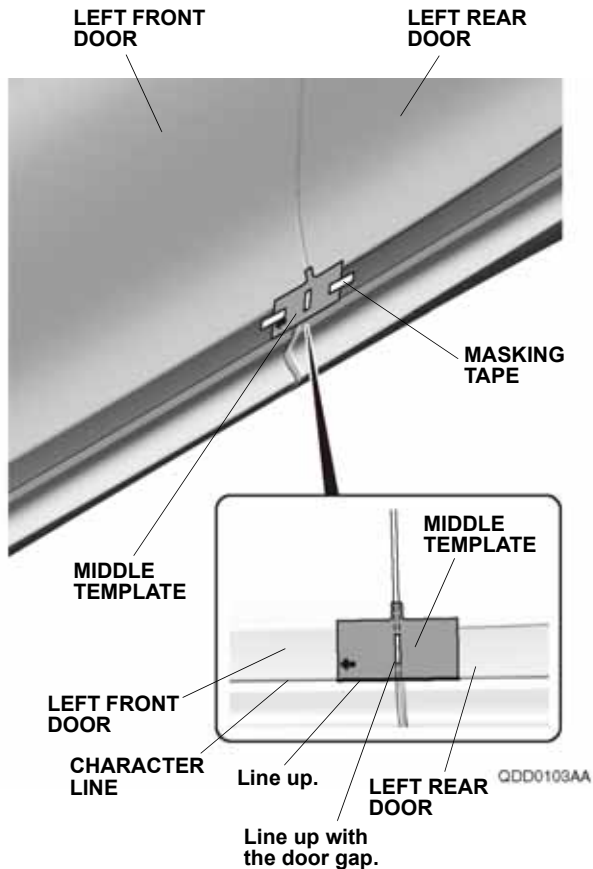

3. Fold the tab, line up the rear template with the character lines and attach it to the left rear door with masking tape as shown.

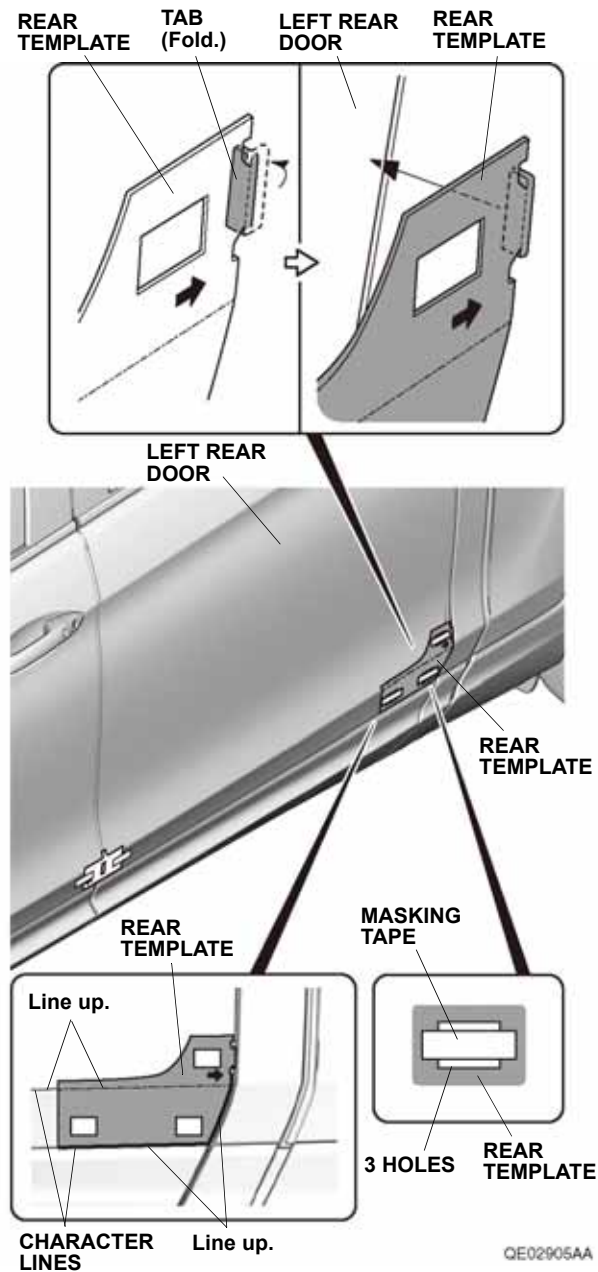


- Using one alcohol swab, thoroughly clean the left front door where the left front body side molding will attach.

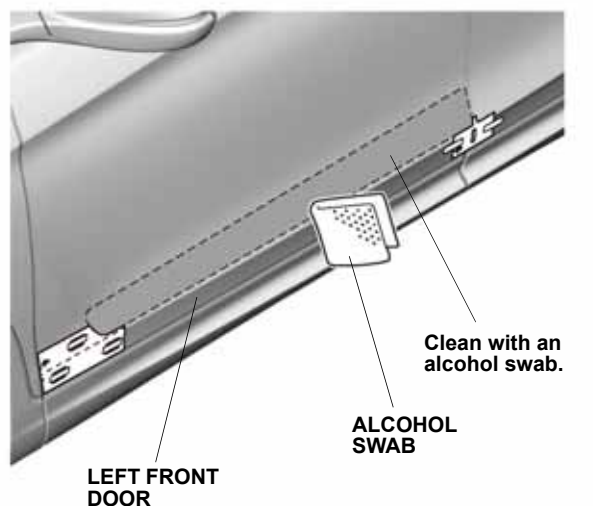


QDD0105AA

- Peel back the adhesive backings and tape them to the front surface of the left front body side molding. Remove the remaining adhesive backings.

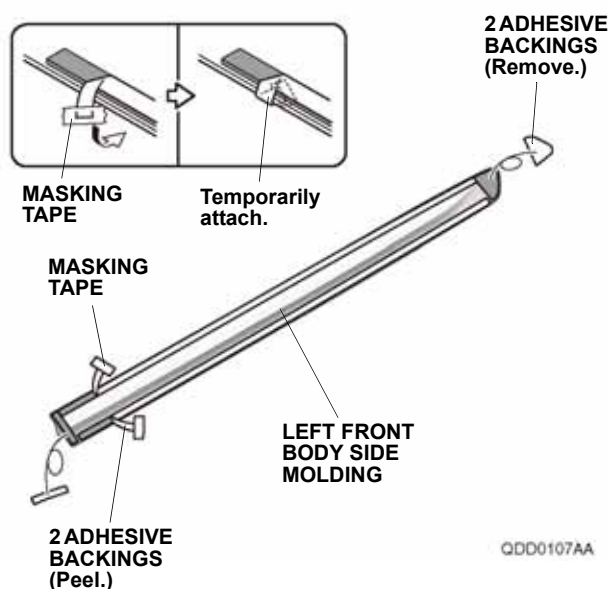


QDD0107AA

- Line up the left front body side molding with the front and middle templates and attach it to the left front door as shown.

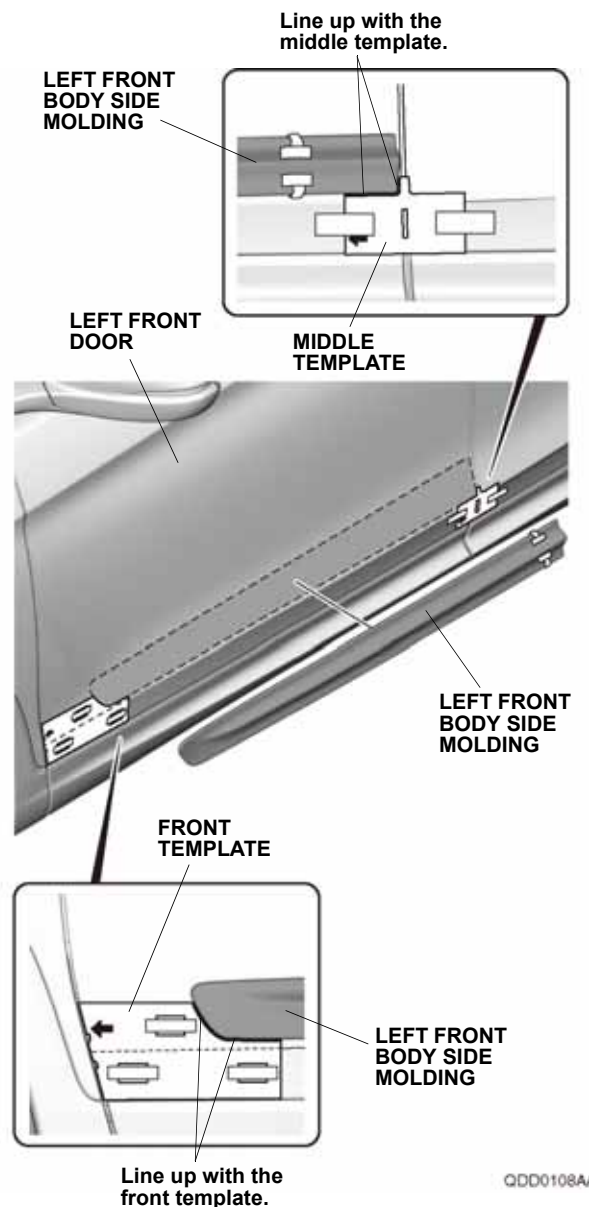


QDD0108AA

7. While applying light pressure to the left front body side molding, carefully remove the taped adhesive backings.

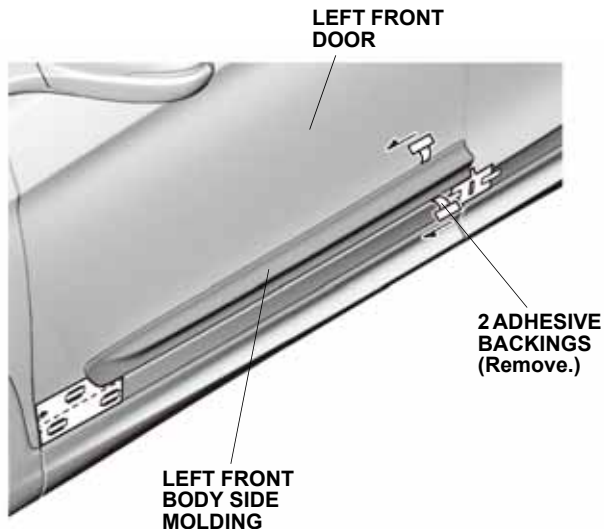


QDD0109AA

8. Using a rubber roller, apply firm pressure while rolling, especially at the ends, to set the adhesive.

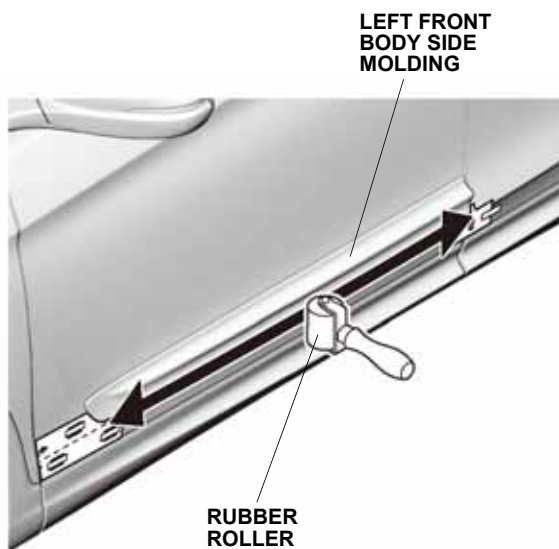


QDD0110AA

9. Using one alcohol swab, thoroughly clean the left rear door where the left rear body side molding will attach.

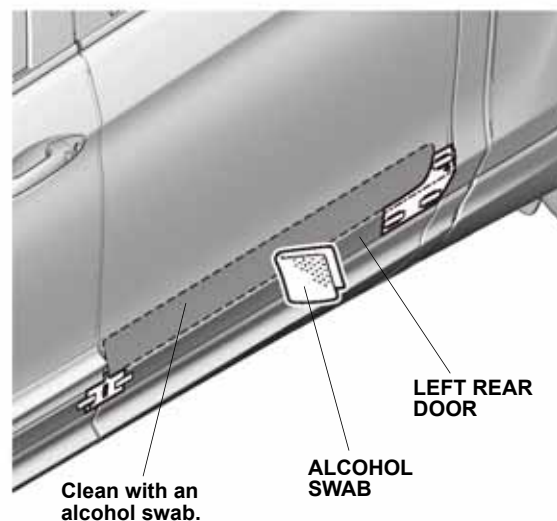


QE02906BA

10. Peel back the adhesive backings and tape them to the front surface of the left rear body side molding with masking tape. Remove the remaining adhesive backings.

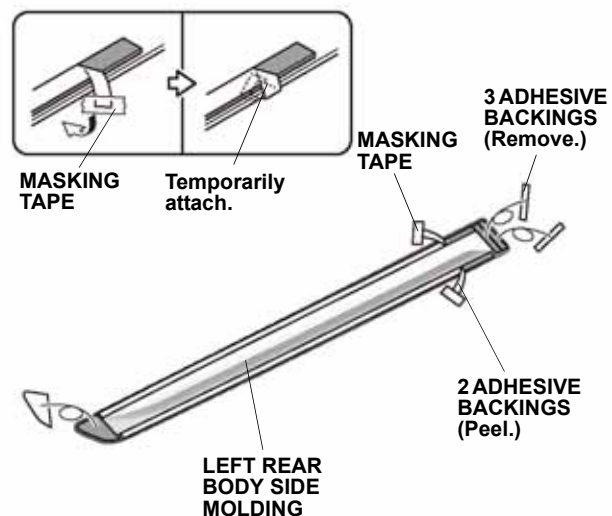


QE02907AA


11. Line up the left rear body side molding with the middle and rear templates and attach it to the left rear door as shown.

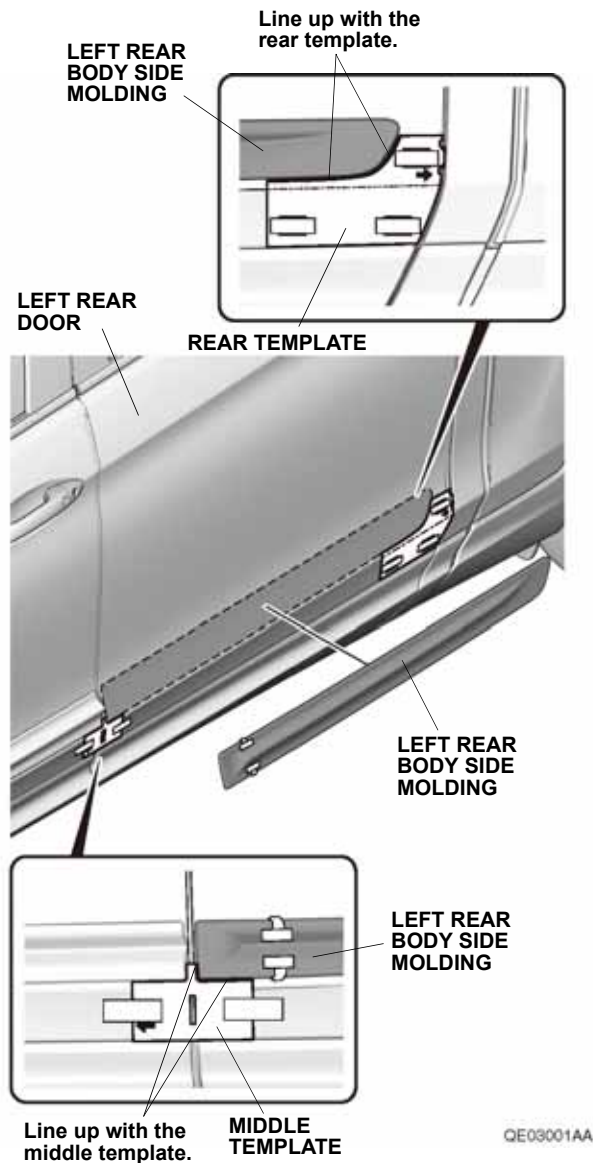

12. While applying light pressure to the left rear body side molding, carefully remove the taped adhesive backings.

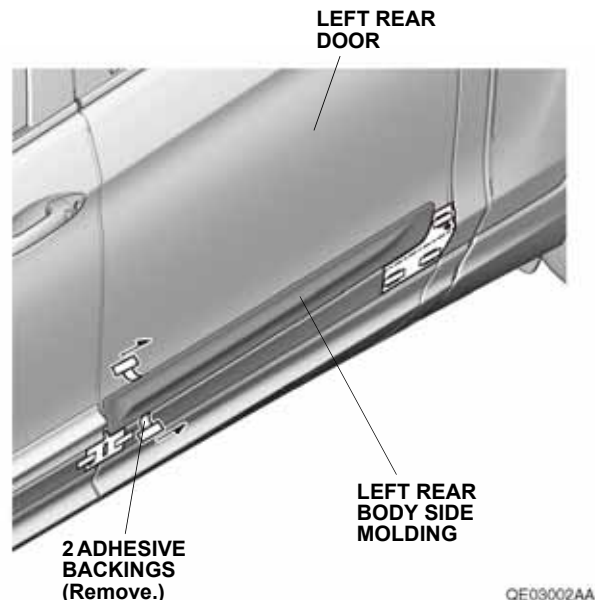

13. Using a rubber roller, apply firm pressure while rolling, especially at the ends, to set the adhesive.

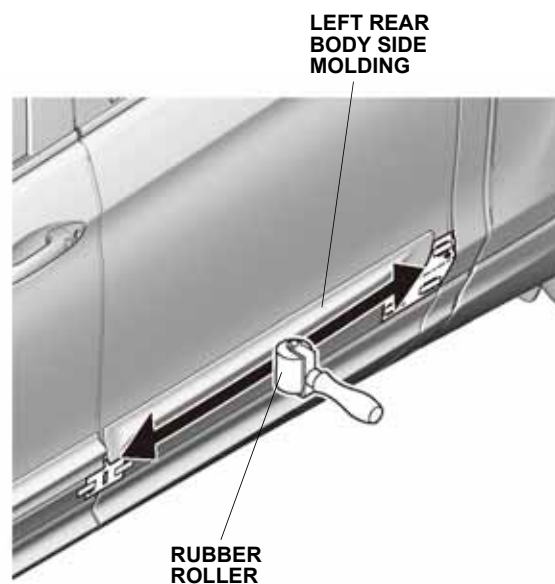

14. Remove the templates. Turn the templates over and repeat steps 1 through 13 to install the right body side moldings.