



## INSTALLATION INSTRUCTIONS

Accessory

STICKER PACKAGE

Application

2021 RIDGELINE

Publications No.

VERSION 1


Issue Date

NOV 2020

## GENERAL VIEW

This part is made for cross application with fender flares, install the fender flares first.

LEFT FENDER  
STICKER

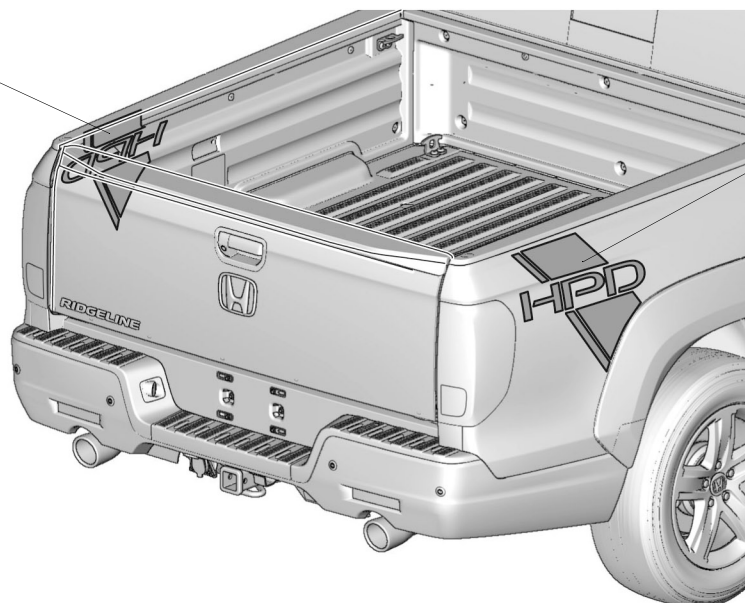

RIGHT FENDER  
STICKER

QK70601BN

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product or vehicle or the environment.

**NOTE**

Gives helpful information or instructions to be followed when using the product.




Indicates a prohibited action


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.

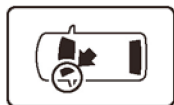

The location on the vehicle.

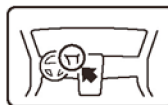

The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not use.)

## Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use a bonding material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part before the adhesive releases.
- Cover the around parts with the shop towel for not to wet.
- Use the 3M protective tape application solution with a spray bottle.
- Not to wash the vehicle for 24 hours to allow the adhesive to cure.



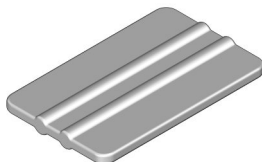
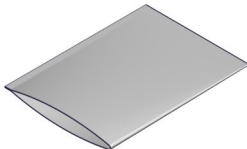

## PARTS LIST

### Stickers Kit

(P/N 08F30-T6Z-100)

(P/N 08F30-T6Z-P00)

(\*: The part differs depending on the kit.)

Left fender sticker	Right fender sticker	*Applicator (P/N 08F30-T6Z-100)	*Felt sleeve (P/N 08F30-T6Z-100)
			
*Alcohol wipes (8) (P/N 08F30-T6Z-100)			
			

## REQUIRED TOOLS AND SUPPLIES



- Shop towel
- 3M Protective tape application solution
- Spray bottle
- Masking tape
- Gloves

## INSTALLATION


1. Clean the attaching area.

### NOTE


Allow to dry thoroughly.

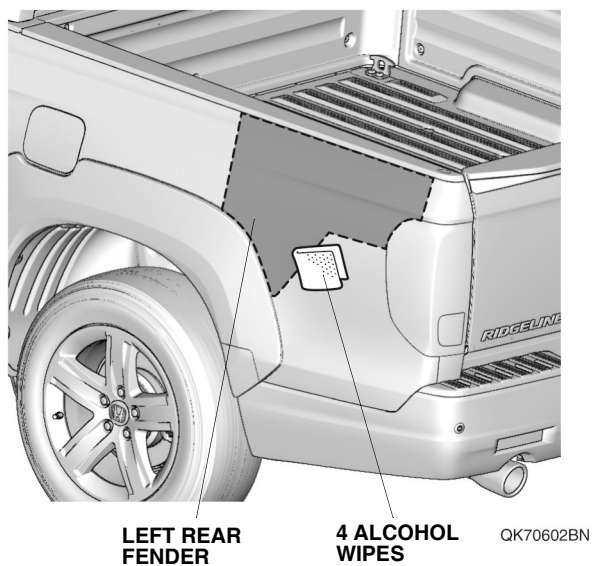

2. Line up the left fender sticker.

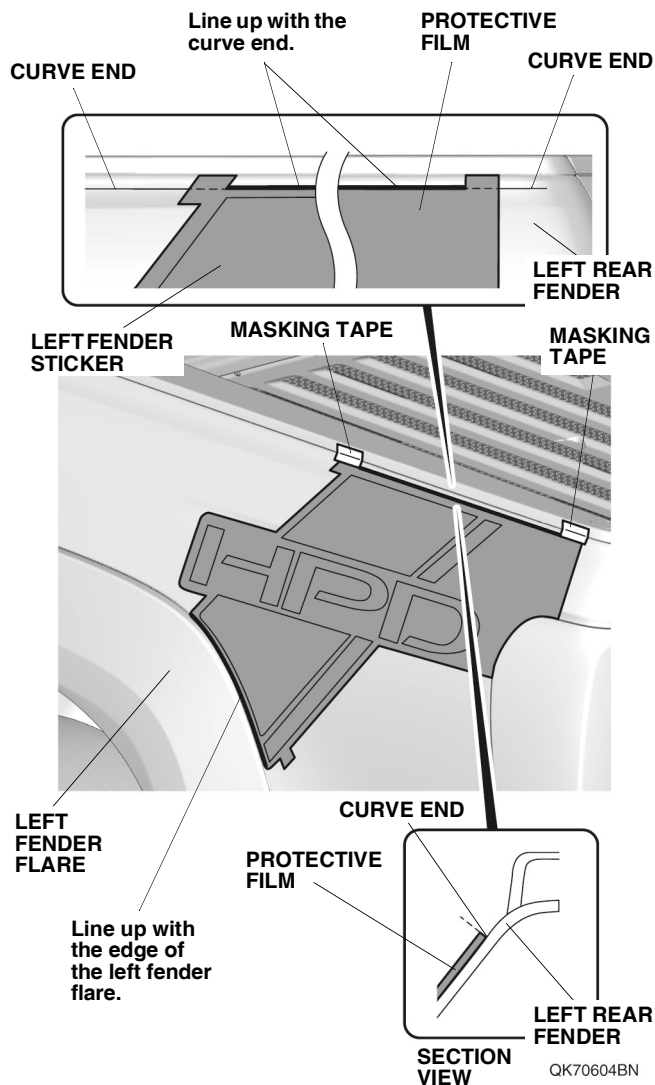

3. Remove the adhesive backing.

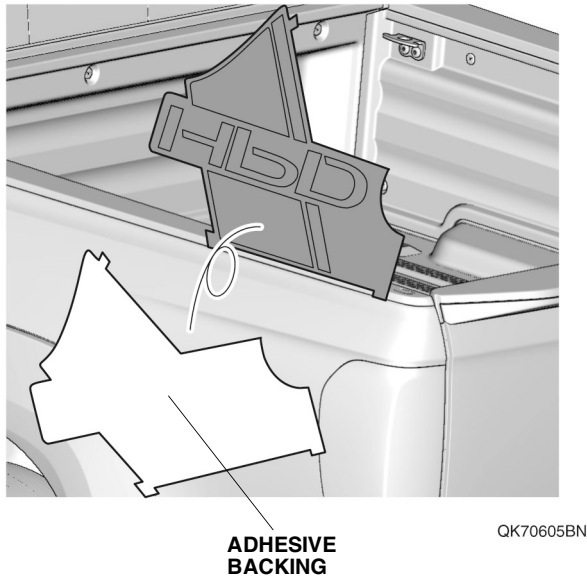

4. Spray the left fender sticker and left rear fender.


## NOTE

Always wear gloves when working with 3M Protective tape application solution.



SPRAY BOTTLE



5. Secure the left fender sticker.

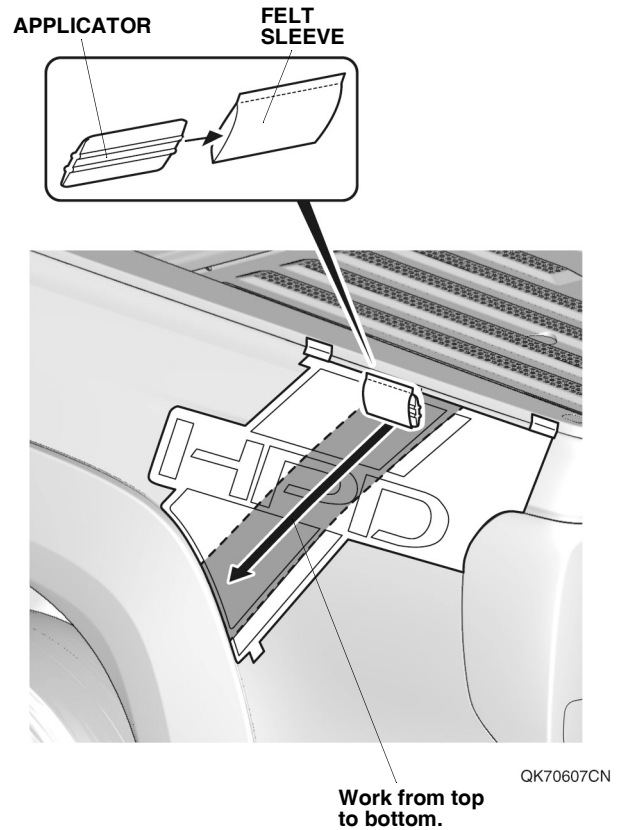

6. Secure the left fender sticker.

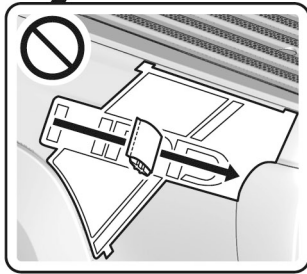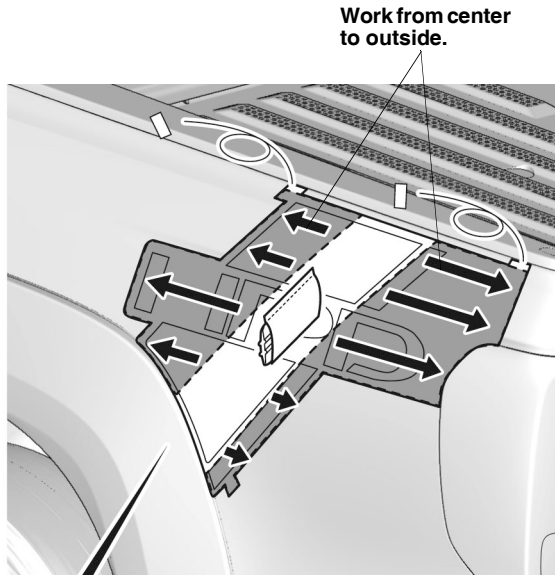



QK70608CN

7. Remove the masking tape.


8. Remove the protective film.

## NOTE

Do not pull up on the protective film.

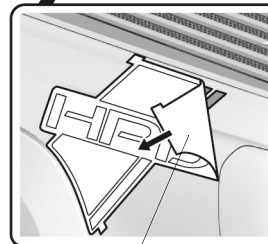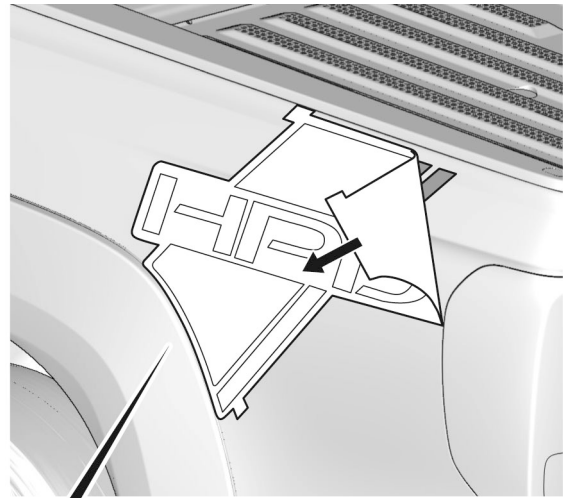

Peel along the left fender sticker.

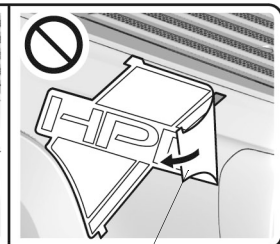


Do not pull up.

QK70609CN


9. Wipe up the 3M protective tape application solution.

<b>NOTE</b>
Allow to dry thoroughly.

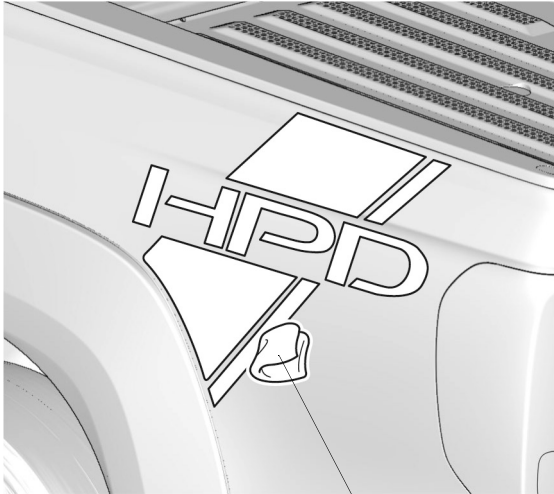

SHOP TOWEL QK70610BN

10. Repeat same procedures for the other side.

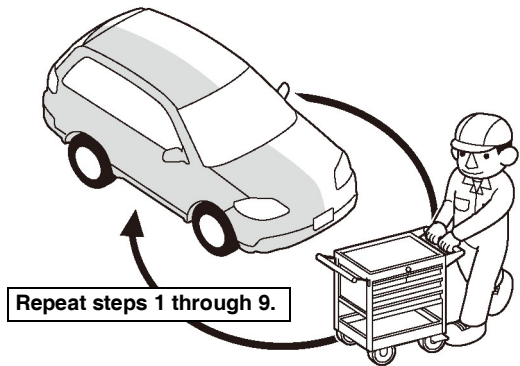

Q9D1014AM

11. Check that all parts are installed properly.