



INSTALLATION INSTRUCTIONS


Accessory
STEERING WHEEL COVER

Application
2009 FIT


Publications No.
All 39829
Issue Date
AUG 2008

PARTS LIST


Steering wheel cover

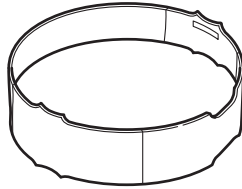

Needle



Lacing string

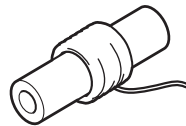

TOOLS AND SUPPLIES REQUIRED

Shop towel

Gloves

Masking tape

Isopropyl alcohol

Scissors


INSTALLATION

NOTE


- Using isopropyl alcohol, thoroughly clean the steering wheel before installing the wheel cover.
- You may want to wear gloves to protect your hands during installation.

1. Center the steering wheel.



2. Put the steering wheel cover on the steering wheel so the adhesive tapes on the inside of the steering wheel cover set at each spoke of the steering wheel.

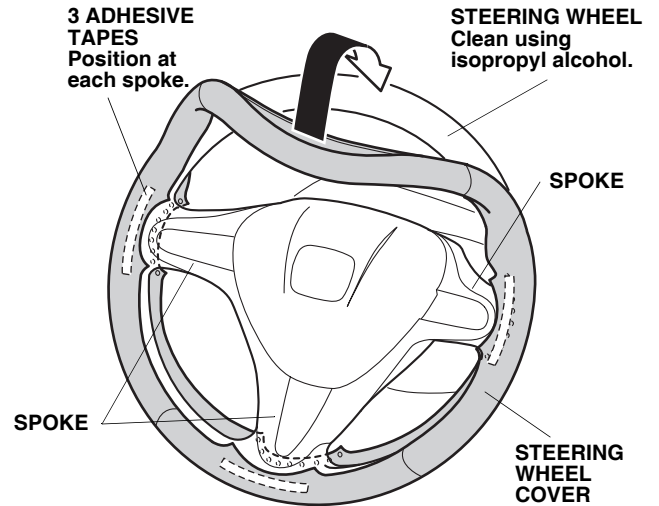


3. Locate the positions where the adhesive tapes will attach, and clean the steering wheel with isopropyl alcohol.
4. Peel back the adhesive backings partway.

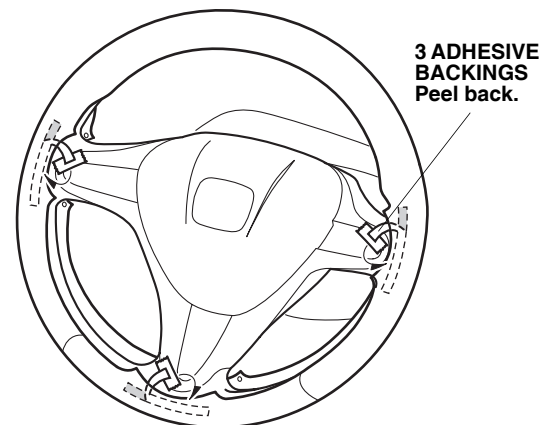


5. Thread a needle. Make inclined stitches in the steering wheel cover up to the hole that is right above the spoke as shown. Stick the needle into the steering wheel cover at the point marked below, and start stitching.

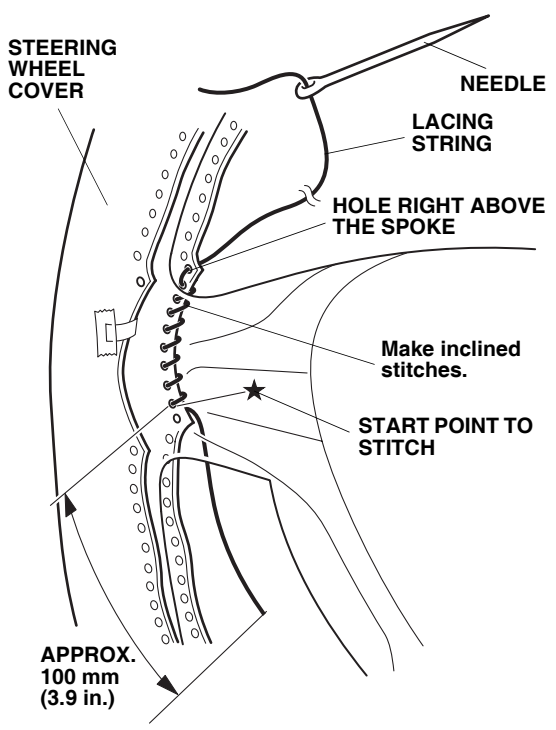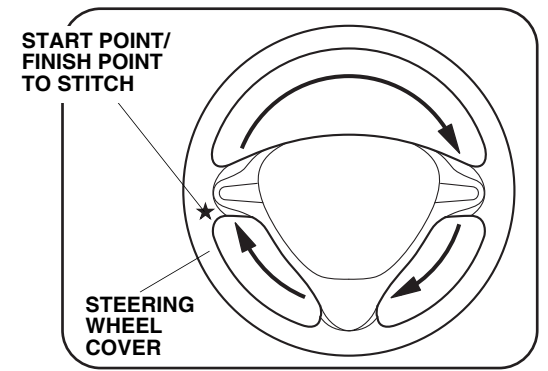


6. Stitch twice at the hole right above the spoke, and pull the lacing string to close the seam securely. Pull the lacing string securely to bring both ends of the steering wheel cover together very closely.

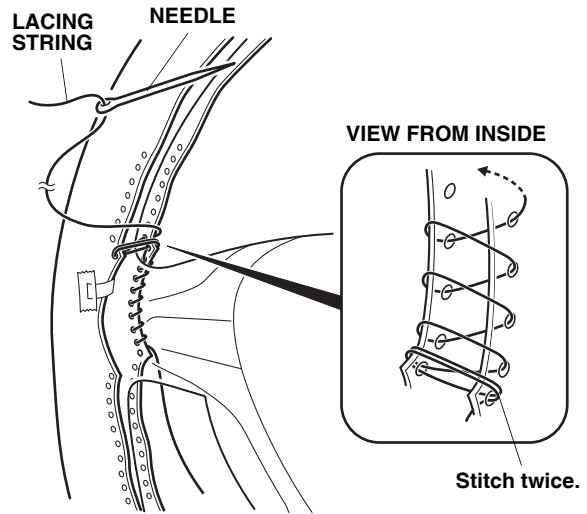


7. Keep stitching the steering wheel cover so the stitches show the inclined line pattern (right side up).
- Pull the lacing string and close the seam securely at each stitch.
 - Keep stitching the steering wheel cover so the seam shows the center line on the inside of the steering wheel.

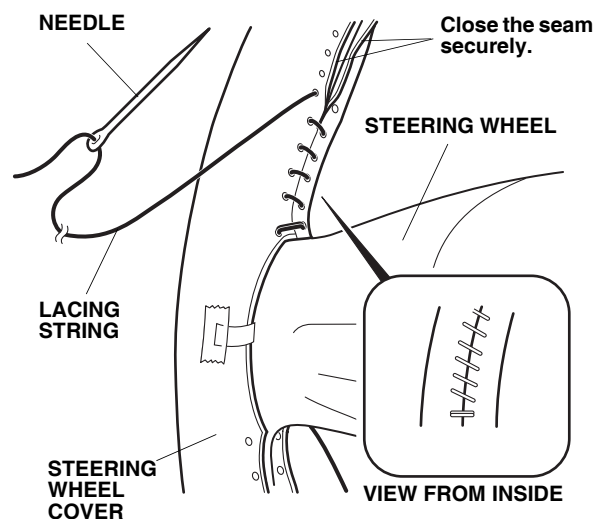

8. Keep stitching while adjusting the steering wheel cover so the joints of both ends of the cover are aligned.

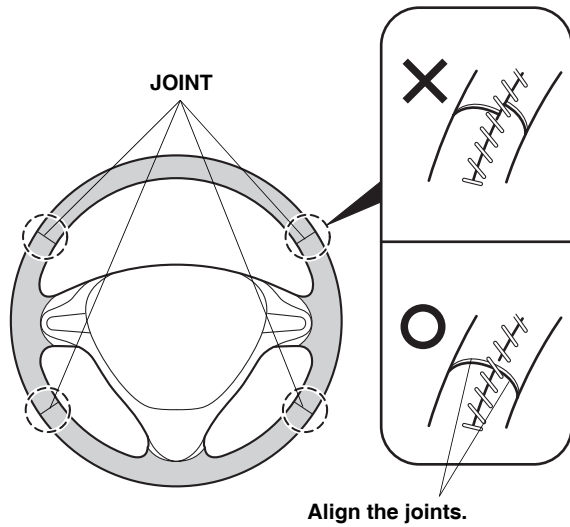


9. Stitch the spoke area of the steering wheel cover as shown. Stitch twice at the holes in the steering wheel cover that are right below and right above the spoke.

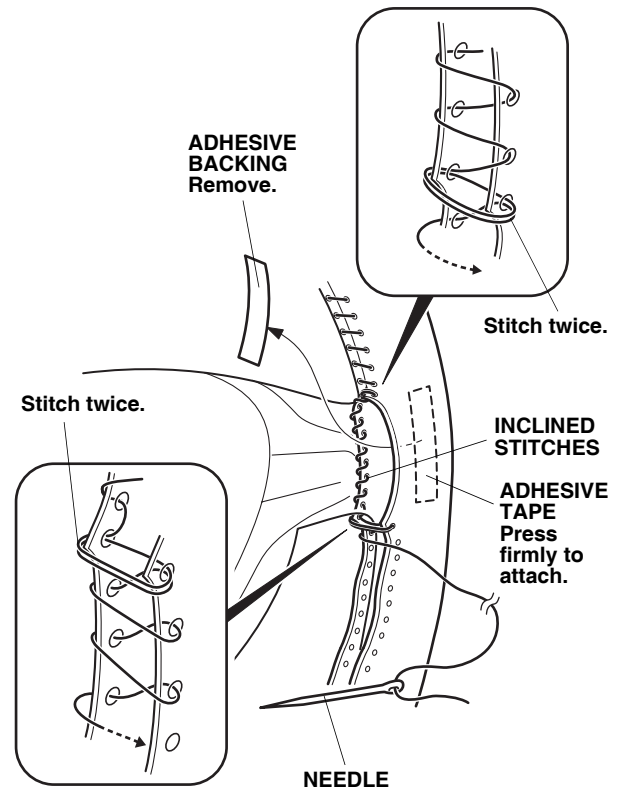

10. Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.
11. Stitch the lower part of the steering wheel cover in the same manner.

12. After stitching the steering wheel cover while removing the adhesive backings, pull the finishing end of the lacing string out of the joint of the steering wheel cover. Be sure that both the starting end and finishing end of the lacing strings are out of the joint of the steering wheel cover.

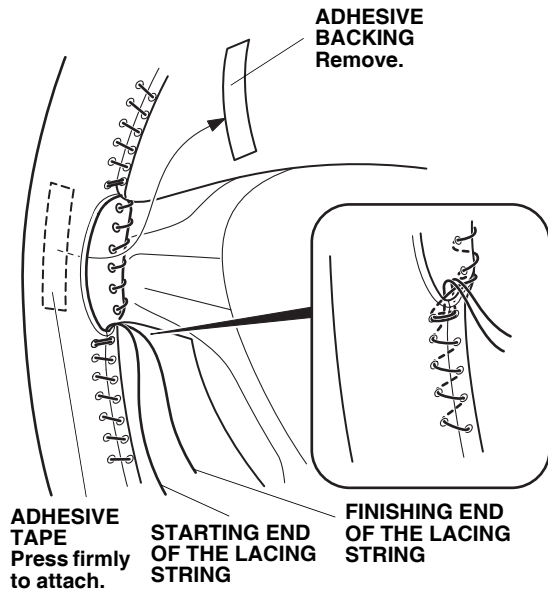

13. Make a knot twice in the end of the lacing strings, and cut off the excess.
14. Put the knots inside the steering wheel cover.
15. Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.