



## HONDA INSTALLATION INSTRUCTIONS

### Accessory

THIRD ROW SEAT COVERS  
P/N 08P32-TG7-100D  
P/N 08P32-TG7-100G

### Application

2017 PILOT

### Publications No.

VERSION 1


### Issue Date

OCT 2016


Put this information in the glove box with the vehicle Owner's Manual.

## PARTS LIST

Third row seat covers

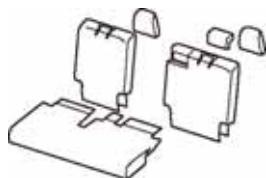


### Illustration of the Third Row Seat Covers in the Vehicle

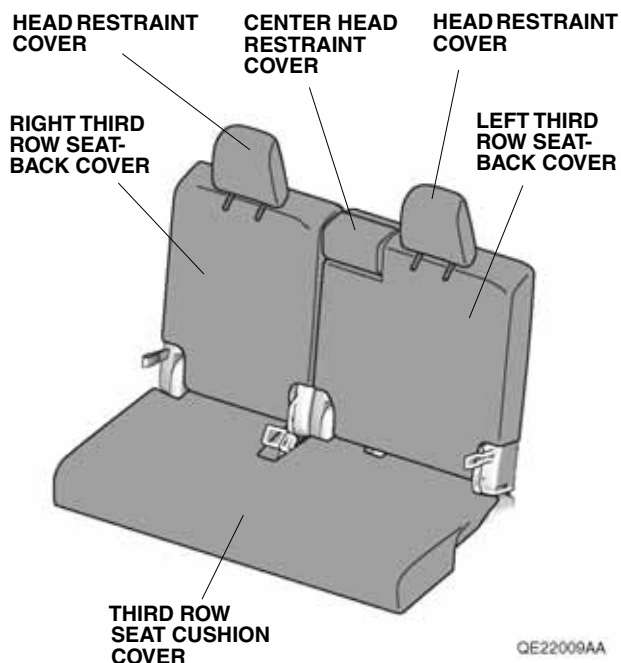


## INSTALLATION

### NOTE:

- Do not damage the vehicle during installation.
  - Do not install the seat covers to the front seat. Improperly covering the front seat may prevent the side airbag from inflating during the side impact.
  - Identify each seat cover by the tags on the back.
1. Push the knobs and remove the center head restraint from the third row seats.

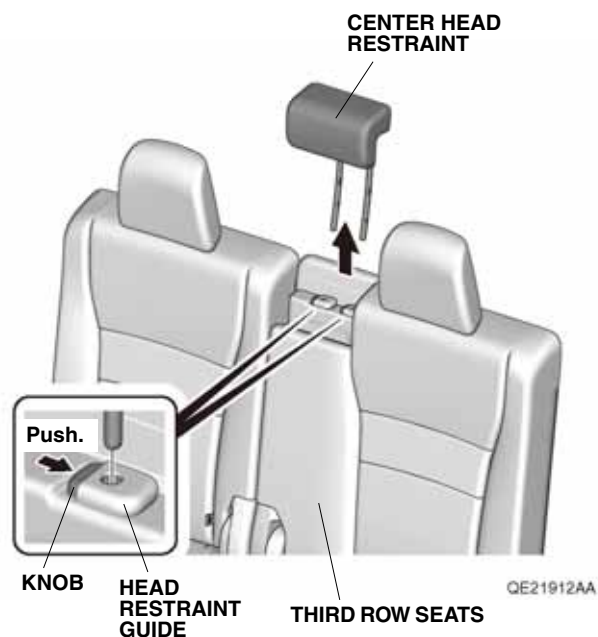


2. Install the center head restraint cover.

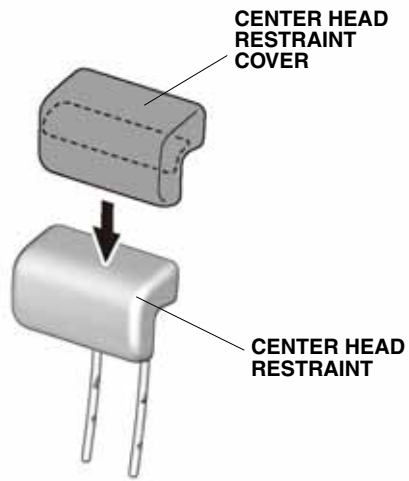


QE21913AA


3. Install the right third row seat-back cover on the right third row seat-back. Pull the strap through the hole on the right third row seat-back cover.

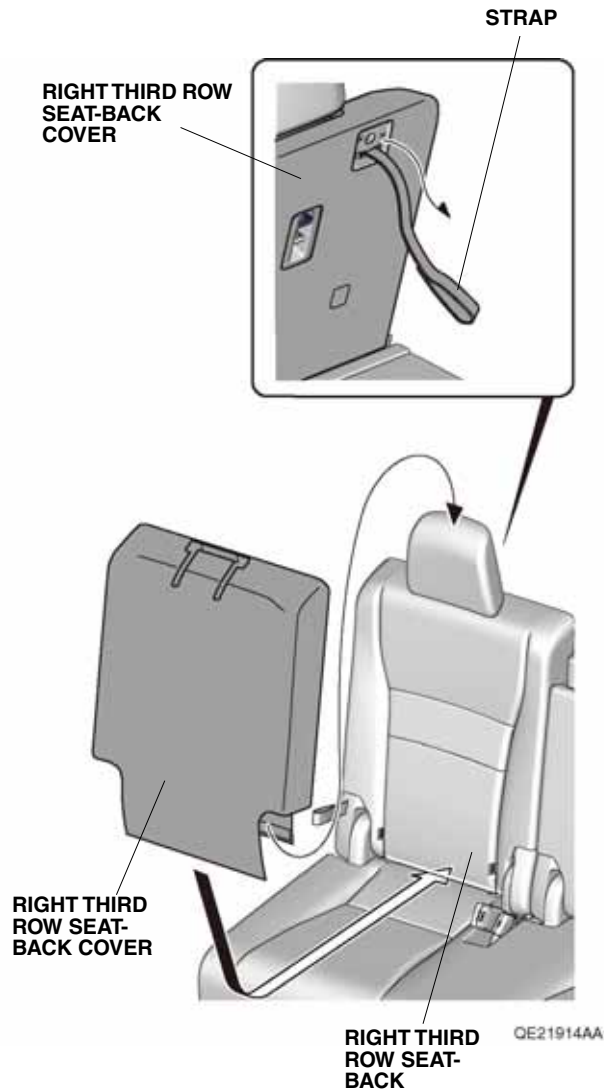


4. Secure the right third row seat-back cover with the fasteners.

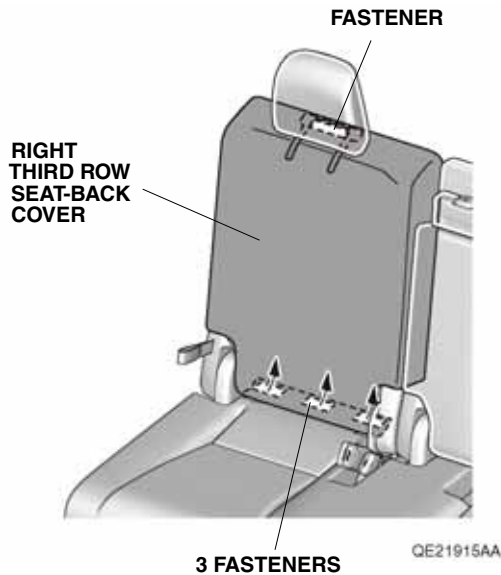


5. Secure the right third row seat-back cover with the fastener. Secure the strap to the right third row seat-back cover with the fastener.

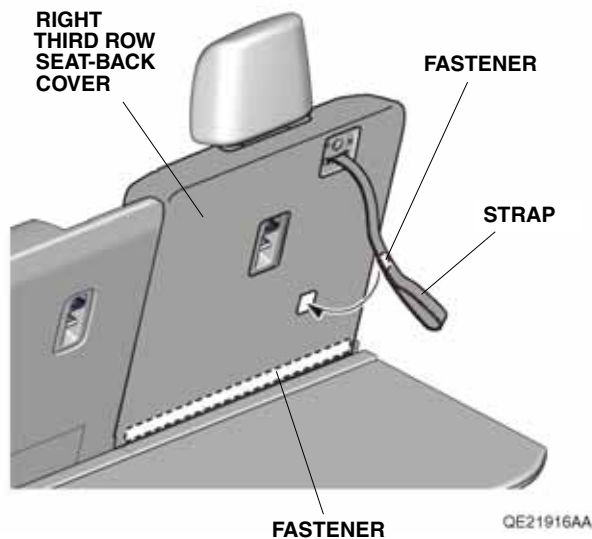


6. Install the left third row seat-back cover to the left third row seat-back. Pull the strap through the hole on the left third row seat-back cover.

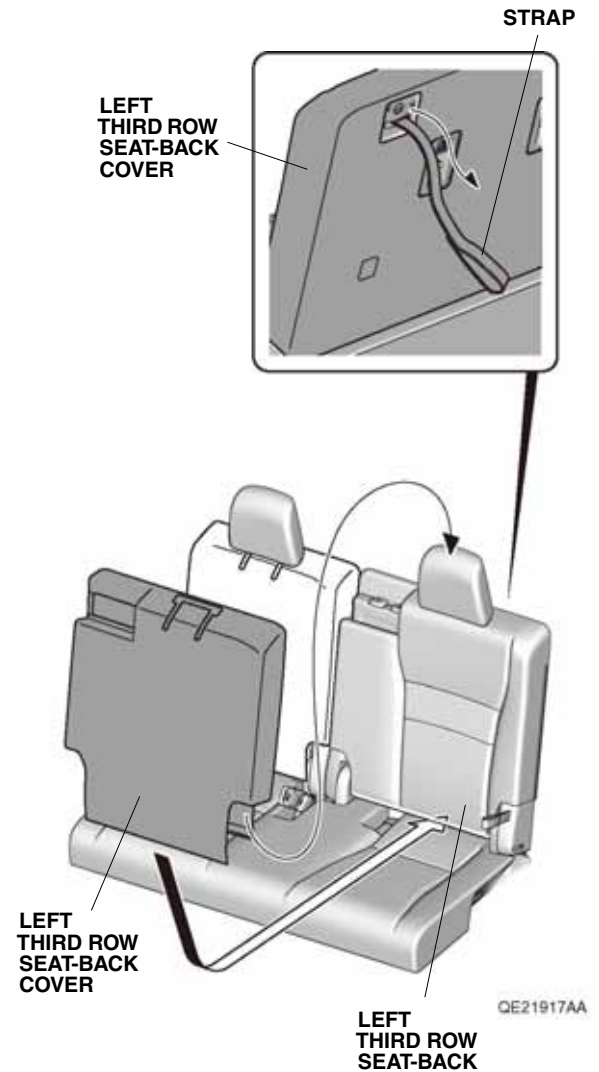


7. Secure the left third row seat-back cover with the fasteners.

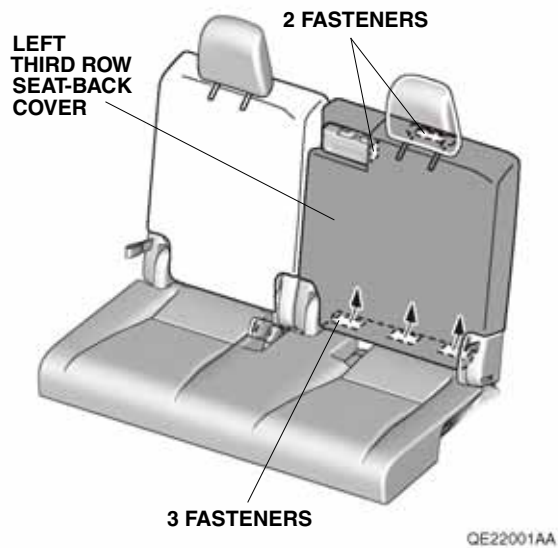


8. Secure the left third row seat-back cover with the fastener. Secure the strap to the left third row seat-back cover with the fastener.

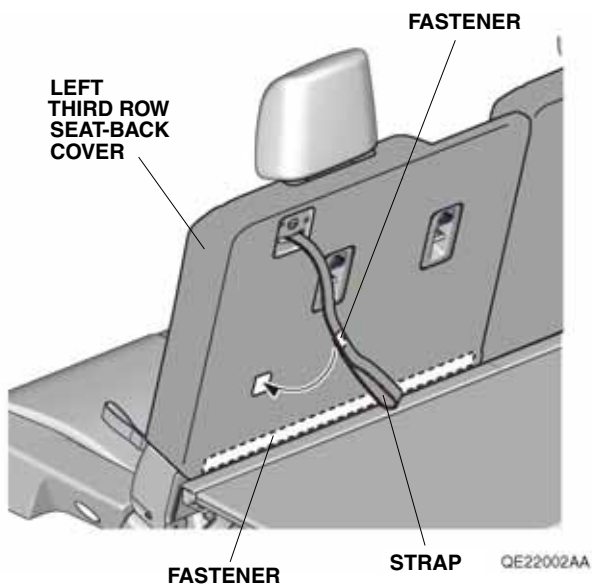


9. Install the two head restraint covers.

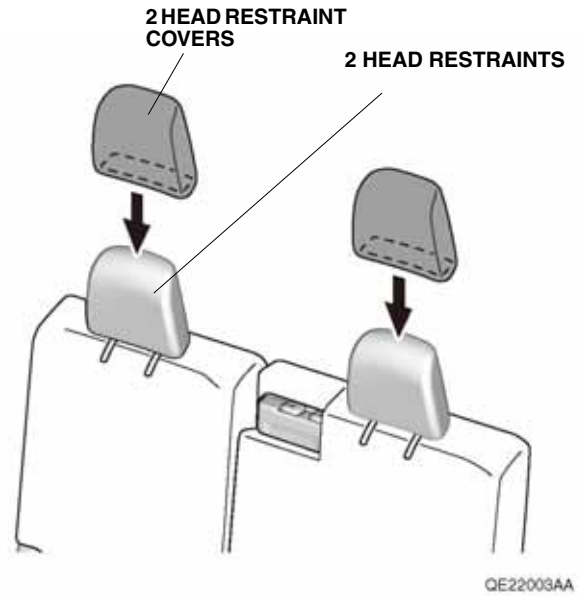


10. Install the third row seat cushion cover on the third row seat cushion.

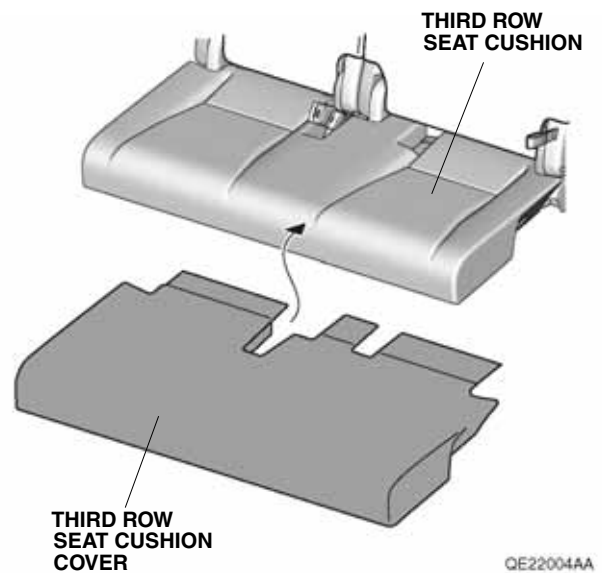

11. Fit the third row seat cushion cover on the third row seat cushion. Secure the fasteners to the third row seat cushion.

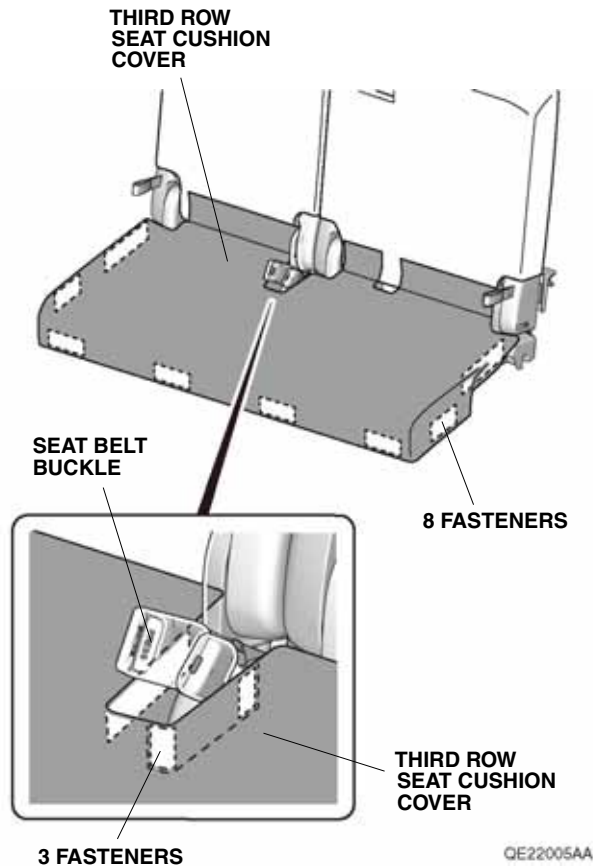

12. Insert the third row seat cushion cover between the third row seat-back and third row seat cushion. Make sure to insert the third row seat cushion cover under the anchors. Secure the fasteners to the third row seat cushion.

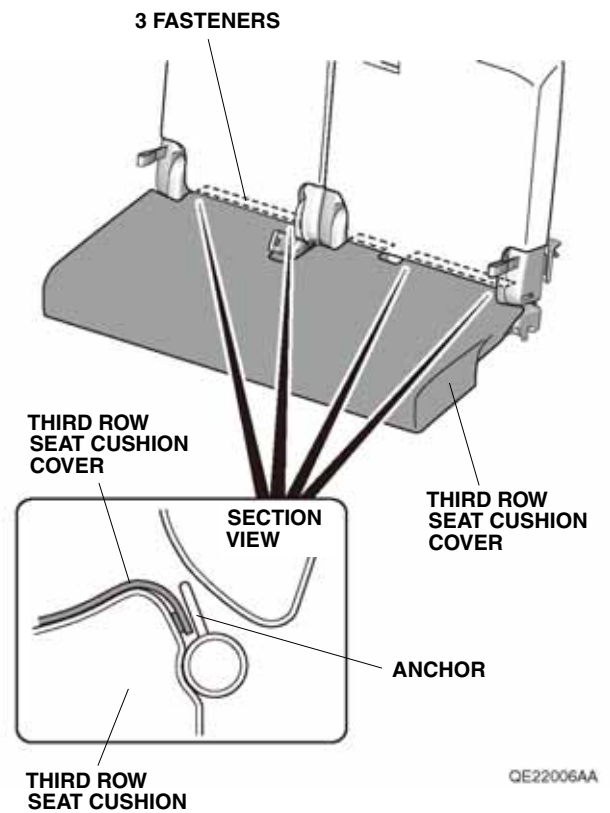

13. Install the center head restraint.