


SPLASH GUARDS	2026 PASSPORT MODEL SERIES	Publications No. VERSION 1
---------------	-------------------------------	-------------------------------

GENERAL VIEW

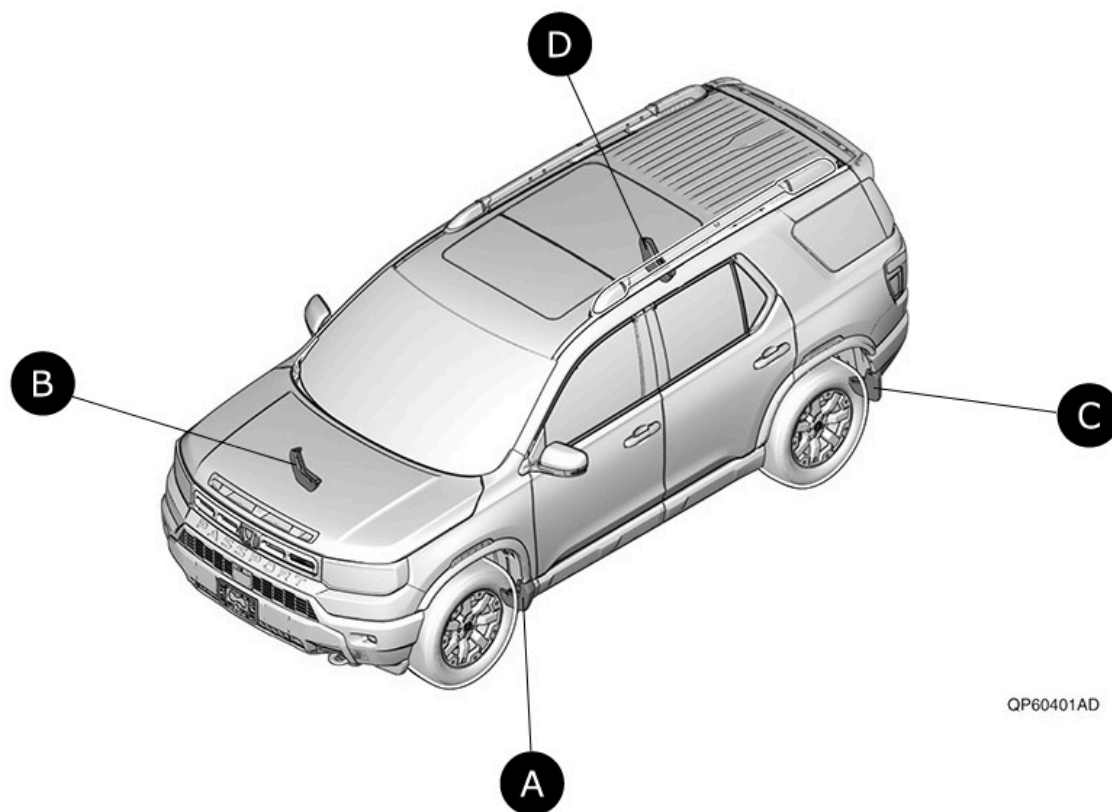

QP60401AD

A	LEFT FRONT SPLASH GUARD
B	RIGHT FRONT SPLASH GUARD
C	LEFT REAR SPLASH GUARD
D	RIGHT REAR SPLASH GUARD

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.













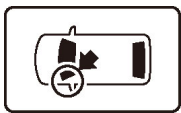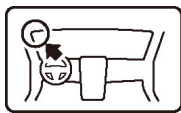



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.









	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

PARTS LIST

■ Splash Guards Kit (P/N 08P00-3BM-100)

Parts	Parts name	QTY	Remarks
	Left front splash guard	1	
	Right front splash guard	1	
	Left rear splash guard	1	
	Right rear splash guard	1	
	Left bracket (identification mark: L)	1	
	Right bracket (identification mark: R)	1	
	5 x 20 mm Self-tapping screw	8	
	5 x 25 mm Self-tapping screw	4	



REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- Stubby Phillips screwdriver
- Pushpin
- Scissors

INSTALLATION

■ Installing the Rear Splash Guards



- 1 Remove the self-tapping screws.

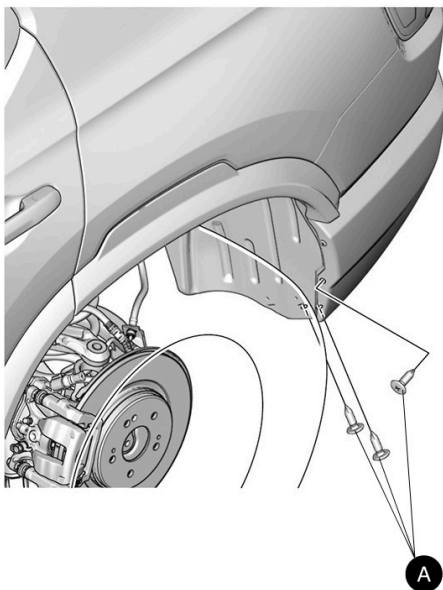

QP60402AD

A	SELF-TAPPING SCREW(3)
----------	-----------------------



2 Remove the spring nuts.

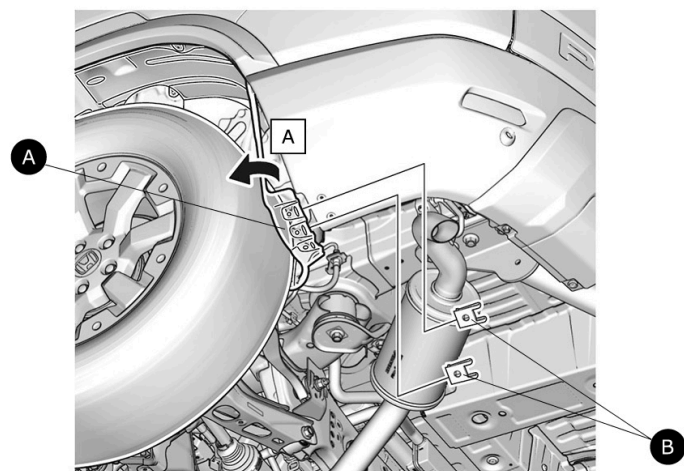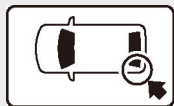


QP60403AD

A	LEFT REAR INNER FENDER
A	Peel back.
B	SPRING NUT(2)

3 Pierce the left rear inner fender.


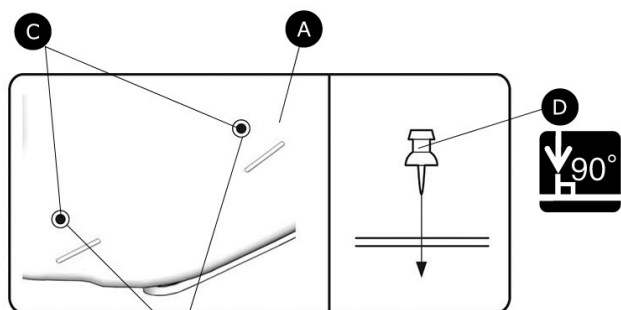
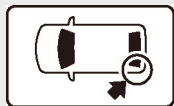


A	LEFT REAR INNER FENDER (outside)
B	DIMPLE(2)
C	MARK(2)
D	PUSHPIN

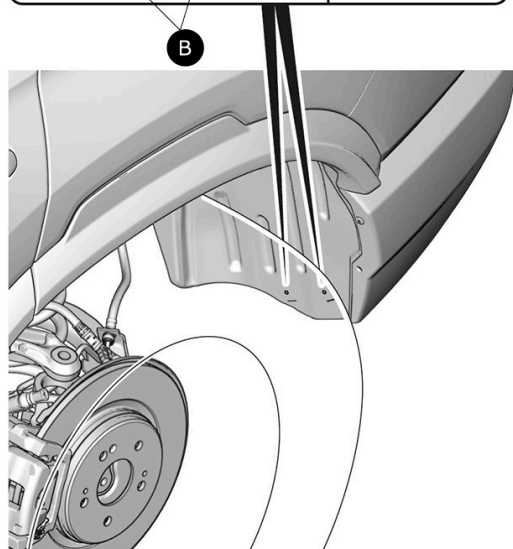

QP60404AD

4 Cut the left rear inner fender.

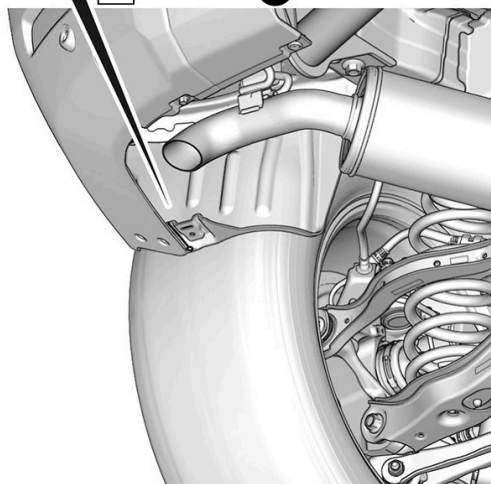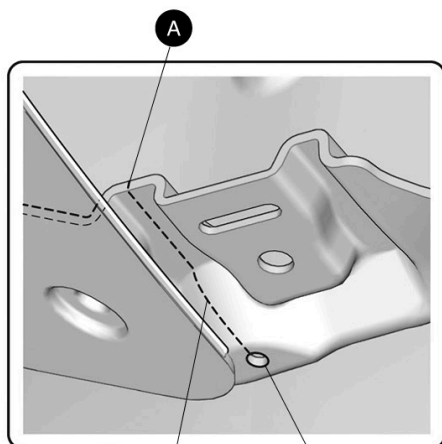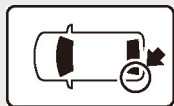


QP01701AD

A	CENTER OF THE RAISED SECTION
B	DRAIN HOLE
A	Cut from the center of the raised section to the drain hole.

5 Install the spring nut.

NOTE


- Make sure to prepare the correct identification mark before proceeding with the installation.
- Make sure to install the spring nut in the correct location.

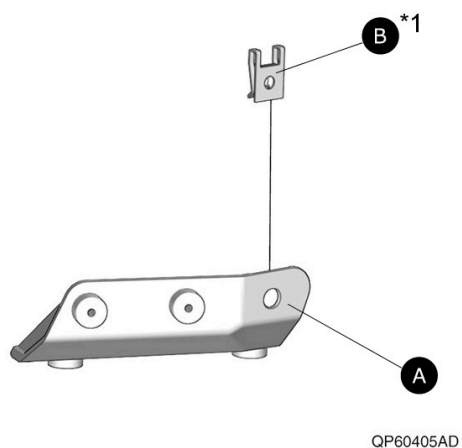


A	LEFT BRACKET (identification mark: L)
B	SPRING NUT

*1: Removed in step 2.

6 Loosely install the left bracket.

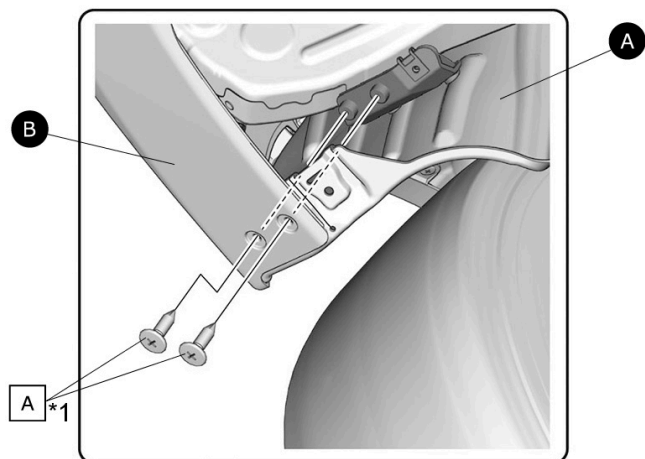



A	LEFT REAR INNER FENDER (inside)
B	REAR BUMPER
A	SELF-TAPPING SCREW (Loosely secure.)(2)

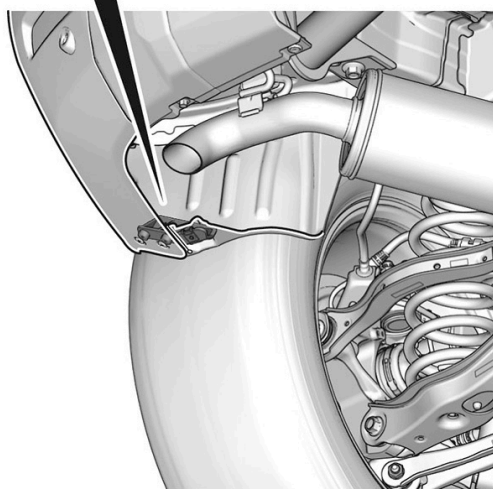

QP60406BD

*1: Removed in step 1.

7 Secure the left bracket.

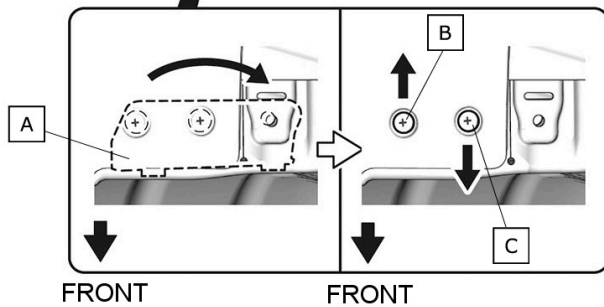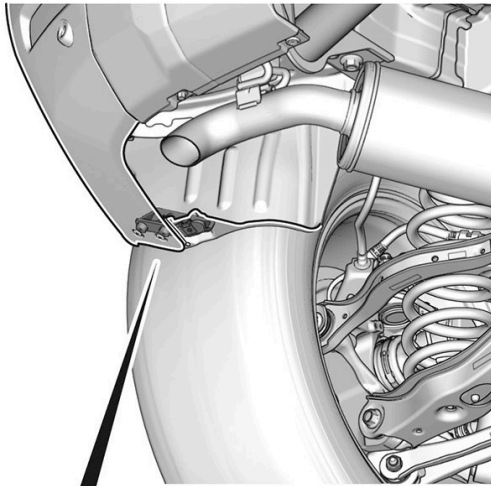



A	Rotate clockwise to push the self-tapping screws as much as possible and hold.
B	Tighten keeping the self-tapping screw pushed toward rear of the vehicle.
C	Tighten keeping the self-tapping screw pushed toward front of the vehicle.

QPD0401AD

8 Install the left rear splash guard.

NOTE


- Work in the order shown.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

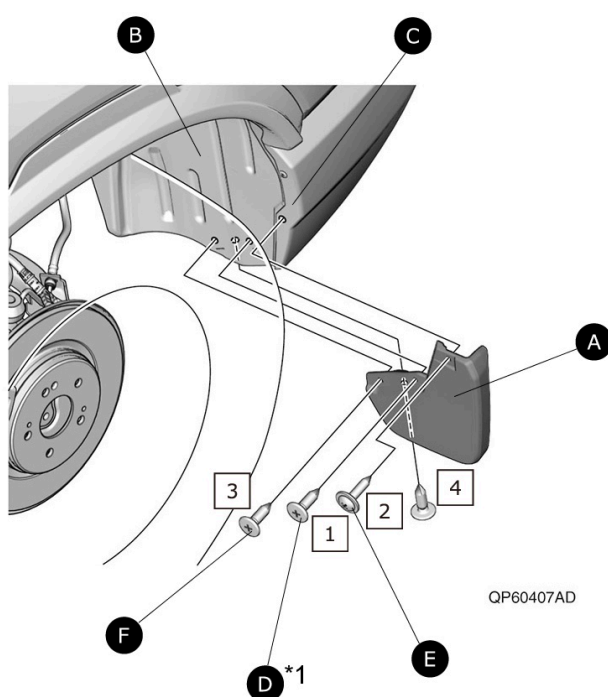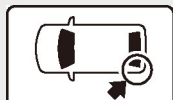

A	LEFT REAR SPLASH GUARD
B	LEFT REAR INNER FENDER (outside)
C	REAR BUMPER
D	SELF-TAPPING SCREW
E	5 x 25 mm SELF-TAPPING SCREW (supplied)
F	5 x 20 mm SELF-TAPPING SCREW (supplied)(2)

*1: Removed in step 1.



9 Repeat steps 1 through 8 on the other side.

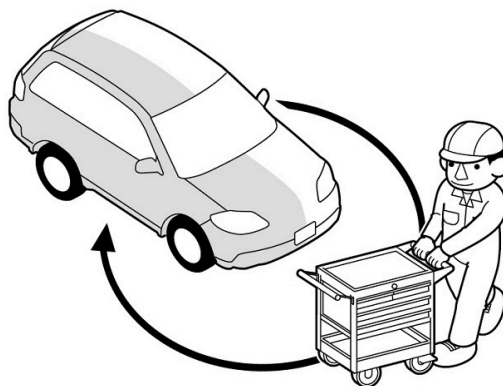

Q9D1014AM

Installing the Front Splash Guards

10 Turn the steering wheel fully counterclockwise.

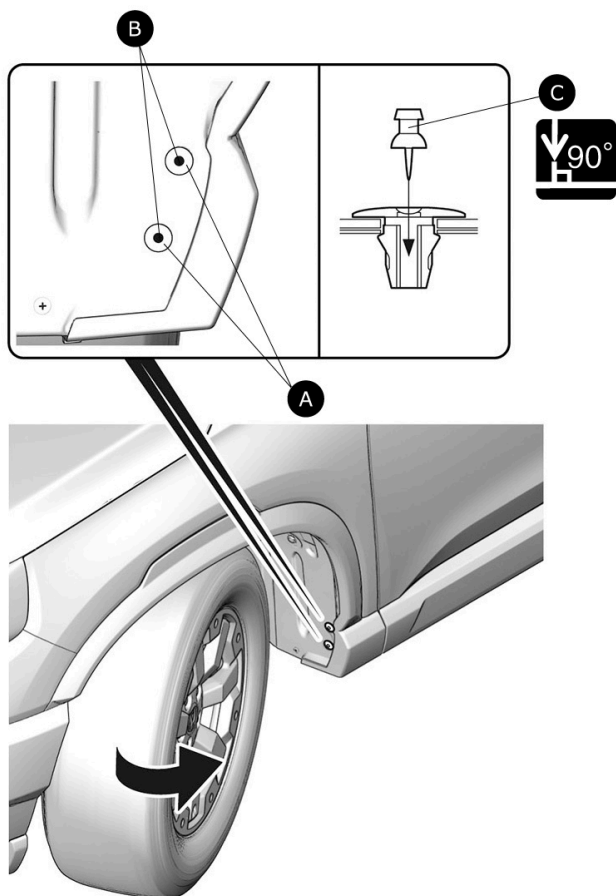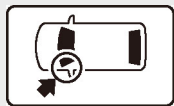


A	CLIP(2)
B	MARK(2)
C	PUSHPIN

QP60501AD

11 Pierce the clips.

12

Remove the self-tapping screw.

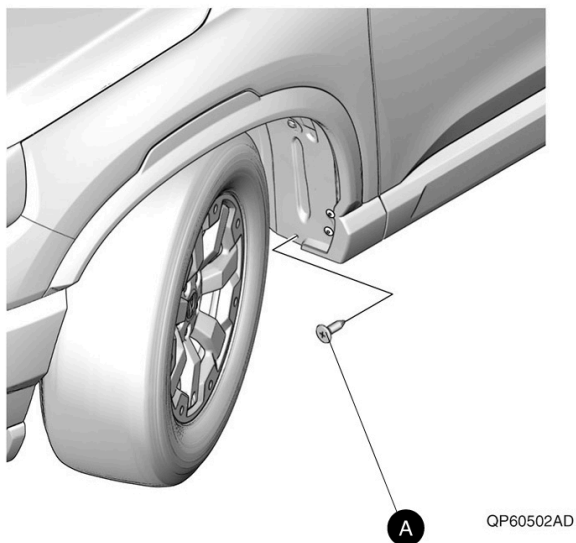


A	SELF-TAPPING SCREW
---	--------------------


13 Install the spring nut.

NOTE

Make sure to install the spring nut in the correct orientation and with the large hole facing out.

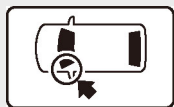

A	SPRING NUT
B	LEFT FRONT INNER FENDER

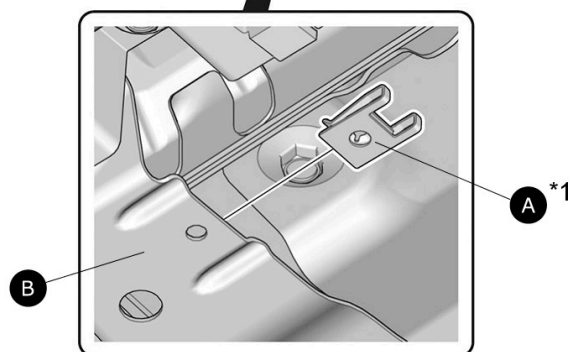


QP60503AD

*1: Removed in step 2.

14 Install the left front splash guard.

NOTE


- Work in the order shown.
- Make sure that there is no gap between the splash guard and vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the vehicle body, and retighten the screws.
- Make sure that the splash guard is properly installed.

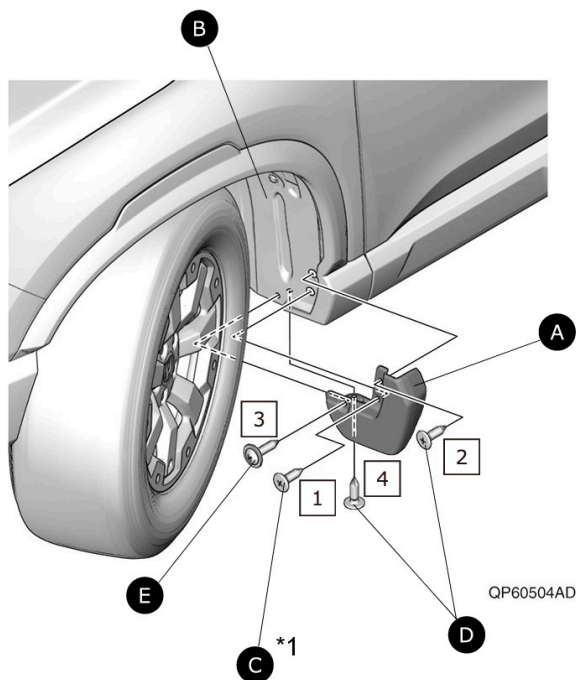

A	LEFT FRONT SPLASH GUARD
B	LEFT FRONT INNER FENDER
C	SELF-TAPPING SCREW
D	5 x 20 mm SELF-TAPPING SCREW (supplied)(2)
E	5 x 25 mm SELF-TAPPING SCREW (supplied)

*1: Removed in step 12.

- 15** Turn the steering wheel fully clockwise, and repeat steps 11 through 14 on the other side.

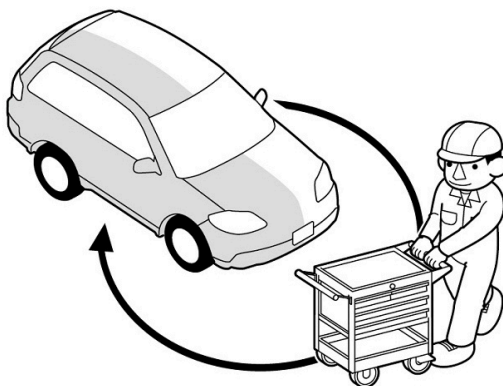

Q9D1014AM

- 16** Check that all parts are installed properly.