	Accessory	Application	Publications No.
(H) HONDA **INSTALLATION** **INSTRUCTIONS**	**ROOF RAILS** P/N 08L02-TK8-100	**2011 ODYSSEY**	**AII 43928**
			Issue Date **SEP 2010**

PARTS LIST

Left side roof rail

Right side roof rail
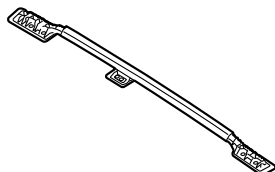
Left front roof rail cover
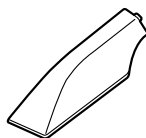
Right front roof rail cover
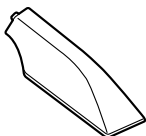
Left center roof rail cover

Right center roof rail cover

Left rear roof rail cover
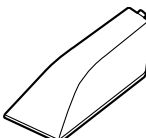
Right rear roof rail cover
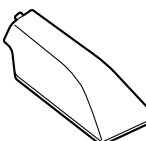
12 Torx nuts

4 Torx screws

2 Roof molding clips

TOOLS AND SUPPLIES REQUIRED

Tape measure

Needle nose pliers

T-15 and T-30 Torx drivers

Air saw (Snap-on AT192A)
(Available through the Honda Tool and Equipment program. On the iN, click on: Service/Service Bay/Tool and Equipment Program, then enter the number under "Search." Or call 888-424-6857.)

Trim Tool Set (SOJATP2014)
(Available through the Honda Tool and Equipment program. On the iN, click on: Service/Service Bay/Tool and Equipment Program, then enter the number under "Search." Or call 888-424-6857.)

Eye protection (face shield, safety goggles, etc.)

File

Felt-tip pen

Masking tape

Illustration of the Roof Rails Installed on the Vehicle

RIGHT SIDE ROOF RAIL

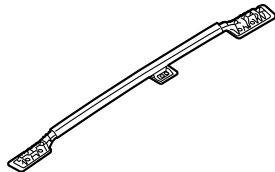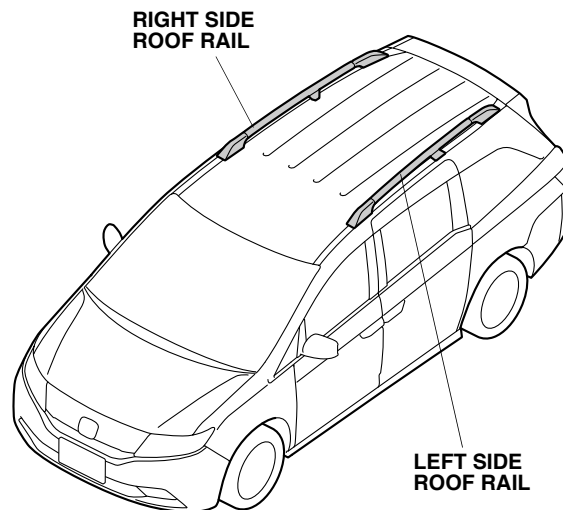**LEFT SIDE ROOF RAIL**

INSTALLATION

> **Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Be extremely careful not to damage the roof and other finished surfaces of the body when installing the roof rails.

Installing the Roof Rails

1. Remove the left roof molding by carefully lifting it upward from four roof molding clips.

LEFT ROOF MOLDING

4 ROOF MOLDING CLIPS

FRONT
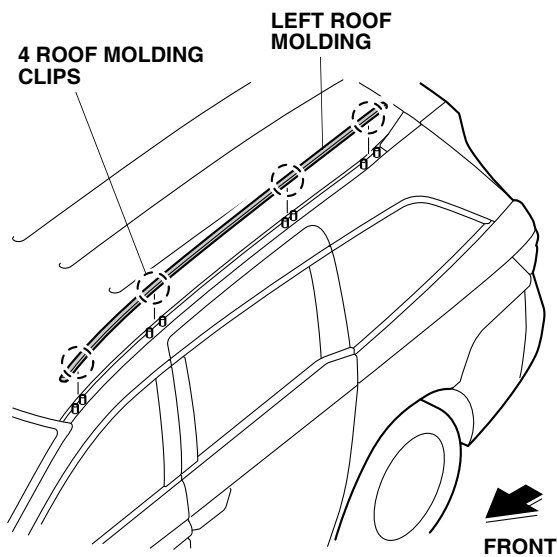
2. Open the tailgate halfway. Using a trim tool, pry up on the rear end of the left roof molding rear cover.

LEFT ROOF MOLDING REAR COVER

TAILGATE Open halfway.

FRONT

TRIM TOOL
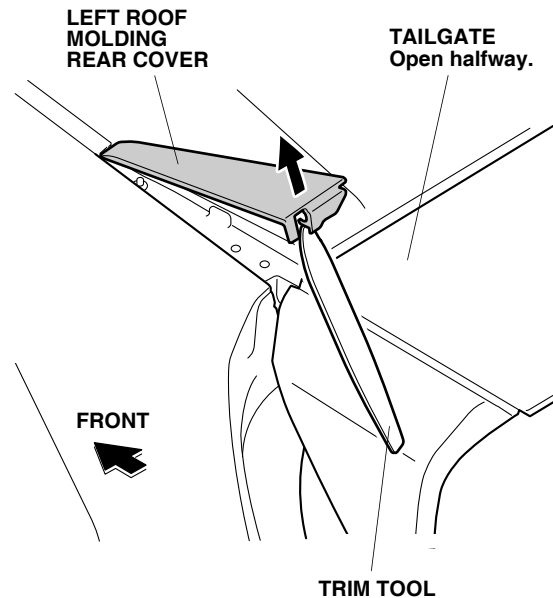
3. While wearing an eye protection, use an air saw to cut off the end of the left roof molding rear cover at the scribe line shown. Remove any burrs.

SCRIBE LINE

LEFT ROOF MOLDING REAR COVER

AIR SAW
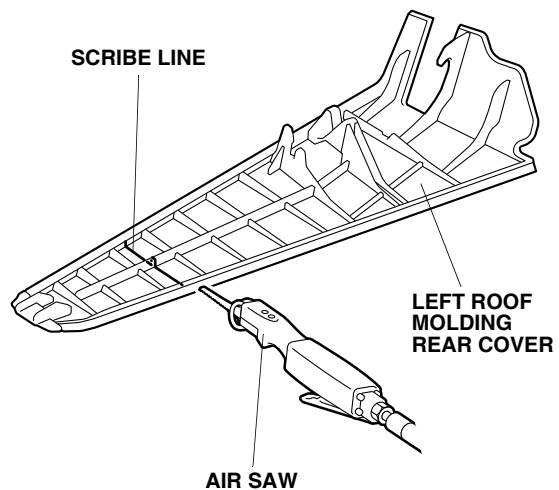
4. Remove and discard the four roof molding clips from the roof molding and/or the stud bolt on the roof.
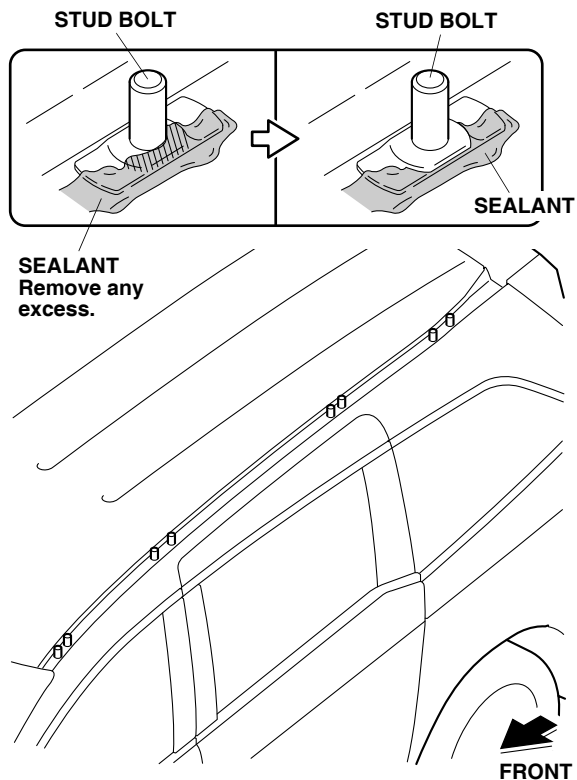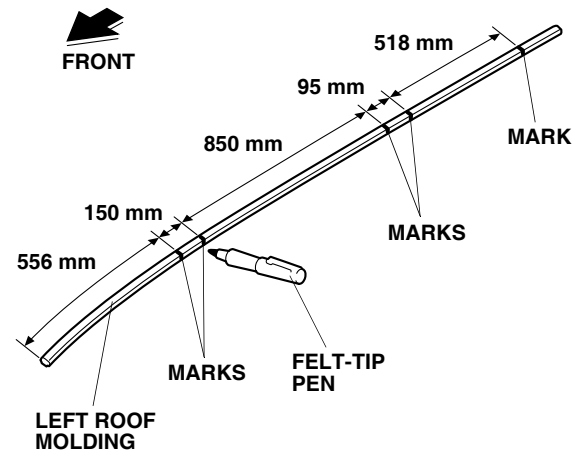
ROOF MOLDING CLIPS Discard.

ROOF MOLDING CLIPS Discard.

ROOF

LEFT ROOF MOLDING

STUD BOLT

FRONT
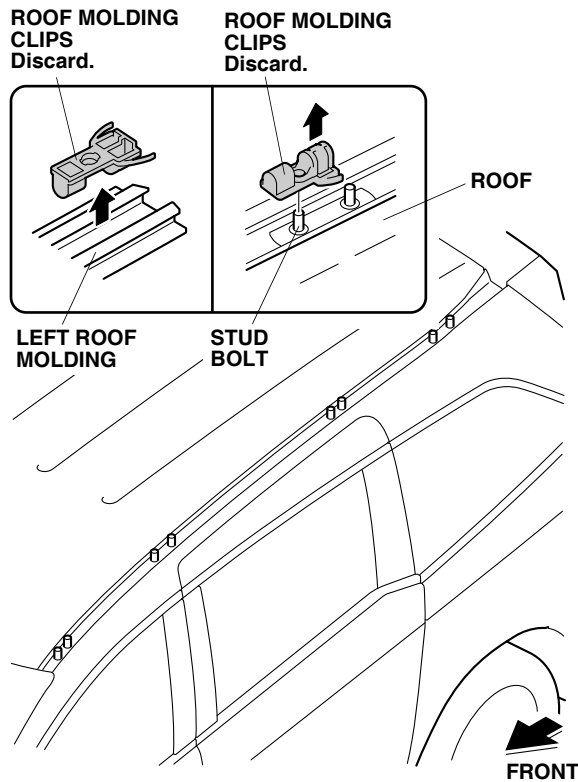
5. Remove any excess sealant from the stud bolts.

STUD BOLT

STUD BOLT

SEALANT

SEALANT Remove any excess.

FRONT

6. Measure and mark the left roof molding as shown using a felt-tip pen.

FRONT

518 mm

95 mm

850 mm

MARK

MARKS

150 mm

556 mm

MARKS

FELT-TIP PEN

LEFT ROOF MOLDING

7. While wearing an eye protection, use an air saw to cut off the left roof molding at the marks made in step 6.

MARK

FRONT

MARKS

MARKS

AIR SAW

LEFT ROOF MOLDING

AII 43928 (1009)
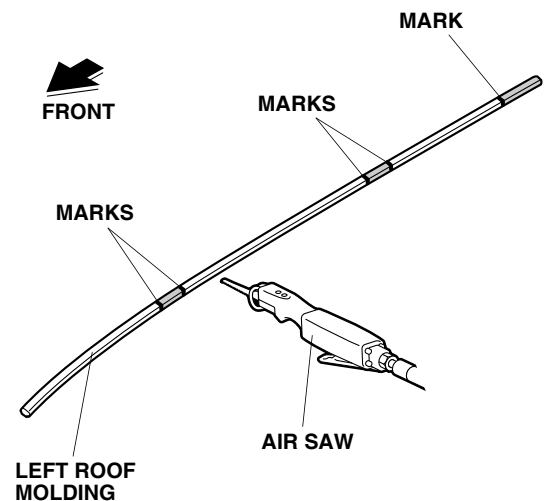
8. Install one roof molding clip (supplied) to the front of the left roof molding.
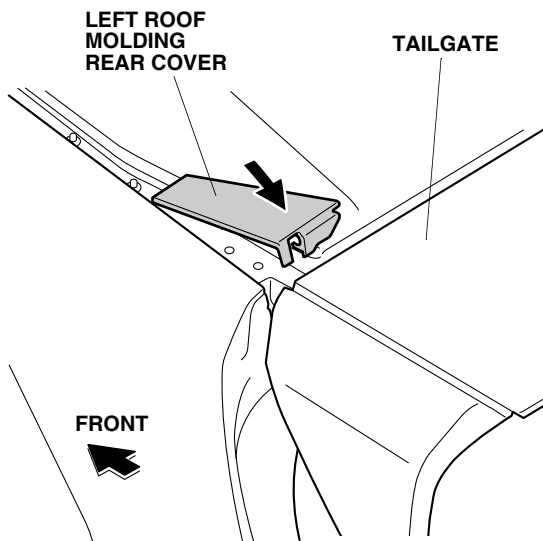
LEFT ROOF MOLDING (FRONT)

FRONT

ROOF MOLDING CLIP

ROOF MOLDING CLIP

FRONT LEFT ROOF MOLDING
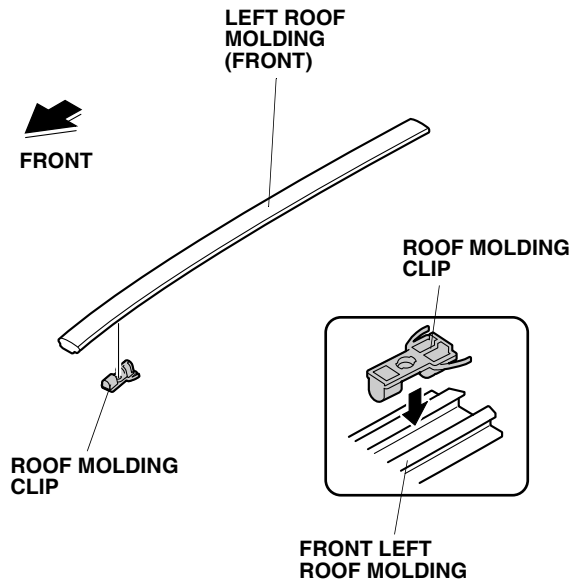
9. Reinstall the left roof molding rear cover.
NOTE: If the roof molding cover is not even with the roof, it is installed incorrectly. Reinstall the roof molding cover properly.

LEFT ROOF MOLDING REAR COVER

TAILGATE

FRONT

10. Reinstall the cut pieces of the left roof molding back onto the roof of the vehicle as shown.

LEFT ROOF MOLDINGS
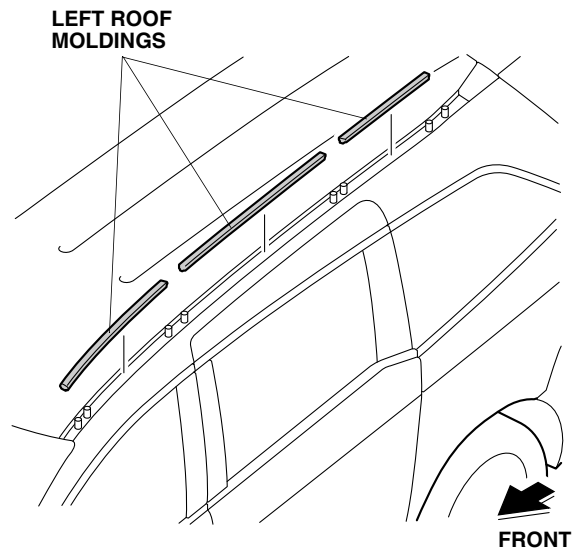
FRONT

11. Install the left side roof rail with six Torx nuts. Make sure the roof rail is installed in the correct position. Torque the Torx nuts to: 10 N·m (7.3 lbf·ft)

LEFT SIDE ROOF RAIL

6 TORX NUTS

6 STUD BOLTS
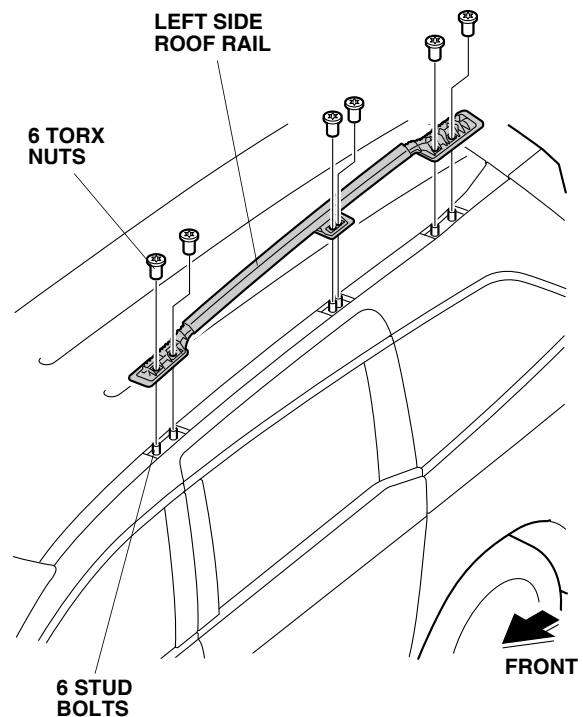
FRONT

12. Install the left front roof rail cover to the left side roof rail with two clips.

TORX SCREW **2 CLIPS**

LEFT FRONT ROOF RAIL COVER

LEFT SIDE ROOF RAIL
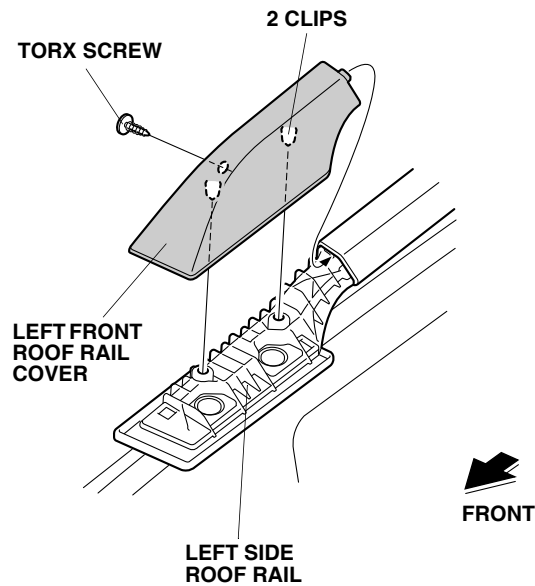
FRONT

13. Secure the left front roof rail cover to the left side roof rail with one Torx screw.

14. Install the left rear roof rail cover to the left side roof rail with three clips.

TORX SCREW **3 CLIPS**

LEFT REAR ROOF RAIL COVER

LEFT SIDE ROOF RAIL

FRONT
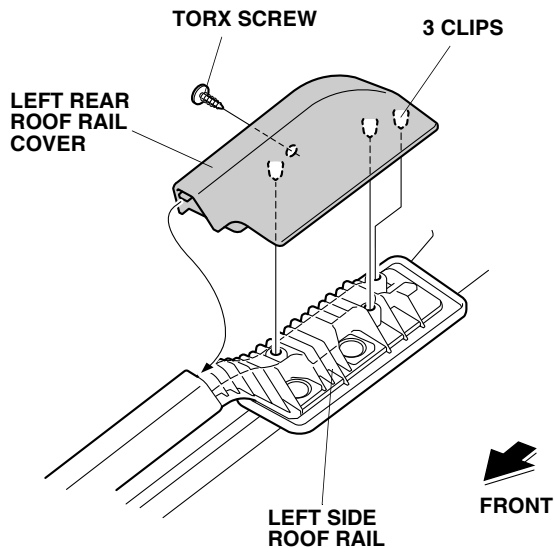
15. Secure the left rear roof rail cover to the left side roof rail with one Torx screw.

16. Attach masking tape to the vehicle panel around the middle roof rail support.

LEFT ROOF RAIL MIDDLE SUPPORT

FRONT

MASKING TAPE

VEHICLE PANEL
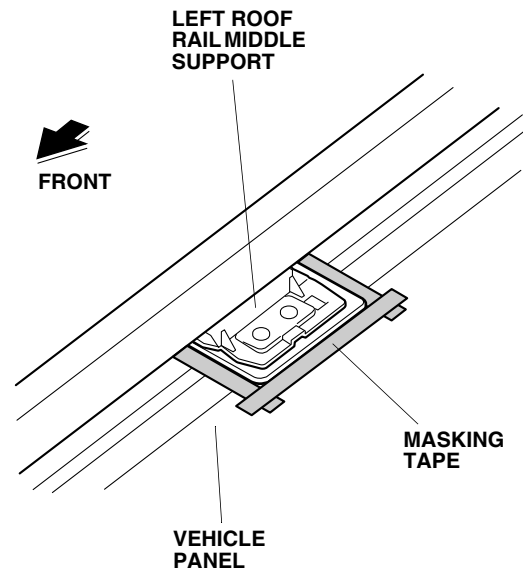
17. Hook the left center roof rail cover to the left roof rail middle support as shown.

LEFT ROOF RAIL MIDDLE SUPPORT

FRONT

LEFT CENTER ROOF RAIL COVER

AII 43928 (1009)
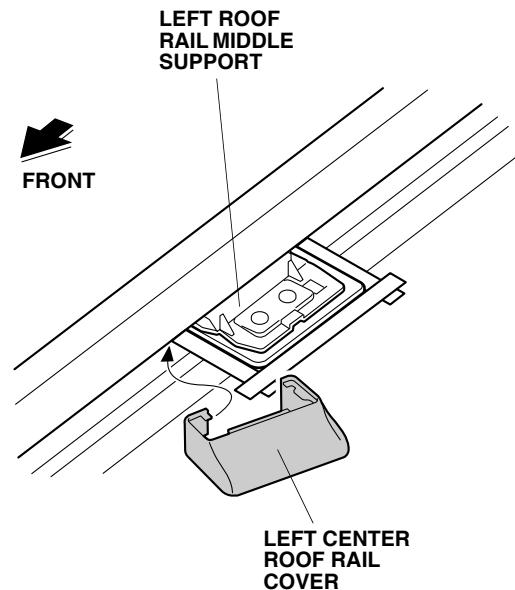
18. Install the left center roof rail cover to the left roof rail middle support as shown. Make sure that the left center roof rail cover has no clearance between the left roof rail middle support.

INSIDE VIEW

FRONT

LEFT ROOF RAIL MIDDLE SUPPORT

LEFT CENTER ROOF RAIL COVER

Push.

Turn.

LEFT CENTER ROOF RAIL COVER

FRONT

LEFT SIDE ROOF RAIL
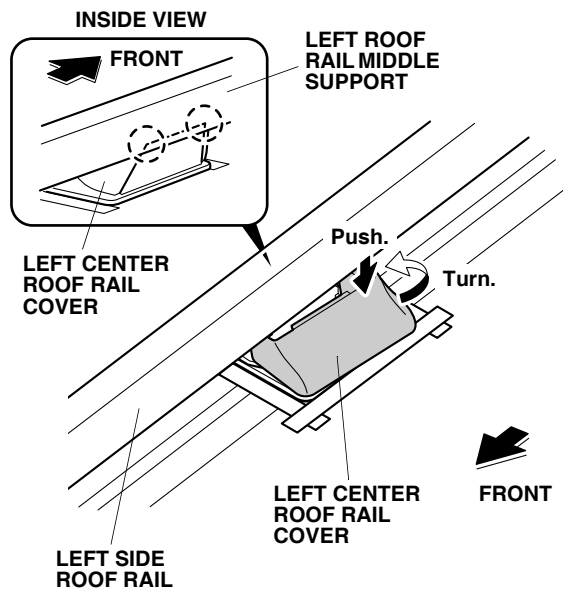
19. Remove the masking tape attached in step 16.

20. Repeat steps 1 thru 19 to install the right roof rail on the vehicle.

USE AND CARE

Check the roof rail mounting bolts frequently, and re-tighten if necessary.

AII 43928 (1009)