



INSTALLATION INSTRUCTIONS


Accessory
HATCH SPOILER

Application
2012 CR-Z


Publications No.
All 46898
Issue Date
OCT 2011

PARTS LIST


Hatch spoiler

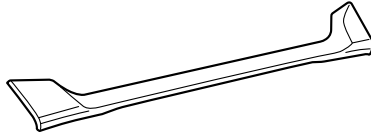


Left support strut

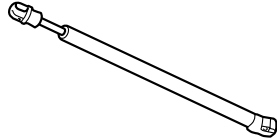


Right support strut

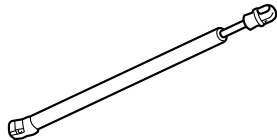


Template

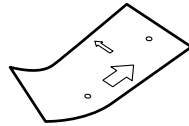

4 Clip grommets



4 Pins




4 Seals



TOOL AND SUPPLIES REQUIRED

- Flat-tip screwdriver
- Masking tape
- Felt-tip pen
- Center punch
- Tape
- Touch-up paint
- Isopropyl alcohol
- Shop towel
- Drill
- 3 mm, 6 mm, and 8.5 mm Drill bits
- File
- Utility knife
- Eye protection (safety goggles, face shield, etc.)

Illustration of the Hatch Spoiler Installed on the Vehicle

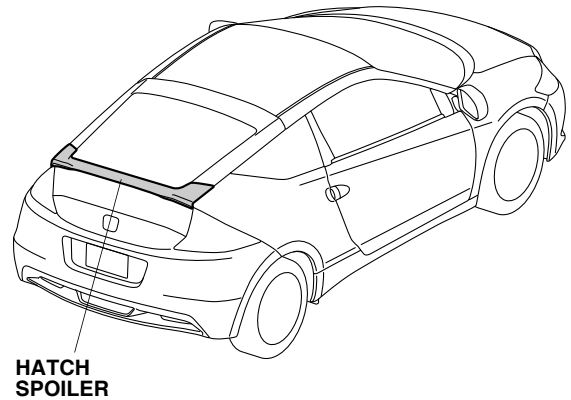


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Be careful not to damage the paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise your customer.

1. Open the hatch.

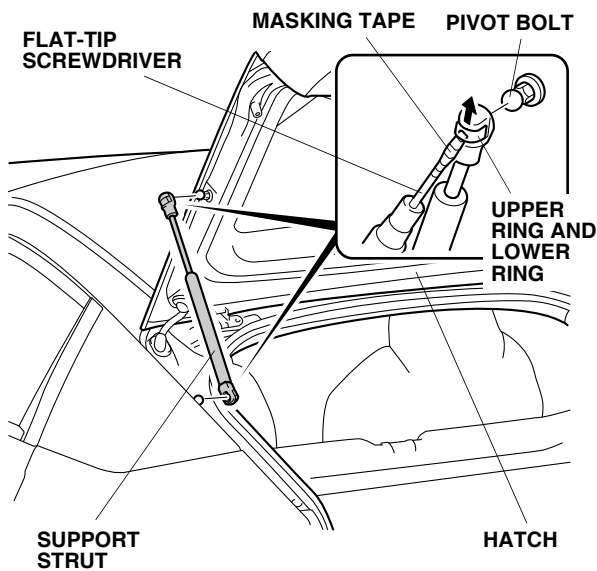


2. With an assistant holding the hatch open, use a flat-tip screwdriver wrapped with masking tape to release one upper ring and one lower ring. Remove the left support strut as shown.

3. Install the new left support strut to two pivot bolts.

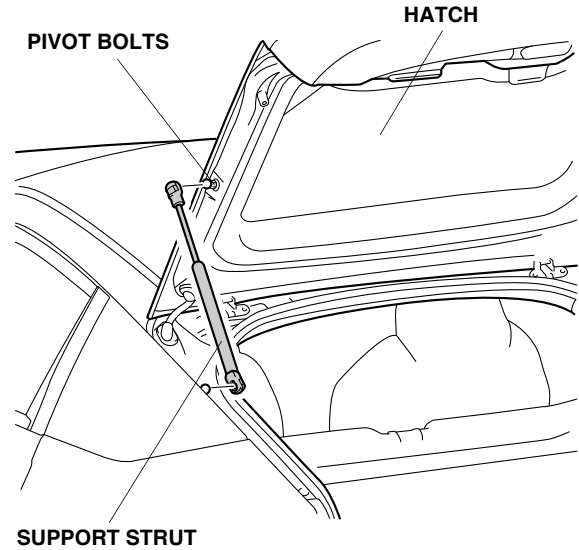


4. Repeat steps 2 and 3 to install the new support strut on the right side of the vehicle.
5. Close the hatch.
6. Align the template to the edge of the hatch, and tape in place with masking tape.

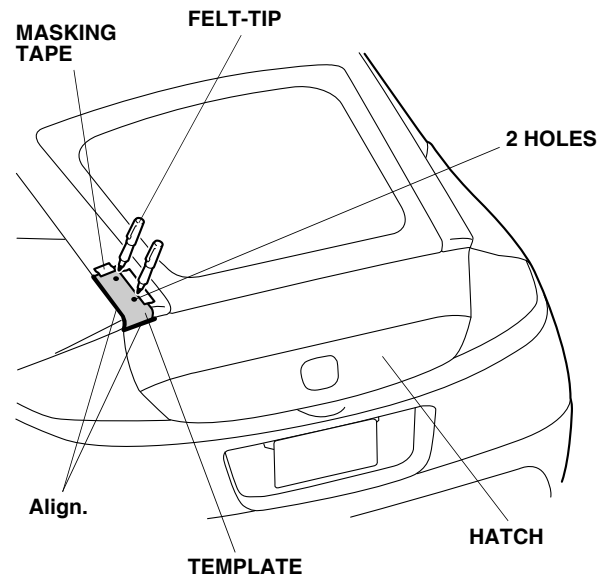


7. Using a felt-tip pen, mark two holes in the template as shown.
8. Remove the template. Turn the template over and repeat steps 6 and 7 to mark the right side of the hatch.


9. Using a center punch, lightly punch the four marks made on the hatch.
NOTE: Set the center punch to the minimum setting.

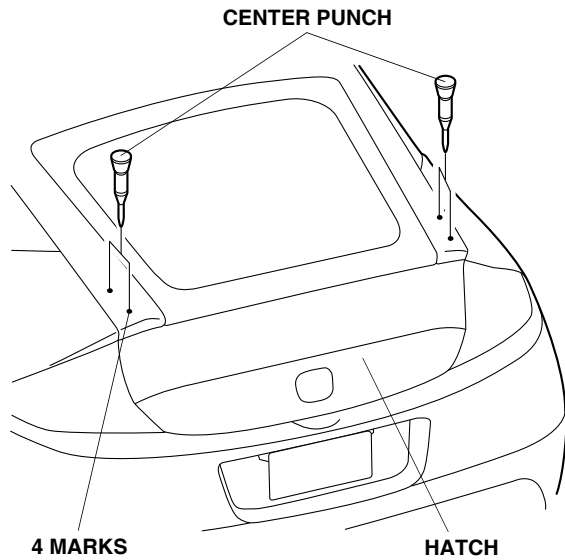


10. To prevent metal shavings from entering the seal area, attach masking tape to the hatch as shown.

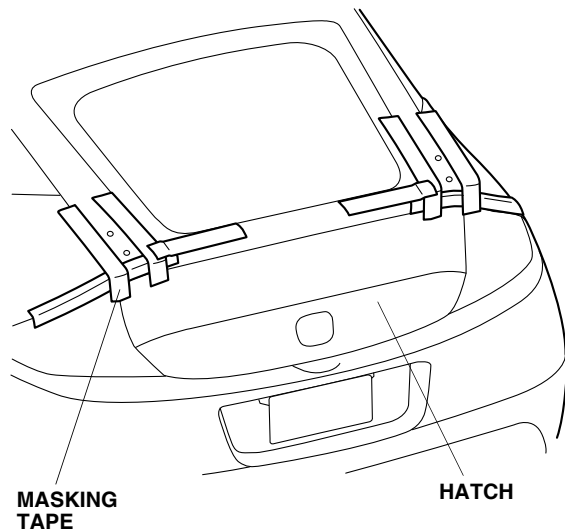


11. While wearing eye protection, drill the four center-punched marks on the hatch:
- First drill with a 3 mm drill bit, then with a 6 mm drill bit, and finish with an 8.5 mm drill bit.
 - Wrap tape around each drill bit 10 mm from the tip or use a drill stop.
 - After drilling, remove any burrs from the edges of all the holes, and apply touch-up paint. Allow the touch-up paint to dry thoroughly before proceeding to the next step.
 - Remove the masking tape.

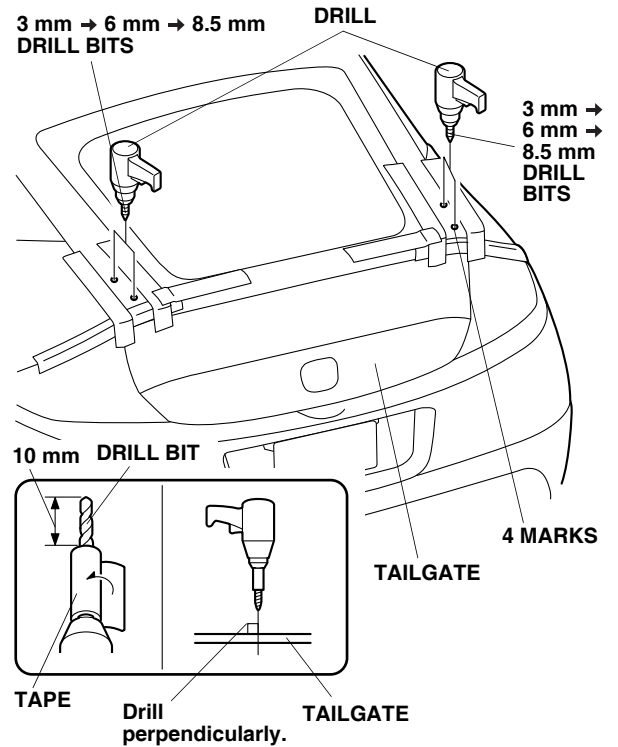


12. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the hatch spoiler will attach.

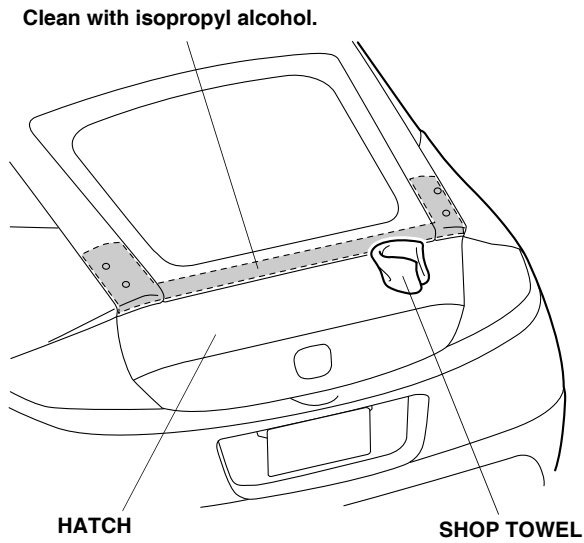


14. Install the four clip grommets into the four holes in the hatch. Press each grommet until you hear a click.

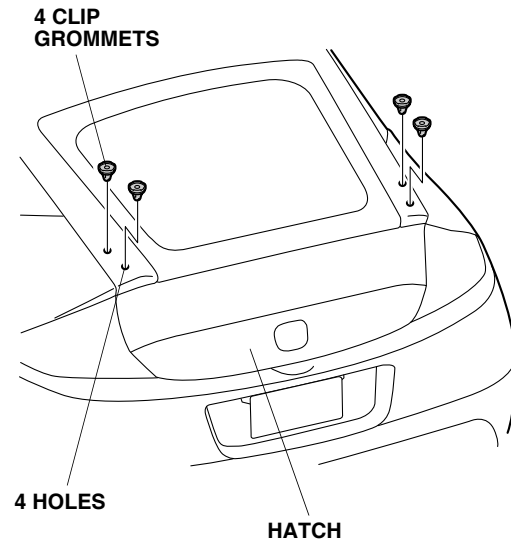


13. Install the four seals on the four clip grommets.

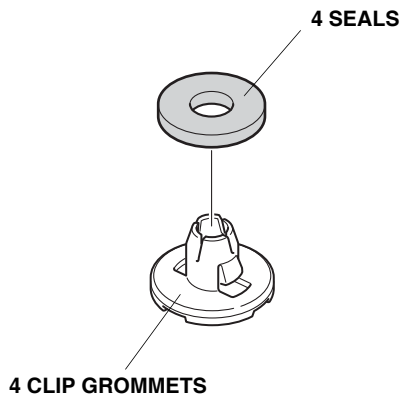


15. Install the four pins onto the hatch spoiler.

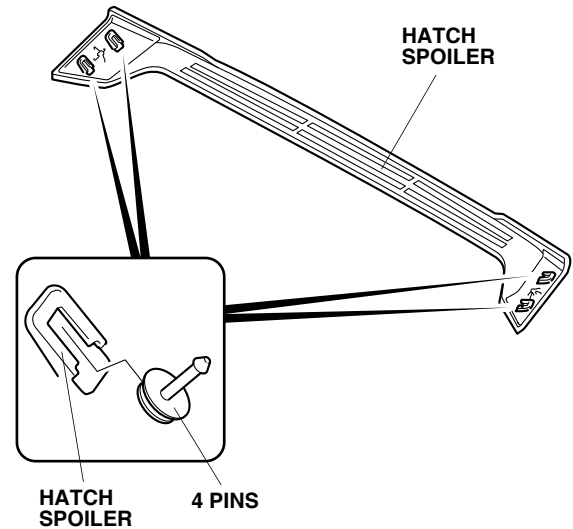


16. Using a utility knife, cut two slits in the adhesive backings on the hatch spoiler.

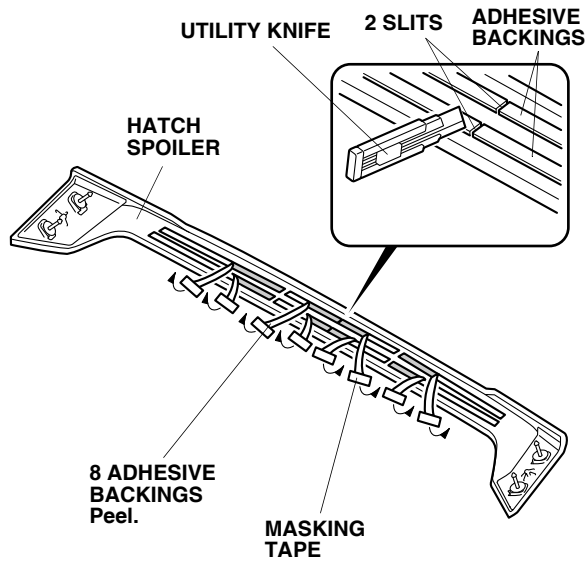

17. Peel back approximately 1½ to 2 inches of the adhesive backings from each of the adhesive strips, and tape the ends to the front surface of the hatch spoiler.
18. Align the four pins on the hatch spoiler with the four clip grommets on the hatch, and press the spoiler down until you hear a click from each clip.
- NOTE:** Do not apply excessive pressure to the hatch spoiler.

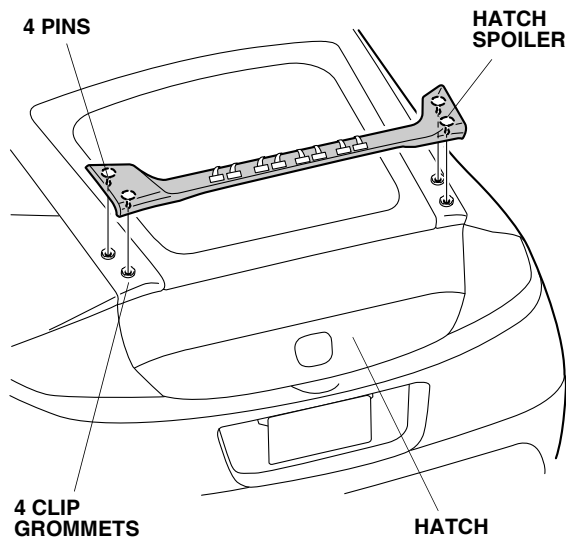

19. While applying light pressure to the hatch spoiler, carefully remove each adhesive backing in the order shown.

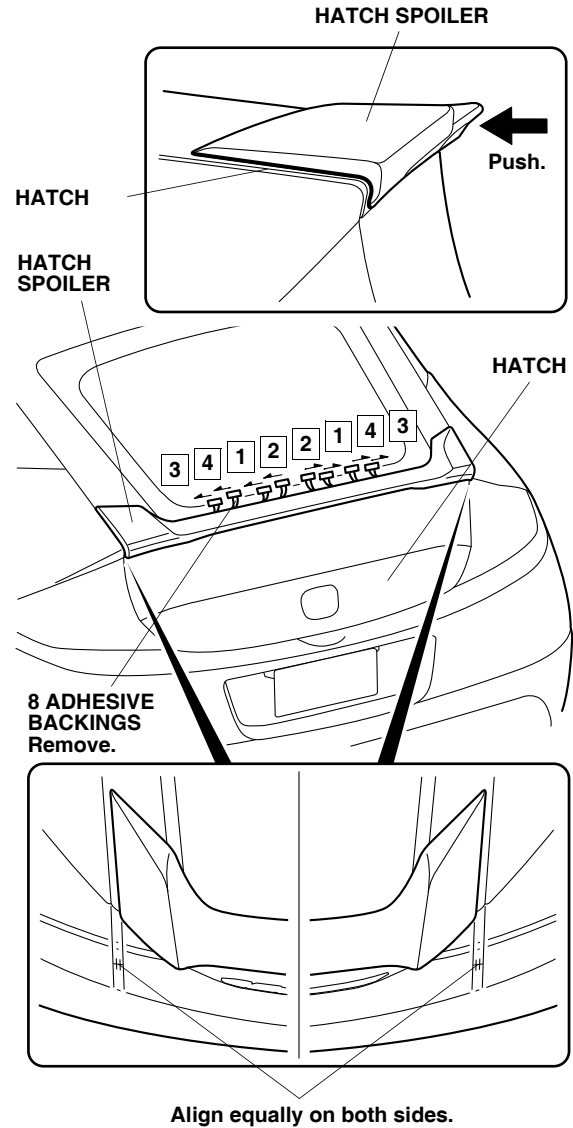

20. Using the palm of your hand, firmly press the hatch spoiler to the hatch for 30 seconds.