# ww.collegehillshonda.com

### **INSTALLATION INSTRUCTIONS**

**SPLASH GUARDS** P/N 08P00-T7S-100A Application

Publications No. **VERSION 1** 

Issue Date

2019 HR-V **JUL 2018** 

#### **PARTS LIST**

Left front splash guard



Right front splash guard



Left rear splash guard



Right rear splash guard



Self-tapping screws, 5 x 25 mm



Self-tapping screws, 5 x 18 mm



### Spring nuts



### **TOOLS AND SUPPLIES REQUIRED**

Phillips screwdriver Stubby Phillips screwdriver

Illustration of the Splash Guards on the Vehicle



08P00-T7S-1A00-90

### www.collegehillshonda.com

#### **INSTALLATION**


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- Be careful not to damage the body paint finish.
- · Clean the areas to be covered.

### **Installing the Splash Guards**


1. Turn the steering wheel fully counterclockwise.

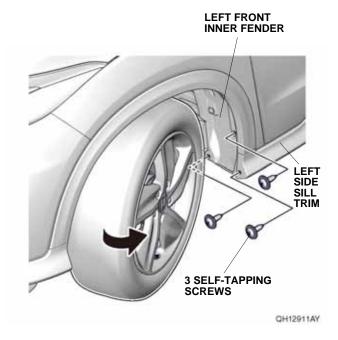

2. Remove the three self-tapping screws.


Secure the left front splash guard with three self-tapping screws in the order shown below.

NOTE: Make sure there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.

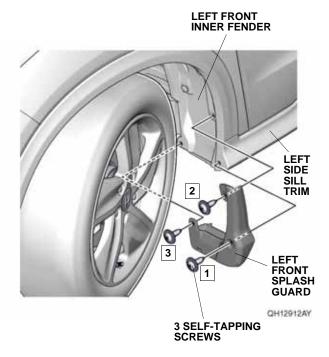


## www.collegehillshonda.com

4. Remove the two self-tapping screws.

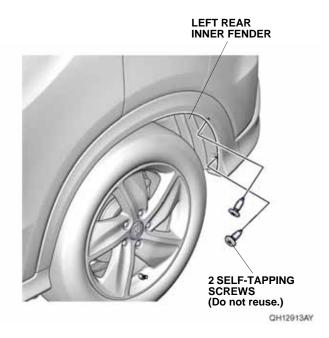


5. Install one spring nut on the left rear inner fender. NOTE: Make sure to install the spring nut in the correct position and orientation.

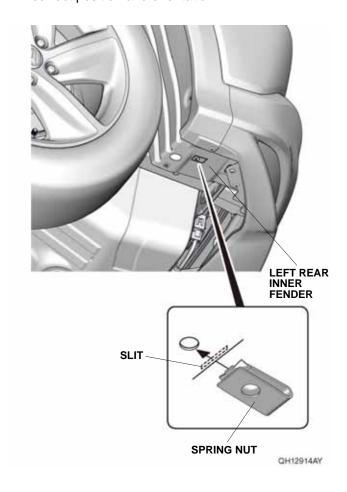

6. Secure the left rear splash guard with two 5 x 25 mm self-tapping screws and one 5 x 18 mm self-tapping screw in the order shown below.

NOTE: Make sure there is no gap between the left rear splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.

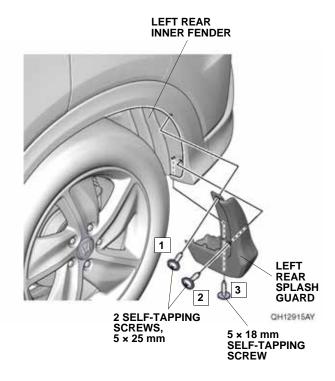

7. Turn the steering wheel fully clockwise, and repeat steps 2 through 6 on the right side of the vehicle.