



INSTALLATION INSTRUCTIONS

Accessory

**MUGEN QUICK SHIFTER
P/N 54000-XTK-000**

Application

2009 FIT MUGEN

Publications No.


All 41061

Issue Date

APRIL 2009

PART LIST

Mugen quick shifter

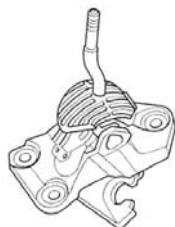

Shift cable clip



TOOL REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Clip remover


Torque wrench

8 mm and 12 mm Sockets

Ratchet


INSTALLATION

1. With the parking brake applied, remove the shift knob by rotating it counterclockwise.

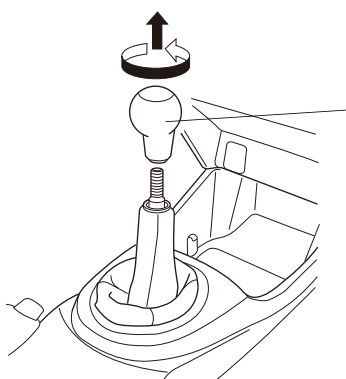


SHIFT KNOB
(Turn counter-
clockwise
to remove.)


2. Remove the parking brake cover.

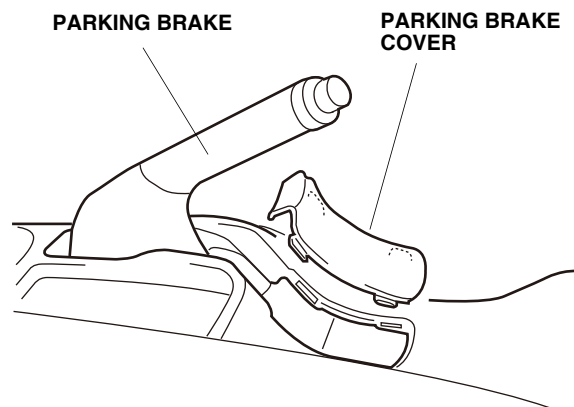

3. Remove the center console (remove the mat, two clips and one bolt).

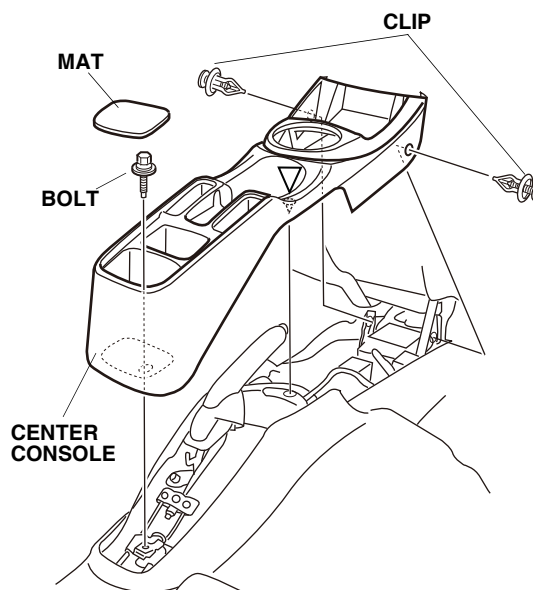

4. Remove the shift cable clip and snap pin. Discard the cable clip. Disconnect the shift cables.

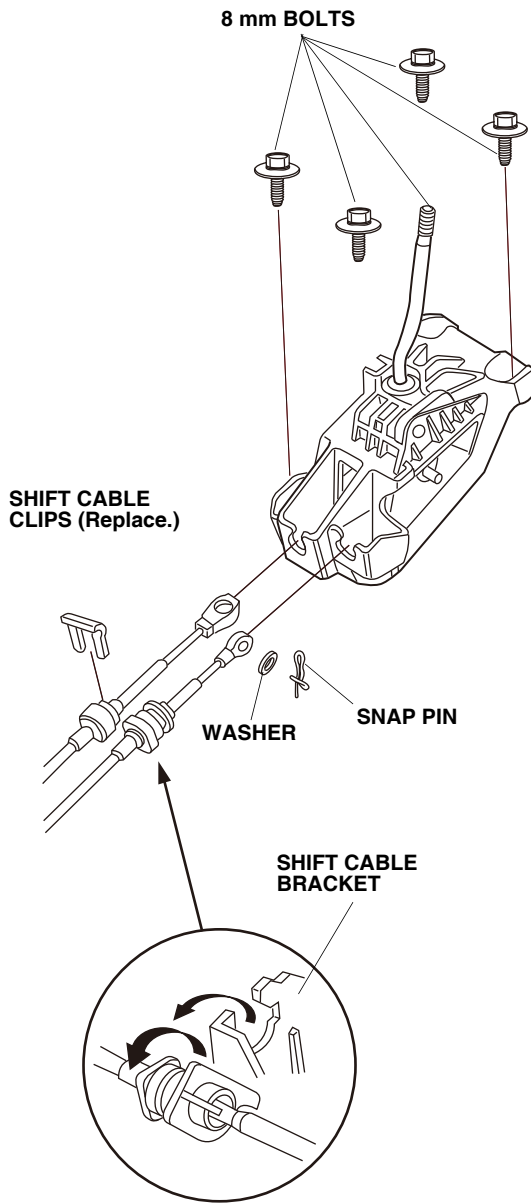

5. Remove the shift cable from the shift cable bracket.
6. Remove the four 8 mm bolts, and remove the shift lever.
7. Install the MUGEN shift lever using the four 8 mm bolts. Torque the 8 mm bolts to 8 N·m.
8. Reinstall the shift cables using a new shift cable clip, and reattach the washer and snap pin.
9. Reinstall all removed parts.