



INSTALLATION INSTRUCTIONS

Accessory

QUICK SHIFTER
P/N 54000-XTK-000

Application

2010 FIT MUGEN

Publications No.


All 42199

Issue Date

JULY 2009

PART LIST

Mugen quick shifter

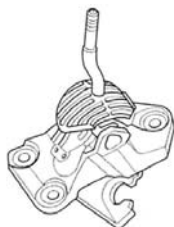

Shift cable clip



TOOL REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Clip remover


Torque wrench

8 mm and 12 mm Sockets

Ratchet


INSTALLATION

1. With the parking brake applied, remove the shift knob by rotating it counterclockwise.

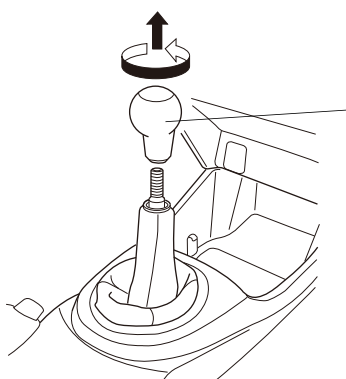

SHIFT KNOB
(Turn counter-
clockwise
to remove.)


2. Remove the parking brake cover.

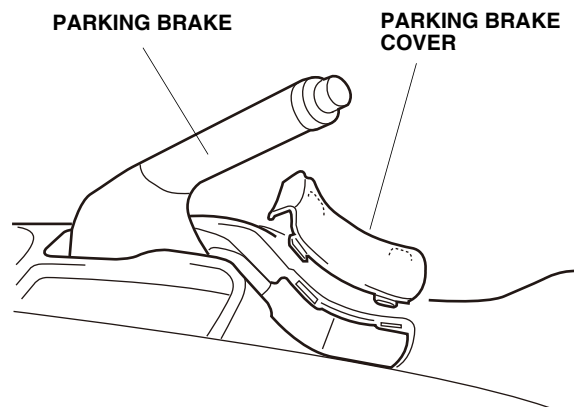

PARKING BRAKE

**PARKING BRAKE
COVER**

3. Remove the center console (remove the mat, two clips, and one bolt).

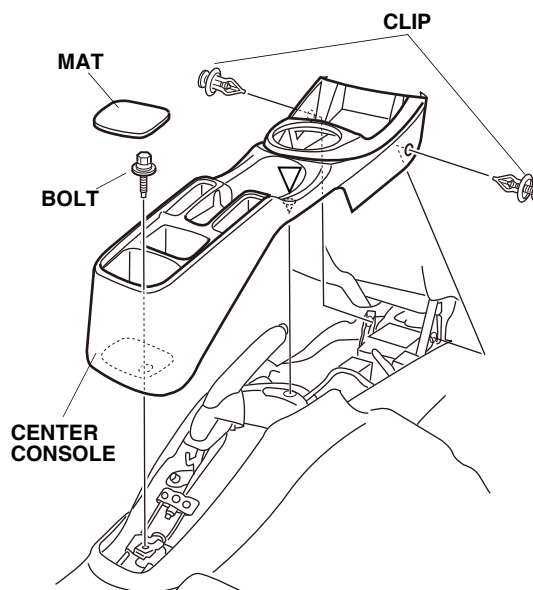


MAT

CLIP

BOLT

**CENTER
CONSOLE**

4. Remove the shift cable clip and snap pin. Discard the cable clip. Disconnect the shift cables.

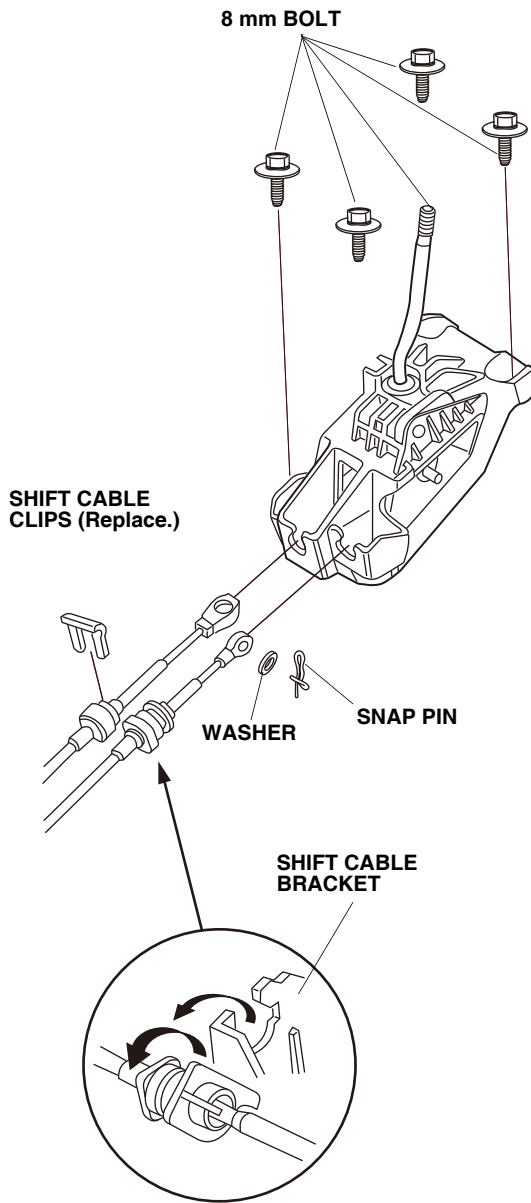

5. Remove the shift cable from the shift cable bracket.
6. Remove the four 8 mm bolts, and remove the shift lever.
7. Install the MUGEN shift lever using the four 8 mm bolts. Torque the 8 mm bolts to 8 N·m.
8. Reinstall the shift cables using a new shift cable clip, and reattach the washer and snap pin.
9. Reinstall all removed parts.